



Post-Installation Tasks

- [Changing the Default Password, page 1](#)
- [Updating the License, page 1](#)

Changing the Default Password

Procedure

- Step 1** From the menu choose **Administration > Users**.
 - Step 2** Click the **Login Users** tab.
 - Step 3** Choose **admin** from the list of Login Users.
 - Step 4** Click **Change Password**.
 - Step 5** In the **Change Password** dialog box, enter the new password and confirm it.
 - Step 6** Click **Save**.
-

Updating the License

You must perform the following procedure to update the license before you start using Cisco IMC Supervisor. For the list of valid licenses, see [About Licenses](#). You must generate a license key, claim and register the Product Access Key. After installing Cisco IMC Supervisor, the license is validated and you can start using Cisco IMC Supervisor.

Before You Begin

If you received a zipped license file by email, extract and save the **.lic** file to your local machine.

Procedure

Step 1 From the menu bar, choose **Administration > License**.

Step 2 Select the **License Keys** tab.

Step 3 Click **Update License**.

Step 4 In the **Update License** dialog box, do one of the following:

- To upload a **.lic** file, click **Browse**, navigate to and select the **.lic** file, then click **Upload**.
- For a license key, check the **Enter License Text** check box then copy and paste the license key only into the **License Text** field. The license key is typically at the top of the file, after Key ->.

You can also copy and paste the full text of a license file into the **License Text** field.

Step 5 Click **Submit**.

The license file is processed, and a message appears confirming the successful update.
