



New and Changed Information for this Release

This chapter contains the following section:

- [New and Changed Information for this Release, page 1](#)

New and Changed Information for this Release

The following table provides an overview of the significant changes to this guide for this current release. The table does not provide an exhaustive list of all changes made to this guide or of all new features in this release.

Table 1: New Features and Changed Behavior in Cisco IMC Supervisor, Release 1.1.0.1

Feature	Description	Where Documented
Support for Selecting Multiple Servers	You can select multiple rack servers and perform various actions such as powering on/off, hard reset, power cycle and so on.	For the various actions, see sections under Inventory and Fault Status for Rack Groups
Managing Tags for All Rack Groups	You can select the top level rack groups, select multiple servers and manage tags for all the selected servers.	Managing Tags for a Rack Mount Server
Collecting Inventory for Multiple Rack Accounts or Rack Groups	You can manage your rack accounts or servers better by collecting inventory for one or more rack accounts or rack groups.	Collecting Inventory for Multiple Rack Accounts or Rack Groups
Assigning Rack Accounts to a Rack Group	You can assign a server or multiple servers to a rack group from the Systems menu.	Assigning Rack Accounts to a Rack Group

Feature	Description	Where Documented
Support for HTTP(S) Based Network Images for Firmware Upgrade	You can download and add a firmware image from a network server using the HTTP/S server type option available in the Firmware Management Menu.	Adding Images from a Network Server

The following table provides an overview of the significant changes to this guide for this current release. The table does not provide an exhaustive list of all changes made to this guide or of all new features in this release.

Table 2: New Features and Changed Behavior in Cisco IMC Supervisor, Release 1.1

Feature	Description	Where Documented
FlexFlash Inventory	You can view the details of FlexFlash adapters used in the server such as Controller Info, Physical Drives and so on.	Viewing a Rack Mount Server Details
Enhancement to Managing Firmware	New UI enhancements are available for Firmware download and upgrade and you can view the images hosted in IMCSupervisor and on the network separately from the UI. It now supports downloading local images for new M4 models and E-Series.	Firmware Management Menu
Managing Policies and Profiles	Support for managing policies and profiles has been introduced in this release. You can now create hardware policies by configuring various properties such as BIOS, LDAP, Users and so on. A combination of existing set of hardware policies make up a profile. You can now apply configuration details of a rack server profile for example, to multiple rack-mount servers. You can also associate this hardware profile to specific rack-mount servers. You can perform various management tasks such as adding, editing, and deleting hardware policies and profiles.	Managing Policies
Email Alerts	You can create, update, or delete multiple email alerts. Alert levels are introduced for each email alert sent.	System Menu