



Installation As a Compute-Only Node for Cisco HyperFlex

Instructions for installing a C220 M4 server as a compute-only node for Cisco HyperFlex can be found here:

[Cisco HyperFlex Systems Getting Started Guide, Release 1.8](#)

Refer to the chapter “Expanding Cisco HyperFlex System Cluster” and the following sections:

- Prerequisites to Adding a Compute-Only Node
- Prepare a Compute-Only Node
- Adding a Compute-Only Node to a Cisco HyperFlex System Cluster

