



# Installation for UCS Software Management

---

This appendix contains the following topics.

- [Installation For Cisco UCS Manager Integration, on page 1](#)
- [Installation For Cisco Intersight, on page 1](#)

## Installation For Cisco UCS Manager Integration

The Cisco UCS Manager integration instructions are in the integration guides found here:

[Cisco UCS C-Series Server Integration with UCS Manager Configuration Guides](#)

Refer to the guide that is for the version of Cisco UCS Manager that you are using.

Also refer to the release notes for Cisco UCS Manager software and C-Series Cisco IMC software for any special considerations regarding integration in your release.

- [Cisco UCS Manager Release Notes](#)
- [Cisco C-Series Software Release Notes](#)

## Installation For Cisco Intersight

Through Cisco Intersight, the server can be claimed, configured, and managed. Intersight information is available for standalone servers through online help, which you can access through:

[Cisco Intersight](#)

Also, refer to the Intersight release notes for any special considerations regarding integration in your release. Release notes are available through:

[Cisco Intersight Release Notes](#)

