



Managing the Server

This chapter includes the following sections:

- [Toggling the Locator LED, page 1](#)
- [Configuring the Server Boot Order, page 2](#)
- [Powering On the Server, page 2](#)
- [Powering Off the Server, page 3](#)
- [Power Cycling the Server, page 3](#)
- [Resetting the Server, page 4](#)
- [Shutting Down the Server, page 4](#)

Toggling the Locator LED

Before You Begin

You must log in with user or admin privileges to perform this task.

Procedure

| | Command or Action | Purpose |
|---------------|---|--|
| Step 1 | Server# scope chassis | Enters chassis command mode. |
| Step 2 | Server /chassis # set locator-led {on off} | Enables or disables the chassis locator LED. |
| Step 3 | Server /chassis # commit | Commits the transaction to the system configuration. |

This example disables the chassis locator LED and commits the transaction:

```
Server# scope chassis
Server /chassis # set locator-led off
Server /chassis *# commit

Server /chassis #
```

Configuring the Server Boot Order



Note Do not change the boot order while the host is performing BIOS power-on self test (POST).

Before You Begin

You must log in with user or admin privileges to perform this task.

Procedure

| | Command or Action | Purpose |
|---------------|--|--|
| Step 1 | Server# scope bios | Enters bios command mode. |
| Step 2 | Server /bios # set boot-order <i>device1</i> [, <i>device2</i> [, <i>device3</i> [, <i>device4</i> [, <i>device5</i>]]]] | Specifies the boot device options and order. You can select one or more of the following: <ul style="list-style-type: none"> • cdrom—Bootable CD-ROM • fdd—Floppy disk drive • hdd—Hard disk drive • pxe—PXE boot • efi—Extensible Firmware Interface |
| Step 3 | Server /bios # commit | Commits the transaction to the system configuration. |

The new boot order will be used on the next BIOS boot.

This example sets the boot order and commits the transaction:

```
Server# scope bios
Server /bios # set boot-order hdd,cdrom,fdd,pxe,efi
Server /bios # commit
Server /bios # show detail
BIOS:
  Boot Order: HDD,CDROM,FDD,PXE,EFI
Server /bios #
```

Powering On the Server



Note If the server was powered off other than through the CIMC, the server will not become active immediately when powered on. In this case, the server will enter standby mode until the CIMC completes initialization.

Before You Begin

You must log in with user or admin privileges to perform this task.

Procedure

| | Command or Action | Purpose |
|---------------|-----------------------------------|------------------------------|
| Step 1 | Server# scope chassis | Enters chassis command mode. |
| Step 2 | Server /chassis # power on | Turns on the server. |

This example turns on the server:

```

Server# scope chassis
Server /chassis # power on
This operation will change the server's power state.
Continue?[y|N]y

Server /chassis # show
Power Serial Number Product Name  UUID
-----
on    Not Specified Not Specified 208F0100020F000000BEA80000DEAD00
    
```

Powering Off the Server

Before You Begin

You must log in with user or admin privileges to perform this task.

Procedure

| | Command or Action | Purpose |
|---------------|------------------------------------|------------------------------|
| Step 1 | Server# scope chassis | Enters chassis command mode. |
| Step 2 | Server /chassis # power off | Turns off the server. |

This example turns off the server:

```

Server# scope chassis
Server /chassis # power off
This operation will change the server's power state.
Continue?[y|N]y

Server /chassis # show
Power Serial Number Product Name  UUID
-----
off   Not Specified Not Specified 208F0100020F000000BEA80000DEAD00
    
```

Power Cycling the Server

Before You Begin

You must log in with user or admin privileges to perform this task.

Procedure

| | Command or Action | Purpose |
|---------------|--------------------------------------|------------------------------|
| Step 1 | Server# scope chassis | Enters chassis command mode. |
| Step 2 | Server /chassis # power cycle | Power cycles the server. |

This example power cycles the server:

```
Server# scope chassis
Server /chassis # power cycle
```

Resetting the Server

Before You Begin

You must log in with user or admin privileges to perform this task.

Procedure

| | Command or Action | Purpose |
|---------------|---|---|
| Step 1 | Server# scope chassis | Enters chassis command mode. |
| Step 2 | Server /chassis # power hard-reset | After a prompt to confirm, resets the server. |

This example resets the server:

```
Server# scope chassis
Server /chassis # power hard-reset
This operation will change the server's power state.
Continue?[y|N]
```

Shutting Down the Server

Before You Begin

You must log in with user or admin privileges to perform this task.

Procedure

| | Command or Action | Purpose |
|---------------|---|------------------------|
| Step 1 | Server# scope chassis | Enters chassis mode. |
| Step 2 | Server /chassis # power shutdown | Shuts down the server. |

The following example shuts down the server:

```
Server# scope chassis
Server /chassis # power shutdown
```