



Viewing Logs

This chapter includes the following sections:

- [CIMC Log, page 1](#)
- [System Event Log, page 2](#)

CIMC Log

Viewing the CIMC Log

Procedure

Step 1 In the **Navigation** pane, click the **Admin** tab.

Step 2 On the **Admin** tab, click **CIMC Log**.

Step 3 Review the following information for each CIMC event in the log.

Name	Description
Timestamp column	The date and time the event occurred.
Source column	The software module that logged the event.
Description column	A description of the event.

Step 4 From the **Entries Per Page** drop-down list , select the number of CIMC events to display on each page.

Step 5 Click **<Newer** and **Older>** to move backward and forward through the pages of CIMC events, or click **<<Newest** to move to the top of the list.

By default, the newest CIMC events are displayed at the top if the list.

Clearing the CIMC Log

Before You Begin

You must log in as a user with user privileges to clear the CIMC log.

Procedure

-
- Step 1** In the **Navigation** pane, click the **Admin** tab.
- Step 2** On the **Admin** tab, click **CIMC Log**.
- Step 3** In the **CIMC Log** pane, click **Clear Log**.
- Step 4** In the dialog box that appears, click **OK**.
-

System Event Log

Viewing the System Event Log

Procedure

-
- Step 1** In the **Navigation** pane, click the **Server** tab.
- Step 2** On the **Server** tab, click **System Event Log**.
- Step 3** Review the following information for each system event in the log:

Name	Description
Timestamp column	The date and time the event occurred.
Severity column	The event severity. This can be: <ul style="list-style-type: none">• Unknown• Informational• Normal• Warning• Critical• Non-Recoverable
Description column	A description of the event.

- Step 4** (Optional) From the **Entries Per Page** drop-down list, select the number of system events to display on each page.
- Step 5** (Optional) Click **<Newer** and **Older>** to move backward and forward through the pages of system events, or click **<<Newest** to move to the top of the list.
By default, the newest system events are displayed at the top of the list.
-

Clearing the System Event Log

Before You Begin

You must log in as a user with user privileges to clear the system event log.

Procedure

-
- Step 1** In the **Navigation** pane, click the **Server** tab.
- Step 2** On the **Server** tab, click **System Event Log**.
- Step 3** In the **System Event Log** pane, click **Clear Log**.
- Step 4** In the dialog box that appears, click **OK**.
-

