



# Configuring Chassis Related Settings

This chapter includes the following sections:

- [Managing Server Power, on page 1](#)
- [Pinging a Hostname/IP Address from the Web UI, on page 2](#)
- [Toggling the Locator LEDs, on page 2](#)
- [Selecting a Time Zone, on page 3](#)

## Managing Server Power

### Before you begin

You must log in with user or admin privileges to perform this task.

### Procedure

- Step 1** In the **Navigation** pane, click the **Chassis** menu.
- Step 2** In the **Chassis** menu, click **Summary**.
- Step 3** In the toolbar above the work pane, click the **Host Power** link.
- Step 4** From the drop-down list, select one of the following options:

Actions	Description
<b>Power On</b>	Powers on the chosen server.
<b>Power Off</b>	Powers off the chosen server, even if tasks are running on that server.  <b>Important</b> If any firmware or BIOS updates are in progress, do not power off or reset the server until those tasks are complete.
<b>Power Cycle</b>	Powers off and powers on chosen server.
<b>Hard Reset</b>	Reboots the chosen server.

Actions	Description
Shut Down	Shuts down the chosen server if the operating system supports that feature.

## Pinging a Hostname/IP Address from the Web UI

### Before you begin

You must log in with user or admin privileges to perform this task.

### Procedure

**Step 1** In the toolbar above the work pane, click the **Ping** icon.

**Step 2** In the **Ping Details** dialog box, update the following fields:

Actions	Description
* <b>Hostname/IP Address</b> field	Hostname or IP address you want to reach out to.
* <b>Number of Retries</b> field	The maximum number of retries allowed to ping the IP address. The default value is 3. The valid range is from 1 to 10.
* <b>Timeout</b> field	The maximum response time for a pinging activity. The default value is 10 seconds. The valid range is from 1 to 20 seconds.
<b>Ping Status</b> field	Displays results of the pinging activity.
<b>Details</b> button	Displays details of the pinging activity.
<b>Ping</b> button	Pings the IP address.
<b>Cancel</b> button	Closes the dialog box without pinging.

**Step 3** Click **Ping**.

## Toggling the Locator LEDs

### Before you begin

You must log in with user or admin privileges to perform this task.

---

**Procedure**

---

- Step 1** In the **Navigation** pane, click the **Chassis** menu.
  - Step 2** In the **Chassis** menu, click **Summary**.
  - Step 3** In the toolbar above the work pane, click the **Locator LED** link.
  - Step 4** Select **Turn On Locator LED** or **Turn Off Locator LED**.
- 

## Selecting a Time Zone

**Before you begin**

You must log in with admin privileges to perform this task.

**Procedure**

---

- Step 1** In the **Navigation** pane, click the **Chassis** menu.
  - Step 2** In the **Chassis** menu, click **Summary**.
  - Step 3** In the **Cisco Integrated Management Controller (Cisco IMC) Information** area, click **Select Timezone**.  
**Select Timezone** screen appears.
  - Step 4** In the **Select Timezone** pop-up screen, mouse over the map and click on the location to select your time zone or choose your time zone from the **Timezone** drop-down menu.
  - Step 5** Click **OK**.
-

