



Requirements and Support

This chapter contains the following topics:

- [Requirements, on page 1](#)
- [Support, on page 1](#)

Requirements



Important

Separate ISO containers are released for each server platform. Be sure to download the correct ISO container for the server.

While upgrading or downgrading from one release to another, see the **Upgrade Paths for Release** section of the respective release notes at the following location for upgrade and downgrade scenarios: [Release Notes for Cisco UCS C-Series Software](#)

For detailed information about the firmware versions of the servers and associated components, see [Cisco UCS C-Series Integrated Management Controller Firmware Files](#)

Support

The Cisco Host Upgrade Utility checks for and then updates the firmware for LSI controller devices on Cisco UCS C-series servers. For a complete list of supported LSI controller devices on the supported servers, see the

[Cisco UCS C-Series Integrated Management Controller Firmware Files, Release 2.0](#)

