



# Requirements and Support

---

This chapter contains the following topics:

- [Requirements, page 1](#)
- [Support, page 1](#)

## Requirements



---

**Important**

Separate ISO containers are released for each server platform. Be sure to download the correct ISO container for the server.

---

We recommend the minimum version required for an upgrade is N-2. Where N is the release that you want to upgrade to. However, upgrading to higher versions may be possible. For detailed information about the firmware versions of the servers and associated components for all releases, see [Cisco UCS C-Series Integrated Management Controller Firmware Files](#)

## Support

The Cisco Host Upgrade Utility checks for and then updates the firmware for LSI controller devices on Cisco UCS C-series servers. For a complete list of supported LSI controller devices on the supported servers, see the *Release Notes for Cisco UCS C-Series Software* available at the following location:

[http://www.cisco.com/en/US/products/ps10739/prod\\_release\\_notes\\_list.html](http://www.cisco.com/en/US/products/ps10739/prod_release_notes_list.html)

