



Requirements and Support

This chapter contains the following topics:

- [Requirements, on page 1](#)
- [Support, on page 1](#)

Requirements



Important

Separate ISO containers are released for each server platform. Be sure to download the correct ISO container for the server.

While upgrading or downgrading from one release to another, see the Upgrade Paths for Release section of the respective release notes at the following location for upgrade and downgrade scenarios: [Release Notes for Cisco UCS C-Series Software](#)

For detailed information about the available components per server and their firmware versions, see: [Firmware Version Listing and Internal Dependencies for Cisco IMC Releases](#)

Support

The Cisco Host Upgrade Utility checks for and then updates the firmware for the components on Cisco UCS C-series servers. For a complete list of server specific components supported in a release, see the [Firmware Version Listing and Internal Dependencies for Cisco IMC Releases](#)



Note

If the firmware version of a component that you are trying to update to is the same as the current firmware version, then HUU skips the update for that component, but proceeds to update the firmware of the components that are not updated.
