



Viewing Sensors

This chapter includes the following sections:

- [Viewing Chassis Sensors, on page 1](#)

Viewing Chassis Sensors

Viewing Power Supply Sensors

Procedure

- Step 1** In the **Navigation** pane, click the **Chassis** menu.
- Step 2** In the **Chassis** menu, click **Sensors**.
- Step 3** In the **Sensors** working area, click the **Power Supply** tab.
- Step 4** Review the following sensor properties for power supply:

Properties Area

| Name | Description |
|-------------------------|-------------------------------------|
| Redundancy Status field | The power supply redundancy status. |

Threshold Sensors Area

| Name | Description |
|--------------------|------------------------|
| Sensor Name column | The name of the sensor |

| Name | Description |
|--------------------------------------|--|
| Sensor Status column | The status of the sensor. This can be one of the following: <ul style="list-style-type: none"> • Unknown • Informational • Normal • Warning • Critical • Non-Recoverable |
| Reading column | The current power usage, in watts. |
| Critical Threshold Min column | The minimum critical threshold. |
| Critical Threshold Max column | The maximum critical threshold. |
| Non-Recoverable Threshold Min column | The minimum non-recoverable threshold. |
| Non-Recoverable Threshold Max column | The maximum non-recoverable threshold. |

Discrete Sensors Area

| Name | Description |
|----------------------|--|
| Sensor Name column | The name of the sensor. |
| Sensor Status column | The status of the sensor. This can be one of the following: <ul style="list-style-type: none"> • Unknown • Informational • Normal • Warning • Critical • Non-Recoverable |
| Reading column | The basic state of the sensor. |

Viewing Fan Sensors

Procedure

- Step 1** In the **Navigation** pane, click the **Chassis** menu.
- Step 2** In the **Chassis** menu, click **Sensors**.
- Step 3** In the **Sensors** working area, click the **Fan** tab.
- Step 4** Review the following fan sensor properties:

| Name | Description |
|---|--|
| Sensor Name column | The name of the sensor |
| Sensor Status column | The status of the sensor. This can be one of the following: <ul style="list-style-type: none"> • Unknown • Informational • Normal • Warning • Critical • Non-Recoverable |
| Speed (RPMS) column | The fan speed in RPM. |
| Critical Threshold Min column | The minimum critical threshold. |
| Critical Threshold Max column | The maximum critical threshold. |
| Non-Recoverable Threshold Min column | The minimum non-recoverable threshold. |
| Non-Recoverable Threshold Max column | The maximum non-recoverable threshold. |

Viewing Temperature Sensors

Procedure

- Step 1** In the **Navigation** pane, click the **Chassis** menu.
- Step 2** In the **Chassis** menu, click **Sensors**.
- Step 3** In the **Sensors** working area, click the **Temperature** tab.
- Step 4** Review the following temperature sensor properties:

| Name | Description |
|--------------------------------------|--|
| Sensor Name column | The name of the sensor |
| Sensor Status column | The status of the sensor. This can be one of the following: <ul style="list-style-type: none"> • Unknown • Informational • Normal • Warning • Critical • Non-Recoverable |
| Temperature column | The current temperature, in Celsius. |
| Critical Threshold Min column | The minimum critical threshold. |
| Critical Threshold Max column | The maximum critical threshold. |
| Non-Recoverable Threshold Min column | The minimum non-recoverable threshold. |

Viewing Voltage Sensors

Procedure

- Step 1** In the **Navigation** pane, click the **Chassis** menu.
- Step 2** In the **Chassis** menu, click **Sensors**.
- Step 3** In the **Sensors** working area, click the **Voltage** tab.
- Step 4** Review the following voltage sensor properties:

| Name | Description |
|--------------------|------------------------|
| Sensor Name column | The name of the sensor |

| Name | Description |
|---|--|
| Sensor Status column | The status of the sensor. This can be one of the following: <ul style="list-style-type: none"> • Unknown • Informational • Normal • Warning • Critical • Non-Recoverable |
| Voltage (V) column | The current voltage, in Volts. |
| Critical Threshold Min column | The minimum critical threshold. |
| Critical Threshold Max column | The maximum critical threshold. |
| Non-Recoverable Threshold Min column | The minimum non-recoverable threshold. |
| Non-Recoverable Threshold Max column | The maximum non-recoverable threshold. |

Viewing Current Sensors

Procedure

-
- Step 1** In the **Navigation** pane, click the **Chassis** menu.
 - Step 2** In the **Chassis** menu, click **Sensors**.
 - Step 3** In the **Sensors** working area, click the **Current** tab.
 - Step 4** Review the following current sensor properties:
-

Viewing Storage Sensors

Procedure

-
- Step 1** In the **Navigation** pane, click the **Compute** menu.
 - Step 2** In the **Chassis** menu, click **Sensors**.
 - Step 3** In the **Storage** tab's **Storage Sensors** area, view the following storage-related statistics for the server:

| Name | Description |
|---------------|---|
| Name column | The name of the storage device. |
| Status column | A brief description of the storage device status. |
