



Upgrading Cisco UCS B-Series Hardware

Upgrading Fabric Interconnects 2

Fabric Interconnect Upgrade Considerations 2

Fabric Interconnect Port Connection Record 6

Upgrading a Fabric Interconnect Cluster 8

Upgrading I/O Modules 11

FEX Upgrade Considerations 11

FEX Port Connection Record 12

Upgrading a FEX 13

Upgrading Adapter Cards 14

Adapter Card Upgrade Considerations 14

Upgrading an Adapter Card 14

Upgrading Integrated Rack-Mount Servers 16

Required Order of Steps for Integrating Cisco UCS Rack-Mount Servers 16

Upgrades of Integrated Rack-Mount Servers 16

Related Cisco UCS Documentation 17

Obtaining Documentation and Submitting a Service Request 18

Upgrading Fabric Interconnects

This section describes the considerations and procedure for upgrading a fabric interconnect.

Fabric Interconnect Upgrade Considerations

Be sure the following prerequisites are met before beginning any procedures in this section:



Caution

All software and firmware on all components must be upgraded to the latest software release and build available before attempting an upgrade. Cisco UCS software version 2.0 is the bare minimum version for the Cisco UCS 6248 UP. The new Cisco UCS 6200 series fabric interconnects must be loaded with the same build version that is on the Cisco UCS 6100 series fabric interconnect it will replace.



Caution

If you intend to implement the fabric port channel feature after you upgrade the hardware, you may need to rearrange the cabling between the FEX and the fabric interconnect before you configure this feature. A fabric port channel requires that all physical links from a given FEX physically connect to a contiguous block of ports (1 to 8 or 9 to 16, and so on), and that a Cisco UCS 2200 Series FEX is connected to a Cisco UCS 6200 Series fabric interconnect.

- Licenses from Cisco UCS 6100 series fabric interconnects are not transferable to Cisco UCS 6200 series fabric interconnects. You must obtain licenses for the Cisco UCS 6200 series fabric interconnects before you upgrade.
- Upgrading the fabric interconnect should be done before upgrading to a new FEX or virtual interface card.
- Do not attempt to implement new software features from the new Cisco UCS software version until all required hardware is installed.
- Changes to the topology, such as the number of servers or uplink connections, should be performed after the fabric interconnect upgrade is complete.
- Make a detailed record of the cabling between FEXes and fabric interconnects using the provided table. You must preserve the physical port mapping to maintain the server pinning already configured and minimize down time. See [Table 1: Fabric Interconnect Port Connection Record](#), on page 6.
- For a cluster configuration, both fabric interconnects must have symmetrical connection topologies between fabric interconnect and FEXes.
- Standalone installations should expect down time. Upgrading a fabric interconnect is inherently traffic disruptive.
- A best practice would be to perform a full configuration and software backup before performing this hardware upgrade.

Port Mapping for Upgrades

The upgrade described here is primarily for upgrading a Cisco UCS 6120 fabric interconnect to a Cisco UCS 6248. If you have a Cisco UCS 6140 fabric interconnect that has 48 or less physical ports connected, you will also be able to utilize these steps, the same principles will apply though you will have to manually map any ports connected to slot 3 on a UCS 6140 as the UCS 6248 has no

slot 3. The same considerations will also apply when upgrading a Cisco UCS 6140 fabric interconnect to a Cisco UCS 6296, though the 6296 has enough slots that no manual remapping will be necessary.

Fixed Ports

On the UCS 6120 fabric interconnect, the fixed ports on slot 1 are all Ethernet ports, which might be further configured as Server ports or uplink Ethernet ports. On the UCS 6248 fabric interconnect, you can separate the 32 physical ports in slot one into two contiguous pools, low numbered ports being Ethernet ports and high numbered ports being Fibre Channel ports. When upgrading to a UCS 6248, the UCS 6120 port mappings can be directly carried over on fixed ports with no reconfiguration required. When upgrading a UCS 6140 to a UCS 6296, the port mappings can be directly carried over on fixed ports with no reconfiguration required.




Note Since a UCS 6140 has 40 ports on slot 1 and a UCS 6248 has 32 ports, any ports currently configured on ports 1/33 to 1/40 of the UCS 6140 will have to be moved during the upgrade process.



Caution If you ever need to change the pool sizes for slot 1, you must reboot the fabric interconnect which can lead to a service disruption. If you ever need to change the pool sizes for slot 2, you must reset the expansion module in slot 2. To minimize disruption, plan to have at least a few Ethernet uplink and Fibre Channel uplink ports configured on slot 1. Implement this fail safe after the upgrade is complete and the system restabilizes.

Figure 1: Cisco UCS 6248 Port Numbering

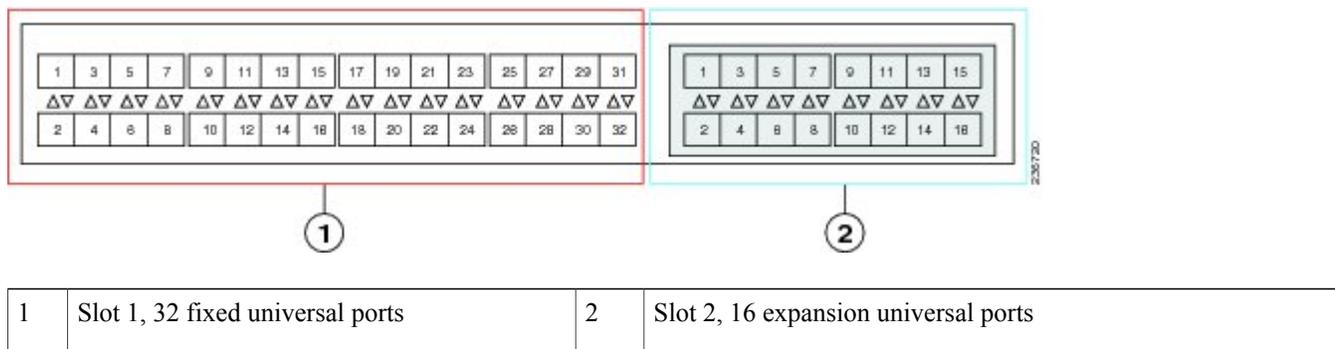

Expansion Ports


On the UCS 6120 fabric interconnect, the expansion slot port types depend on which of four possible expansion modules are installed. On the UCS 6248 fabric interconnect, you can separate the 16 physical ports in an expansion slot into two pools, low numbered ports being Ethernet ports and high numbered ports being Fibre Channel, see [the Cisco UCS Manager configuration guides](#). When upgrading to a UCS 6248 or UCS 6296, you may need to pre- plan and re-configure expansion module port mappings before powering up the new interconnect.



Note Any expansion ports in slot 3 of a UCS 6140 fabric interconnect will need to have their configuration deleted and their use remapped to ports on slots 1 or 2 of the new UCS 6248. Upgrading a UCS 6140 to a UCS 6296 is the preferred path as this manual remapping will not be necessary.


- If you have an N10-E0080 or N10-E0060 Fibre channel expansion module in your UCS 6120, the existing fibre channel configurations can simply carry over to the new UCS 6248, though this may not be appropriate for all situations as it will mean that all ports in slot 2 are Fibre Channel. If you want to reconfigure ports 2/1 to 2/8 to use ports 2/9 to 2/16, do so after the upgrade is completed.

Figure 2: Cisco UCS 6120 Port Numbering when Configured with the N10-E0080 Expansion Module

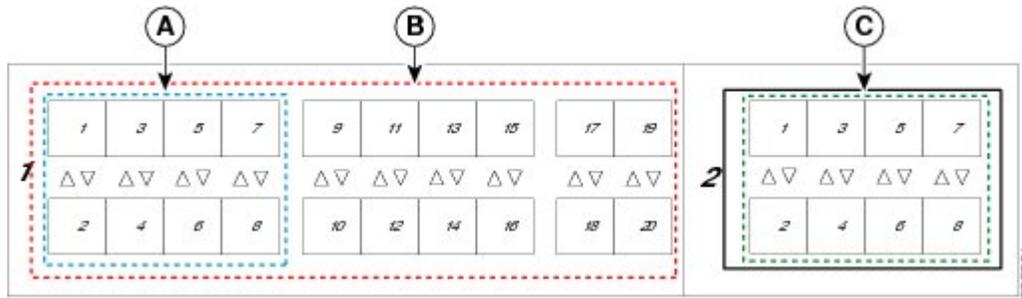

A	Slot 1, ports 1 through 8: 10-Gigabit or 1 Gigabit Ethernet capable ports	C	Slot 2 Fibre Channel ports 1 through 8
B	Slot 1, ports 1 through 20: 10-Gigabit Ethernet ports		


Figure 3: Cisco UCS 6120 Port Numbering when Configured with the N10-E0060 Expansion Module

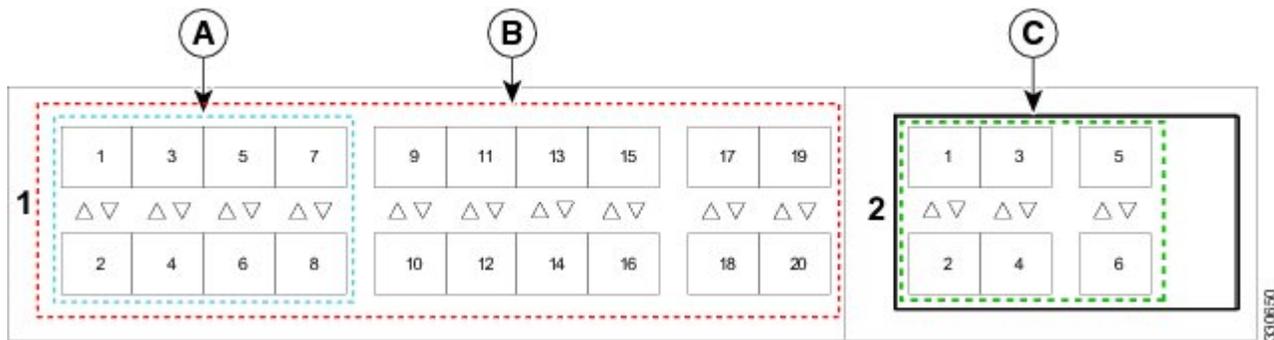

A	Slot 1, ports 1 through 8: 10-Gigabit or 1 Gigabit Ethernet capable ports	C	Slot 2 Fibre Channel ports 1 through 6
B	Slot 1, ports 1 through 20: 10-Gigabit Ethernet ports		

- If you have an N10-E0600 Fibre Channel expansion module in your UCS 6120, the existing Ethernet configurations can simply carry over to the UCS 6248, with ports 2/7 to 2/16 potentially configurable for either Ethernet or FC.


Figure 4: Cisco UCS 6120 Port Numbering when Configured with the N10-E0600 Expansion Module

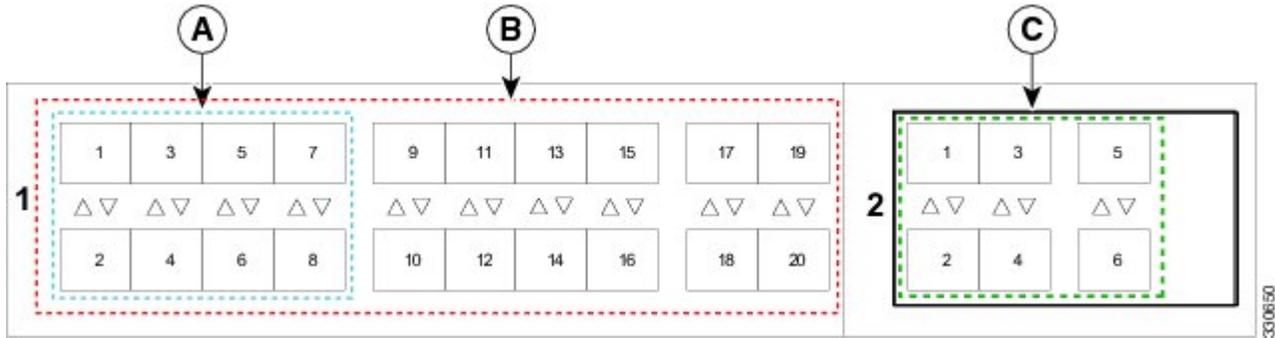

A	Slot 1, ports 1 through 8: 10-Gigabit or 1 Gigabit Ethernet capable unencrypted ports	C	Slot 2 10-Gigabit Ethernet ports 1 through 6
B	Slot 1, ports 1 through 20: 10-Gigabit Ethernet ports		

- If you have an N10-E0440 expansion module in your UCS 6120, the simplest direct mapping would be to allow Ethernet ports 2/1 to 2/4 on the UCS 6248 to carry over, then remap the fibre channel ports to new port numbers on either slot 1 or slot 2.

Figure 5: Cisco UCS 6120 Port Numbering when Configured with the N10-E0440 Expansion Module

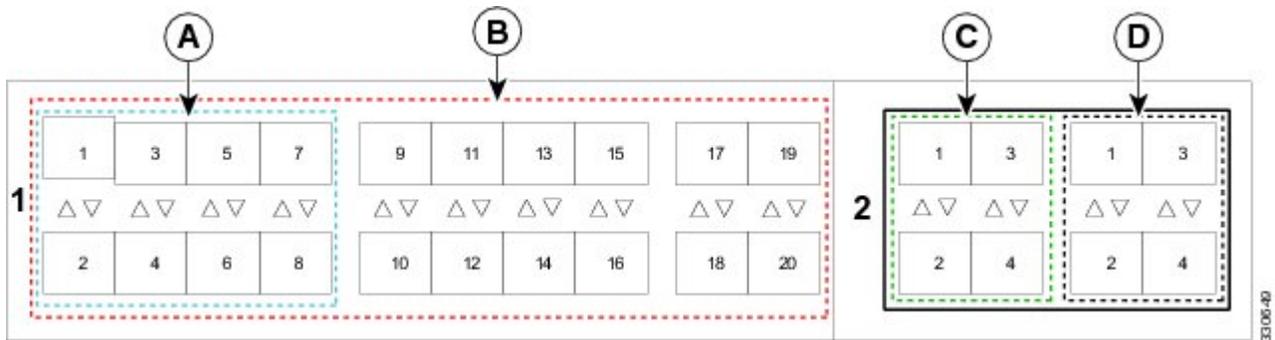

A	Slot 1, ports 1 through 8: 10-Gigabit or 1 Gigabit Ethernet capable ports	C	Slot 2 10-Gigabit Ethernet ports 1 through 4
B	Slot 1, ports 1 through 20: 10-Gigabit Ethernet ports	D	Slot 2 Fibre Channel ports 1 through 4

Fabric Interconnect Port Connection Record

Table 1: Fabric Interconnect Port Connection Record

Fabric Interconnect A/B		Connected to					
Slot	Port	Chassis	IOM	Port	LAN or SAN Pin Group	Port Channel Group	Connection Notes
1	1						
	2						
	3						
	4						
	5						
	6						
	7						
	8						
	9						
	10						
	11						
	12						
	13						
	14						
	15						
	16						
	17						
	18						
	19						
	20						

Fabric Interconnect A/B		Connected to					
Slot	Port	Chassis	IOM	Port	LAN or SAN Pin Group	Port Channel Group	Connection Notes
	21						
	22						
	23						
	24						
	25						
	26						
	27						
	28						
	29						
	30						
	31						
	32						

Fabric Interconnect A/B		Connected to					
Slot	Port	Chassis	IOM	Port	LAN or SAN Pin Group	Port Channel Group	Connection Notes
2	1						
	2						
	3						
	4						
	5						
	6						
	7						
	8						
	9						
	10						
	11						
	12						
	13						
	14						
	15						
	16						

Upgrading a Fabric Interconnect Cluster



Caution

If your Cisco UCS 6120 fabric interconnect uses a N10-E0440 expansion module, or if you are migrating a Cisco UCS 6140 with an expansion module in slot 3 to a Cisco UCS 6248, pre-plan their deletion and remapping following the guidelines in the previous section on port maps.

Unless otherwise noted, for more information about how to perform configuration procedures in Cisco UCS Manager for a particular step, see the [Cisco UCS Manager configuration guide](#) for the appropriate release.

Procedure

- Step 1** Mount the replacement fabric interconnects into either the same rack or an adjacent rack. Refer to the Cisco UCS 6200 Series Installation Guide for details.
- Step 2** Using either the Cisco UCS Manager CLI or GUI, verify the state (subordinate or active) of the fabric interconnects. See http://www.cisco.com/en/us/docs/unified_computing/ucs/sw/upgrading/from1.4/to2.0/b_upgradingciscoucsfrom1.4to2.0_chapter_0101.html.
- Step 3** Back up the software configuration information and the Cisco UCS Manager software.
- Step 4** Disable the server ports on the subordinate fabric interconnect.
- Step 5** Power down the subordinate fabric interconnect by unplugging it from the power source. If you are monitoring the upgrade using a KVM session, you may need to reconnect the KVM session when you power down the fabric interconnect.
- Step 6** Disconnect the cables from the chassis FEXes or fabric extenders to the subordinate fabric interconnect ports in slot 1 on the old fabric interconnect.
- Step 7** Connect these cables into the corresponding ports on slot 1 of one of the new Cisco UCS 6248 UP fabric interconnects, using the connection records to preserve the port mapping and the configured server pinning. See [Fabric Interconnect Port Connection Record](#), on page 6.
See [Fabric Interconnect Upgrade Considerations](#), on page 2.
- Step 8** Disconnect the L1/L2, M1 management, and console cables on the old fabric interconnect. The ports for these connections are on the opposite side of the interconnect, so if your cables are just barely long enough to connect two rack-adjacent Cisco UCS 6120 interconnects you will probably need new cables.
- Step 9** Connect the M1 management, and console cables to the new Cisco UCS 6248 UP.
- Step 10** Connect the L1/L2 cables that were disconnected onto the new Cisco UCS 6248 UP. L1 connects to L1, L2 connects to L2.
- Step 11** Disconnect the Ethernet or FC cables from slot 2 of the old fabric interconnect.
- Step 12** Connect the Ethernet or FC cables to the corresponding ports in slot 2 of the new Cisco UCS 6248 UP. Some may go to slot 1, depending on the mappings planned out earlier in the process.
- Step 13** Connect the power to the new Cisco UCS 6248 UP, it will automatically boot and run POST tests. If it reboots itself, this is a normal behavior.
Important [Directly connect the console port to a terminal](#) and observe the boot sequence. You should at some point see the Basic System Configuration Dialog, where you will configure the switch as a subordinate interconnect. If you do not see this dialog, you either have different builds of software on your old primary and new subordinate, or the new subordinate has previously been part of a cluster and will need to have all configuration information wiped before it can be added to a cluster as a subordinate. In either case, immediately disconnect the L1 and L2 connections and complete the bringup as a standalone fabric interconnect, then correct the issue before proceeding further.
- Step 14** (Optional) Remap Cisco UCS 6100 fabric interconnect FC ports 2/1 to 2/4 on a N10-E0440 expansion module or any slot 3 ports onto the new fabric interconnect expansion module.
- Use Cisco UCS Manager to delete the ports on the subordinate fabric interconnect that you will need to move within the configuration.
 - For each port you have just deleted, create new ports on either slot 1 or slot 2. These ports must use the same port type definitions as the old ports, but will use different port numbers.

- c) For recently moved Ethernet server ports, reconfigure the associated service profile to use the new port number for the appropriate LAN pin group.
- d) For recently moved uplink Ethernet ports, reconfigure the port channel settings to use the new ports.
- e) For recently moved uplink FC ports, reconfigure the associated service profile SAN pin group to use the new ports.
- f) Reacknowledge chassis for blade servers and fabric extender for rack servers.
This will be disruptive to traffic, but is necessary in this specific scenario.

Step 15 The new subordinate fabric interconnect will automatically synchronize the configuration and database/state information from the primary fabric interconnect.
Synchronization between primary and subordinate fabric interconnects can take several minutes. You may see an error message that will persist until the server ports are enabled.
The port configuration is copied from the subordinate switch to the new hardware.

Step 16 Verify that the data path is ready.
See http://www.cisco.com/en/us/docs/unified_computing/ucs/sw/upgrading/from1.4/to2.0/b_upgradingciscoucsfrom1.4to2.0_chapter_0100.html.
Make sure all faults are resolved before proceeding.

- a) Verify and if necessary reconfigure the SAN pin group for FC ports in the associated service profile.
- b) Verify and if necessary reconfigure the LAN pin group for Ethernet ports in the associated service profile.
- c) Verify and if necessary reconfigure the port channel for uplink Ethernet ports.

Step 17 Enable the server ports that had been disabled in Step 4.

- a) If you have changed port mappings, you may need to reacknowledge the chassis or rack server connected to the subordinate fabric interconnect.
- b) Verify and if necessary reconfigure Ethernet ports as server ports.

Step 18 Promote the subordinate fabric interconnect to active, and repeat the process on the second Cisco UCS 6248 UP.
Cable the second new fabric interconnect identically to the first, and allow the reconfiguration done to be applied to the second new fabric interconnect as well.
See http://www.cisco.com/en/us/docs/unified_computing/ucs/sw/upgrading/from1.4/to2.0/b_upgradingciscoucsfrom1.4to2.0_chapter_0100.html.

Upgrading I/O Modules

This section describes the considerations and procedure for upgrading an I/O module.

FEX Upgrade Considerations

Be sure the following prerequisites are met before beginning any procedures in this section:

All software and firmware on all components must be upgraded to the same software release available before attempting an upgrade. This release must support the hardware you will be adding. Cisco UCS software version 2.0(1) is the bare minimum version for the UCS 2208XP FEX. Cisco UCS software version 2.0(2) is the bare minimum version for the Cisco UCS 2204XP FEX.

- Do not attempt to implement new software features from the new Cisco UCS software version until all required hardware is installed.
- Make a detailed record of the cabling between FEXes and fabric interconnects. You will need to preserve the physical port mapping to maintain the server pinning already configured and minimize down time.
- For a cluster configuration, both fabric interconnects must have symmetrical connection topologies between fabric interconnect and FEX.
- Standalone installations should expect down time. Upgrading a FEX will be inherently traffic disruptive.
- When performing hardware upgrades to implement features new to Cisco UCS software version 2.0, upgrade the fabric interconnect, then the FEX, then the adapter in the blade server.
- Cisco FEXes only support one, two, four, and (Cisco UCS 2208 only) eight link topologies between FEX and fabric interconnect. If there is a link failure on one of the links, Cisco UCS falls back to the next largest possible topology with regards to blade to fabric port mapping. If this ever happens, reacknowledge the chassis, and manually remap the fabric ports. It is recommended during the replacement of a fabric interconnect that you have all ports connected to the fabric interconnect before the configuration sync.
- A best practice would be to perform a full configuration and database/state information backup before performing this hardware upgrade.
- If you intend to implement the fabric port channel feature available in Cisco UCS software version 2.0, you may need to rearrange the cabling between FEX and fabric interconnect before performing the feature configuration. Fabric port channel will require that all physical links from a given FEX physically connect to a contiguous block of ports (1to8 or 9 to 16, and so on). This feature requires a Cisco UCS 2200 Series FEX connecting to a Cisco UCS 6200 Series Fabric Interconnect. See the [Cisco UCS Manager configuration guides](#).

FEX Port Connection Record

Table 2: FEX Port Connection Record

FEX		Connected to			
Number	Port	Fabric Interconnect A or B	Slot	Port	Connection Notes
1	1				
	2				
	3				
	4				
	5				
	6				
	7				
	8				
2	1				
	2				
	3				
	4				
	5				
	6				
	7				
	8				

Upgrading a FEX

Procedure

- Step 1** Connect to the cluster's fabric interconnect, and verify the state (subordinate or active) of the fabric interconnects.
- Step 2** Make a detailed record of the port mapping of the connections between the fabric interconnects and the FEXes.
- Step 3** Disconnect the 10 Gigabit Ethernet cables connecting the chassis FEX to the subordinate fabric interconnect on the FEX side.
- Step 4** Loosen the captive screws on the old FEX's levers.
- Step 5** Pull the levers outward to unseat the old FEX.
- Step 6** Make sure that the two levers at the front of the new FEX are pulled open.
- Step 7** Slide the new FEX into the FEX slot, ensuring that the new FEX is fully seated.
- Step 8** Close the levers and tighten the captive screw on each lever.
- Step 9** Connect the 10GbE cables into the appropriate ports on the new Cisco UCS 2208UP FEX or Cisco UCS 2204UP FEX, using the connection records to preserve the port mapping and the configured server pinning.
- Step 10** If you have changed port mappings, you may need to reacknowledge the FEX or rack server connected to the subordinate fabric interconnect.
This action will only be necessary if you have changed port mappings, but it will be disruptive if it is needed. See the [Cisco UCS Manager configuration guides](#).
- Step 11** Promote the subordinate fabric interconnect to active, and repeat steps 2 to 9 on the second Cisco UCS 2208 UP or Cisco UCS 2204UP FEX.
It may take 5-15 minutes for all error indications to clear on the GUI, and for the service profiles on the servers in the chassis to come up.
-

Upgrading Adapter Cards

This section describes the considerations and procedure for upgrading an adapter card.

Adapter Card Upgrade Considerations

Be sure the following prerequisites are met before beginning any procedures in this section.

All software and firmware on all components must be upgraded to the latest software release available before attempting an upgrade. Cisco UCS software version 2.0(1) is the bare minimum version for the Cisco UCS 6248 UP, the Cisco UCS 2208 FEX, and the Cisco UCS Virtual Interface Card 1280. Cisco UCS software version 2.0(2) is the bare minimum version for the Cisco UCS 6296 UP and the Cisco UCS 2204 FEX.

- Do not attempt to implement new software features from the new Cisco UCS software version until all required hardware is installed.
- You will be able to physically install a Cisco UCS Virtual Interface Card 1280 without first installing a Cisco UCS 2208 FEX or Cisco UCS 2204 FEX and additional connections to a fabric interconnect, but to do so would not allow you to take full advantage of the additional performance the Cisco UCS Virtual Interface Card 1280 provides compared to the Cisco UCS M81KR. The preferred order is to upgrade the Fabric interconnect, then the FEX, and finally the Cisco UCS Virtual Interface Card 1280.
- Blade servers allowing more than one Adapter Card may mix the Cisco UCS Virtual Interface Card 1280 with the Cisco UCS M81KR, the M72KR-E, or the M72KR-Q. Dual Cisco UCS Virtual Interface Card 1280 adapters are also supported.
- A best practice would be to perform a full configuration and software backup before performing this hardware upgrade.
- If you intend to implement the fabric port channel feature available in Cisco UCS software version 2.0, you may need to rearrange the cabling between IOM and Fabric Interconnect before performing the feature configuration. Fabric port channel will require that all physical links from a given FEX physically connect to a contiguous block of ports (1-8 or 9-16, and so on). This feature requires a Cisco UCS 2200 Series FEX connecting to a Cisco UCS 6200 Series Fabric Interconnect. See the [Fabric Port Channel](#) sections in the configuration guides for more details.

Upgrading an Adapter Card

Procedure

- Step 1** Use the locator button in the Cisco UCS Manager GUI to confirm which server you are upgrading.
- Step 2** Decommission and remove the blade server using the adapter you wish to upgrade.
 - a) Decommission the server as described in the [Decommissioning the Server](#) section of your software release's configuration guide or by using the power button on the front panel.
 - b) Completely loosen the captive screws on the front of the blade.
 - c) Remove the blade from the chassis by pulling the ejector levers on the blade until it unseats the extended memory blade server.
 - d) Slide the blade part of the way out of the chassis, and place your other hand under the blade to support its weight.

- e) Once removed, place the blade on an antistatic mat or antistatic foam if you are not immediately reinstalling it into another slot.

Step 3 Remove the top cover and remove the old adapter card.

- a) Press and hold the button down.
- b) (Most models) Press and hold the top cover release button down. While holding the back end of the cover, pull the cover back and then up.
- c) (B230) Press and hold the top cover release button down. While holding the back end of the cover, pull the cover forward. The face plate is meant to be removed along with the top cover.
- d) Loosen the three captive screws attaching the Adapter Card to the motherboard. Remove the adapter connector from the motherboard connector and pull straight up. Be careful not to damage the connectors.
- e) Remove the adapter connector from the motherboard connector and pull straight up. Be careful not to damage the connectors. You may need to gently rock the card from side to side to get the connector to unseat.

Step 4 Install the new adapter card.

- a) Position the adapter board connector above the mother board connector and align the three adapter captive screws to the posts on the motherboard.
- b) Firmly press the adapter connector into the motherboard connector. If the seating is bad, it may cause the network connection LED to stay amber when the server is restarted.
- c) Tighten the three captive screws.

Step 5 Replace the top cover and reinsert the blade server in the chassis.

Step 6 Recommission the server by [reacknowledging the server slot](#).

Step 7 When upgrading a virtual interface card, configurations created for the older card will carry over to the new hardware. Additional configuration is now possible, but no reconfiguration is required.

Upgrading Integrated Rack-Mount Servers

This section describes the considerations and procedure for upgrading a rack-mount server that has been integrated with Cisco UCS Manager.

Required Order of Steps for Integrating Cisco UCS Rack-Mount Servers

After you upgrade the firmware for the existing components, you can integrate one or more Cisco UCS rack-mount servers. When you integrate rack-mount servers, you must perform the steps in the following order:

- 1 If you have not already done so, configure the rack server discovery policy in Cisco UCS Manager.
- 2 Follow the instructions in the appropriate [rack-mount server installation guide](#) for installing and integrating a rack-mount server in a system managed by Cisco UCS Manager.
- 3 Wait for Cisco UCS Manager to discover the new server. If server discovery does not begin within a few minutes, acknowledge the server.

Upgrades of Integrated Rack-Mount Servers

Cisco UCS Release 2.0(2) does not support integration with rack-mount servers through Cisco Nexus 2248 FEXes. If you upgrade a Cisco UCS domain that includes integrated rack-mount servers to Release 2.0(2) or later, you must to upgrade your setup to include Cisco Nexus 2232 FEXes.

For more information, see the appropriate [rack-mount server installation guide](#) for migrating a rack-mount server integration to Cisco UCS Release 2.0(2).

Revised: March 11, 2015, OL-28912-02

Related Cisco UCS Documentation

Documentation Roadmaps

For a complete list of all B-Series documentation, see the *Cisco UCS B-Series Servers Documentation Roadmap* available at the following URL: <http://www.cisco.com/go/unifiedcomputing/b-series-doc>.

For a complete list of all C-Series documentation, see the *Cisco UCS C-Series Servers Documentation Roadmap* available at the following URL: <http://www.cisco.com/go/unifiedcomputing/c-series-doc>.

For a complete list of all M-Series documentation, see the *Cisco UCS M-Series Servers Documentation Roadmap* available at the following URL: https://www-author.cisco.com/c/en/us/td/docs/unified_computing/ucs/overview/guide/UCS_M_Series_Servers_Documentation_Roadmap.html

Other Documentation Resources

An ISO file containing all B and C-Series documents is available at the following URL: <http://www.cisco.com/cisco/software/type.html?mdfid=283853163&flowid=25821>. From this page, click **Unified Computing System (UCS) Documentation Roadmap Bundle**.

The ISO file is updated after every major documentation release.

Follow [Cisco UCS Docs on Twitter](#) to receive document update notifications.

Revised: March 11, 2015, OL-28912-02

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly [What's New in Cisco Product Documentation](#), which also lists all new and revised Cisco technical documentation.

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.

Follow [Cisco UCS Docs on Twitter](#) to receive document update notifications.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <http://www.cisco.com/go/trademarks>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2013-2015 Cisco Systems, Inc. All rights reserved.



Americas Headquarters
Cisco Systems, Inc.
San Jose, CA 95134-1706
USA

Asia Pacific Headquarters
Cisco Systems (USA) Pte. Ltd.
Singapore

Europe Headquarters
Cisco Systems International BV
Amsterdam, The Netherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at www.cisco.com/go/offices.