



Uninstalling Cisco UCS VIC Drivers for Windows

- [Uninstalling Windows Drivers, page 1](#)
- [Uninstalling the NIC Teaming Driver , page 2](#)
- [Uninstalling the iSCSI Crash Dump Driver, page 2](#)

Uninstalling Windows Drivers

Procedure

- Step 1** Start the **Device Manager**.
- a) Right-click **My Computer**.
 - b) Choose **Manage**.
 - c) Choose **Device Manager**.
- Step 2** Expand the adapter.
- For the eNIC driver, expand **Network Adapters**.
 - For the fNIC driver, expand **Storage Controllers**.
- Step 3** In the **Devices** list, right-click the adapter and select **Uninstall**.
- For the eNIC driver, right-click **Cisco VIC Ethernet Interface**.
 - For the fNIC driver, right-click **Cisco VIC FCoE Storport Miniport**.
- Step 4** In the **Confirm Device Removal** dialog box, click **OK**.
-

Uninstalling the NIC Teaming Driver

Procedure

- Step 1** In Windows, open a command prompt with administrator privileges.
 - Step 2** At the command prompt, enter **enictool -u**
The Cisco NIC Teaming Driver is uninstalled.
-

Uninstalling the iSCSI Crash Dump Driver

Procedure

- Step 1** Open a command prompt with administrator privileges.
 - Step 2** Enter the following command to uninstall the iSCSI Crash Dump Driver using the iSCSI Crash Dump Driver utility:
edumputil -u.
 - Step 3** Reboot the host.
-