

CAI Go Win Offer for Rack M8 Server Ordering Guide

Introduction

The Cisco UCS C225 M8 Rack Server extends the capabilities of the Cisco UCS rack server portfolio. It powers 5th Gen and 4th Gen AMD EPYC™ Processors with 150 percent more cores per socket designed using AMD's chiplet architecture. With advanced features such as AMD Infinity Guard, compute-intensive applications will see significant performance improvements and reap other benefits such as power and cost efficiencies.

The Cisco UCS C245 M8 Rack Server extends the capabilities of the Cisco UCS rack server portfolio. It powers 5th Gen and 4th Gen AMD EPYC™ Processors with up to 160 cores per socket designed using AMD's chiplet architecture. With advanced features like AMD Infinity Guard, compute-intensive applications will see significant performance improvements and will reap other benefits such as power and cost efficiencies.

Purpose, Audience, and Scope

Purpose

This document describes how to order the Cisco CAI Go Win Offer for Rack M8 Server Product

Scope

This ordering guide describes the information for:


- Ordering Structure of Cisco CAI Go Win Offer for Rack M8 Server Product
- · Catalog of Product IDs
- Ordering Server Hardware and Software options
- · Links to additional resources


Audience


Buy Method Through Cisco (Eg: Direct Customer & Tier 1 Partners):


- Scenario 1: Customer Without Enterprise Agreement for Cisco Intersight Software License
- Scenario 2: Customer With Enterprise Agreement for Cisco Intersight Software License
 Buy Method Through Distributor (Eg: Tier 1 & Tier 2 Partners):
 - Scenario 1: Customer Without Enterprise Agreement for Cisco Intersight Software License
 - Scenario 2: Customer With Enterprise Agreement for Cisco Intersight Software License

Ordering Structure of Rack M8 Server CAI Gowin Offers

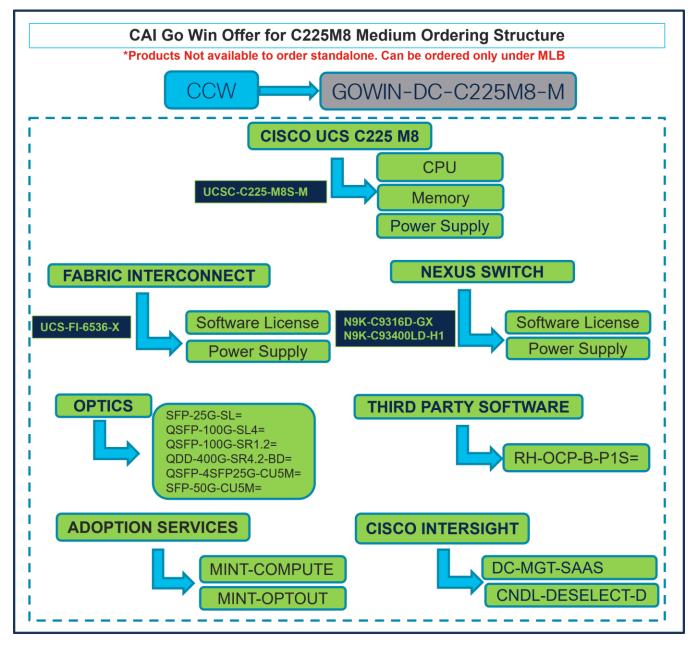

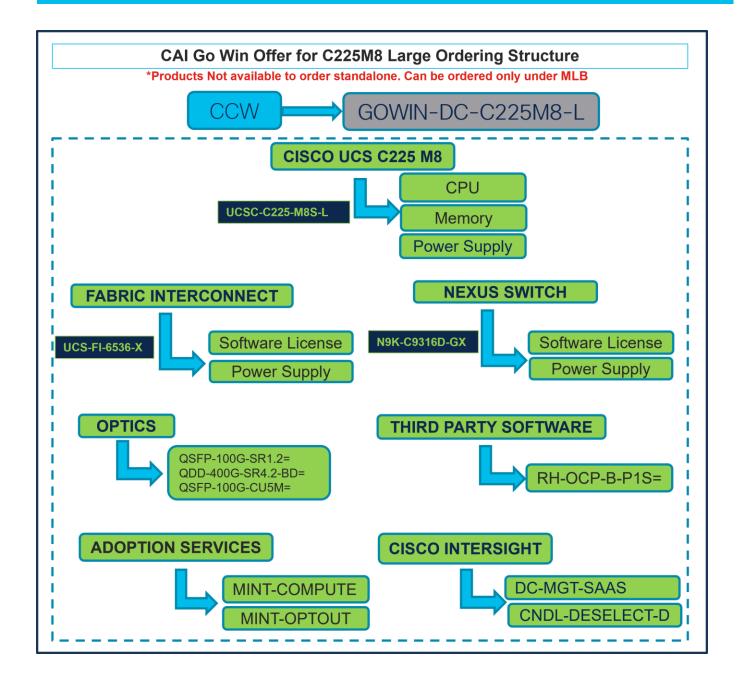

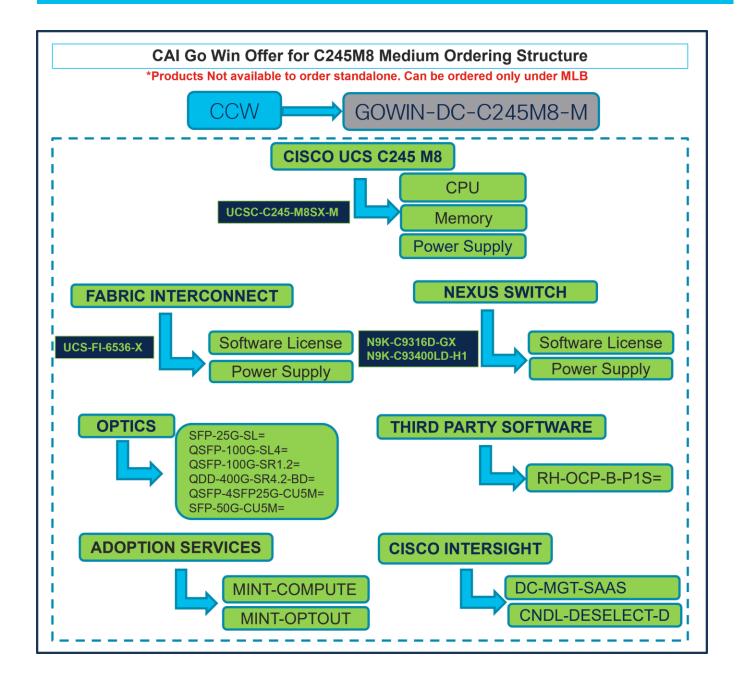

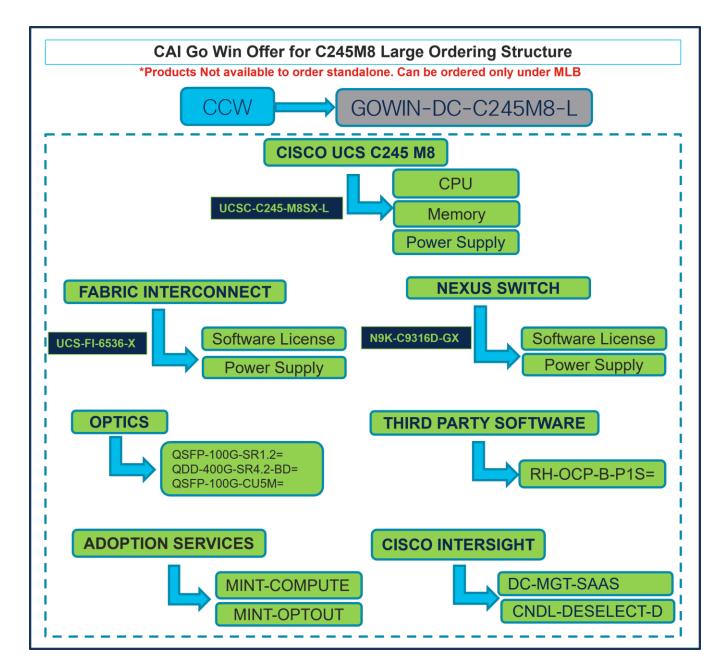

Catalog of Product IDs (PIDs)

Table 1. PID of Major Line Bundle (MLB)

Product ID (PID)	Description
GOWIN-DC-C225M8-M	CAI Go Win Offer for C225M8 Medium
GOWIN-DC-C225M8-L	CAI Go Win Offer for C225M8 Large
GOWIN-DC-C245M8-M	CAI Go Win Offer for C245M8 Medium

Product ID (PID)	Description
GOWIN-DC-C245M8-L	CAI Go Win Offer for C245M8 Large

Table 2. Server node Major Line PIDs

Product ID (PID)	Description
UCSC-C225-M8S-M	UCS C225 M8 CAI Go Win Offer Medium Server
UCSC-C225-M8S-L	UCS C225 M8 CAI Go Win Offer Large Server
UCSC-C245-M8SX-M	UCS C245 M8 CAI Go Win Offer Medium Server
UCSC-C245-M8SX-L	UCS C245 M8 CAI Go Win Offer Large Server

 Table 3.
 Fabric Interconnect Major Line PIDs

Product ID (PID)	Description
UCS-FI-6536-X	CAI Go Win Offer Fabric Interconnect 6536 for UCSM

Table 4. Nexus Switch

Product ID (PID)	Description
N9K-C9316D-GX	Nexus 9300 Series, 16p 400G
N9K-C93400LD-H1	Nexus 9K 48x 25G/50G + 4x 400G QSFP-DD

Table 5. Optic Major Line PIDs

Product ID (PID)	Description
SFP-25G-SL=	25GBASE-SR SFP SL Module
QSFP-100G-SL4=	100GBASE SL4 for up to 30M over OM4 MMF
QSFP-100G-SR1.2=	100G SR1.2 BiDi QSFP Transceiver, LC, 100m OM4 MMF
QDD-400G-SR4.2-BD=	400G QSFP-DD Transceiver, MPO-12, 100m OM4 MMF 400GBASE-SR4
QSFP-4SFP25G-CU5M=	100GBase QSFP to 4xSFP25G Passive Copper Splitter Cable, 5m
SFP-50G-CU5M=	25/50GBASE-CU SFP56 Cable 5 Meter LSZH

 Table 6.
 Third Party Software

Product ID (PID)	Description
RH-OCP-B-P1S=	OpenShiftContainerPlatform(BM),Prem 1YSnS Req(1-2CPU-64core)

Table 7. Adoption Service

Product ID (PID)	Description
MINT-COMPUTE	SolutionsPlus: DC Compute Mentored Installation - MINT
MINT-OPTOUT	Partner or CX Services Options - No MINT

Table 8. Cisco Intersight Major Line PIDs

Product ID (PID)	Description
DC-MGT-SAAS	Cisco Intersight SaaS
CNDL-DESELECT-D	Conditional Deselect

GOWIN-DC-C225M8-M Ordering Process


Buy Method Through Cisco (Eg: Direct Customer & Tier 1 Partners)

Scenario 1: Customer Without Enterprise Agreement for Cisco Intersight Software License Step 1.




- a. In CCW, search for MLB PID and click on "Add"
- b. Click on "Select Options" to enter the configurator.

Step 2.

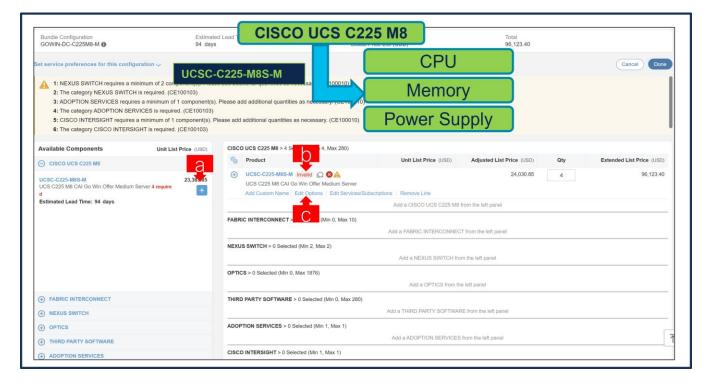


- a. ATO: UCSC-C225-M8S-M is preselected with 4 QTY from Category: CISCO UCS C225 M8.
- b. Notice the ATO: UCSC-C225-M8S-M Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 3.

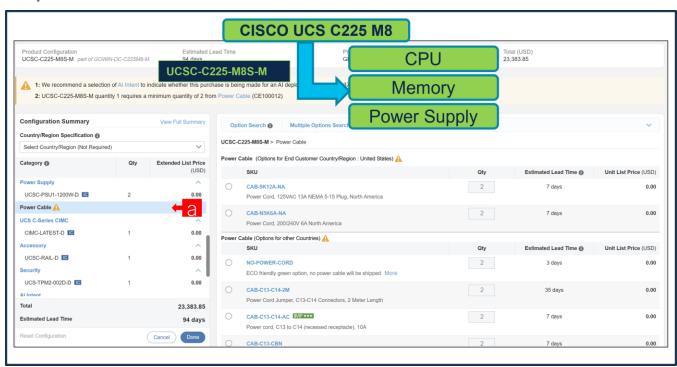


 All Server Components are Auto Included in the configuration. Please select appropriate Power Cable.

Step 4.

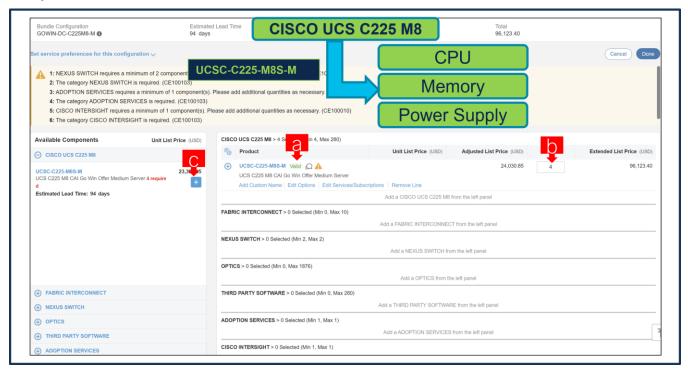

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 5.

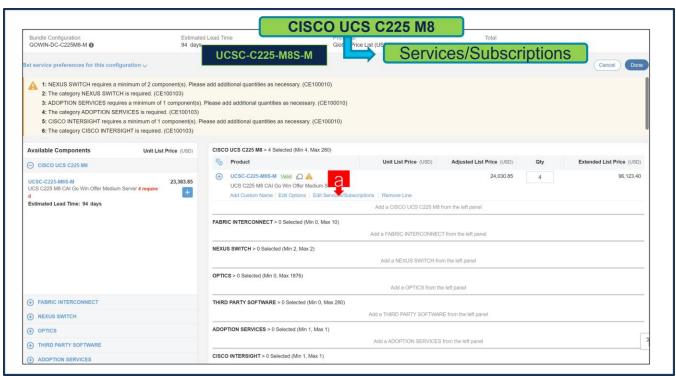

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 6.




- a. Enter the Term Duration
- b. Click on "Apply" and "Done"

Step 7.

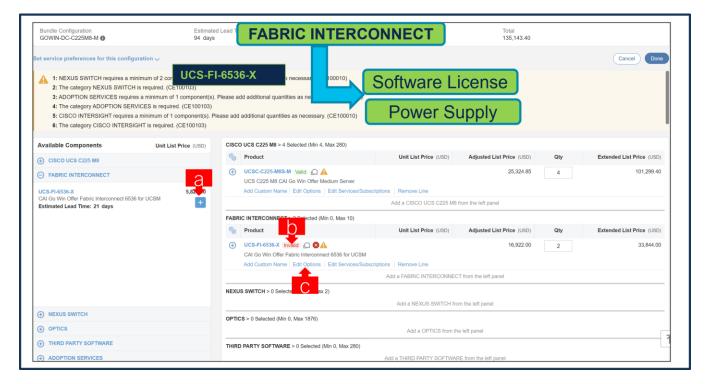


- FABRIC INTERCONNECT: UCS-FI-6536-X is an optional selection and minimum 2 QTY is required if selected.
- b. Notice the UCS-FI-6536-X ATO Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 8.

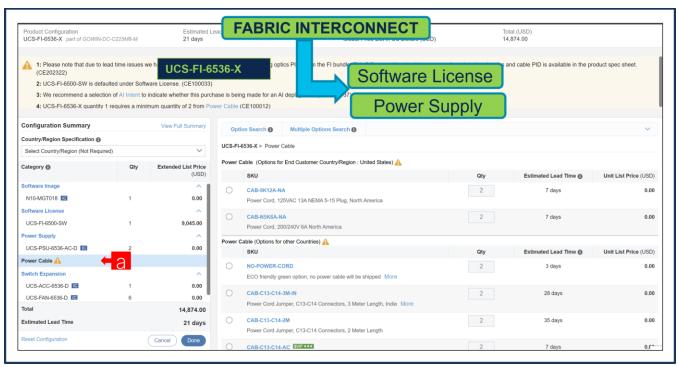


a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 9.

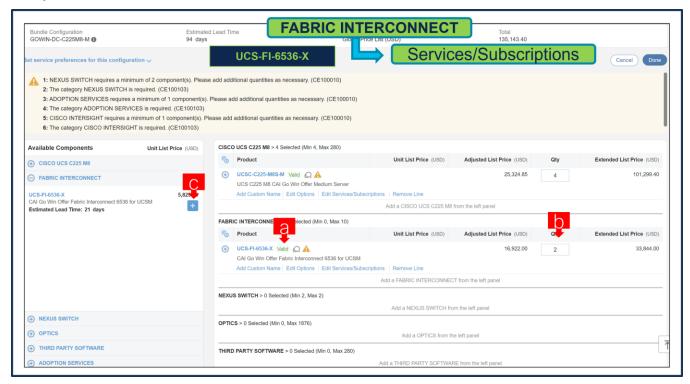

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 10.

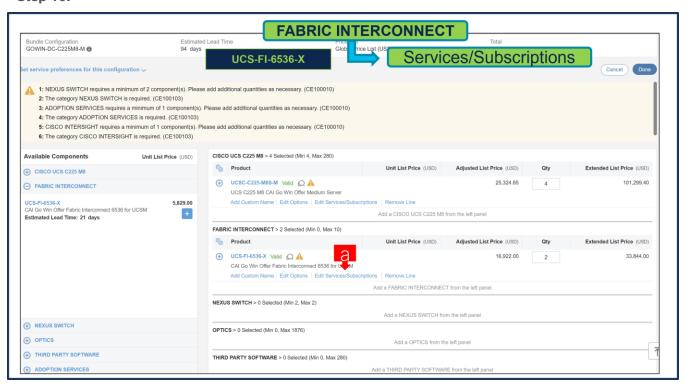

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 11.

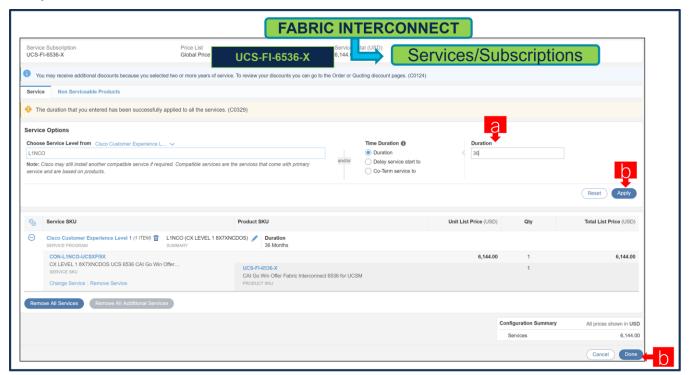

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"

Step 12.

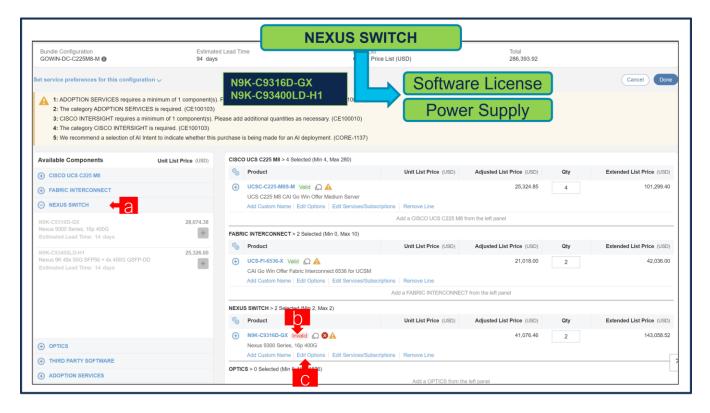


- a. At least one selection is required from NEXUS SWITCH Category.
- b. Notice the ATO: N9K-C9316D-GX Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Note:

- If FI: UCS-FI-6536-X is selected, then user must select 2 QTY of N9K-C9316D-GX.
- If FI: UCS-FI-6536-X is not selected, then user must select 2 QTY of N9K-C93400LD-H1...


Step 13.

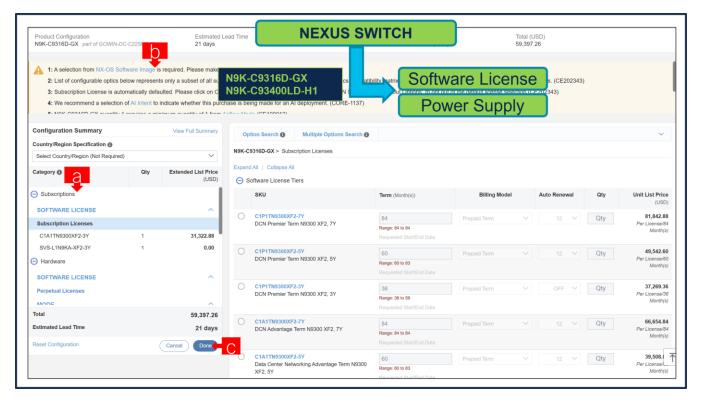

- a. Software Subscription License is default selection. User may select other available options.
- b. Please follow the warning messages and make the minimum required selections.
- c. Click Done when completed.

Note: If Order is through Distributor, please select C1-SUBS-OPTOUT from Perpetual License Option


Step 14.

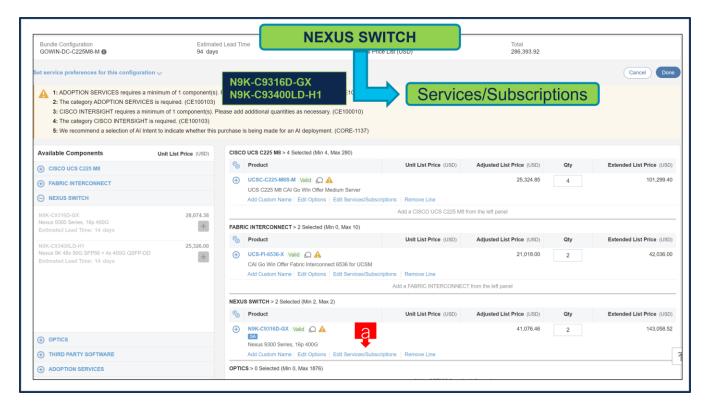

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 15.

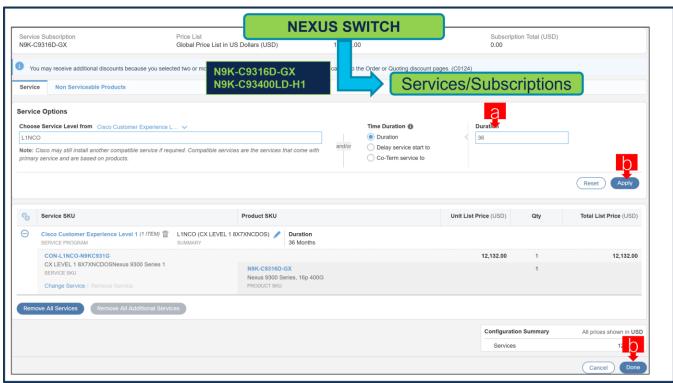

a. Enter the Term Duration

b. Click on "Apply" and "Done"

Step 16.




a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 17.

OPTICS Reference Guide					
		A	В	С	D
1	GOWIN-DC	C2xxMx-M	C2xxMx-M	C2xxMx-L	C2xxMx-L
2	FI Present	Yes	No	Yes	No
3	Nexus	9316D-GX	93400LD-H1	9316D-GX	9316D-GX
4	# of Servers	N, where Min=4, Max=280	N, where Min=4, Max=24	N, where Min=4, Max=140	N, where Min=4, Max=40
5	# of FI	(ROUNDUP(A4/56))*2	-	(ROUNDUP(C4/28))*2	-
6	QSFP-4SFP25G-CU5M location	Server uplinks & FI downlinks	-	-	-
7	QSFP-4SFP25G-CU5M	A4	-	-	-
8	SFP-50G-CU5M location	-	Server uplinks & Nexus downlinks	-	-
9	SFP-50G-CU5M	-	B4*4	-	-
10	QSFP-100G-CU5M location			Server uplinks & FI downlinks	-
11	QSFP-100G-CU5M			C4*2	-
12	OR, SFP-25G-SL location	Server uplinks	Server uplinks & Nexus downlinks	-	-
13	SFP-25G-SL	A4*4	B4*8	-	-
14	OR, QSFP-100G-SL4 location	FI downlinks	-	-	-
15	QSFP-100G-SL4	A13/4	-	-	-
16	OR, QSFP-100G-SR1.2 location	-	-	Server uplinks & FI downlinks	-
17	QSFP-100G-SR1.2	-		C4*2*2	-
18	QSFP-100G-SR1.2 location	FI uplinks	-	FI uplinks	Server Uplinks
19	QSFP-100G-SR1.2	EVEN(A4/3.5)	-	EVEN((C4*2)/3.5)	D4*2
20	QDD-400G-SR4.2-BD location	Nexus downlinks	-	Nexus downlinks	Nexus downlinks
21	ODD-400G-SR4.2-BD	A19/4	-	C19/4	D19/4


- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 18.

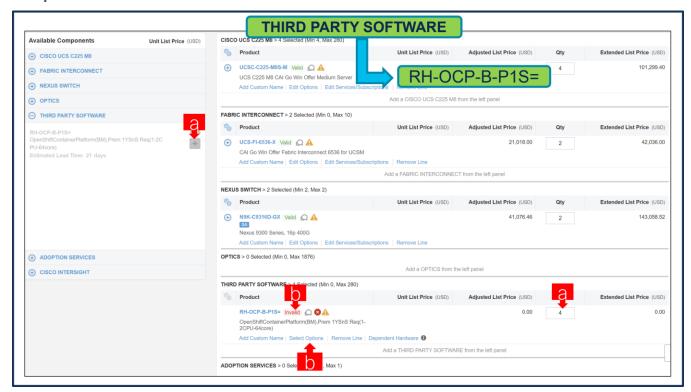


- a. THIRD PARTY SOFTWARE: RH-OCP-B-P1S= is an optional selection and QTY must be equal to Server QTY when selected.
- b. Notice the PID: RH-OCP-B-P1S= Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Step 19.

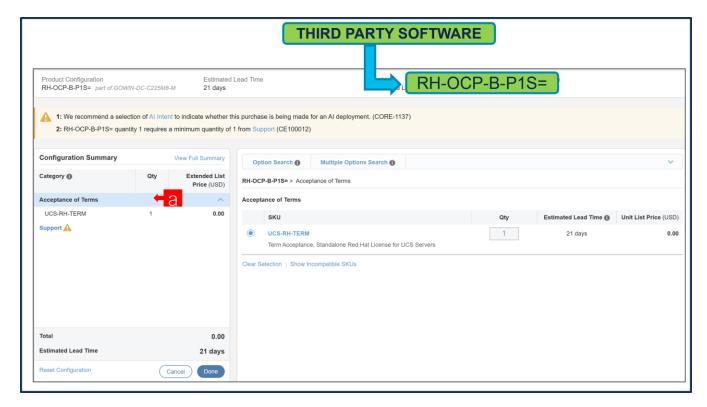


a. Select Acceptance of Terms Option.

Step 20.

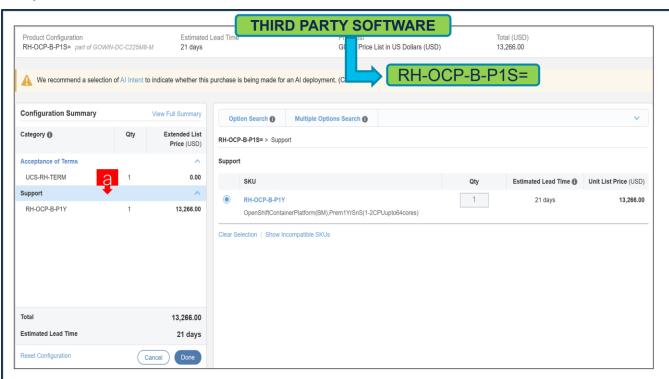

a. Select Support Option.


Step 21.

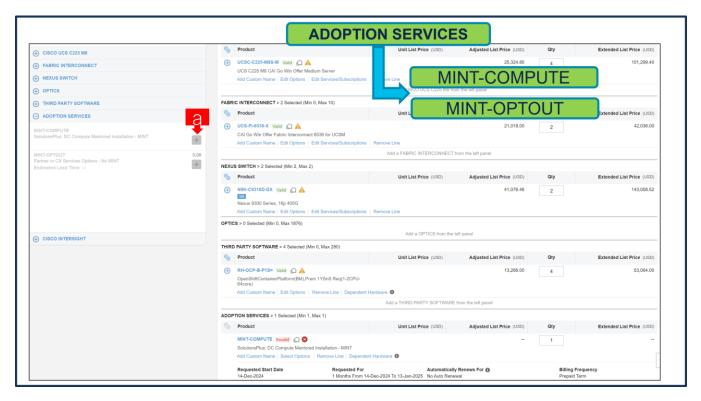

- a. Please select at least one option from ADOPTION SERVICES Category.
- b. User can select either MINT Services or can optout.


Note: Please select MINT-OPTOUT, if Order is through Distributor.

Step 22.

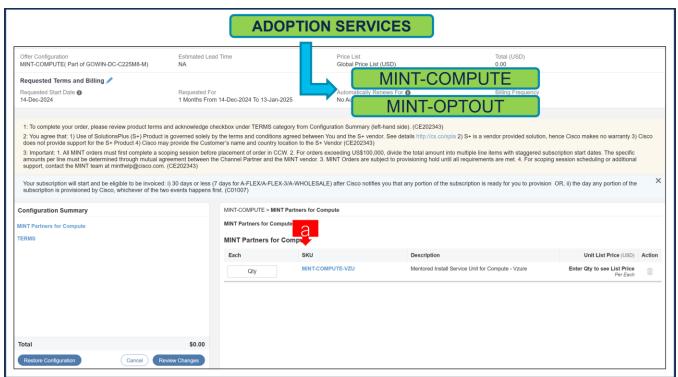

a. Please select appropriate QTY of MINT Service Units.

Step 23.

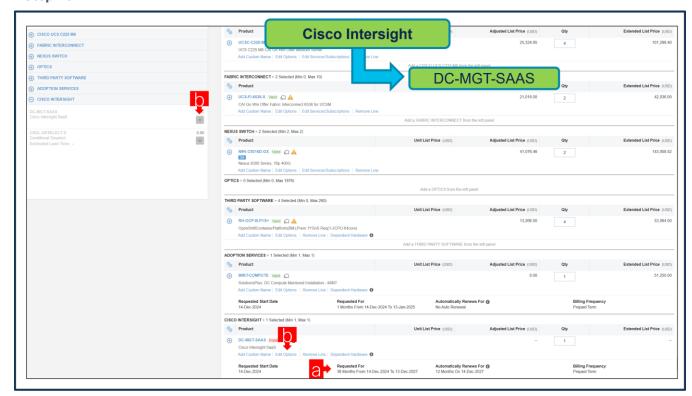


- a. It is recommended that Term Duration for HW Support align with Software Subscription Duration.
- b. Intersight is a required selection, if you have not previously purchased Cisco Intersight Software. Please make selection by clicking "ADD". Click on "Edit Options" to configure.

Step 24.



- a. Requested Start Date (RSD) is now dependent on HW Ship Date and will automatically starts when the HW ships. If you change the RSD, the Software will start either on the RSD you picked or the HW Ship Date whichever is later.
- b. **End Date** (duration in months) is defaulted to **36 Months**, **Auto Renewal** (on/off) is defaulted to **On** and **Billing Frequency** is defaulted to **Prepaid Term**. You can still change the setting accordingly.

Step 25.

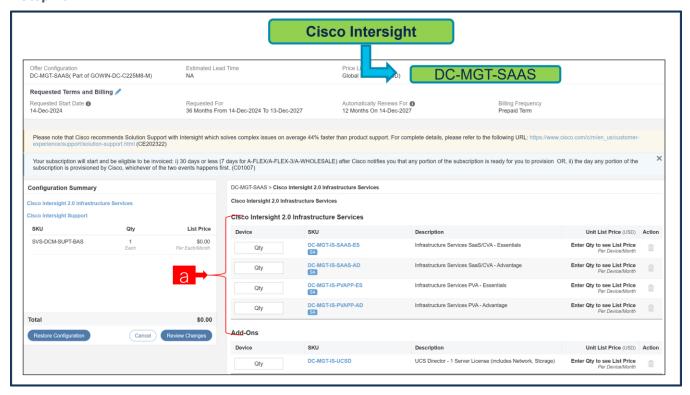


a. The quantity of Cisco Intersight 2.0 Infrastructure Services License under Offer: DC-MGT-SAAS should be equal to the quantity of Server selected. Enter the quantity.

Step 26.



a. The Cisco Intersight License comes with separate Support. Basic Embedded Support is the default selection. However, it is recommended that Customer upgrade to CX Success Track Level 1 or Level 2 to ensure consistent SLA response time between Hardware and Software.

Step 27.

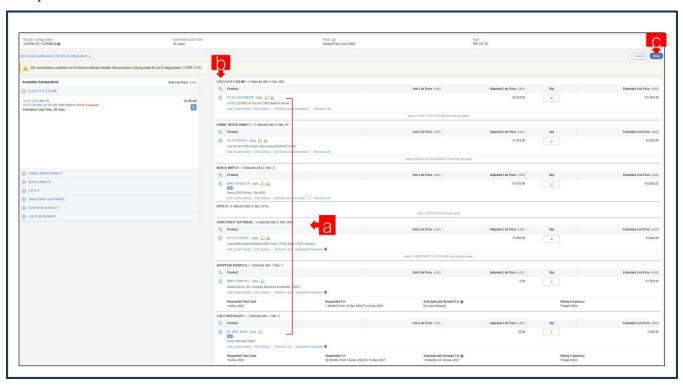

 Configuration for MLB is completed when status of each Product is Valid and warning messages are cleared.

- b. Click on the "PLUS" to expand and view the selections made for each Product.
- c. Click on the "DONE" to complete the MLB Configuration.

Scenario 2: Customer With Enterprise Agreement for Cisco Intersight Software License

Step 1.




- a. In CCW, search for MLB PID and click on "Add"
- b. Click on "Select Options" to enter the configurator.

Step 2.




- a. ATO: UCSC-C225-M8S-M is preselected with 4 QTY from Category: CISCO UCS C225 M8.
- b. Notice the ATO: UCSC-C225-M8S-M Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 3.

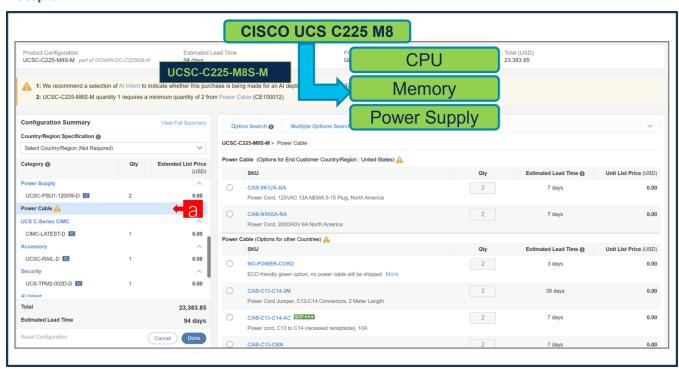


 All Server Components are Auto Included in the configuration. Please select appropriate Power Cable.

Step 4.

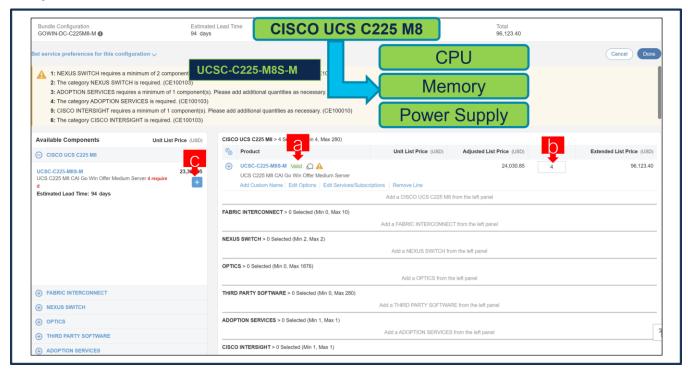

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 5.

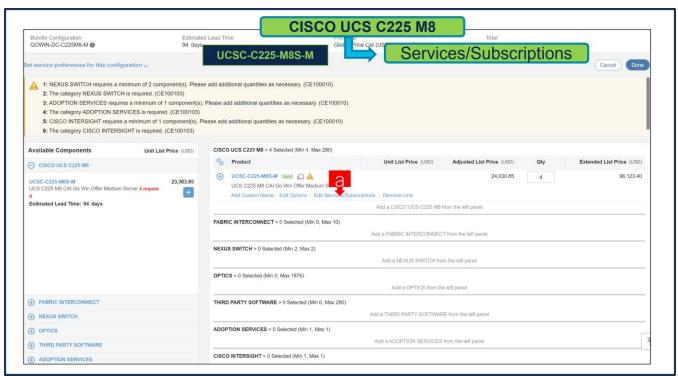

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 6.




- a. Enter the Term Duration
- b. Click on "Apply" and "Done"

Step 7.

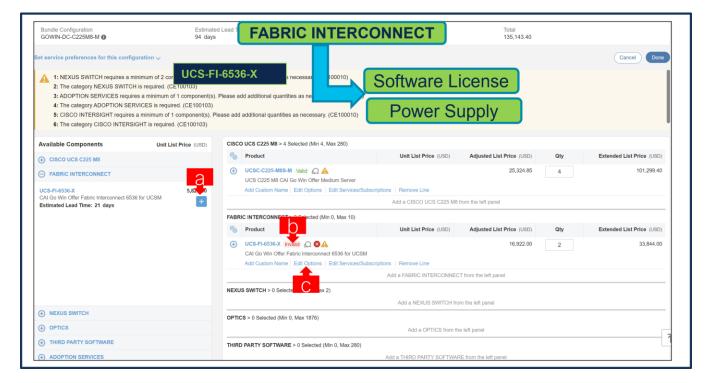


- FABRIC INTERCONNECT: UCS-FI-6536-X is an optional selection and minimum 2 QTY is required if selected.
- b. Notice the UCS-FI-6536-X ATO Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 8.

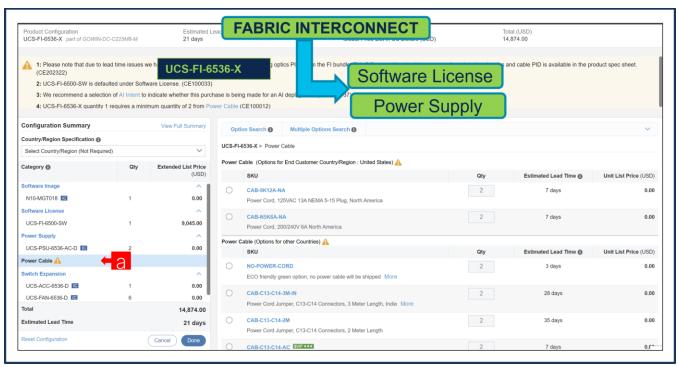


a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 9.

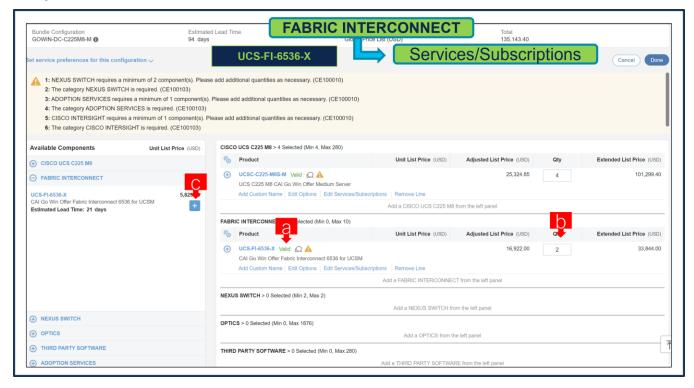

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 10.

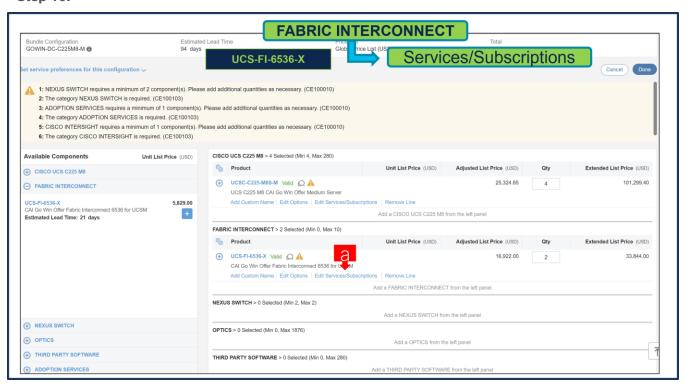

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 11.

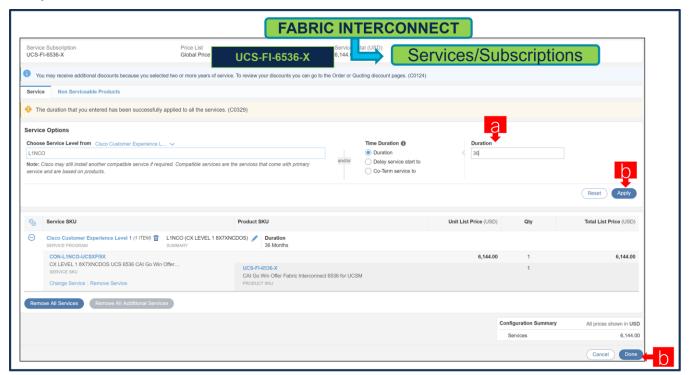

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"

Step 12.

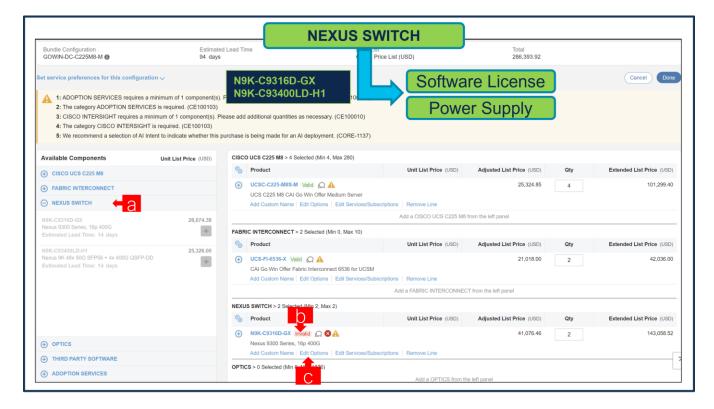


- a. At least one selection is required from NEXUS SWITCH Category.
- b. Notice the ATO: N9K-C9316D-GX Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Note:

- If FI: UCS-FI-6536-X is selected, then user must select 2 QTY of N9K-C9316D-GX.
- If FI: UCS-FI-6536-X is not selected, then user must select 2 QTY of N9K-C93400LD-H1...


Step 13.

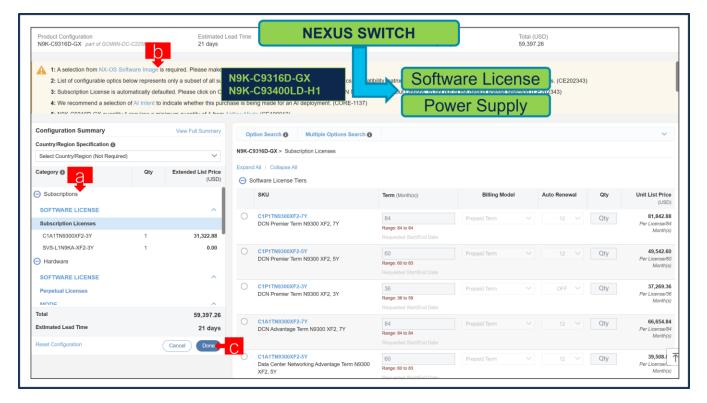

- a. Software Subscription License is default selection. User may select other available options.
- b. Please follow the warning messages and make the minimum required selections.
- c. Click Done when completed.

Note: If Order is through Distributor, please select C1-SUBS-OPTOUT from Perpetual License Option


Step 14.

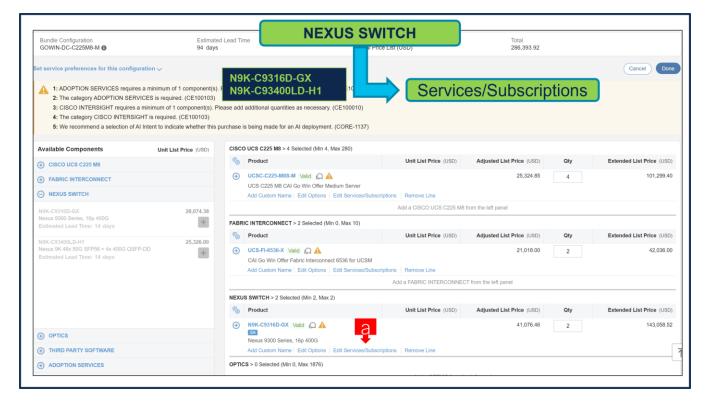

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 15.

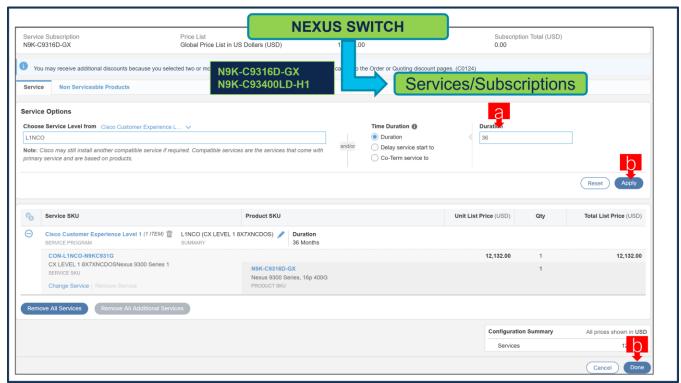

a. Enter the Term Duration

b. Click on "Apply" and "Done"

Step 16.




a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 17.

OPTICS Reference Guide						
		A	В	С	D	
1	GOWIN-DC	C2xxMx-M	C2xxMx-M	C2xxMx-L	C2xxMx-L	
2	FI Present	Yes	No	Yes	No	
3	Nexus	9316D-GX	93400LD-H1	9316D-GX	9316D-GX	
4	# of Servers	N, where Min=4, Max=280	N, where Min=4, Max=24	N, where Min=4, Max=140	N, where Min=4, Max=40	
5	# of FI	(ROUNDUP(A4/56))*2	-	(ROUNDUP(C4/28))*2	-	
6	QSFP-4SFP25G-CU5M location	Server uplinks & FI downlinks	-	-	-	
7	QSFP-4SFP25G-CU5M	A4	-	-	-	
8	SFP-50G-CU5M location	-	Server uplinks & Nexus downlinks	-	-	
9	SFP-50G-CU5M	-	B4*4	-	-	
10	QSFP-100G-CU5M location			Server uplinks & FI downlinks	-	
11	QSFP-100G-CU5M			C4*2	-	
12	OR, SFP-25G-SL location	Server uplinks	Server uplinks & Nexus downlinks	-	-	
13	SFP-25G-SL	A4*4	B4*8	-	-	
14	OR, QSFP-100G-SL4 location	FI downlinks	-	-	-	
15	QSFP-100G-SL4	A13/4	-	-	-	
16	OR, QSFP-100G-SR1.2 location	-	-	Server uplinks & FI downlinks	-	
17	QSFP-100G-SR1.2	-		C4*2*2	-	
18	QSFP-100G-SR1.2 location	FI uplinks	-	FI uplinks	Server Uplinks	
19	QSFP-100G-SR1.2	EVEN(A4/3.5)	-	EVEN((C4*2)/3.5)	D4*2	
20	QDD-400G-SR4.2-BD location	Nexus downlinks	-	Nexus downlinks	Nexus downlinks	
21	ODD-400G-SR4.2-BD	A19/4	-	C19/4	D19/4	


- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 18.

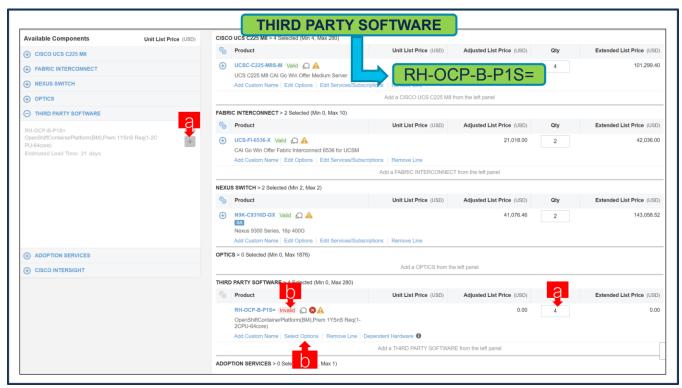


- a. THIRD PARTY SOFTWARE: RH-OCP-B-P1S= is an optional selection and QTY must be equal to Server QTY when selected.
- b. Notice the PID: RH-OCP-B-P1S= Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Step 19.

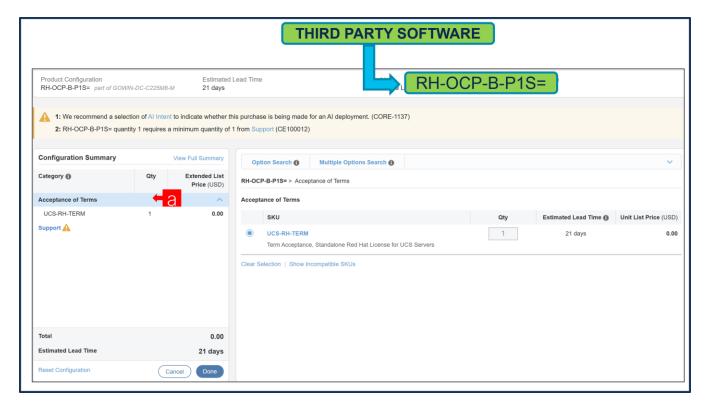


a. Select Acceptance of Terms Option.

Step 20.

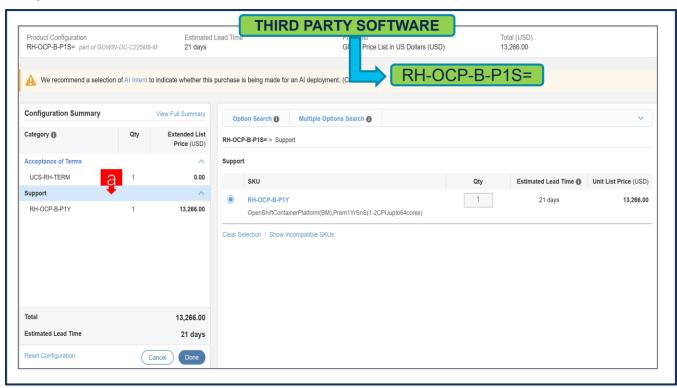

a. Select Support Option.

Step 21.

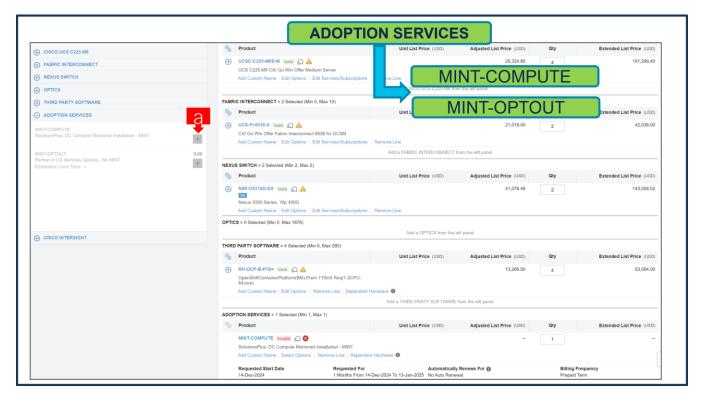

- a. Please select at least one option from ADOPTION SERVICES Category.
- b. User can select either MINT Services or can optout.


Note: Please select MINT-OPTOUT, if Order is through Distributor.

Step 22.




a. Please select appropriate QTY of MINT Service Units.

Step 23.

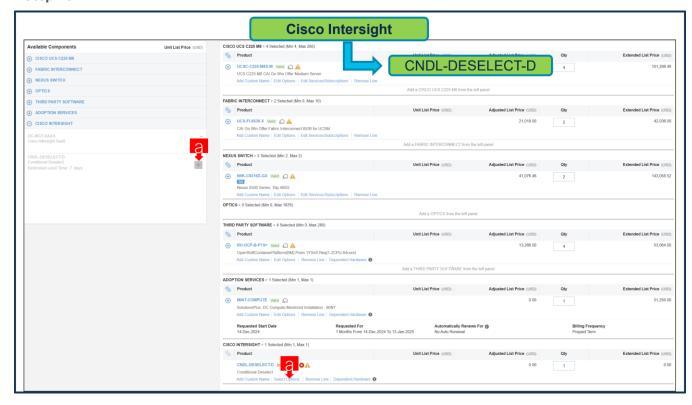


 a. CNDL-DESELECT-D is meant to select only if Customer has already purchased Cisco Intersight License via EA Contract or order is for Disti Fulfillment.

Step 24.

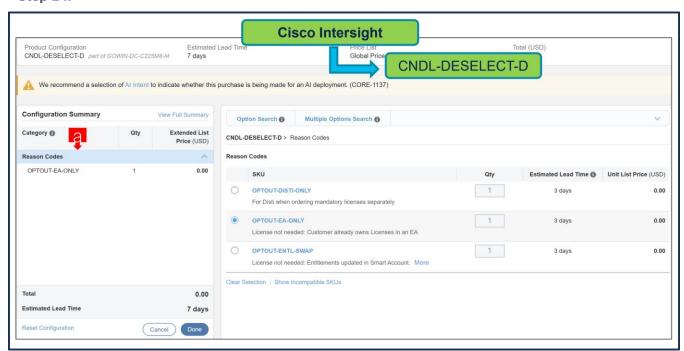

a. Please select appropriate Reason Code

Step 25.

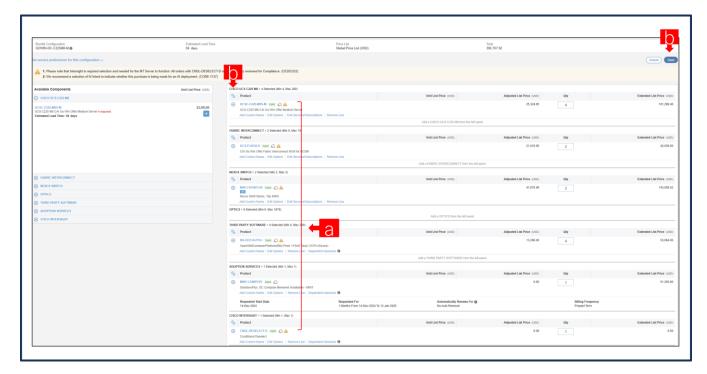

- a. Configuration for MLB is completed when status of each Product is Valid and warning messages are cleared.
- b. Click on the "PLUS" to expand and view the selections made for each Product.
- c. Click on the "DONE" to complete the MLB Configuration.


Buy Method Through Distributor (Eg: Direct Customer & Tier 1 Partners)

Scenario 1: Customer Without Enterprise Agreement for Cisco Intersight Software License Step 1.




- a. In CCW, search for MLB PID and click on "Add"
- b. Click on "Select Options" to enter the configurator.

Step 2.

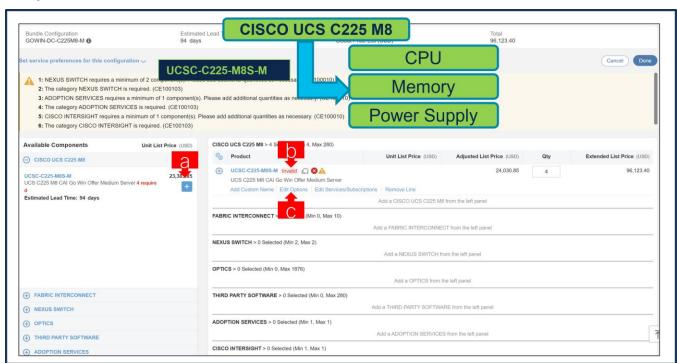


- ATO: UCSC-C225-M8S-M is preselected with 4 QTY from Category: CISCO UCS C225 M8.
- b. Notice the ATO: UCSC-C225-M8S-M Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 3.

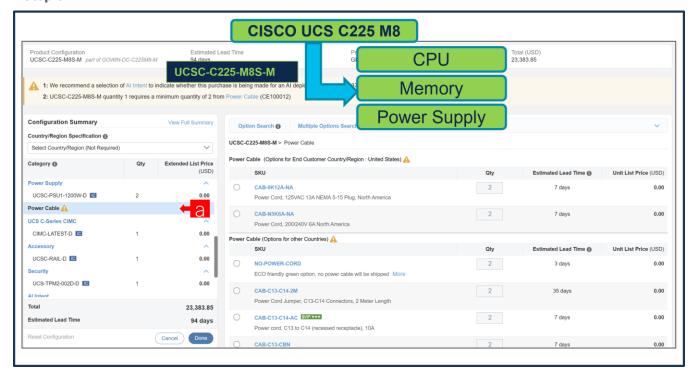

 All Server Components are Auto Included in the configuration. Please select appropriate Power Cable.

Step 4.

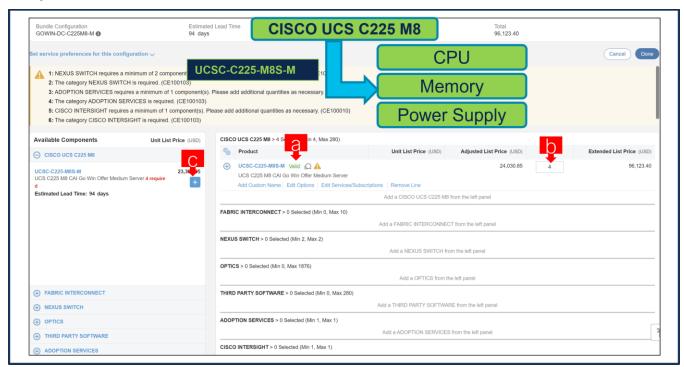

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.

c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 5.



a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 6.

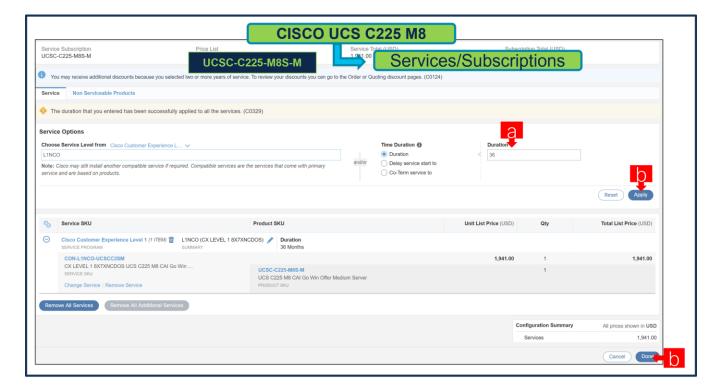

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"


Step 7.

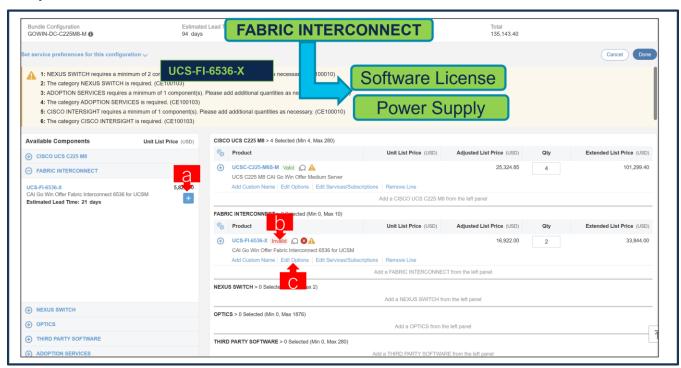

- FABRIC INTERCONNECT: UCS-FI-6536-X is an optional selection and minimum 2 QTY is required if selected.
- b. Notice the UCS-FI-6536-X ATO Status is invalid as further configuration is needed.


c. Select 'Edit Options' to enter the configurator.

Step 8.

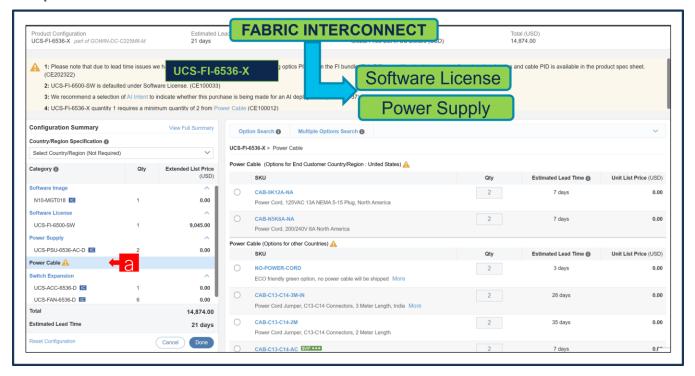

 All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.


Step 9.

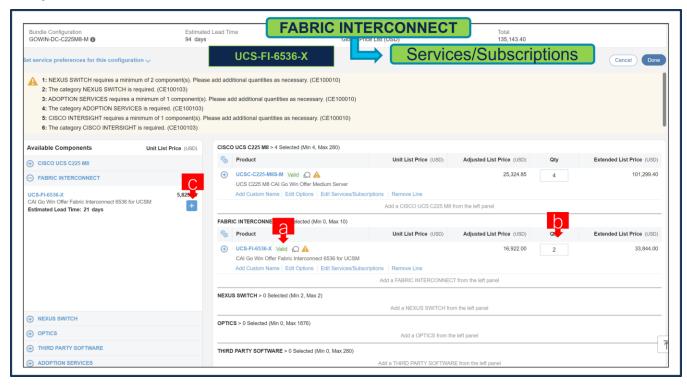

a. Note Status is now showing as Valid.

- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 10.

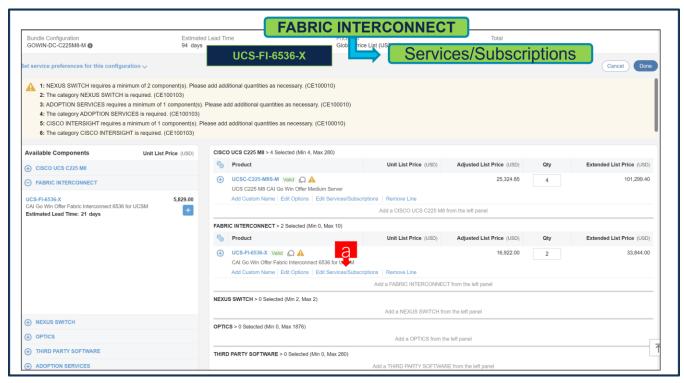

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 11.

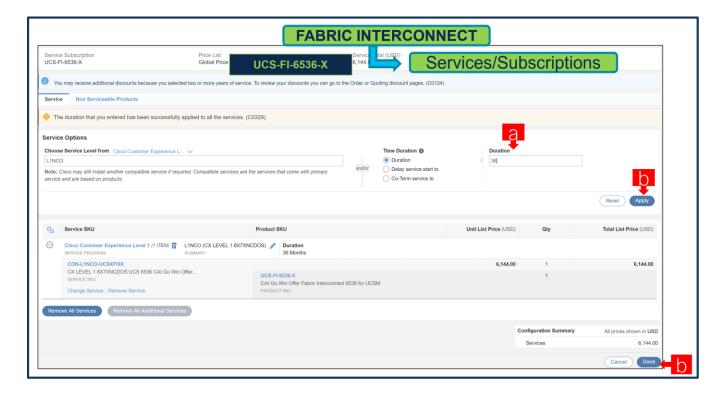

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"

Step 12.

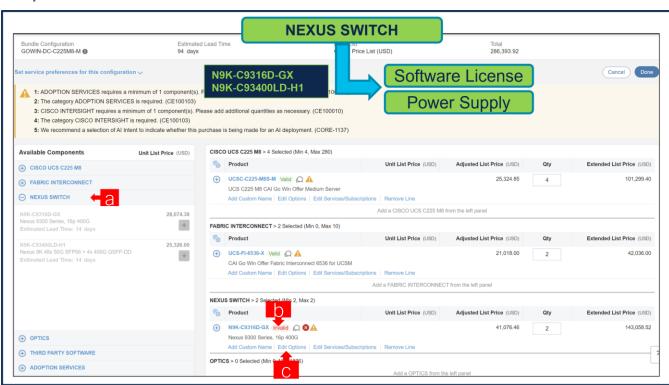


a. At least one selection is required from NEXUS SWITCH Category.

- b. Notice the ATO: N9K-C9316D-GX Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Note:

- If FI: UCS-FI-6536-X is selected, then user must select 2 QTY of N9K-C9316D-GX.
- If FI: UCS-FI-6536-X is not selected, then user must select 2 QTY of N9K-C93400LD-H1...


Step 13.

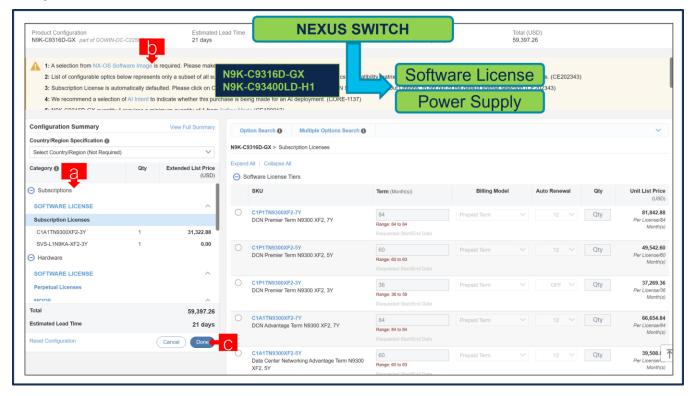

- a. Software Subscription License is default selection. User may select other available options.
- b. Please follow the warning messages and make the minimum required selections.
- c. Click Done when completed.

Note: If Order is through Distributor, please select C1-SUBS-OPTOUT from Perpetual License Option


Step 14.

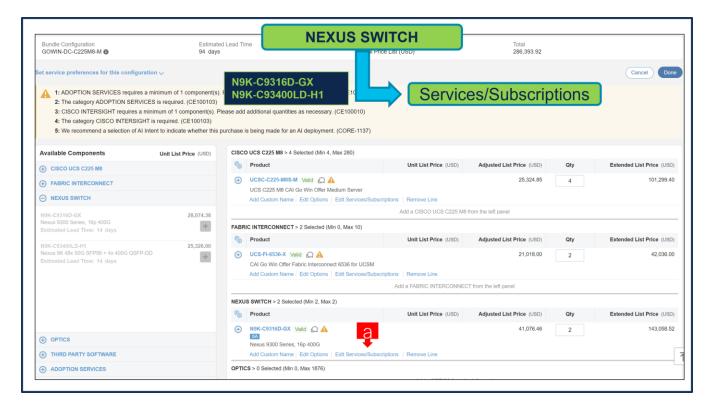

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 15.

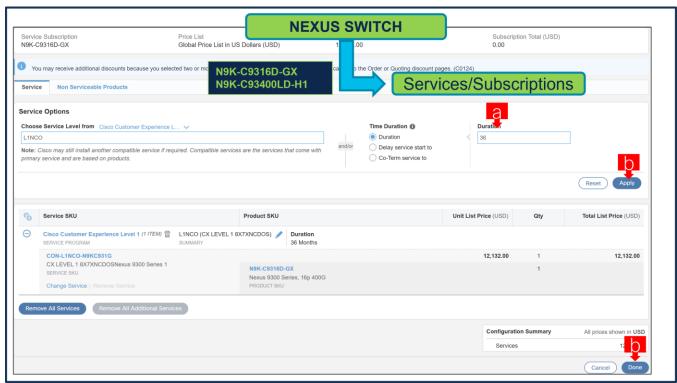

a. Enter the Term Duration

b. Click on "Apply" and "Done"

Step 16.




a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 17.

		OPTICS Refe	erence Guide		
		A	В	С	D
1	GOWIN-DC	C2xxMx-M	C2xxMx-M	C2xxMx-L	C2xxMx-L
2	FI Present	Yes	No	Yes	No
3	Nexus	9316D-GX	93400LD-H1	9316D-GX	9316D-GX
4	# of Servers	N, where Min=4, Max=280	N, where Min=4, Max=24	N, where Min=4, Max=140	N, where Min=4, Max=40
5	# of FI	(ROUNDUP(A4/56))*2	-	(ROUNDUP(C4/28))*2	-
6	QSFP-4SFP25G-CU5M location	Server uplinks & FI downlinks	-	-	-
7	QSFP-4SFP25G-CU5M	A4	-	-	-
8	SFP-50G-CU5M location	-	Server uplinks & Nexus downlinks	-	-
9	SFP-50G-CU5M	-	B4*4	-	-
10	QSFP-100G-CU5M location			Server uplinks & FI downlinks	-
11	QSFP-100G-CU5M			C4*2	-
12	OR, SFP-25G-SL location	Server uplinks	Server uplinks & Nexus downlinks	-	-
13	SFP-25G-SL	A4*4	B4*8	-	-
14	OR, QSFP-100G-SL4 location	FI downlinks	-	-	-
15	QSFP-100G-SL4	A13/4	-	-	-
16	OR, QSFP-100G-SR1.2 location	-	-	Server uplinks & FI downlinks	-
17	QSFP-100G-SR1.2	-		C4*2*2	-
18	QSFP-100G-SR1.2 location	FI uplinks	-	FI uplinks	Server Uplinks
19	QSFP-100G-SR1.2	EVEN(A4/3.5)	-	EVEN((C4*2)/3.5)	D4*2
20	QDD-400G-SR4.2-BD location	Nexus downlinks	-	Nexus downlinks	Nexus downlinks
21	ODD-400G-SR4.2-BD	A19/4	-	C19/4	D19/4


- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 18.

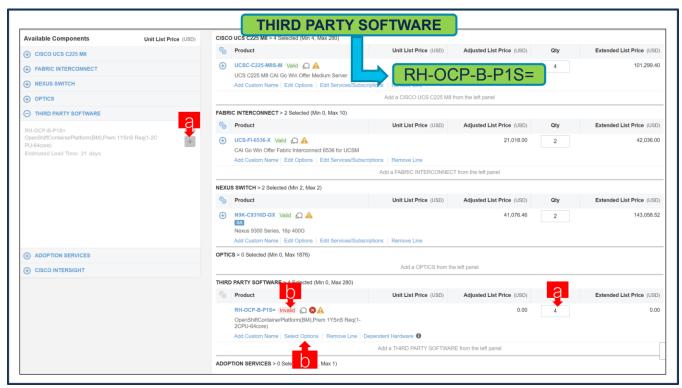


- a. THIRD PARTY SOFTWARE: RH-OCP-B-P1S= is an optional selection and QTY must be equal to Server QTY when selected.
- b. Notice the PID: RH-OCP-B-P1S= Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Step 19.

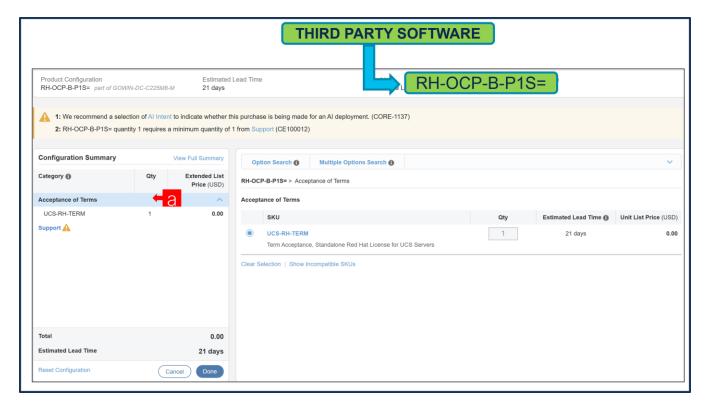


a. Select Acceptance of Terms Option.

Step 20.

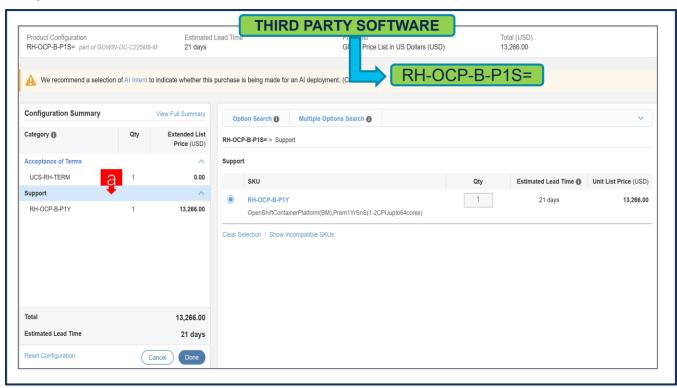

a. Select Support Option.

Step 21.

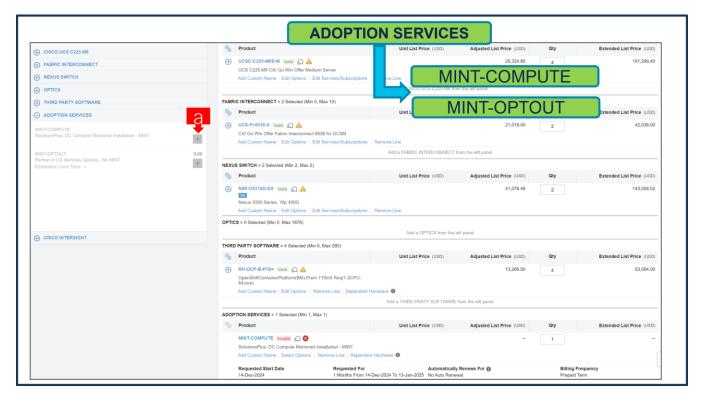

- a. Please select at least one option from ADOPTION SERVICES Category.
- b. User can select either MINT Services or can optout.


Note: Please select MINT-OPTOUT, if Order is through Distributor.

Step 22.




a. Please select appropriate QTY of MINT Service Units.

Step 23.

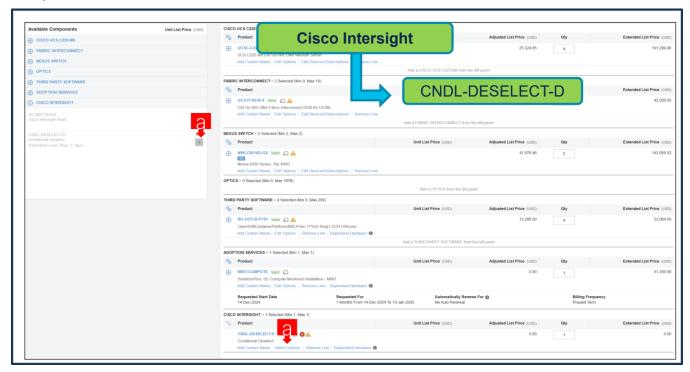


a. **CNDL-DESELECT-D** is meant to select only if Customer has already purchased Cisco Intersight License via EA Contract or order is for Disti Fulfillment.

Step 24.

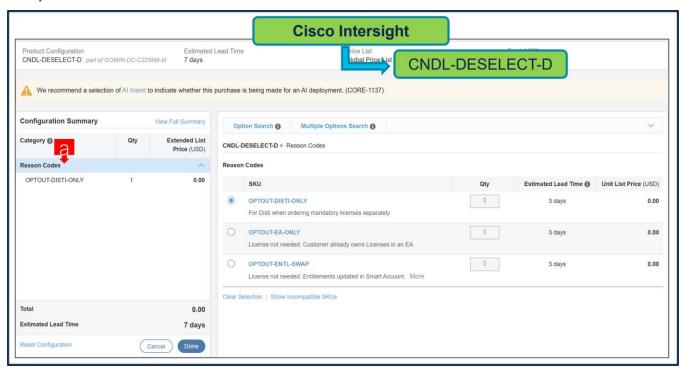


a. Please select appropriate Reason Code

Step 25.

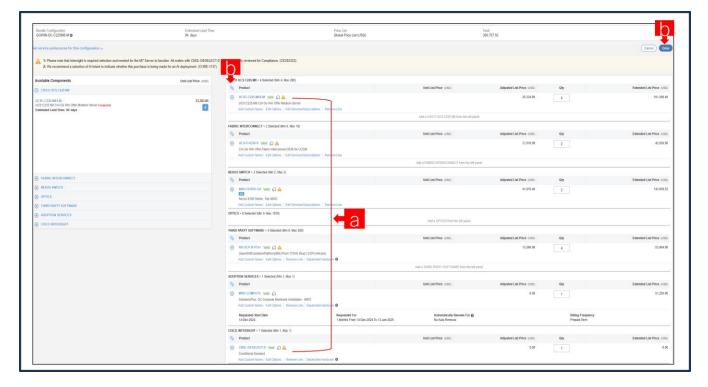

- Configuration for MLB is completed when status of each Product is Valid, and warning messages are cleared.
- b. Click on the "PLUS" to expand and view the selections made for each Product.
- c. Click on the "DONE" to complete the MLB Configuration.


Step 26.

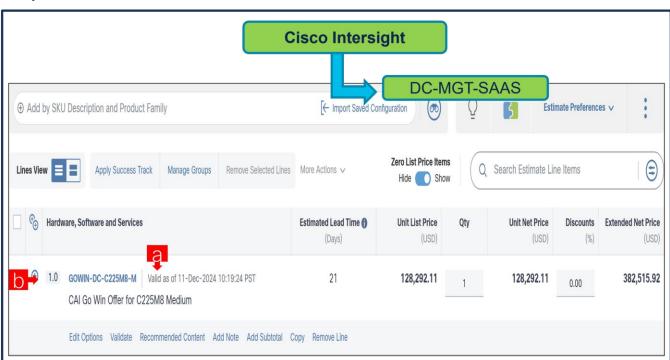

a. Configuration of MLB is now Valid and Line No. 1.0 represents HW only Configuration.


b. Intersight is a required selection, if you have not previously purchased Cisco Intersight Software and needs to added in Line 2.0 which will represent SW only Configuration.

Step 27.

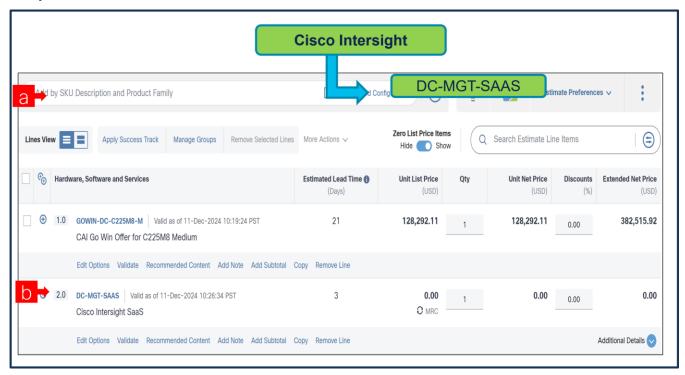


- a. In CCW, search for DC-MGT-SAAS and click on "ADD".
- b. Intersight is a required selection, if you have not previously purchased Cisco Intersight Software. Click on Select Options to enter the configurator.

Step 28.

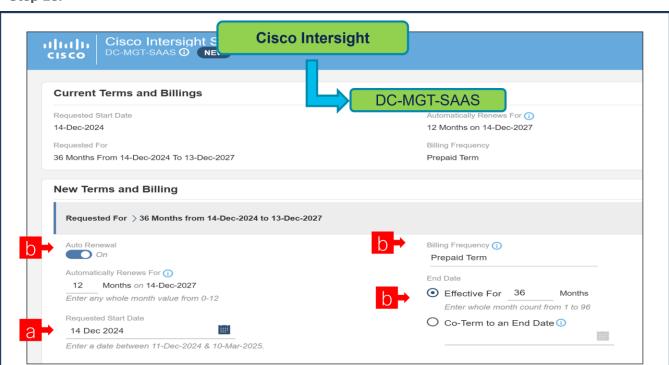


- a. **Requested Start Date (RSD)** It is recommended that when you book your SaaS Product, you select a Request Start Date (RSD) 90 days into the future.
- b. **End Date** (duration in months) is defaulted to **36 Months**, **Auto Renewal** (on/off) is defaulted to **On** and **Billing Frequency** is defaulted to **Prepaid Term**. You can still change the setting accordingly.

Step 29.

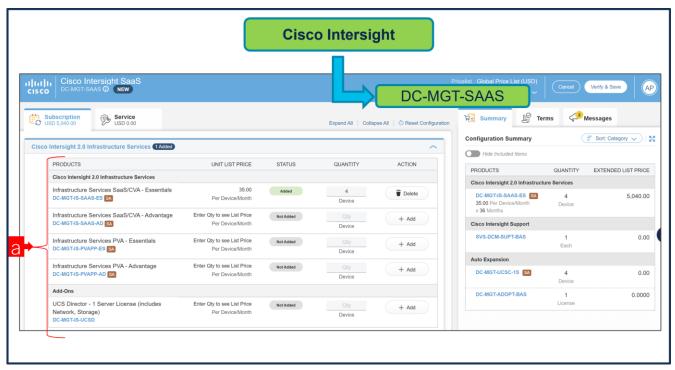


 The quantity of Cisco Intersight 2.0 Infrastructure Services License under Offer: DC-MGT-SAAS should be equal to the quantity of Server selected. Enter the quantity.

Step 30.

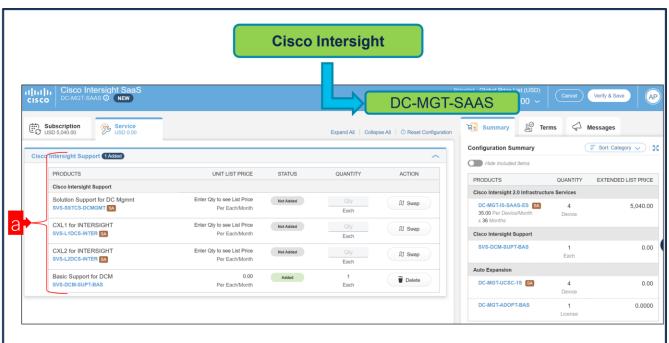

a. The Cisco Intersight License comes with separate Support. Basic Embedded Support is the default selection. It is recommended that Customer should upgrade to Solution Support or CX Success Track L1 or L2 for the HW.

Step 31.

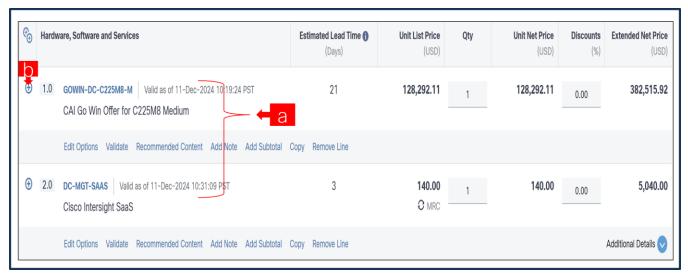


- a. Configuration for MLB and DC-MGT-SAAS is now completed, and status of each Product is Valid.
- b. Click on the "PLUS" to expand and view the selections made for each Product.

Scenario 2: Customer With Enterprise Agreement for Cisco Intersight Software License Step 1.




- a. In CCW, search for MLB PID and click on "Add"
- b. Click on "Select Options" to enter the configurator.

Step 2.

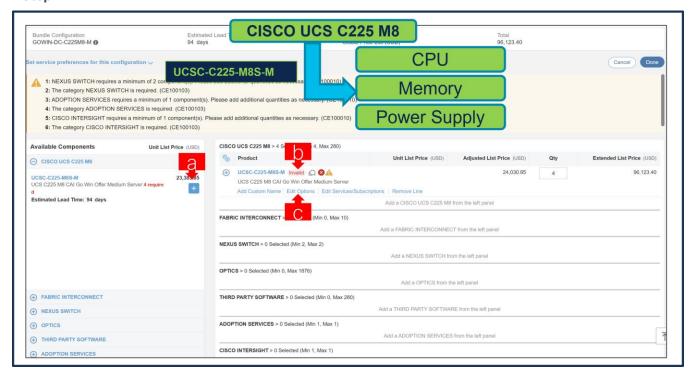


- a. ATO: UCSC-C225-M8S-M is preselected with 4 QTY from Category: CISCO UCS C225 M8.
- b. Notice the ATO: UCSC-C225-M8S-M Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 3.

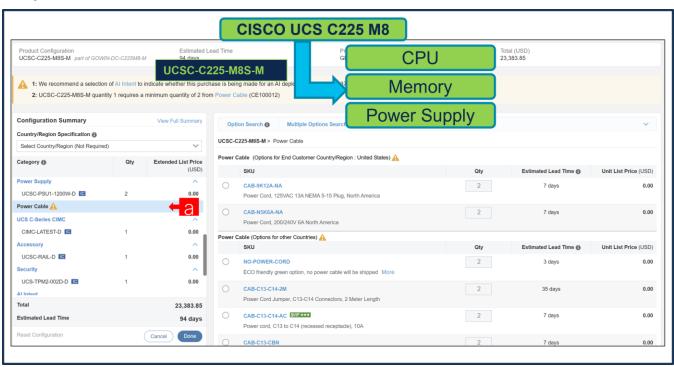

a. All Server Components are Auto Included in the configuration. Please select appropriate Power Cable.

Step 4.

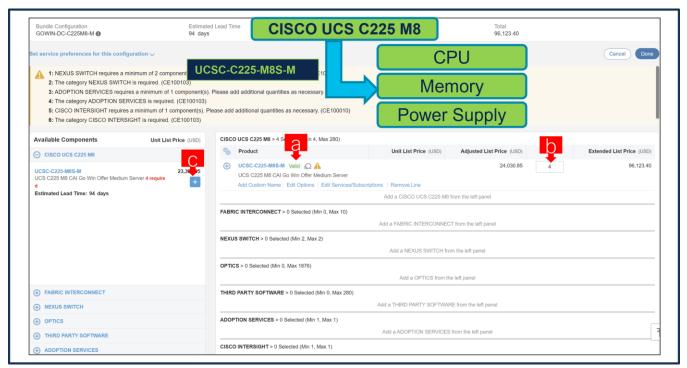

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 5.



a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.


Step 6.



a. Enter the Term Duration


b. Click on "Apply" and "Done"

Step 7.

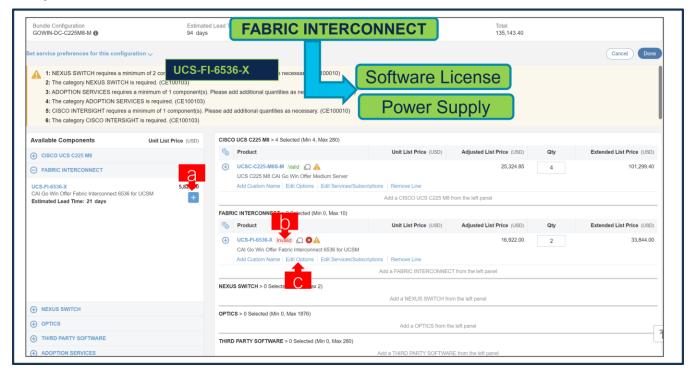


- FABRIC INTERCONNECT: UCS-FI-6536-X is an optional selection and minimum 2 QTY is required if selected.
- b. Notice the UCS-FI-6536-X ATO Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 8.

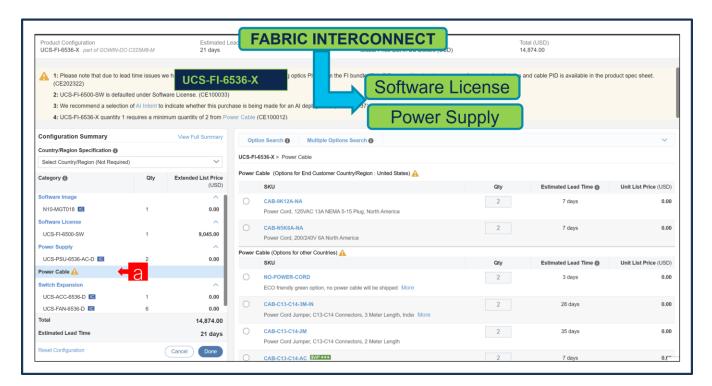

a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.


Step 9.

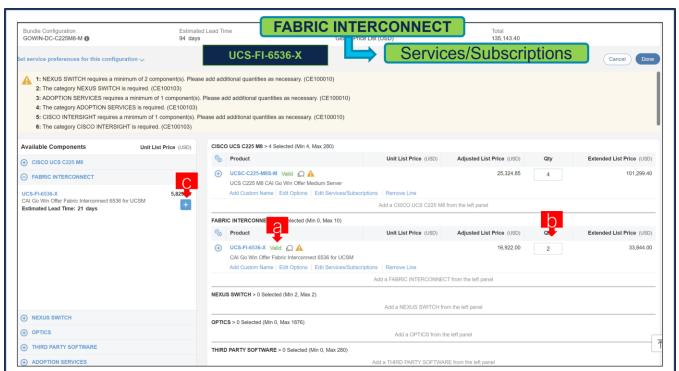

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.

c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 10.

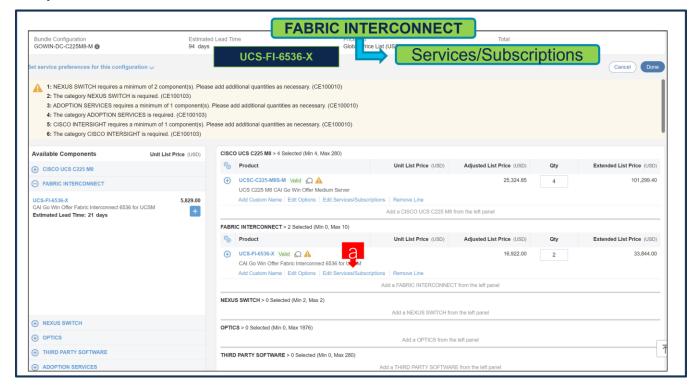

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 11.

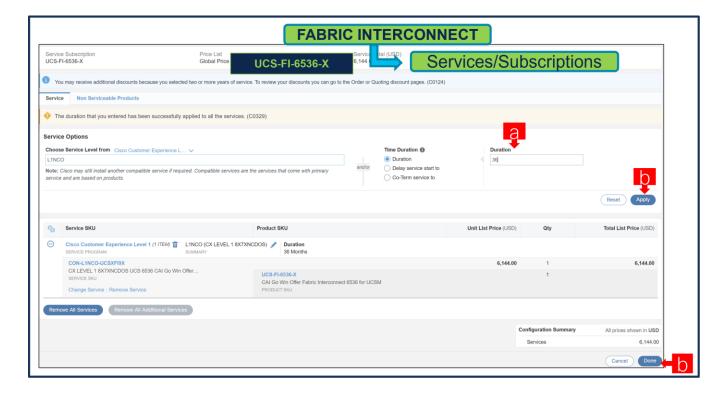

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"

Step 12.

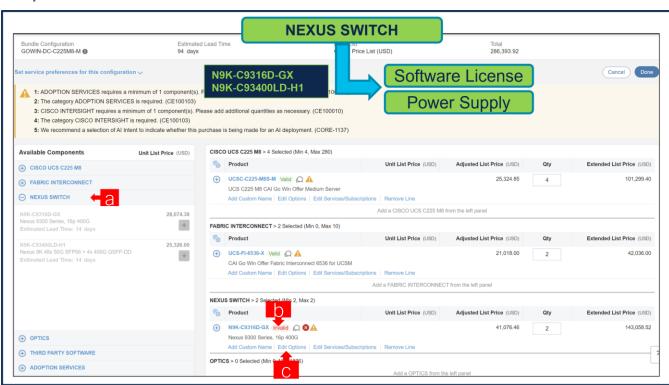


a. At least one selection is required from NEXUS SWITCH Category.

- b. Notice the ATO: N9K-C9316D-GX Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Note:

- If FI: UCS-FI-6536-X is selected, then user must select 2 QTY of N9K-C9316D-GX.
- If FI: UCS-FI-6536-X is not selected, then user must select 2 QTY of N9K-C93400LD-H1...


Step 13.

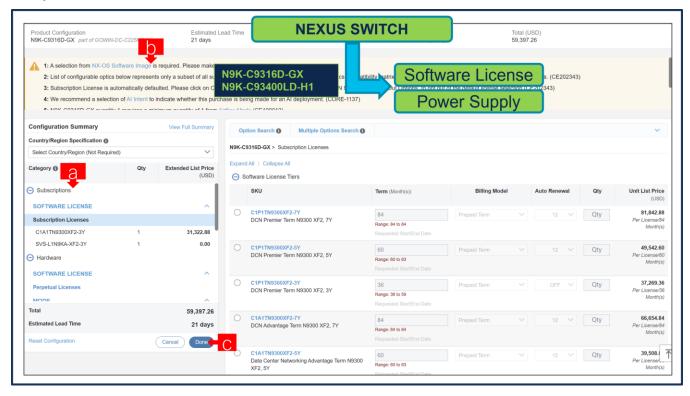

- a. Software Subscription License is default selection. User may select other available options.
- b. Please follow the warning messages and make the minimum required selections.
- c. Click Done when completed.

Note: If Order is through Distributor, please select C1-SUBS-OPTOUT from Perpetual License Option


Step 14.

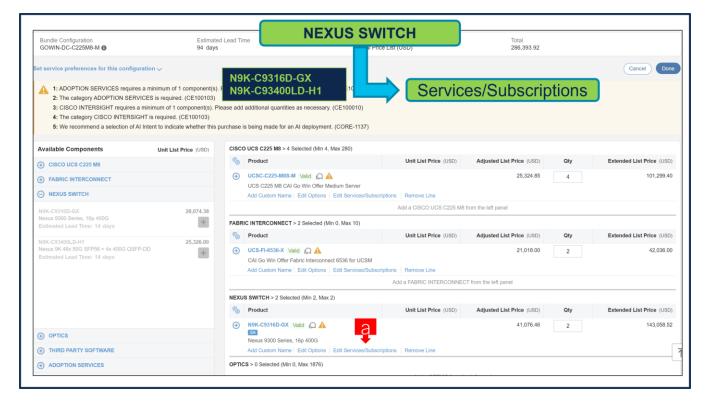

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 15.

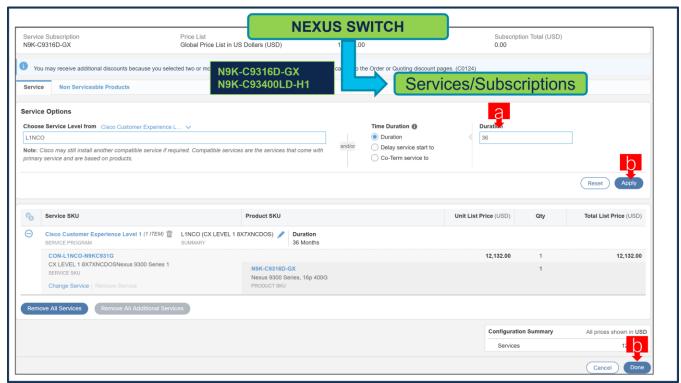

a. Enter the Term Duration

b. Click on "Apply" and "Done"

Step 16.




a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 17.

OPTICS Reference Guide							
		A	В	С	D		
1	GOWIN-DC	C2xxMx-M	C2xxMx-M	C2xxMx-L	C2xxMx-L		
2	FI Present	Yes	No	Yes	No		
3	Nexus	9316D-GX	93400LD-H1	9316D-GX	9316D-GX		
4	# of Servers	N, where Min=4, Max=280	N, where Min=4, Max=24	N, where Min=4, Max=140	N, where Min=4, Max=40		
5	# of FI	(ROUNDUP(A4/56))*2	-	(ROUNDUP(C4/28))*2	-		
6	QSFP-4SFP25G-CU5M location	Server uplinks & FI downlinks	-	-	-		
7	QSFP-4SFP25G-CU5M	A4	-	-	-		
8	SFP-50G-CU5M location	-	Server uplinks & Nexus downlinks	-	-		
9	SFP-50G-CU5M	-	B4*4	-	-		
10	QSFP-100G-CU5M location			Server uplinks & FI downlinks	-		
11	QSFP-100G-CU5M			C4*2	-		
12	OR, SFP-25G-SL location	Server uplinks	Server uplinks & Nexus downlinks	-	-		
13	SFP-25G-SL	A4*4	B4*8	-	-		
14	OR, QSFP-100G-SL4 location	FI downlinks	-	-	-		
15	QSFP-100G-SL4	A13/4	-	-	-		
16	OR, QSFP-100G-SR1.2 location	-	-	Server uplinks & FI downlinks	-		
17	QSFP-100G-SR1.2	-		C4*2*2	-		
18	QSFP-100G-SR1.2 location	FI uplinks	-	FI uplinks	Server Uplinks		
19	QSFP-100G-SR1.2	EVEN(A4/3.5)	-	EVEN((C4*2)/3.5)	D4*2		
20	QDD-400G-SR4.2-BD location	Nexus downlinks	-	Nexus downlinks	Nexus downlinks		
21	ODD-400G-SR4.2-BD	A19/4	-	C19/4	D19/4		


- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 18.

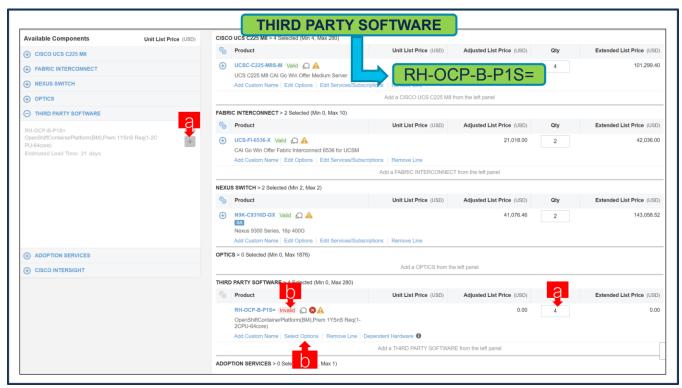


- a. THIRD PARTY SOFTWARE: RH-OCP-B-P1S= is an optional selection and QTY must be equal to Server QTY when selected.
- b. Notice the PID: RH-OCP-B-P1S= Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Step 19.

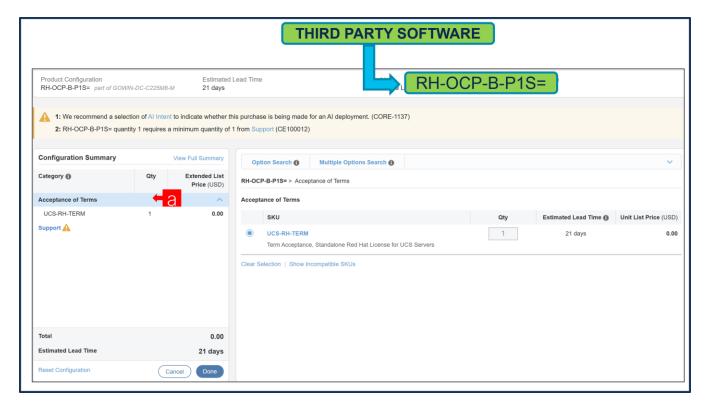


a. Select Acceptance of Terms Option.

Step 20.

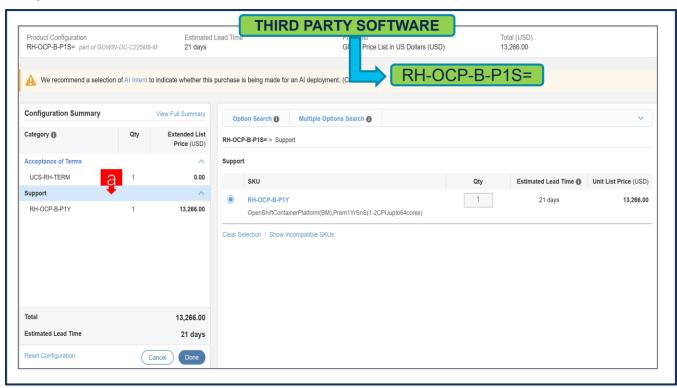

a. Select Support Option.

Step 21.

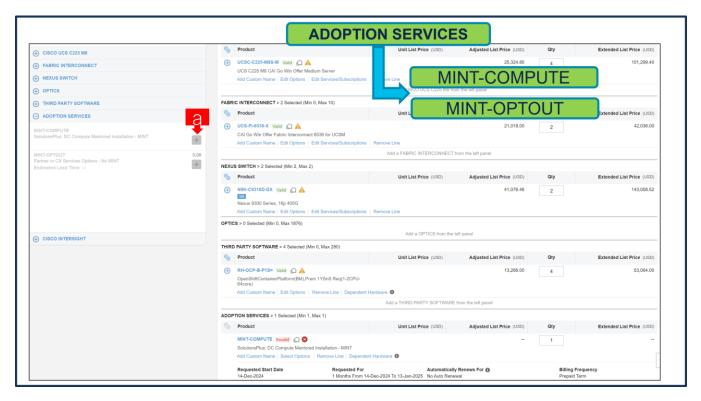

- a. Please select at least one option from ADOPTION SERVICES Category.
- b. User can select either MINT Services or can optout.


Note: Please select MINT-OPTOUT, if Order is through Distributor.

Step 22.




a. Please select appropriate QTY of MINT Service Units.

Step 23.

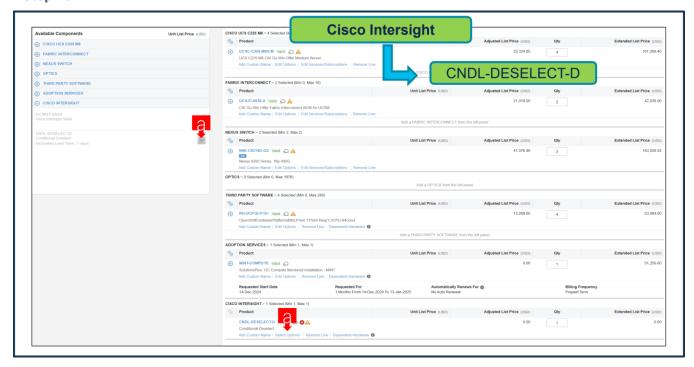


 a. CNDL-DESELECT-D is meant to select only if Customer has already purchased Cisco Intersight License via EA Contract or order is for Disti Fulfillment.

Step 24.

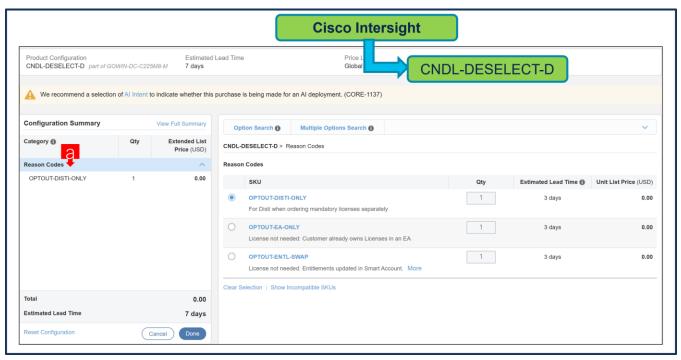

a. Please select appropriate Reason Code

Step 25.

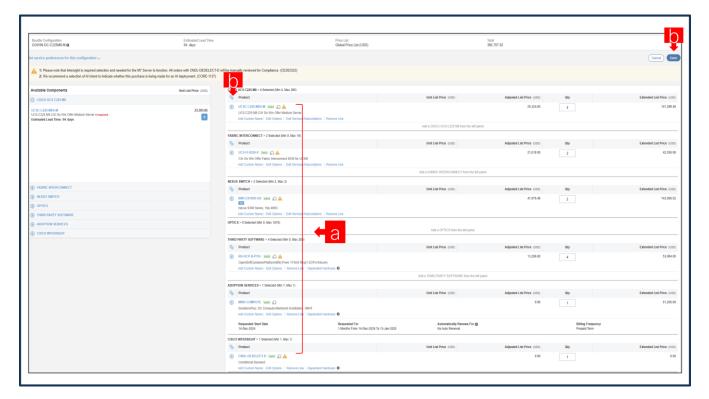


- a. Configuration for MLB is completed when status of each Product is Valid and warning messages are cleared.
- b. Click on the "PLUS" to expand and view the selections made for each Product.
- c. Click on the "DONE" to complete the MLB Configuration.

GOWIN-DC-C225M8-L Ordering Process


Buy Method Through Cisco (Eg: Direct Customer & Tier 1 Partners)

Scenario 1: Customer Without Enterprise Agreement for Cisco Intersight Software License Step 1.

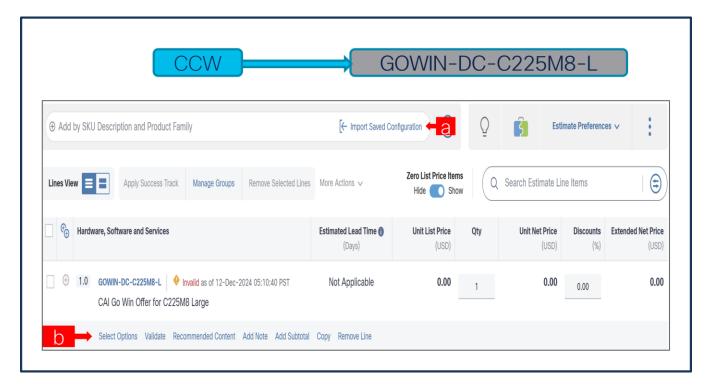

- a. In CCW, search for MLB PID and click on "Add"
- b. Click on "Select Options" to enter the configurator.

Step 2.

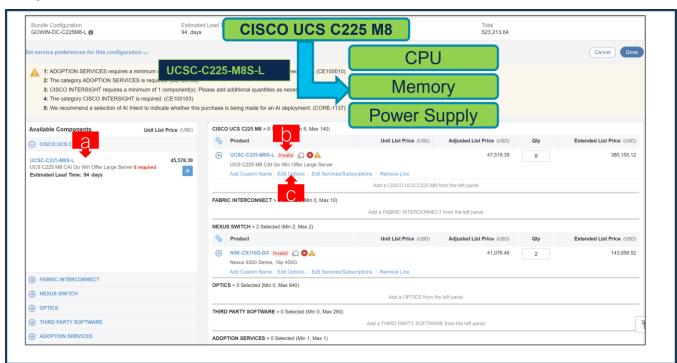

- a. ATO: UCSC-C225-M8S-L is preselected with 4 QTY from Category: CISCO UCS C225 M8.
- b. Notice the ATO: UCSC-C225-M8S-L Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 3.



 All Server Components are Auto Included in the configuration. Please select appropriate Power Cable.

Step 4.



- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.

c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 5.



a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 6.

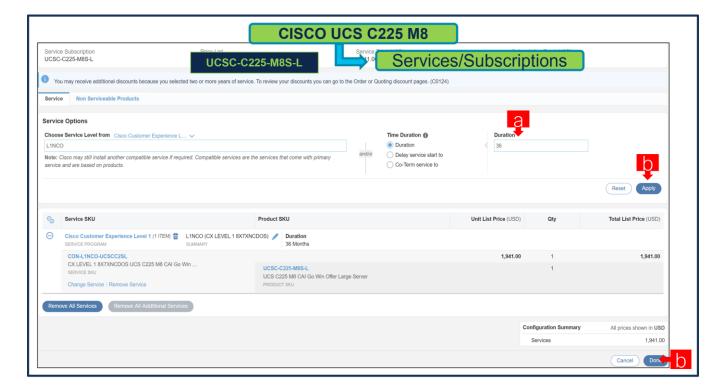

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"


Step 7.

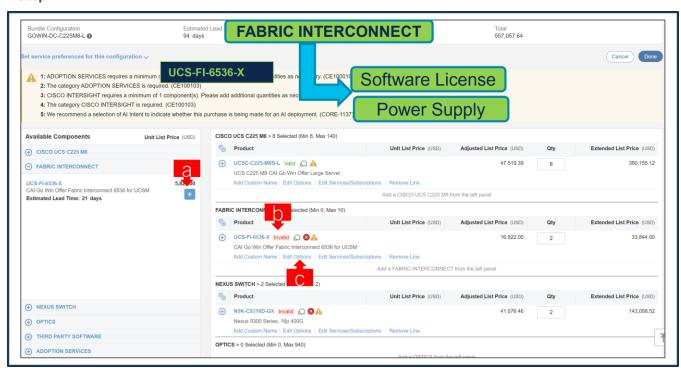

- FABRIC INTERCONNECT: UCS-FI-6536-X is an optional selection and minimum 2 QTY is required if selected.
- b. Notice the UCS-FI-6536-X ATO Status is invalid as further configuration is needed.


c. Select 'Edit Options' to enter the configurator.

Step 8.

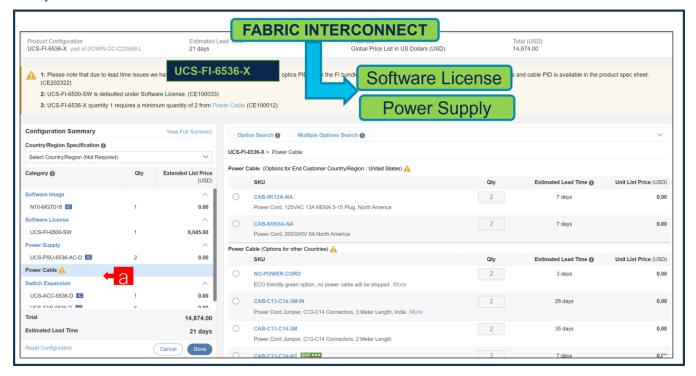

a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.


Step 9.

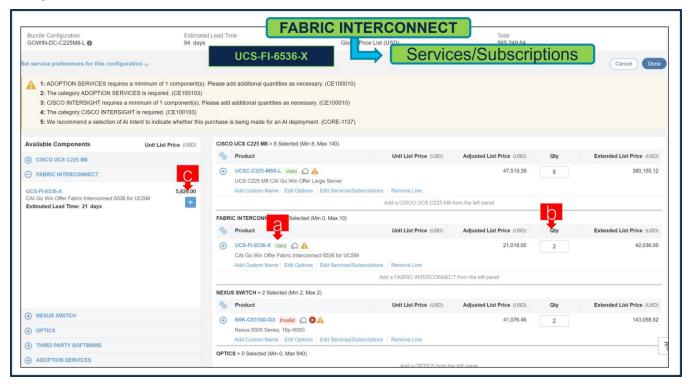

a. Note Status is now showing as Valid.

- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 10.

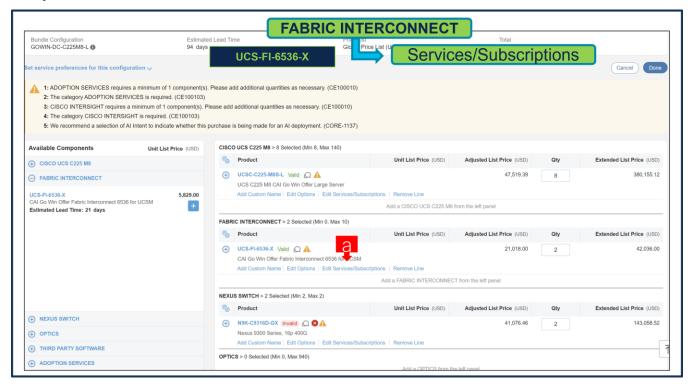

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 11.

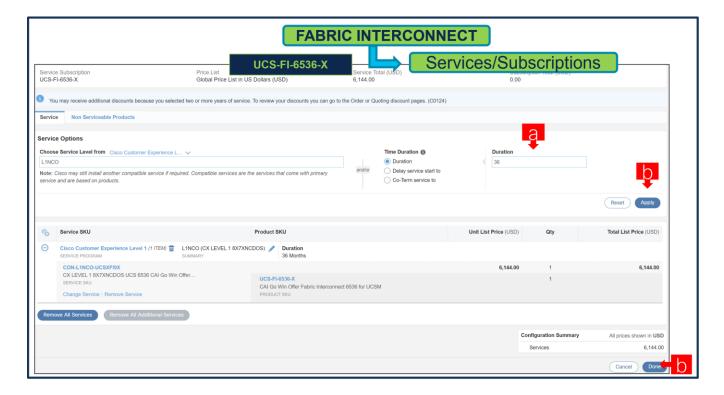

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"


Step 12.

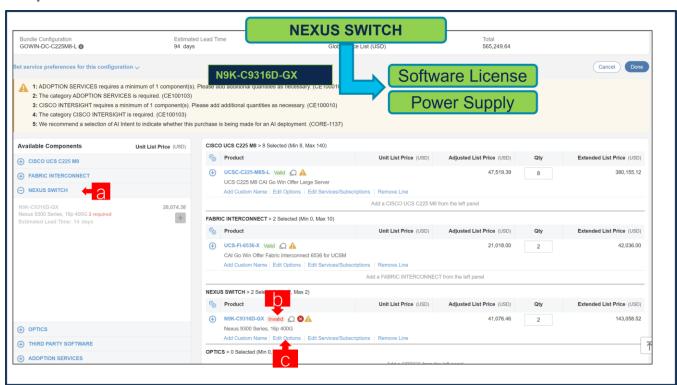

- ATO: N9K-C9316D-GX is preselected with 2 QTY from NEXUS SWITCH Category
- Notice the ATO: N9K-C9316D-GX Status is invalid as further configuration needed.

c. Select 'Edit Options' to enter the configurator.

Step 13.

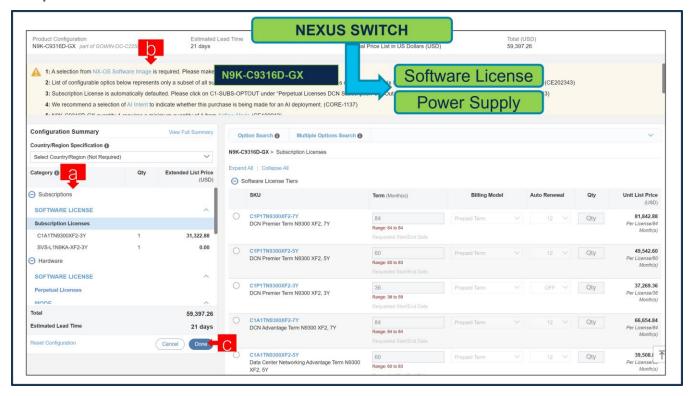

- a. Software Subscription License is default selection. User may select other available options.
- b. Please follow the warning messages and make the minimum required selections.
- c. Click Done when completed.

Note: If Order is through Distributor, please select C1-SUBS-OPTOUT from Perpetual License Option


Step 14.



a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.


Step 15.

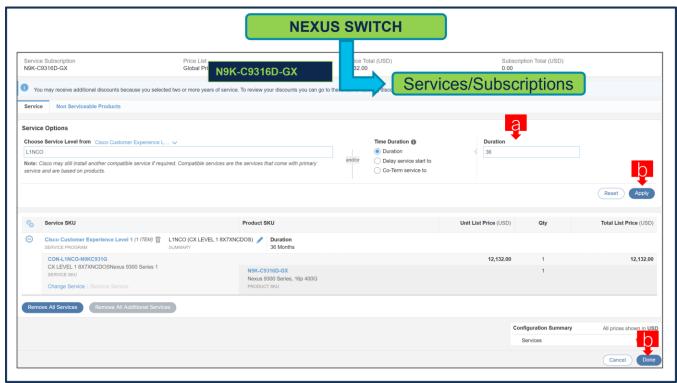

a. Enter the Term Duration

b. Click on "Apply" and "Done"

Step 16.

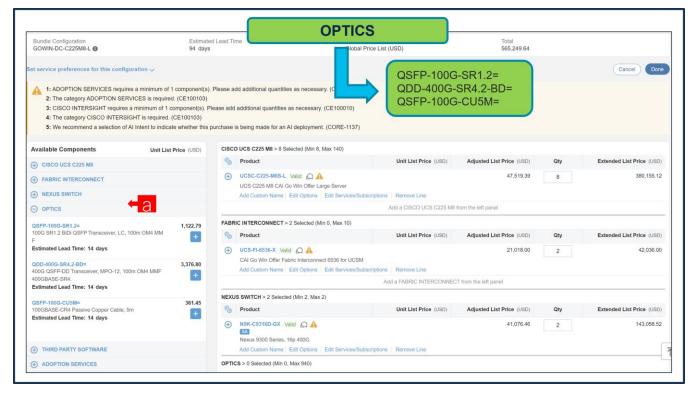


a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 17.

OPTICS Reference Guide							
		A	В	С	D		
1	GOWIN-DC	C2xxMx-M	C2xxMx-M	C2xxMx-L	C2xxMx-L		
2	FI Present	Yes	No	Yes	No		
3	Nexus	9316D-GX	93400LD-H1	9316D-GX	9316D-GX		
4	# of Servers	N, where Min=4, Max=280	N, where Min=4, Max=24	N, where Min=4, Max=140	N, where Min=4, Max=40		
5	# of FI	(ROUNDUP(A4/56))*2	-	(ROUNDUP(C4/28))*2	-		
6	QSFP-4SFP25G-CU5M location	Server uplinks & FI downlinks	-	-	-		
7	QSFP-4SFP25G-CU5M	A4	-	-	-		
8	SFP-50G-CU5M location	-	Server uplinks & Nexus downlinks	-	-		
9	SFP-50G-CU5M	-	B4*4	-	-		
10	QSFP-100G-CU5M location			Server uplinks & FI downlinks	-		
11	QSFP-100G-CU5M			C4*2	-		
12	OR, SFP-25G-SL location	Server uplinks	Server uplinks & Nexus downlinks	-	-		
13	SFP-25G-SL	A4*4	B4*8	-	-		
14	OR, QSFP-100G-SL4 location	FI downlinks	-	-	-		
15	QSFP-100G-SL4	A13/4	-	-	-		
16	OR, QSFP-100G-SR1.2 location	-	-	Server uplinks & FI downlinks	-		
17	QSFP-100G-SR1.2	-		C4*2*2	-		
18	QSFP-100G-SR1.2 location	FI uplinks	-	FI uplinks	Server Uplinks		
19	QSFP-100G-SR1.2	EVEN(A4/3.5)	-	EVEN((C4*2)/3.5)	D4*2		
20	QDD-400G-SR4.2-BD location	Nexus downlinks	-	Nexus downlinks	Nexus downlinks		
21	ODD-400G-SR4.2-BD	A19/4	-	C19/4	D19/4		


- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 18.

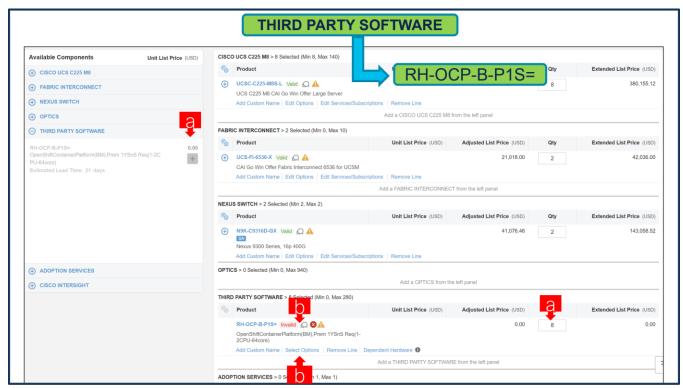


- a. THIRD PARTY SOFTWARE: RH-OCP-B-P1S= is an optional selection and QTY must be equal to Server QTY when selected.
- b. Notice the PID: RH-OCP-B-P1S= Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Step 19.

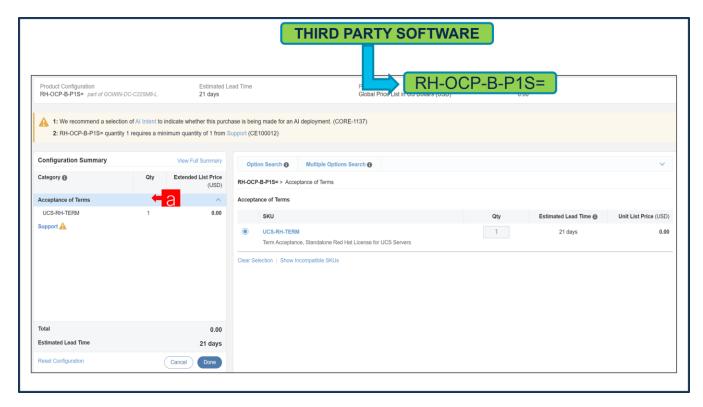


a. Select Acceptance of Terms Option.

Step 20.

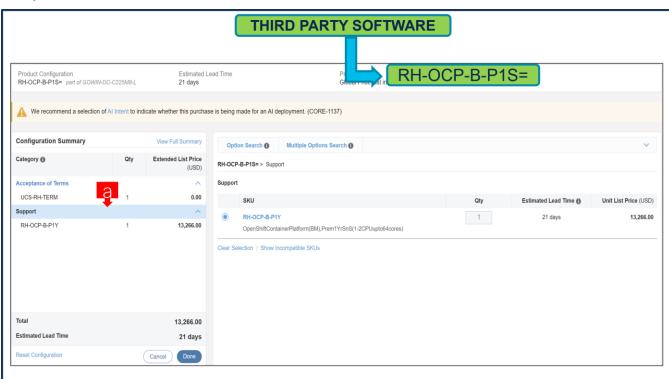

a. Select Support Option.

Step 21.

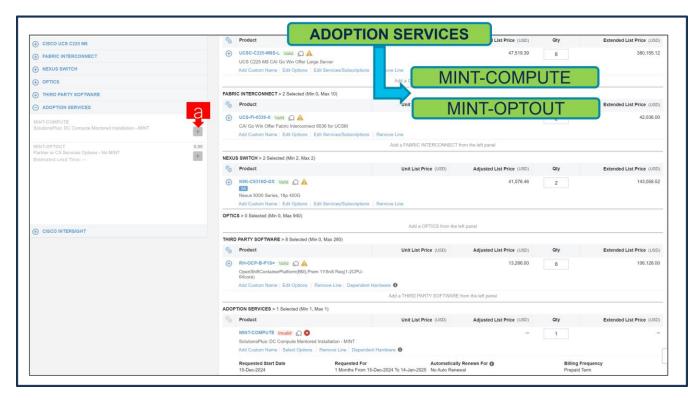

- a. Please select at least one option from ADOPTION SERVICES Category.
- b. User can select either MINT Services or can optout.


Note: Please select MINT-OPTOUT, if Order is through Distributor.

Step 22.




a. Please select appropriate QTY of MINT Service Units.

Step 23.

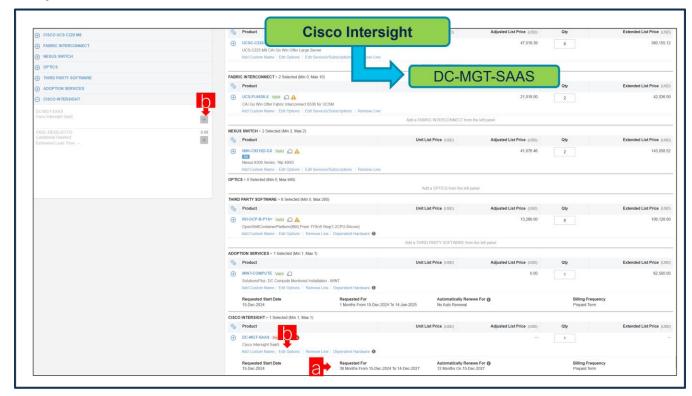


- a. It is recommended that Term Duration for HW Support align with Software Subscription Duration.
- b. Intersight is a required selection, if you have not previously purchased Cisco Intersight Software. Please make selection by clicking "ADD". Click on "Edit Options" to configure.

Step 24.

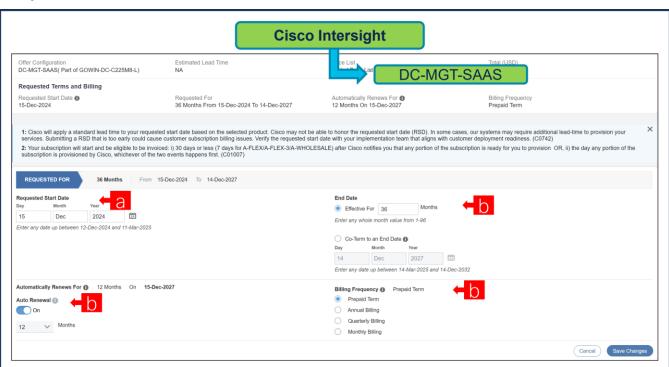


- a. Requested Start Date (RSD) is now dependent on HW Ship Date and will automatically starts when the HW ships. If you change the RSD, the Software will start either on the RSD you picked or the HW Ship Date whichever is later.
- b. **End Date** (duration in months) is defaulted to **36 Months**, **Auto Renewal** (on/off) is defaulted to **On** and **Billing Frequency** is defaulted to **Prepaid Term**. You can still change the setting accordingly.

Step 25.

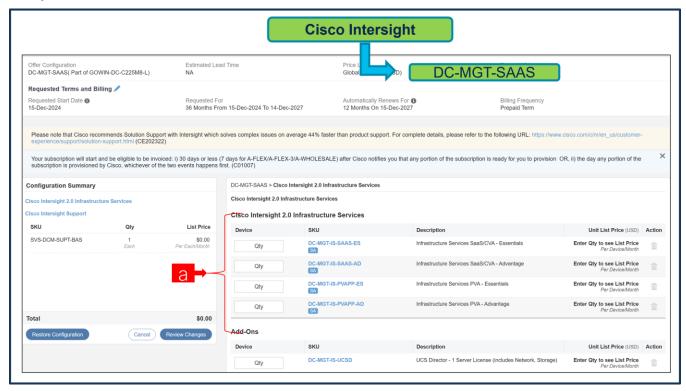


a. The quantity of Cisco Intersight 2.0 Infrastructure Services License under Offer: DC-MGT-SAAS should be equal to the quantity of Server selected. Enter the quantity.

Step 26.

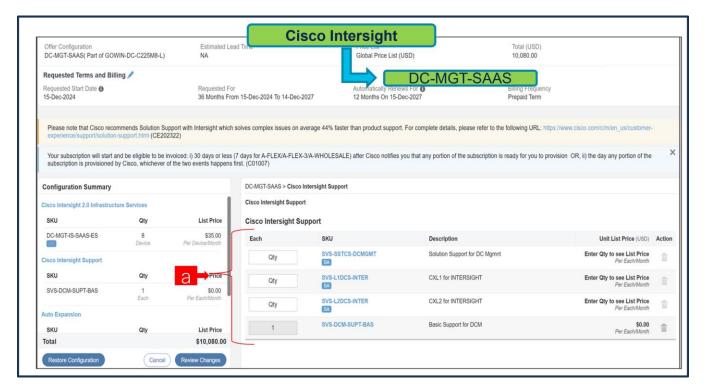

a. The Cisco Intersight License comes with separate Support. Basic Embedded Support is the default selection. However, it is recommended that Customer upgrade to CX Success Track Level 1 or Level 2 to ensure consistent SLA response time between Hardware and Software.

Step 27.

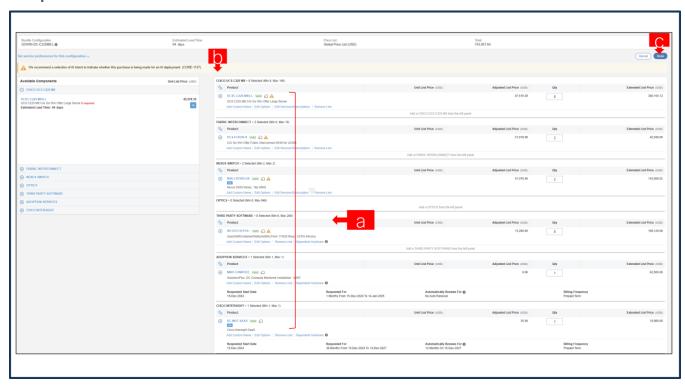


a. Configuration for MLB is completed when status of each Product is Valid and warning messages are cleared.

- b. Click on the "PLUS" to expand and view the selections made for each Product.
- c. Click on the "DONE" to complete the MLB Configuration.


Scenario 2: Customer With Enterprise Agreement for Cisco Intersight Software License

Step 1.

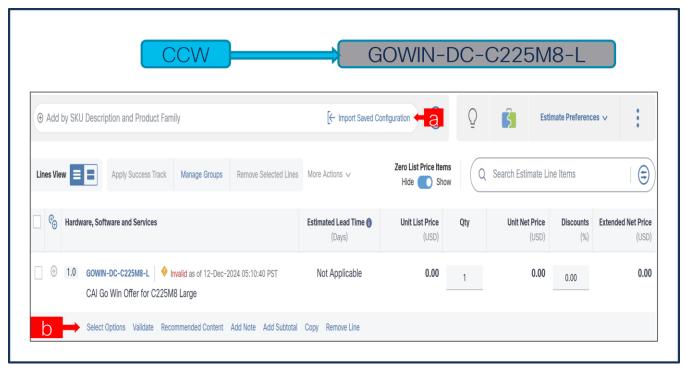

- a. In CCW, search for MLB PID and click on "Add"
- b. Click on "Select Options" to enter the configurator.

Step 2.

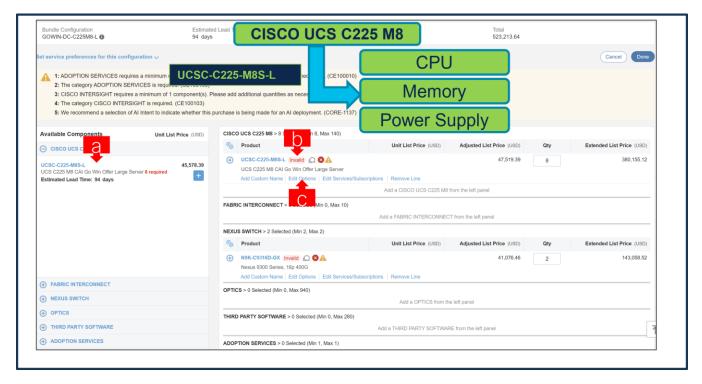


- a. ATO: UCSC-C225-M8S-L is preselected with 4 QTY from Category: CISCO UCS C225 M8.
- b. Notice the ATO: UCSC-C225-M8S-L Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 3.




 All Server Components are Auto Included in the configuration. Please select appropriate Power Cable.

Step 4.

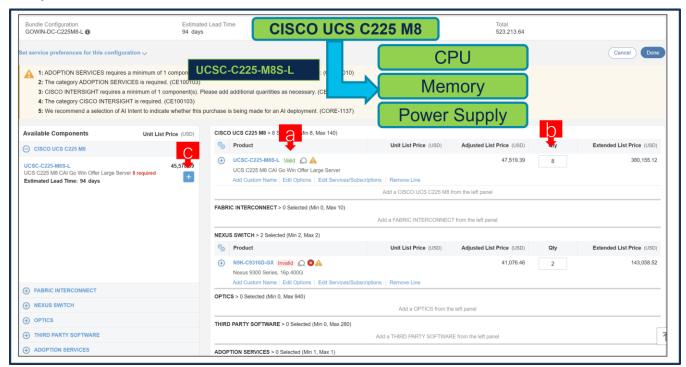

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 5.

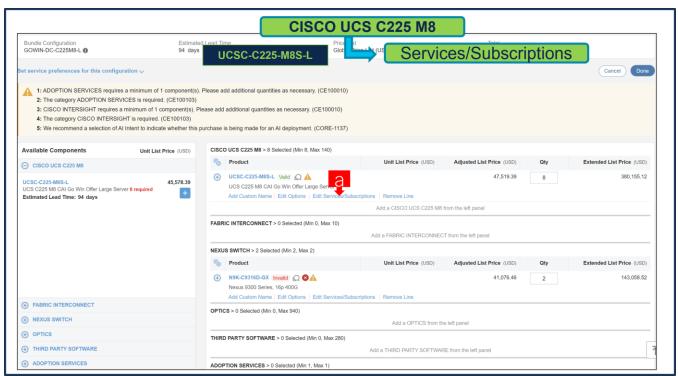

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 6.

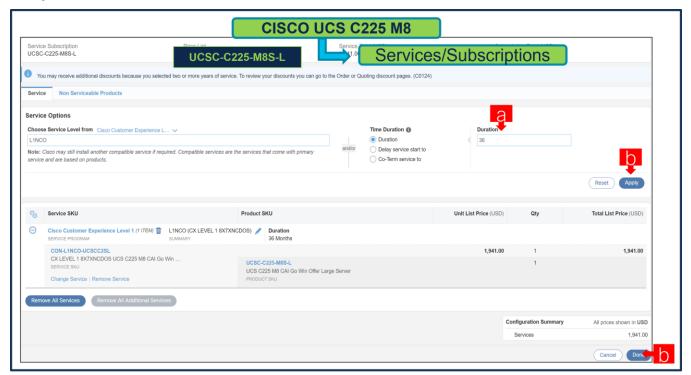


- a. Enter the Term Duration
- b. Click on "Apply" and "Done"

Step 7.

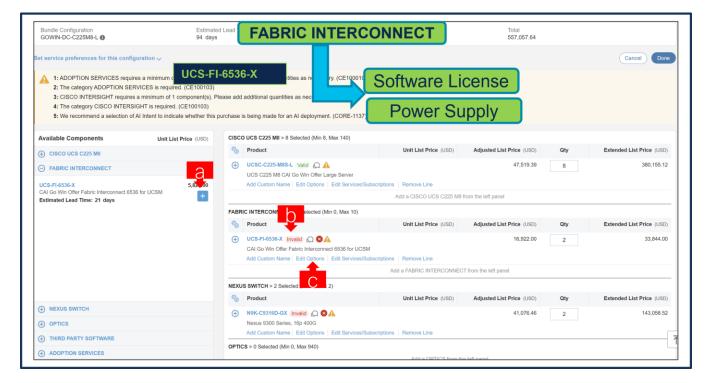


- FABRIC INTERCONNECT: UCS-FI-6536-X is an optional selection and minimum 2 QTY is required if selected.
- b. Notice the UCS-FI-6536-X ATO Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 8.

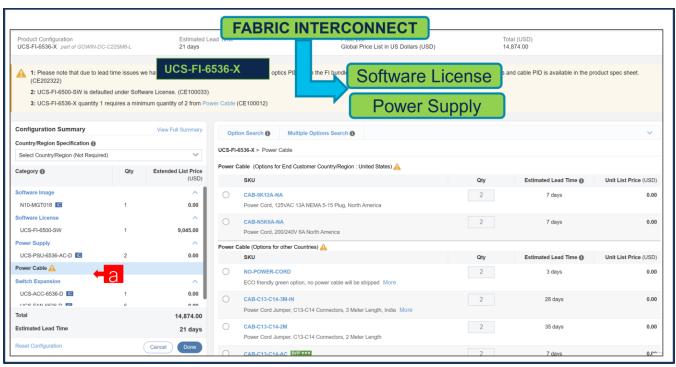


a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 9.

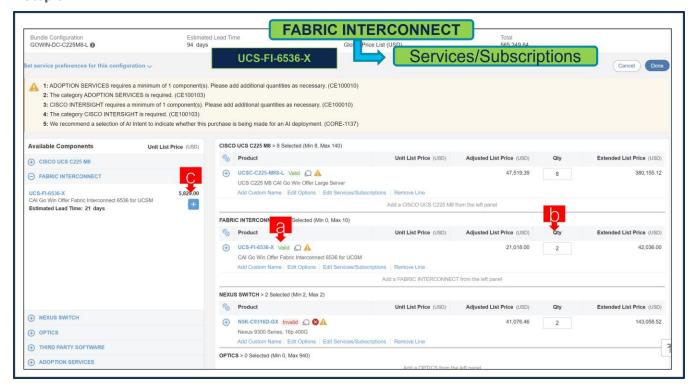

- Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 10.

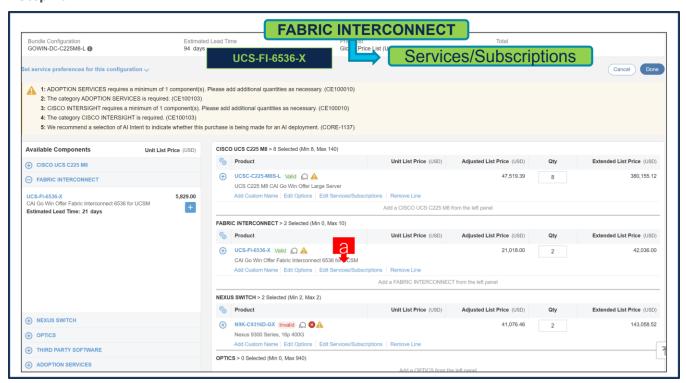

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 11.

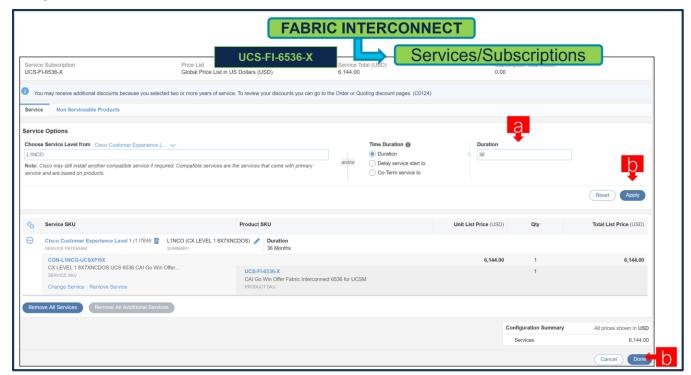


- a. Enter the Term Duration
- b. Click on "Apply" and "Done"

Step 12.

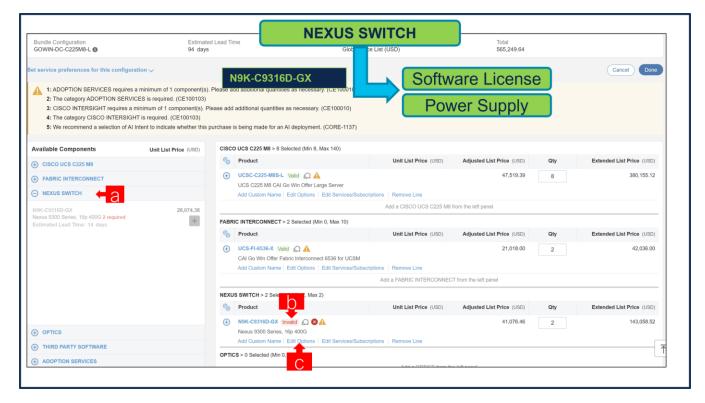

- a. ATO: N9K-C9316D-GX is preselected with 2 QTY from NEXUS SWITCH Category
- Notice the ATO: N9K-C9316D-GX Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Step 13.

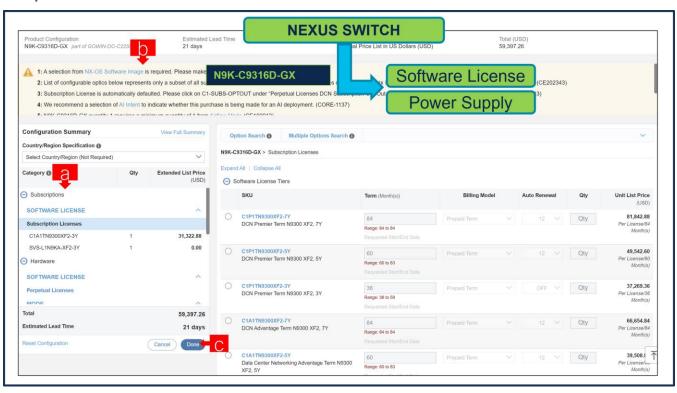


a. Software Subscription License is default selection. User may select other available options.

- b. Please follow the warning messages and make the minimum required selections.
- c. Click Done when completed.

Note: If Order is through Distributor, please select C1-SUBS-OPTOUT from Perpetual License Option


Step 14.

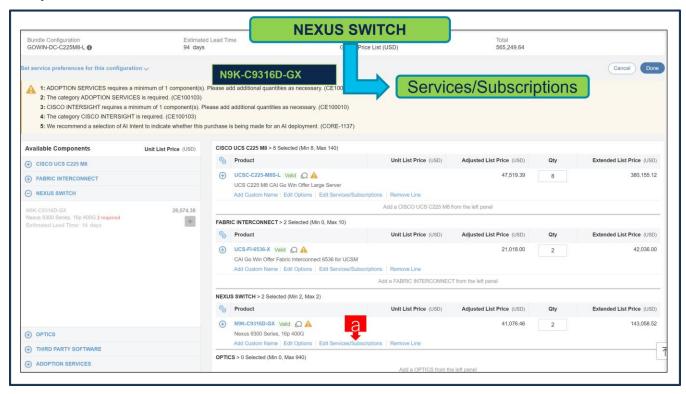

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 15.

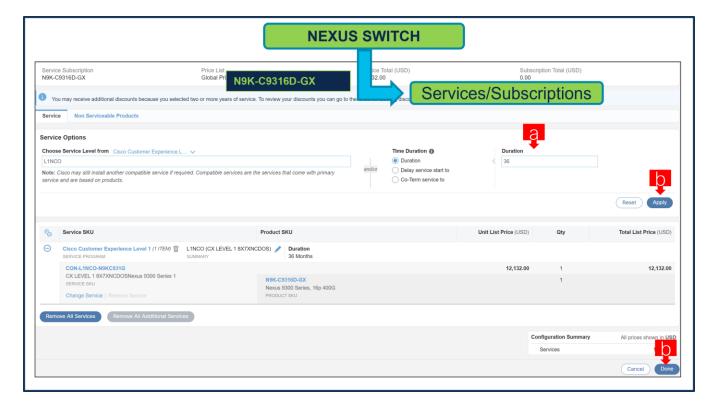

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"

Step 16.

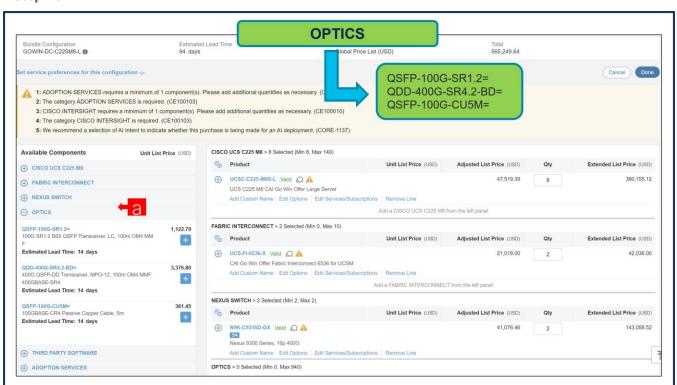


 All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 17.

	OPTICS Reference Guide					
		A	В	С	D	
1	GOWIN-DC	C2xxMx-M	C2xxMx-M	C2xxMx-L	C2xxMx-L	
2	FI Present	Yes	No	Yes	No	
3	Nexus	9316D-GX	93400LD-H1	9316D-GX	9316D-GX	
4	# of Servers	N, where Min=4, Max=280	N, where Min=4, Max=24	N, where Min=4, Max=140	N, where Min=4, Max=40	
5	# of FI	(ROUNDUP(A4/56))*2	-	(ROUNDUP(C4/28))*2	-	
6	QSFP-4SFP25G-CU5M location	Server uplinks & FI downlinks	-	-	-	
7	QSFP-4SFP25G-CU5M	A4	-	-	-	
8	SFP-50G-CU5M location	-	Server uplinks & Nexus downlinks	-	-	
9	SFP-50G-CU5M	-	B4*4	-	-	
10	QSFP-100G-CU5M location			Server uplinks & FI downlinks	-	
11	QSFP-100G-CU5M			C4*2	-	
12	OR, SFP-25G-SL location	Server uplinks	Server uplinks & Nexus downlinks	-	-	
13	SFP-25G-SL	A4*4	B4*8	-	-	
14	OR, QSFP-100G-SL4 location	FI downlinks	-	-	-	
15	QSFP-100G-SL4	A13/4	-	-	-	
16	OR, QSFP-100G-SR1.2 location	-	-	Server uplinks & FI downlinks	-	
17	QSFP-100G-SR1.2	-		C4*2*2	-	
18	QSFP-100G-SR1.2 location	FI uplinks	-	FI uplinks	Server Uplinks	
19	QSFP-100G-SR1.2	EVEN(A4/3.5)	-	EVEN((C4*2)/3.5)	D4*2	
20	QDD-400G-SR4.2-BD location	Nexus downlinks	-	Nexus downlinks	Nexus downlinks	
21	QDD-400G-SR4.2-BD	A19/4	-	C19/4	D19/4	


- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 18.

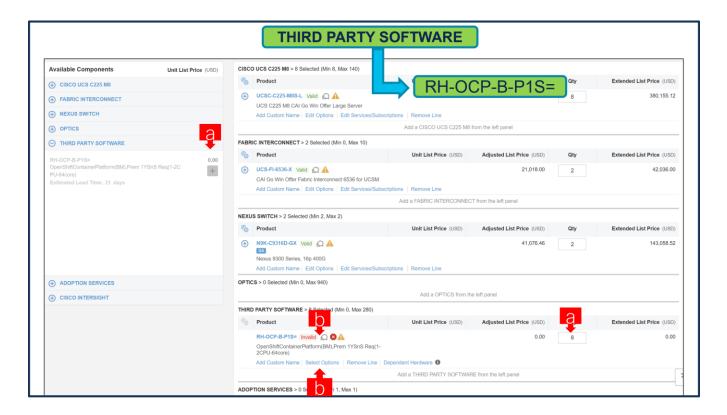


- a. THIRD PARTY SOFTWARE: RH-OCP-B-P1S= is an optional selection and QTY must be equal to Server QTY when selected.
- b. Notice the PID: RH-OCP-B-P1S= Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Step 19.

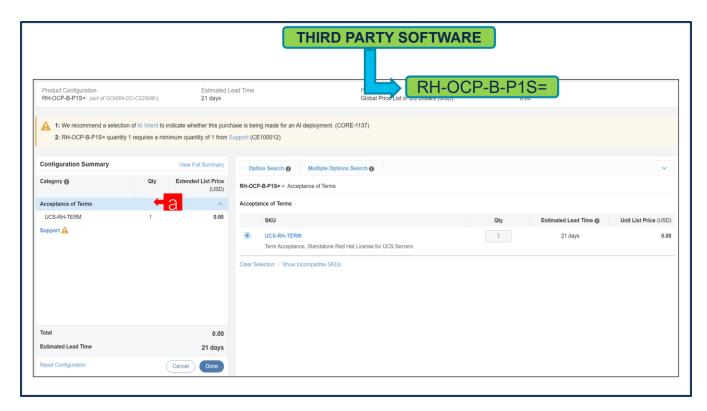


a. Select Acceptance of Terms Option.

Step 20.

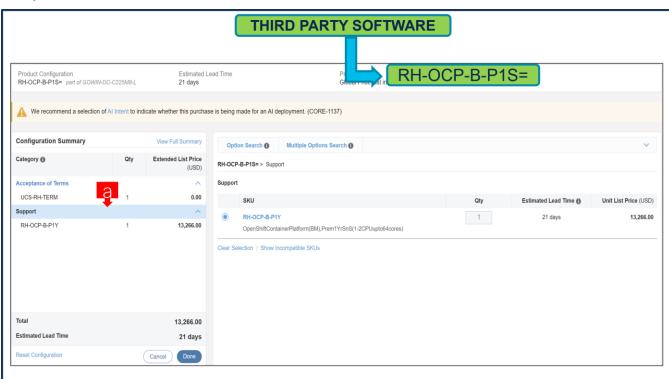

a. Select Support Option.

Step 21.

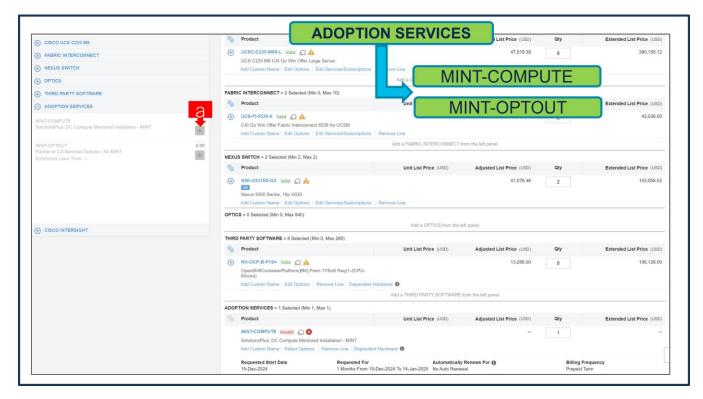

- a. Please select at least one option from ADOPTION SERVICES Category.
- b. User can select either MINT Services or can optout.


Note: Please select MINT-OPTOUT, if Order is through Distributor.

Step 22.




a. Please select appropriate QTY of MINT Service Units.

Step 23.

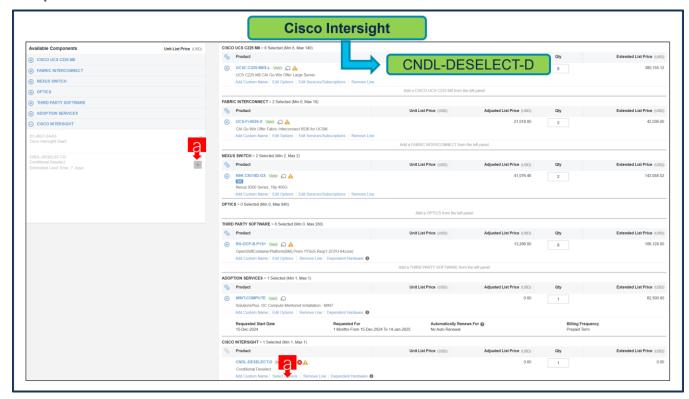


 a. CNDL-DESELECT-D is meant to select only if Customer has already purchased Cisco Intersight License via EA Contract or order is for Disti Fulfillment.

Step 24.

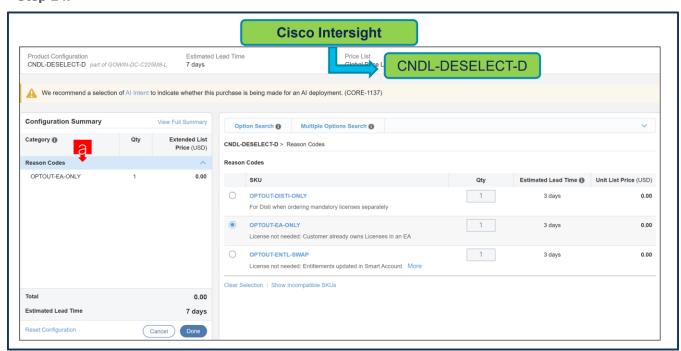

a. Please select appropriate Reason Code


Step 25.

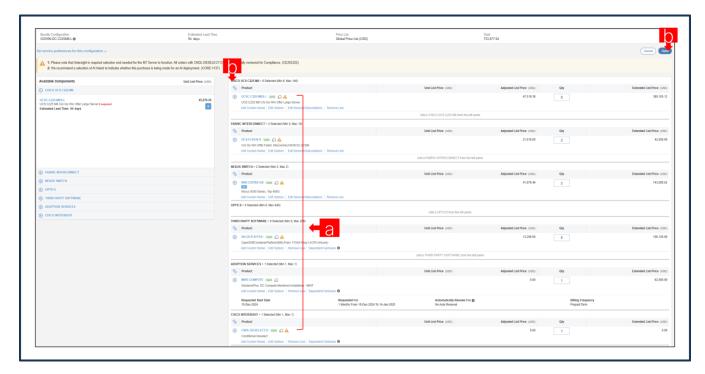

- a. Configuration for MLB is completed when status of each Product is Valid and warning messages are cleared.
- b. Click on the "PLUS" to expand and view the selections made for each Product.
- c. Click on the "DONE" to complete the MLB Configuration.


Buy Method Through Distributor (Eg: Direct Customer & Tier 1 Partners)

Scenario 1: Customer Without Enterprise Agreement for Cisco Intersight Software License Step 1.

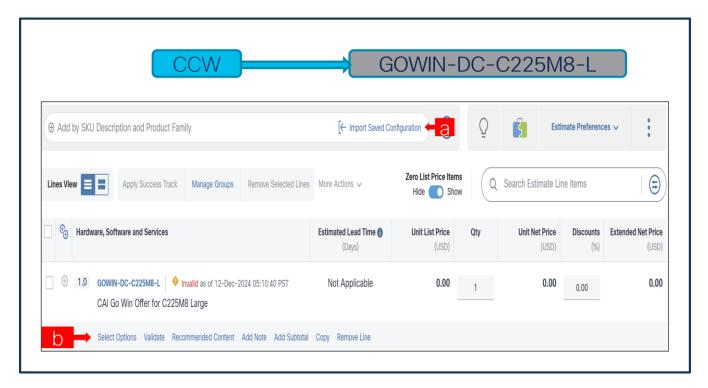

- a. In CCW, search for MLB PID and click on "Add"
- b. Click on "Select Options" to enter the configurator.

Step 2.

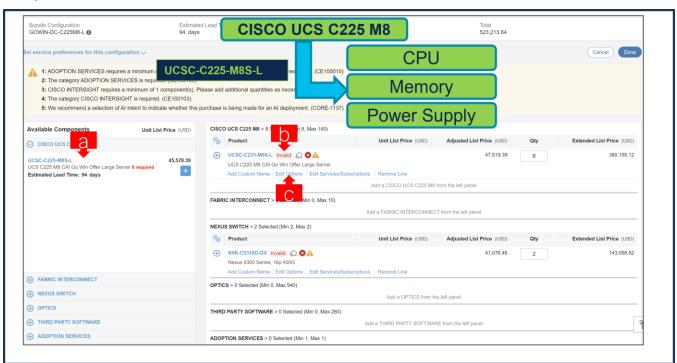

- a. ATO: UCSC-C225-M8S-L is preselected with 4 QTY from Category: CISCO UCS C225 M8.
- b. Notice the ATO: UCSC-C225-M8S-L Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 3.



 All Server Components are Auto Included in the configuration. Please select appropriate Power Cable.

Step 4.



- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.

c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 5.



a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 6.



- a. Enter the Term Duration
- b. Click on "Apply" and "Done"


Step 7.

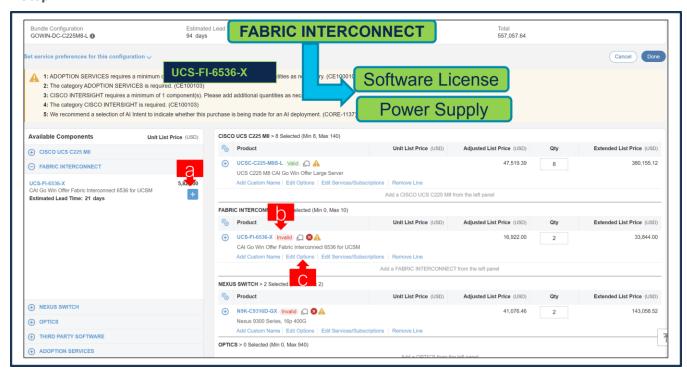

- FABRIC INTERCONNECT: UCS-FI-6536-X is an optional selection and minimum 2 QTY is required if selected.
- b. Notice the UCS-FI-6536-X ATO Status is invalid as further configuration is needed.


c. Select 'Edit Options' to enter the configurator.

Step 8.

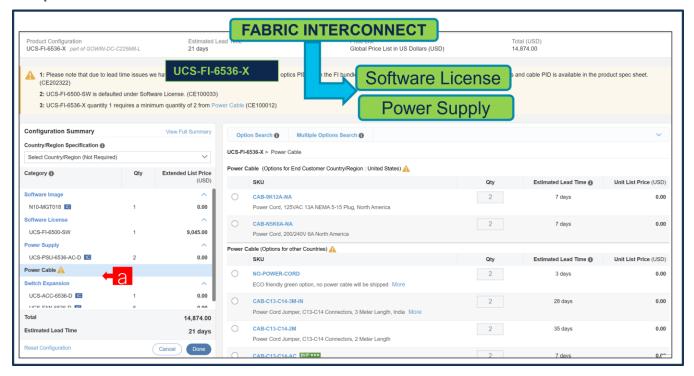

a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.


Step 9.

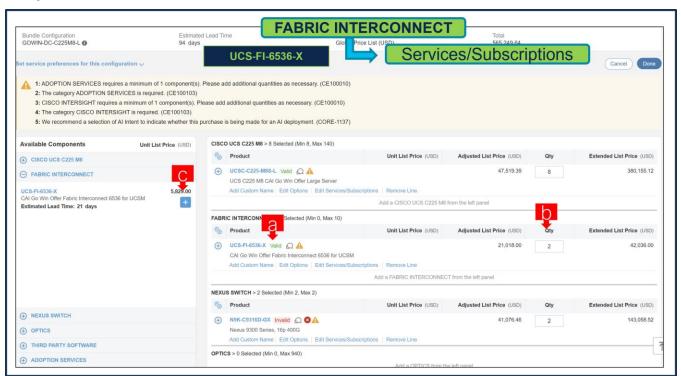

a. Note Status is now showing as Valid.

- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 10.

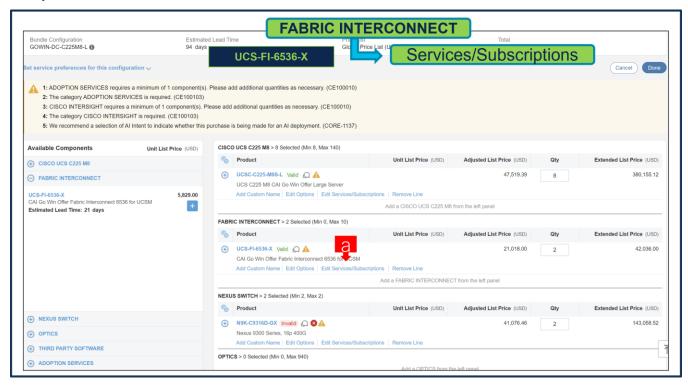

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 11.

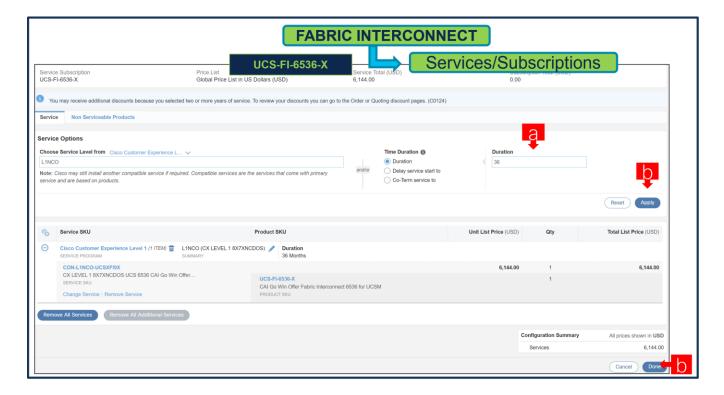

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"


Step 12.

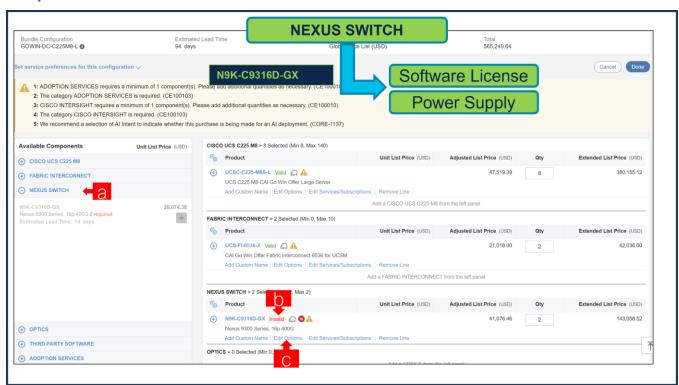

- ATO: N9K-C9316D-GX is preselected with 2 QTY from NEXUS SWITCH Category
- Notice the ATO: N9K-C9316D-GX Status is invalid as further configuration needed.

c. Select 'Edit Options' to enter the configurator.


Step 13.

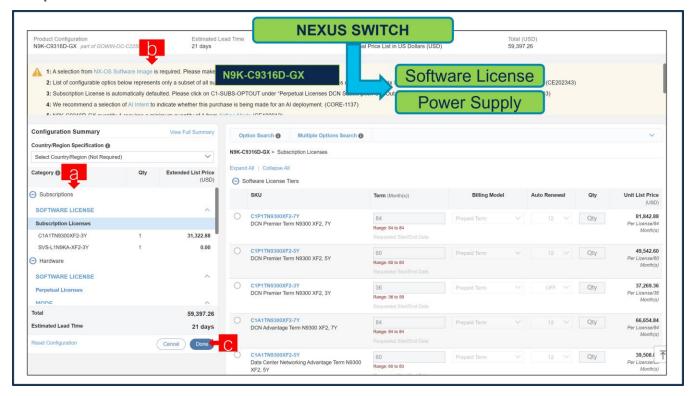

- a. Software Subscription License is default selection. User may select other available options.
- b. Please follow the warning messages and make the minimum required selections.
- c. Click Done when completed.

Note: If Order is through Distributor, please select C1-SUBS-OPTOUT from Perpetual License Option


Step 14.

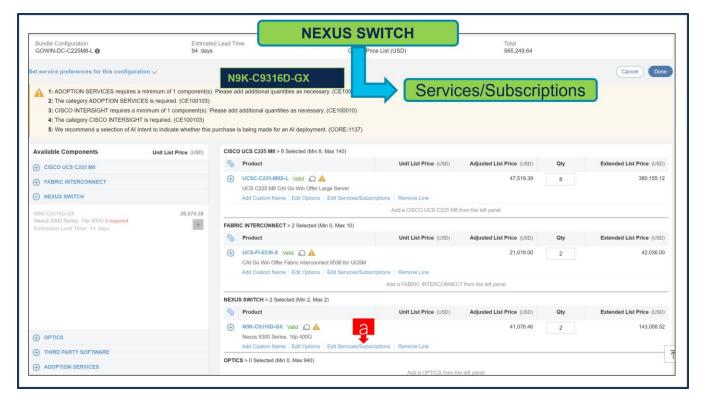

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 15.

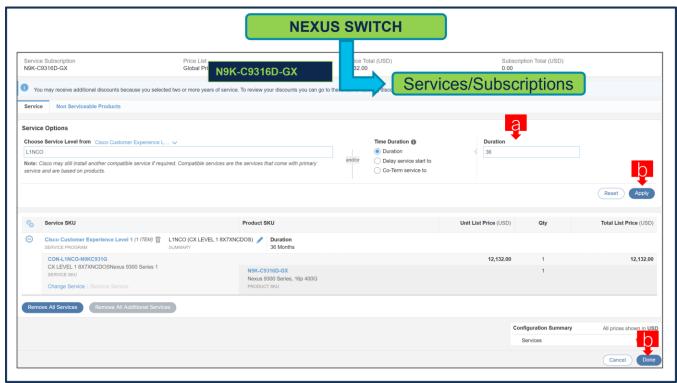

a. Enter the Term Duration

b. Click on "Apply" and "Done"

Step 16.




a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 17.

OPTICS Reference Guide								
		A	В	С	D			
1	GOWIN-DC	C2xxMx-M	C2xxMx-M	C2xxMx-L	C2xxMx-L			
2	FI Present	Yes	No	Yes	No			
3	Nexus	9316D-GX	93400LD-H1	9316D-GX	9316D-GX			
4	# of Servers	N, where Min=4, Max=280	N, where Min=4, Max=24	N, where Min=4, Max=140	N, where Min=4, Max=40			
5	# of FI	(ROUNDUP(A4/56))*2	-	(ROUNDUP(C4/28))*2	-			
6	QSFP-4SFP25G-CU5M location	Server uplinks & FI downlinks	-	-	-			
7	QSFP-4SFP25G-CU5M	A4	-	-	-			
8	SFP-50G-CU5M location	-	Server uplinks & Nexus downlinks	-	-			
9	SFP-50G-CU5M	-	B4*4	-	-			
10	QSFP-100G-CU5M location			Server uplinks & FI downlinks	-			
11	QSFP-100G-CU5M			C4*2	-			
12	OR, SFP-25G-SL location	Server uplinks	Server uplinks & Nexus downlinks	-	-			
13	SFP-25G-SL	A4*4	B4*8	-	-			
14	OR, QSFP-100G-SL4 location	FI downlinks	-	-	-			
15	QSFP-100G-SL4	A13/4	-	-	-			
16	OR, QSFP-100G-SR1.2 location	-	-	Server uplinks & FI downlinks	-			
17	QSFP-100G-SR1.2	-		C4*2*2	-			
18	QSFP-100G-SR1.2 location	FI uplinks	-	FI uplinks	Server Uplinks			
19	QSFP-100G-SR1.2	EVEN(A4/3.5)	-	EVEN((C4*2)/3.5)	D4*2			
20	QDD-400G-SR4.2-BD location	Nexus downlinks	-	Nexus downlinks	Nexus downlinks			
21	ODD-400G-SR4.2-BD	A19/4	-	C19/4	D19/4			


- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 18.

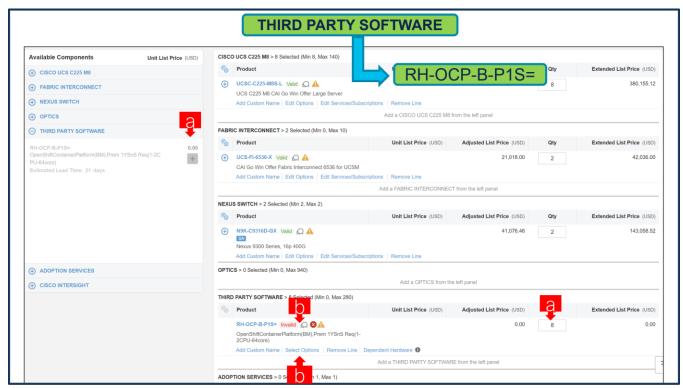


- a. THIRD PARTY SOFTWARE: RH-OCP-B-P1S= is an optional selection and QTY must be equal to Server QTY when selected.
- b. Notice the PID: RH-OCP-B-P1S= Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Step 19.

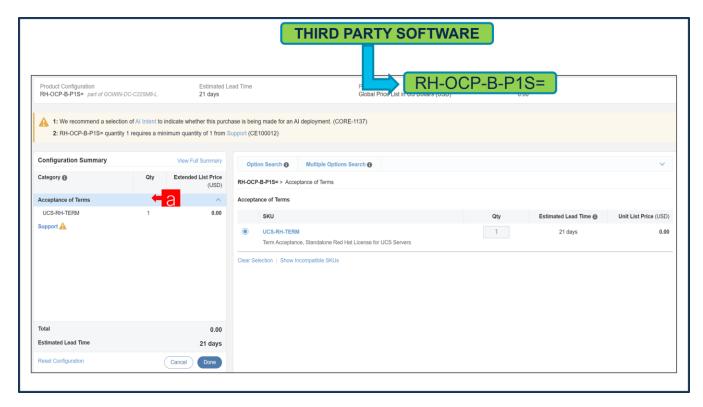


a. Select Acceptance of Terms Option.

Step 20.

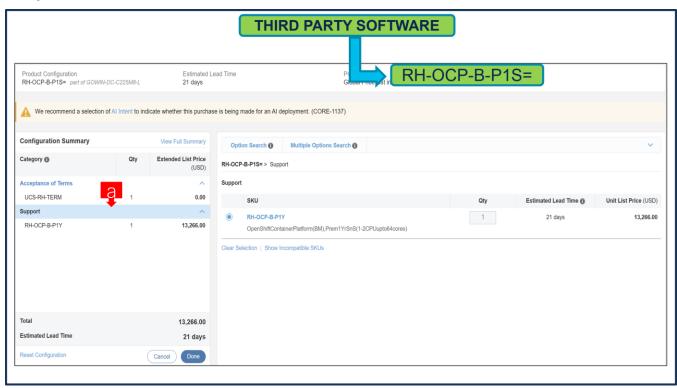

a. Select Support Option.

Step 21.

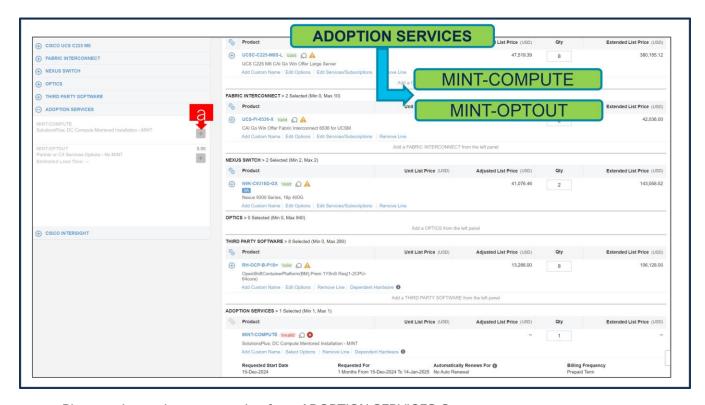

- a. Please select at least one option from ADOPTION SERVICES Category.
- b. User can select either MINT Services or can optout.


Note: Please select MINT-OPTOUT, if Order is through Distributor.

Step 22.




a. Please select appropriate QTY of MINT Service Units.

Step 23.

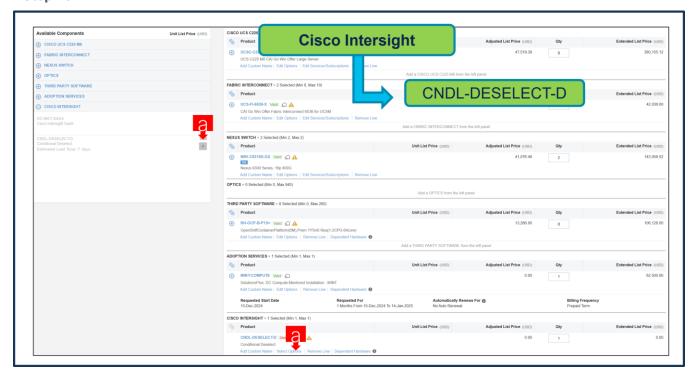


 a. CNDL-DESELECT-D is meant to select only if Customer has already purchased Cisco Intersight License via EA Contract or order is for Disti Fulfillment.

Step 24.

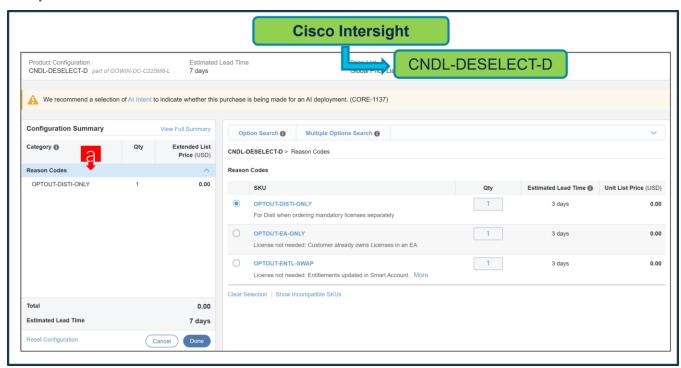


a. Please select appropriate Reason Code

Step 25.

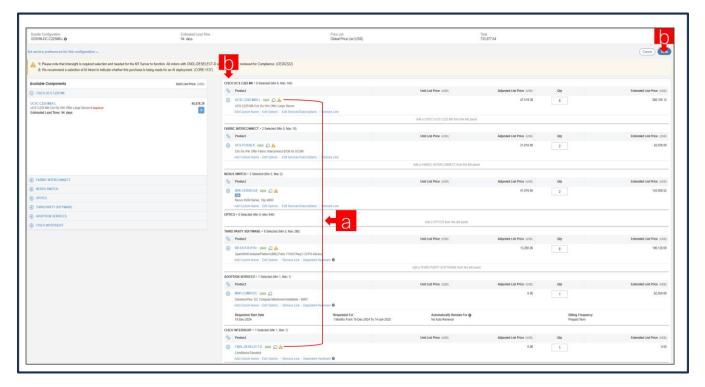

- a. Configuration for MLB is completed when status of each Product is Valid, and warning messages are cleared.
- b. Click on the "PLUS" to expand and view the selections made for each Product.
- c. Click on the "DONE" to complete the MLB Configuration.


Step 26.

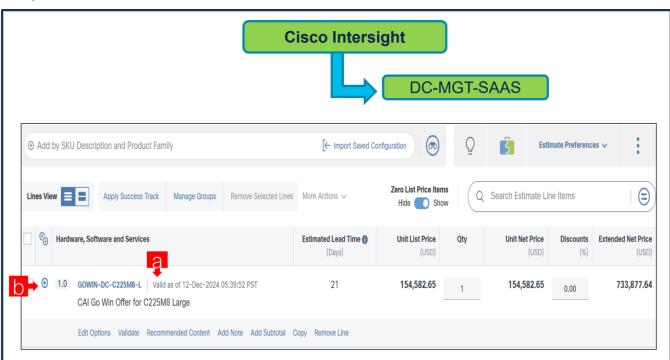

a. Configuration of MLB is now Valid and Line No. 1.0 represents HW only Configuration.

b. Intersight is a required selection, if you have not previously purchased Cisco Intersight Software and needs to added in Line 2.0 which will represent SW only Configuration.

Step 27.

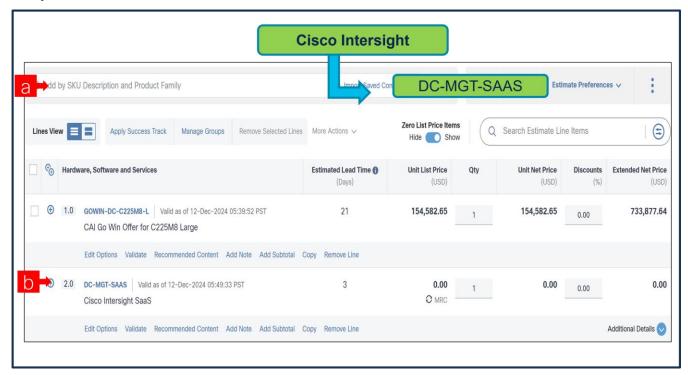


- a. In CCW, search for DC-MGT-SAAS and click on "ADD".
- b. Intersight is a required selection, if you have not previously purchased Cisco Intersight Software. Click on Select Options to enter the configurator.

Step 28.




- a. **Requested Start Date (RSD)** It is recommended that when you book your SaaS Product, you select a Request Start Date (RSD) 90 days into the future.
- b. **End Date** (duration in months) is defaulted to **36 Months**, **Auto Renewal** (on/off) is defaulted to **On** and **Billing Frequency** is defaulted to **Prepaid Term**. You can still change the setting accordingly.

Step 29.

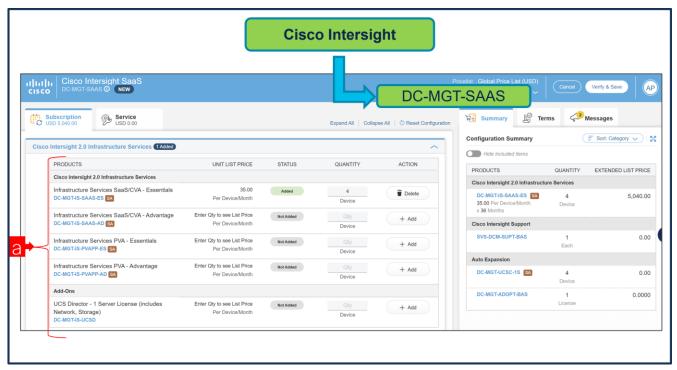


 The quantity of Cisco Intersight 2.0 Infrastructure Services License under Offer: DC-MGT-SAAS should be equal to the quantity of Server selected. Enter the quantity.

Step 30.

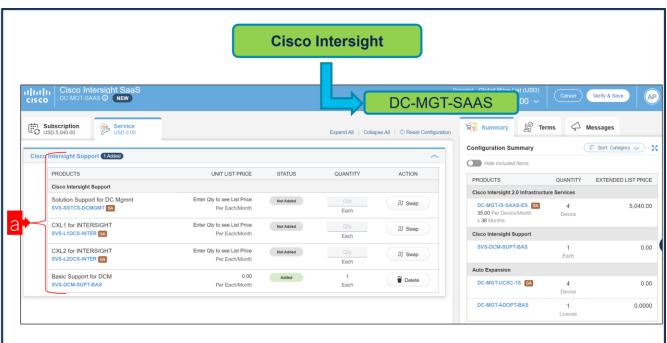


a. The Cisco Intersight License comes with separate Support. Basic Embedded Support is the default selection. It is recommended that Customer should upgrade to Solution Support or CX Success Track L1 or L2 for the HW.

Step 31.

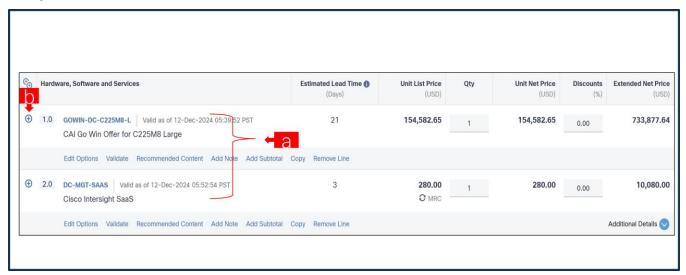


- a. Configuration for MLB and DC-MGT-SAAS is now completed, and status of each Product is Valid.
- b. Click on the "PLUS" to expand and view the selections made for each Product.

Scenario 2: Customer With Enterprise Agreement for Cisco Intersight Software License Step 1.

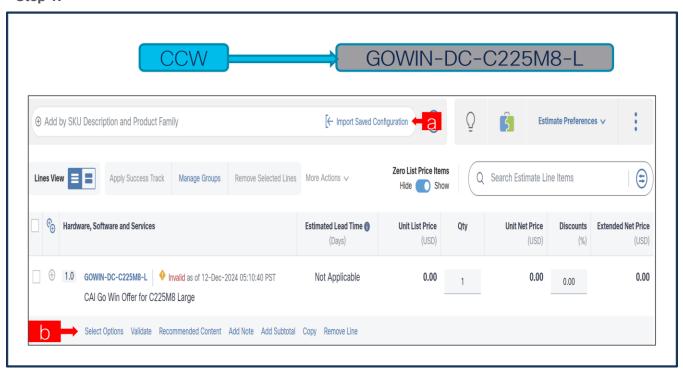


- a. In CCW, search for MLB PID and click on "Add"
- b. Click on "Select Options" to enter the configurator.

Step 2.

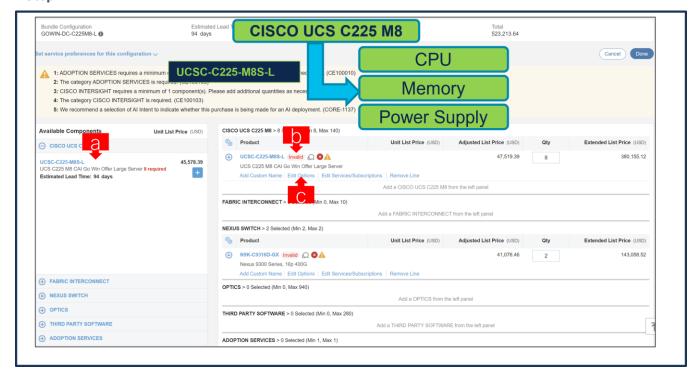

- a. ATO: UCSC-C225-M8S-L is preselected with 4 QTY from Category: CISCO UCS C225 M8.
- b. Notice the ATO: UCSC-C225-M8S-L Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 3.

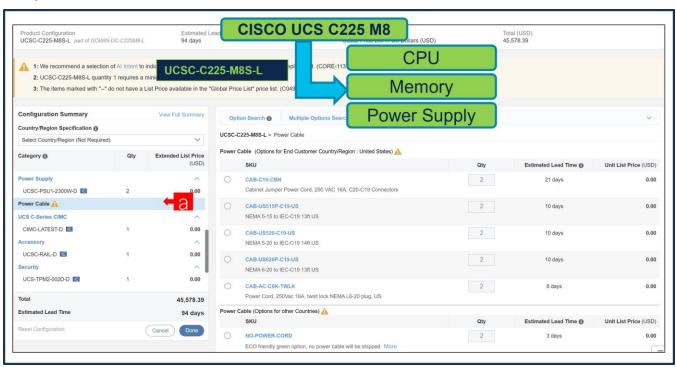


 All Server Components are Auto Included in the configuration. Please select appropriate Power Cable.

Step 4.



- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 5.

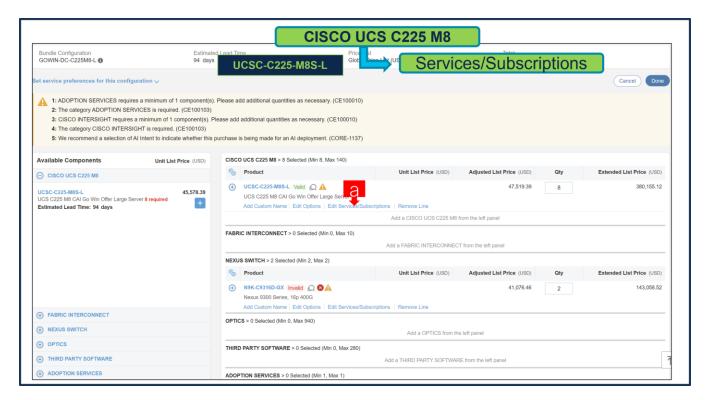

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.


Step 6.

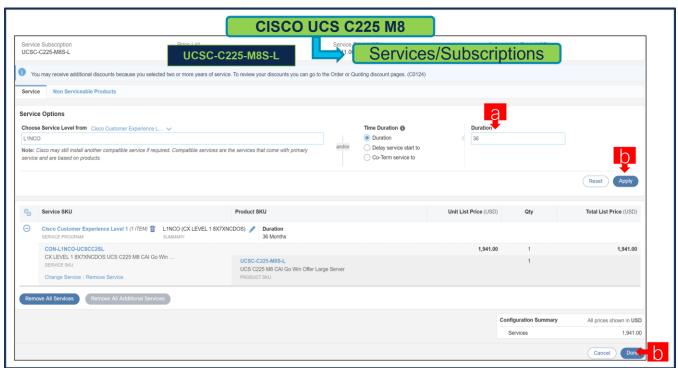

a. Enter the Term Duration


b. Click on "Apply" and "Done"

Step 7.

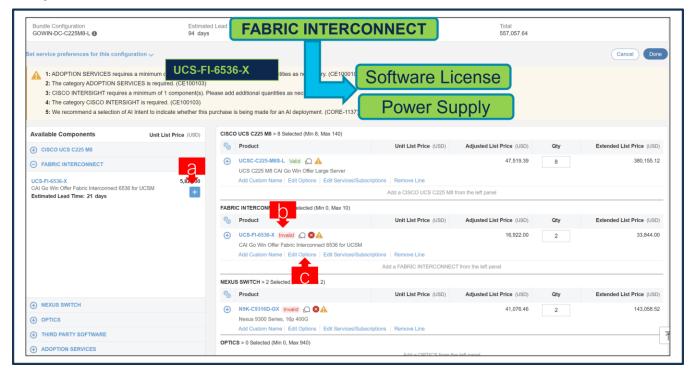


- FABRIC INTERCONNECT: UCS-FI-6536-X is an optional selection and minimum 2 QTY is required if selected.
- b. Notice the UCS-FI-6536-X ATO Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 8.

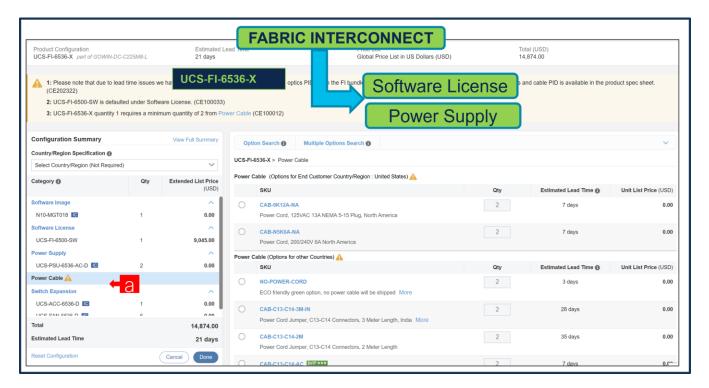

a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.


Step 9.

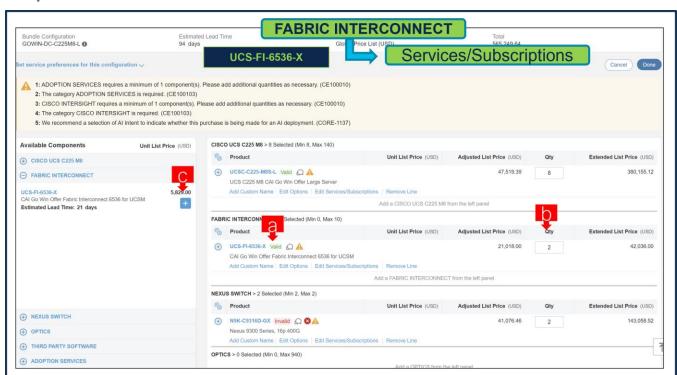

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.

 Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 10.

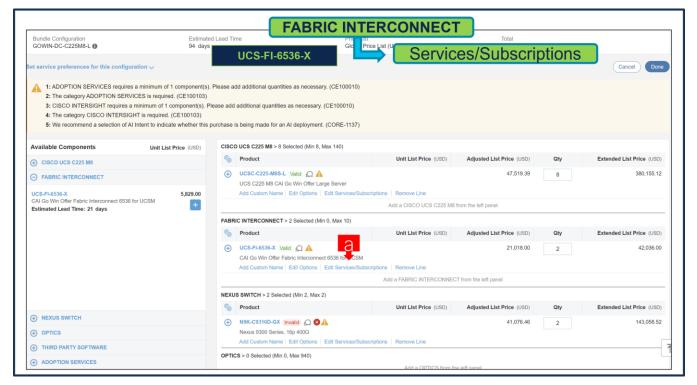

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 11.

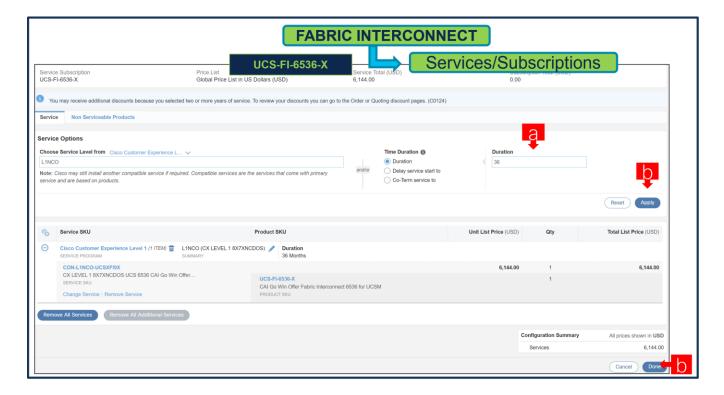

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"


Step 12.

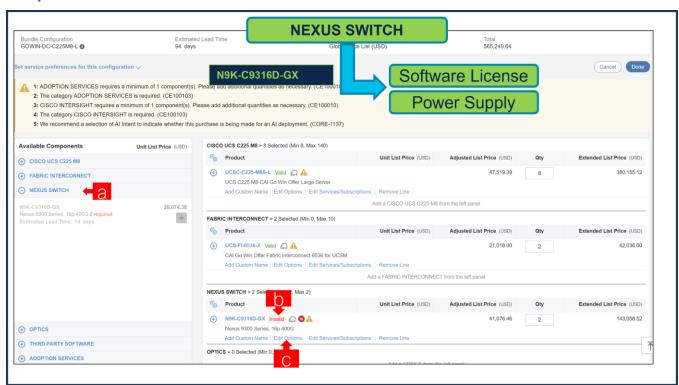

- ATO: N9K-C9316D-GX is preselected with 2 QTY from NEXUS SWITCH Category
- Notice the ATO: N9K-C9316D-GX Status is invalid as further configuration needed.

c. Select 'Edit Options' to enter the configurator.


Step 13.

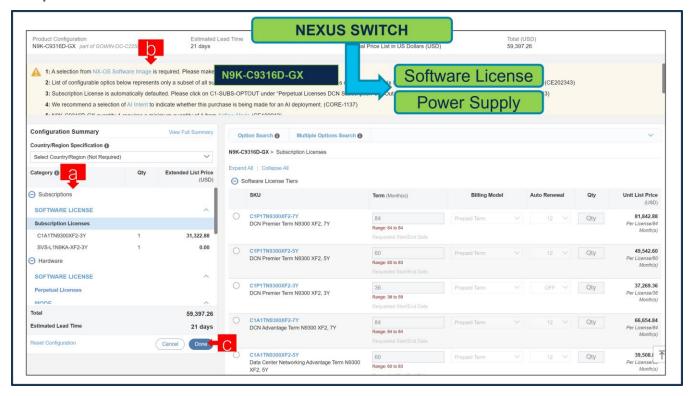

- a. Software Subscription License is default selection. User may select other available options.
- b. Please follow the warning messages and make the minimum required selections.
- c. Click Done when completed.

Note: If Order is through Distributor, please select C1-SUBS-OPTOUT from Perpetual License Option


Step 14.

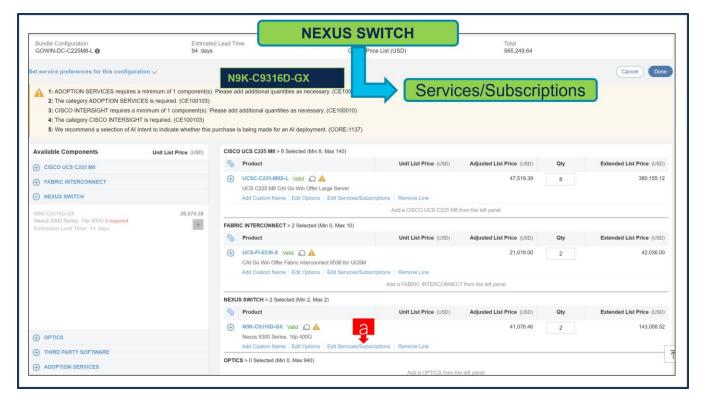

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.


Step 15.

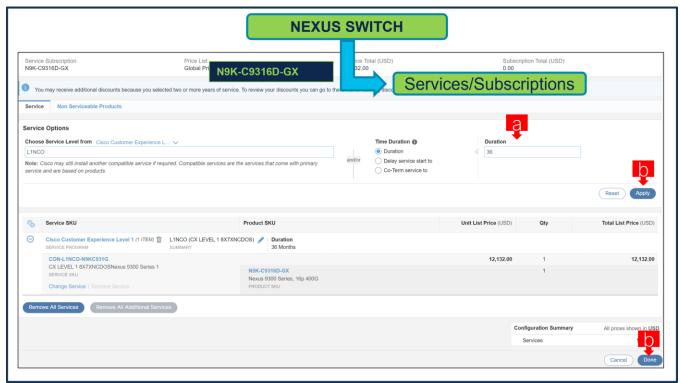

a. Enter the Term Duration

b. Click on "Apply" and "Done"

Step 16.

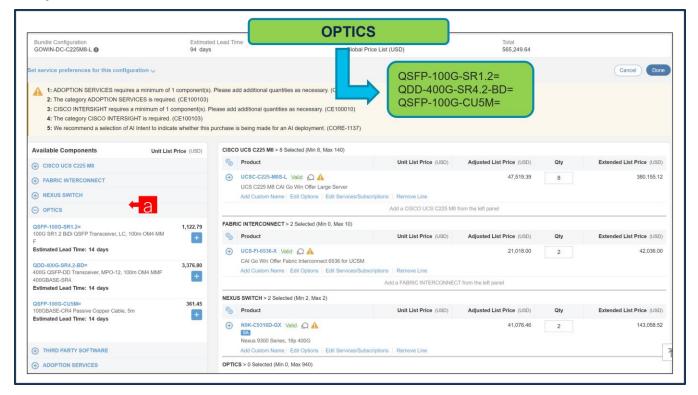


a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 17.

OPTICS Reference Guide							
		A	В	С	D		
1	GOWIN-DC	C2xxMx-M	C2xxMx-M	C2xxMx-L	C2xxMx-L		
2	FI Present	Yes	No	Yes	No		
3	Nexus	9316D-GX	93400LD-H1	9316D-GX	9316D-GX		
4	# of Servers	N, where Min=4, Max=280	N, where Min=4, Max=24	N, where Min=4, Max=140	N, where Min=4, Max=40		
5	# of FI	(ROUNDUP(A4/56))*2	-	(ROUNDUP(C4/28))*2	-		
6	QSFP-4SFP25G-CU5M location	Server uplinks & FI downlinks	-	-	-		
7	QSFP-4SFP25G-CU5M	A4	-	-	-		
8	SFP-50G-CU5M location	-	Server uplinks & Nexus downlinks	-	-		
9	SFP-50G-CU5M	-	B4*4	-	-		
10	QSFP-100G-CU5M location			Server uplinks & FI downlinks	-		
11	QSFP-100G-CU5M			C4*2	-		
12	OR, SFP-25G-SL location	Server uplinks	Server uplinks & Nexus downlinks	-	-		
13	SFP-25G-SL	A4*4	B4*8	-	-		
14	OR, QSFP-100G-SL4 location	FI downlinks	-	-	-		
15	QSFP-100G-SL4	A13/4	-	-	-		
16	OR, QSFP-100G-SR1.2 location	-	-	Server uplinks & FI downlinks	-		
17	QSFP-100G-SR1.2	-		C4*2*2	-		
18	QSFP-100G-SR1.2 location	FI uplinks	-	FI uplinks	Server Uplinks		
19	QSFP-100G-SR1.2	EVEN(A4/3.5)	-	EVEN((C4*2)/3.5)	D4*2		
20	QDD-400G-SR4.2-BD location	Nexus downlinks	-	Nexus downlinks	Nexus downlinks		
21	ODD-400G-SR4.2-BD	A19/4	-	C19/4	D19/4		


- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 18.

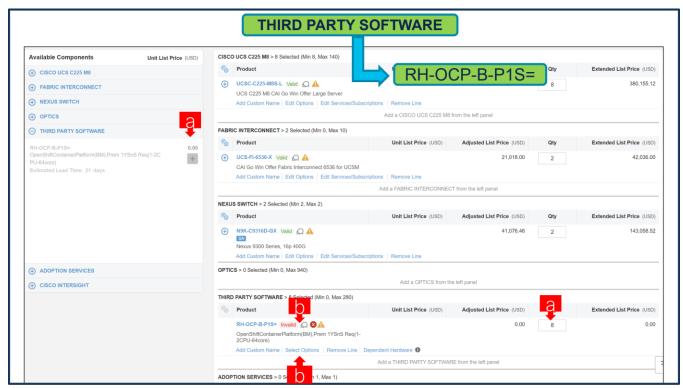


- a. THIRD PARTY SOFTWARE: RH-OCP-B-P1S= is an optional selection and QTY must be equal to Server QTY when selected.
- b. Notice the PID: RH-OCP-B-P1S= Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Step 19.

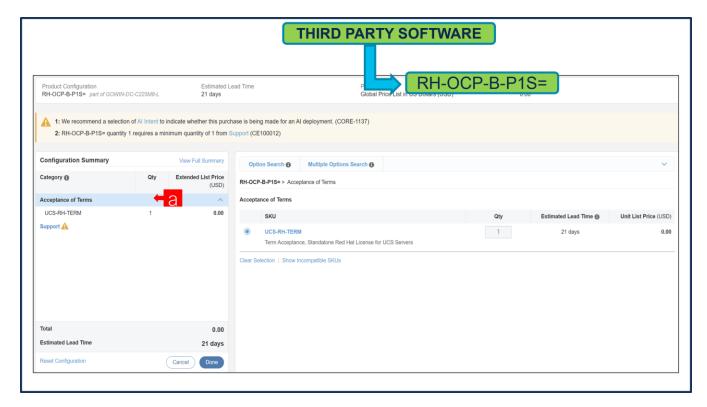


a. Select Acceptance of Terms Option.

Step 20.

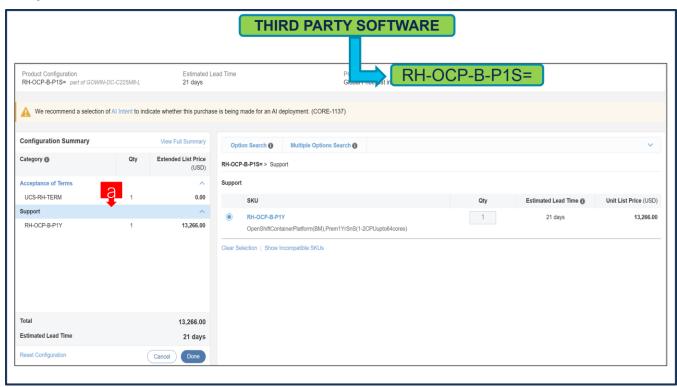

a. Select Support Option.

Step 21.

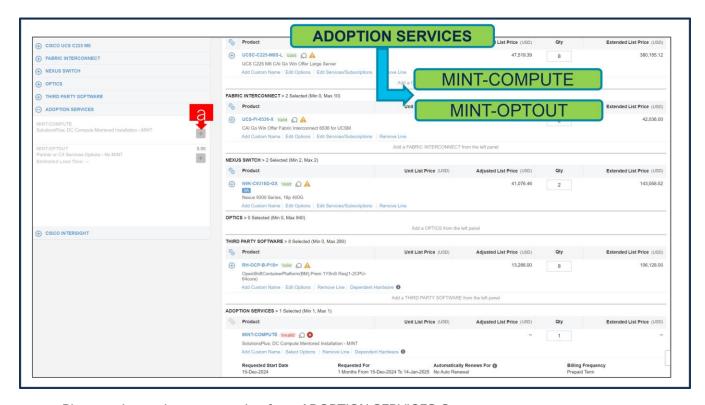

- a. Please select at least one option from ADOPTION SERVICES Category.
- b. User can select either MINT Services or can optout.

Note: Please select MINT-OPTOUT, if Order is through Distributor.

Step 22.




a. Please select appropriate QTY of MINT Service Units.

Step 23.




 a. CNDL-DESELECT-D is meant to select only if Customer has already purchased Cisco Intersight License via EA Contract or order is for Disti Fulfillment.

Step 24.

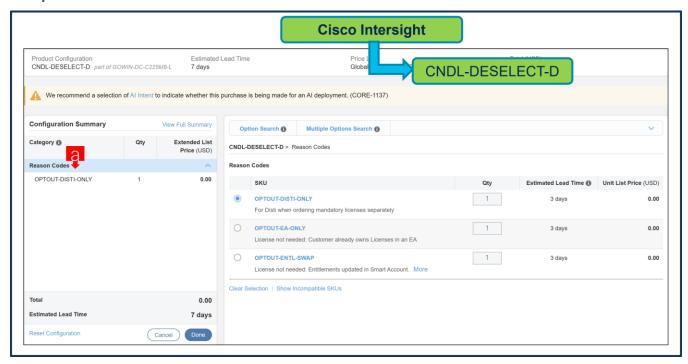

a. Please select appropriate Reason Code

Step 25.

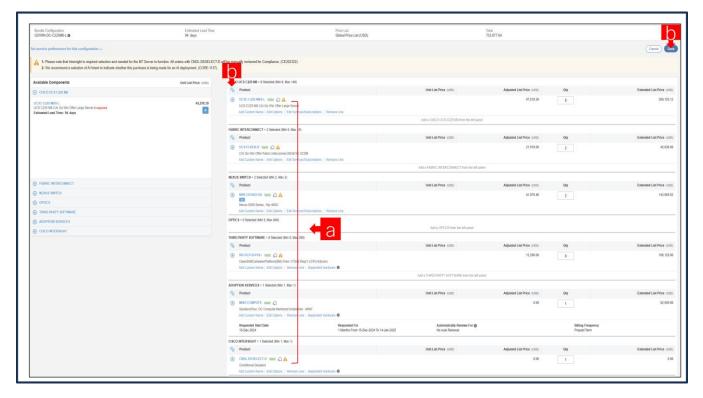

- a. Configuration for MLB is completed when status of each Product is Valid and warning messages are cleared.
- b. Click on the "PLUS" to expand and view the selections made for each Product.
- c. Click on the "DONE" to complete the MLB Configuration.

GOWIN-DC-C245M8-M Ordering Process


Buy Method Through Cisco (Eg: Direct Customer & Tier 1 Partners)

Scenario 1: Customer Without Enterprise Agreement for Cisco Intersight Software License Step 1.




- a. In CCW, search for MLB PID and click on "Add"
- b. Click on "Select Options" to enter the configurator.

Step 2.

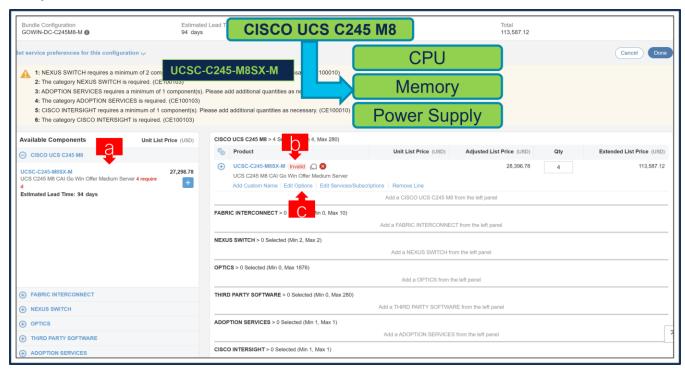


- a. ATO: UCSC-C245-M8SX-M is preselected with 4 QTY from Category: CISCO UCS C245 M8.
- b. Notice the ATO: UCSC-C245-M8SX-M Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 3.

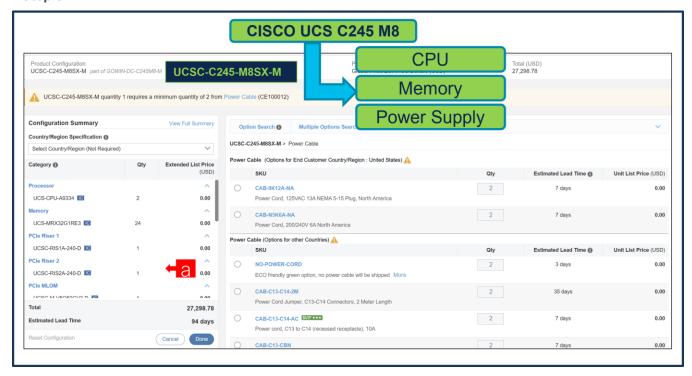

 All Server Components are Auto Included in the configuration. Please select appropriate Power Cable.

Step 4.

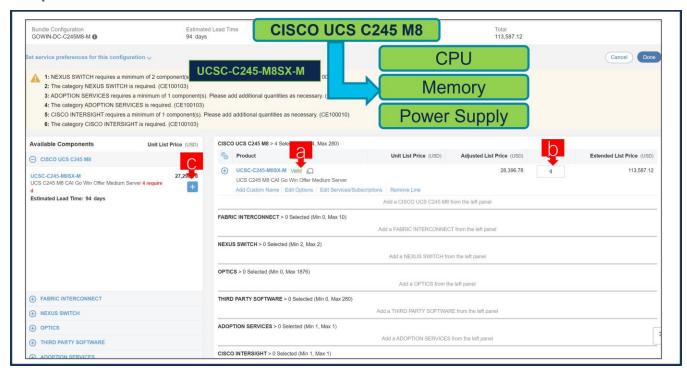

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.

c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 5.



a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 6.

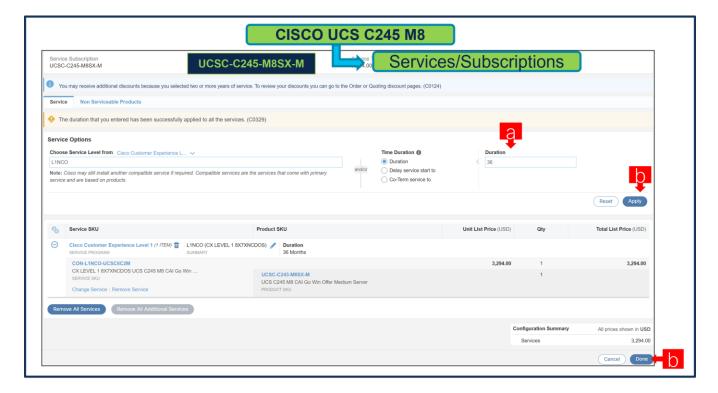

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"


Step 7.



- FABRIC INTERCONNECT: UCS-FI-6536-X is an optional selection and minimum 2 QTY is required if selected.
- b. Notice the UCS-FI-6536-X ATO Status is invalid as further configuration is needed.


c. Select 'Edit Options' to enter the configurator.

Step 8.

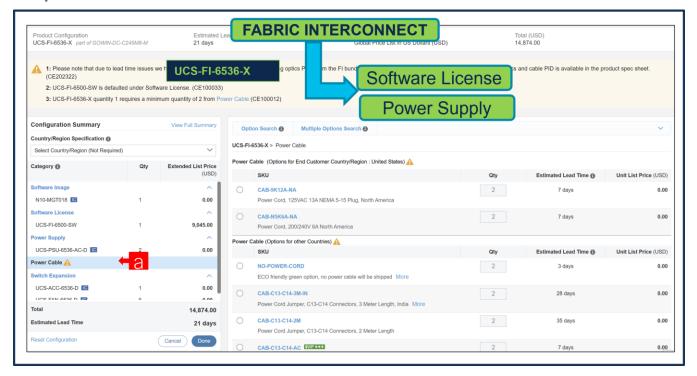

a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.


Step 9.

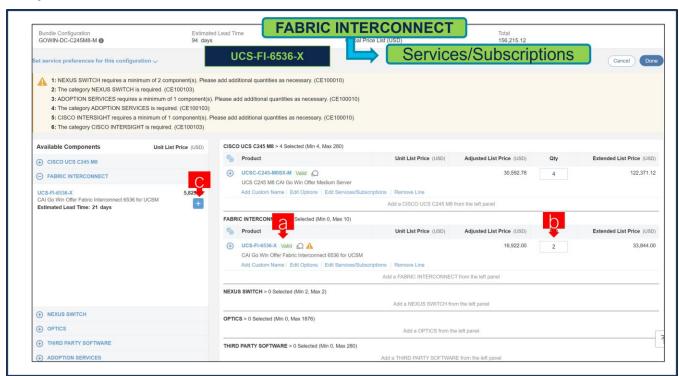

a. Note Status is now showing as Valid.

- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 10.

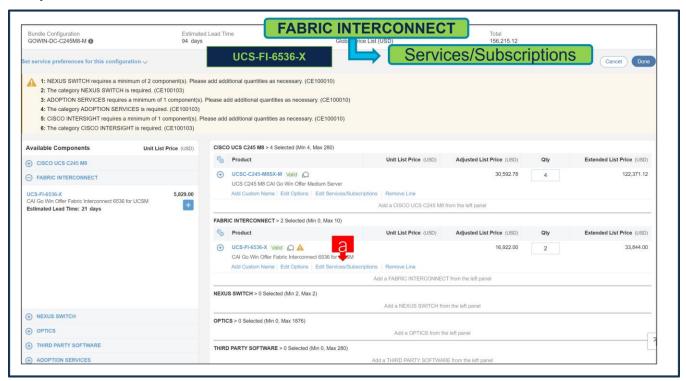

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 11.

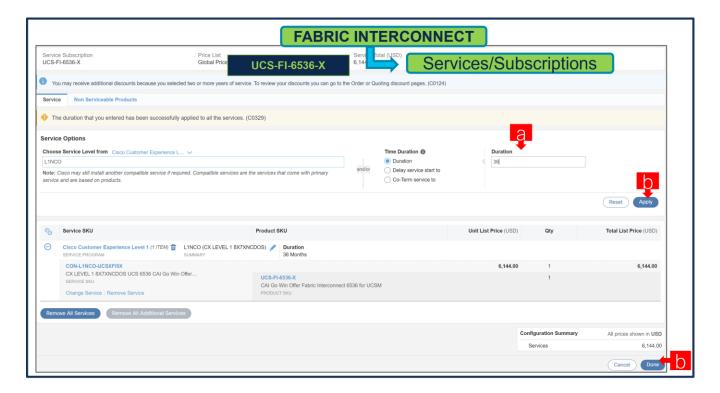

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"

Step 12.

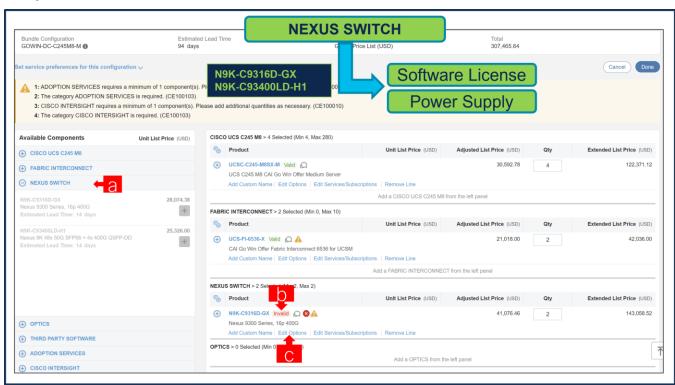


- a. At least one selection is required from NEXUS SWITCH Category.
- b. Notice the ATO: N9K-C9316D-GX Status is invalid as further configuration needed.

c. Select 'Edit Options' to enter the configurator.

Note:

- If FI: UCS-FI-6536-X is selected, then user must select 2 QTY of N9K-C9316D-GX.
- If FI: UCS-FI-6536-X is not selected, then user must select 2 QTY of N9K-C93400LD-H1.


Step 13.

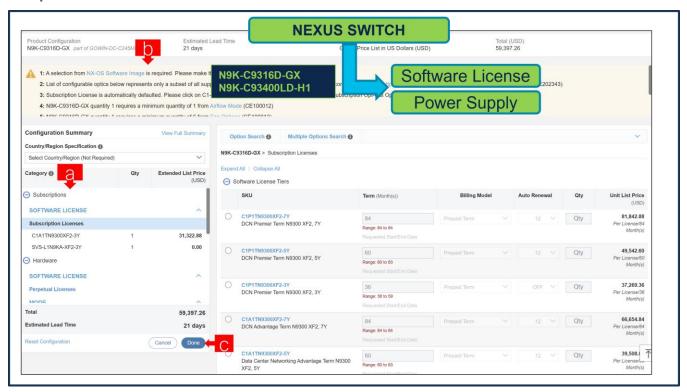

- a. Software Subscription License is default selection. User may select other available options.
- b. Please follow the warning messages and make the minimum required selections.
- c. Click Done when completed.

Note: If Order is through Distributor, please select C1-SUBS-OPTOUT from Perpetual License Option


Step 14.

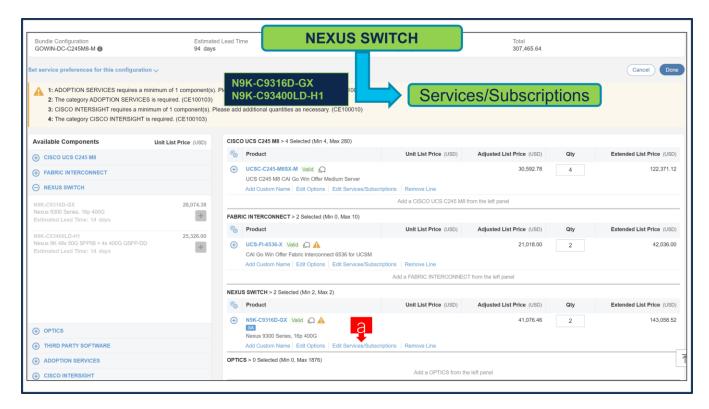

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 15.

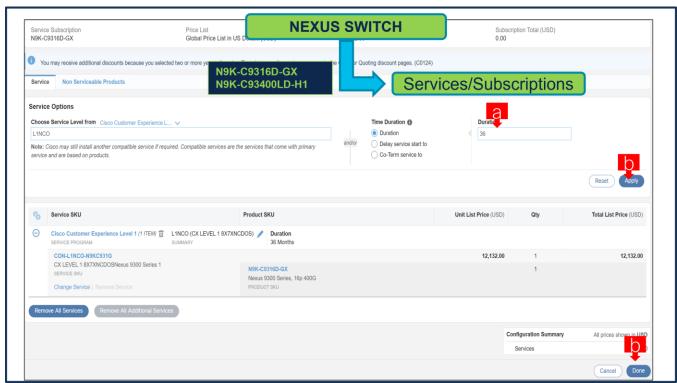

a. Enter the Term Duration

b. Click on "Apply" and "Done"

Step 16.




a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 17.

OPTICS Reference Guide							
		A	В	С	D		
1	GOWIN-DC	C2xxMx-M	C2xxMx-M	C2xxMx-L	C2xxMx-L		
2	FI Present	Yes	No	Yes	No		
3	Nexus	9316D-GX	93400LD-H1	9316D-GX	9316D-GX		
4	# of Servers	N, where Min=4, Max=280	N, where Min=4, Max=24	N, where Min=4, Max=140	N, where Min=4, Max=40		
5	# of FI	(ROUNDUP(A4/56))*2	-	(ROUNDUP(C4/28))*2	-		
6	QSFP-4SFP25G-CU5M location	Server uplinks & FI downlinks	-	-	-		
7	QSFP-4SFP25G-CU5M	A4	-	-	-		
8	SFP-50G-CU5M location	-	Server uplinks & Nexus downlinks	-	-		
9	SFP-50G-CU5M	-	B4*4	-	-		
10	QSFP-100G-CU5M location			Server uplinks & FI downlinks	-		
11	QSFP-100G-CU5M			C4*2	-		
12	OR, SFP-25G-SL location	Server uplinks	Server uplinks & Nexus downlinks	-	-		
13	SFP-25G-SL	A4*4	B4*8	-	-		
14	OR, QSFP-100G-SL4 location	FI downlinks	-	-	-		
15	QSFP-100G-SL4	A13/4	-	-	-		
16	OR, QSFP-100G-SR1.2 location	-	-	Server uplinks & FI downlinks	-		
17	QSFP-100G-SR1.2	-		C4*2*2	-		
18	QSFP-100G-SR1.2 location	FI uplinks	-	FI uplinks	Server Uplinks		
19	QSFP-100G-SR1.2	EVEN(A4/3.5)	-	EVEN((C4*2)/3.5)	D4*2		
20	QDD-400G-SR4.2-BD location	Nexus downlinks	-	Nexus downlinks	Nexus downlinks		
21	ODD-400G-SR4.2-BD	A19/4	-	C19/4	D19/4		


- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 18.

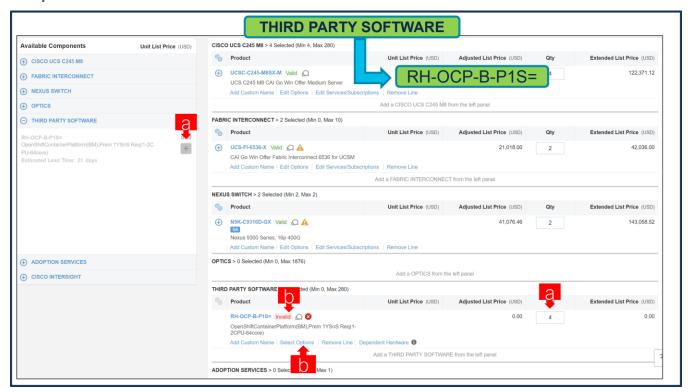


- a. THIRD PARTY SOFTWARE: RH-OCP-B-P1S= is an optional selection and QTY must be equal to Server QTY when selected.
- b. Notice the PID: RH-OCP-B-P1S= Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Step 19.

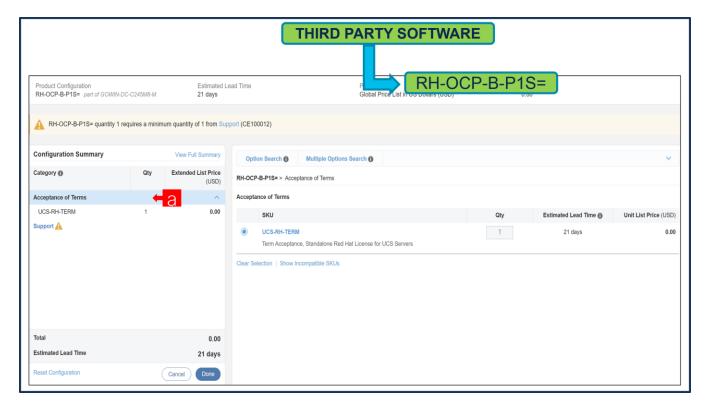


a. Select Acceptance of Terms Option.

Step 20.

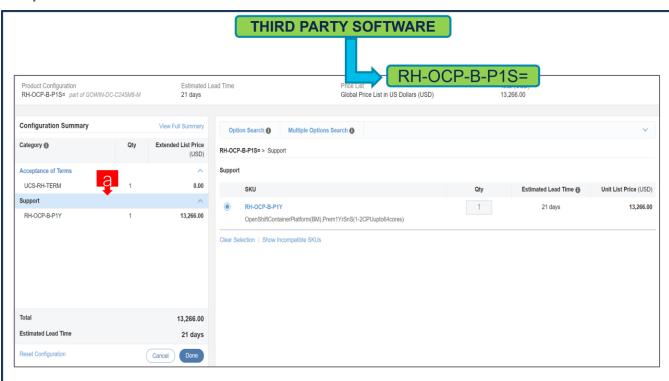

a. Select Support Option.

Step 21.

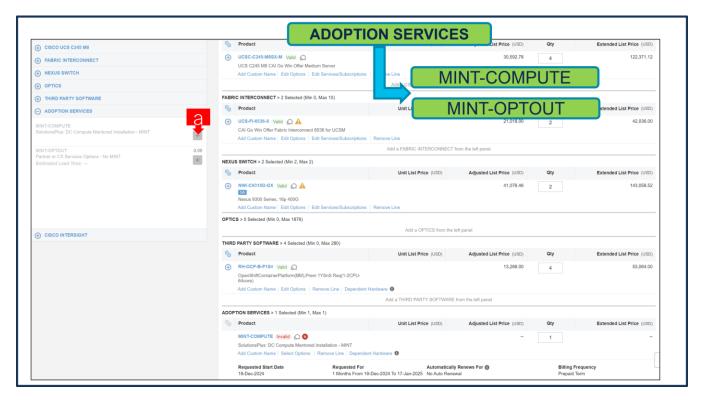

- a. Please select at least one option from ADOPTION SERVICES Category.
- b. User can select either MINT Services or can optout.


Note: Please select MINT-OPTOUT, if Order is through Distributor.

Step 22.




a. Please select appropriate QTY of MINT Service Units.

Step 23.

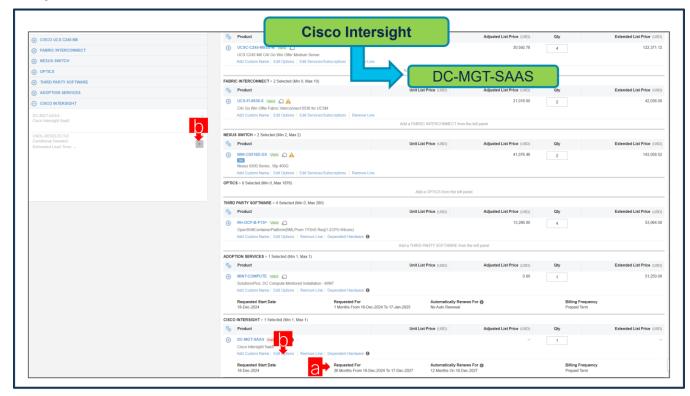


- a. It is recommended that Term Duration for HW Support align with Software Subscription Duration.
- b. Intersight is a required selection, if you have not previously purchased Cisco Intersight Software. Please make selection by clicking "ADD". Click on "Edit Options" to configure.

Step 24.

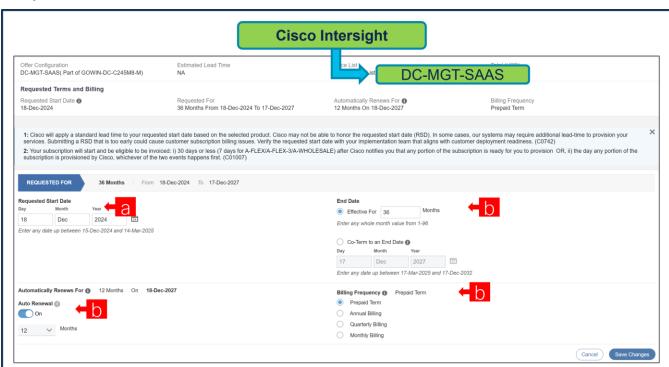


- a. Requested Start Date (RSD) is now dependent on HW Ship Date and will automatically starts when the HW ships. If you change the RSD, the Software will start either on the RSD you picked or the HW Ship Date whichever is later.
- b. **End Date** (duration in months) is defaulted to **36 Months**, **Auto Renewal** (on/off) is defaulted to **On** and **Billing Frequency** is defaulted to **Prepaid Term**. You can still change the setting accordingly.

Step 25.

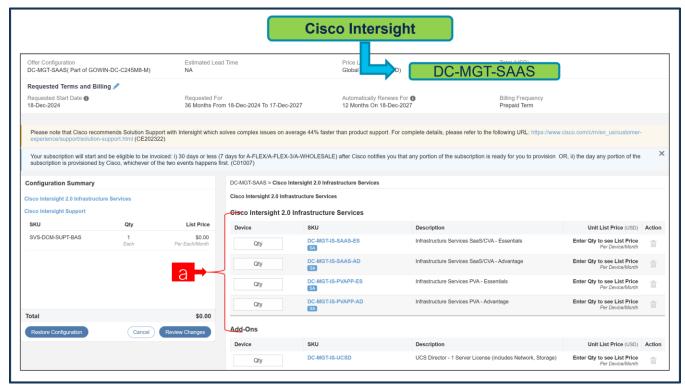


a. The quantity of Cisco Intersight 2.0 Infrastructure Services License under Offer: DC-MGT-SAAS should be equal to the quantity of Server selected. Enter the quantity.

Step 26.

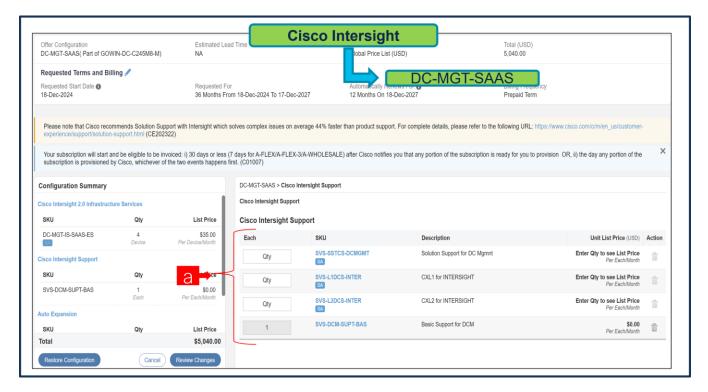

a. The Cisco Intersight License comes with separate Support. Basic Embedded Support is the default selection. However, it is recommended that Customer upgrade to CX Success Track Level 1 or Level 2 to ensure consistent SLA response time between Hardware and Software.

Step 27.

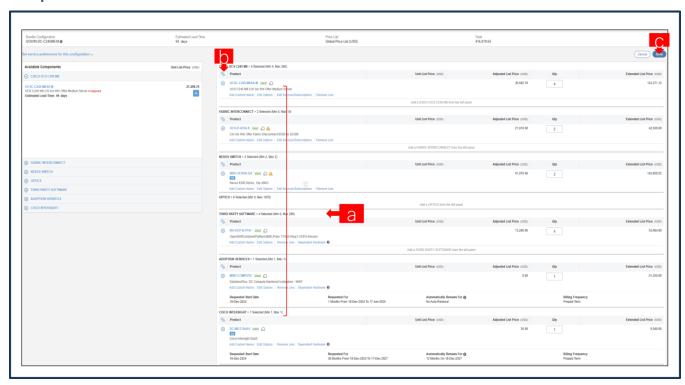

 Configuration for MLB is completed when status of each Product is Valid and warning messages are cleared.

- b. Click on the "PLUS" to expand and view the selections made for each Product.
- c. Click on the "DONE" to complete the MLB Configuration.

Scenario 2: Customer With Enterprise Agreement for Cisco Intersight Software License

Step 1.




- a. In CCW, search for MLB PID and click on "Add"
- b. Click on "Select Options" to enter the configurator.

Step 2.




- a. ATO: UCSC-C245-M8SX-M is preselected with 4 QTY from Category: CISCO UCS C245 M8.
- b. Notice the ATO: UCSC-C245-M8SX-M Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 3.

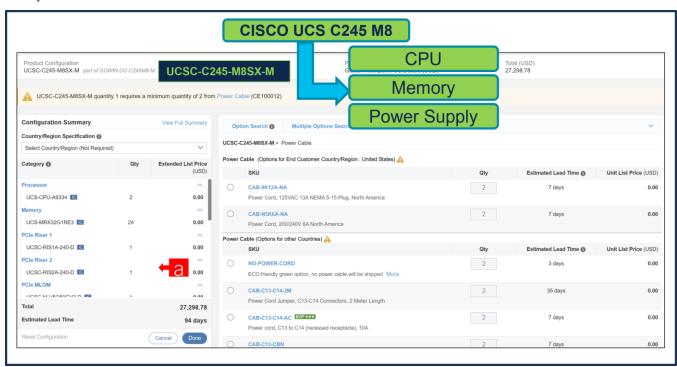

 All Server Components are Auto Included in the configuration. Please select appropriate Power Cable.

Step 4.

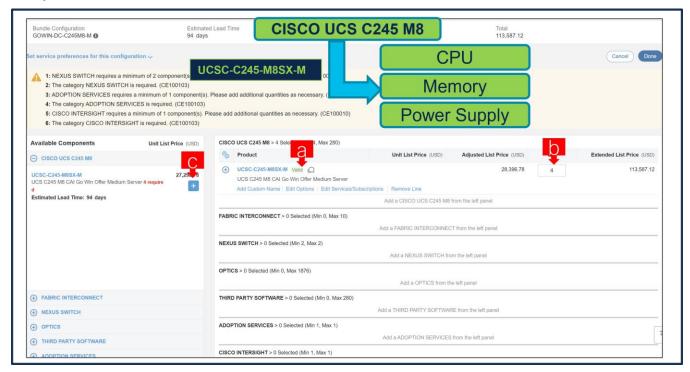

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 5.



a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 6.

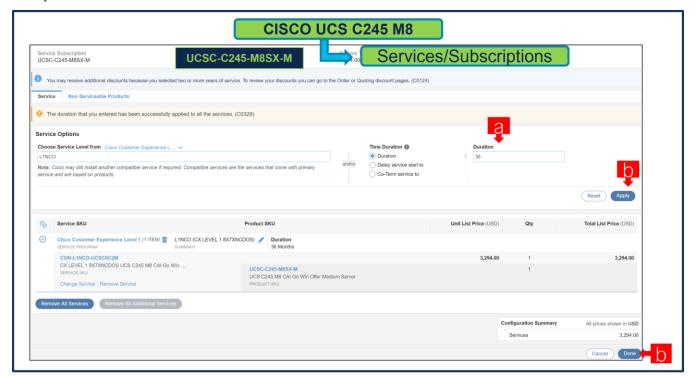


- a. Enter the Term Duration
- b. Click on "Apply" and "Done"

Step 7.

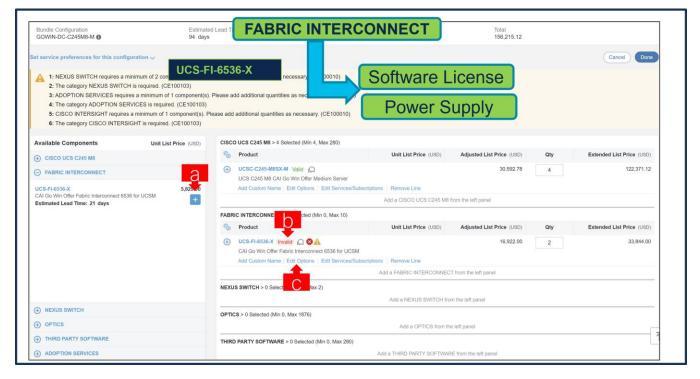


- FABRIC INTERCONNECT: UCS-FI-6536-X is an optional selection and minimum 2 QTY is required if selected.
- b. Notice the UCS-FI-6536-X ATO Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 8.

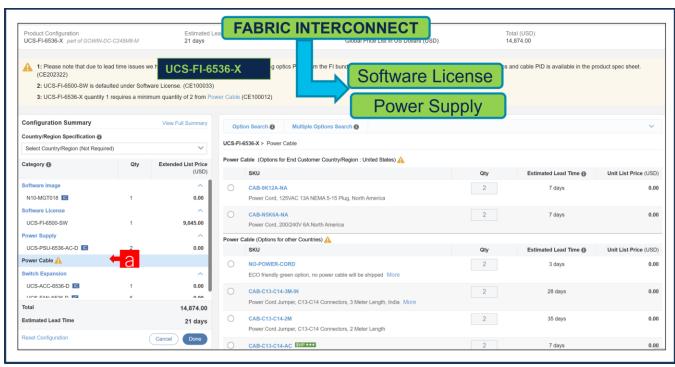


a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 9.

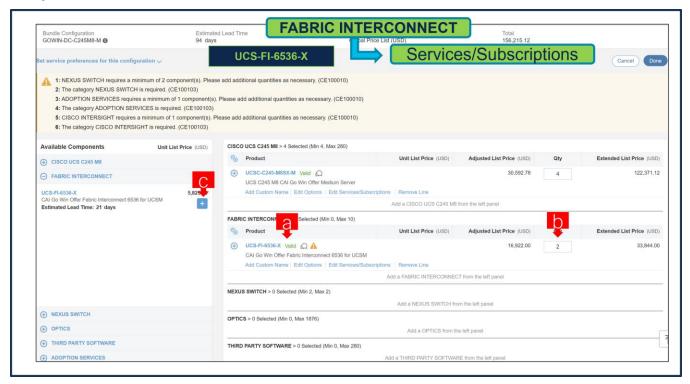

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 10.

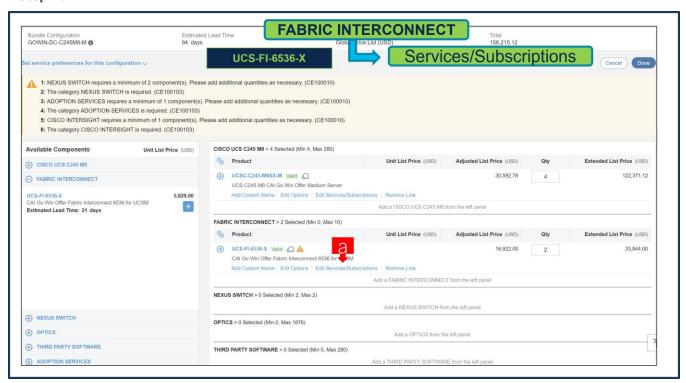

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 11.

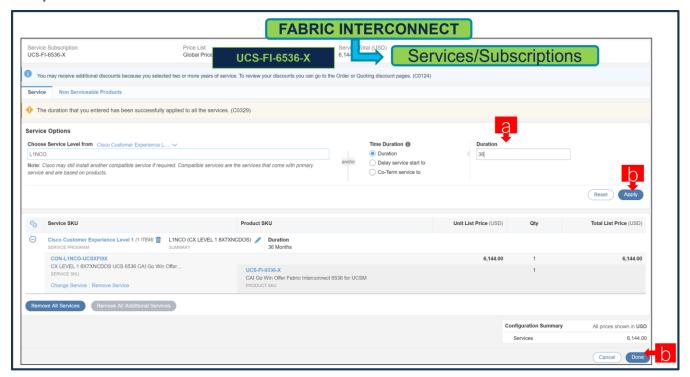

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"

Step 12.

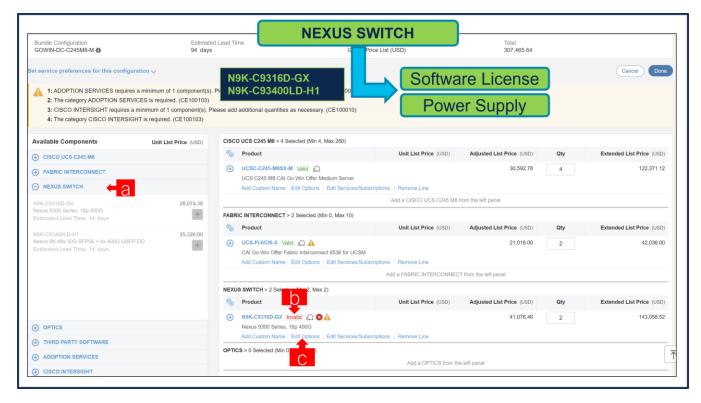


- a. At least one selection is required from NEXUS SWITCH Category.
- b. Notice the ATO: N9K-C9316D-GX Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Note:

- If FI: UCS-FI-6536-X is selected, then user must select 2 QTY of N9K-C9316D-GX.
- If FI: UCS-FI-6536-X is not selected, then user must select 2 QTY of N9K-C93400LD-H1.


Step 13.

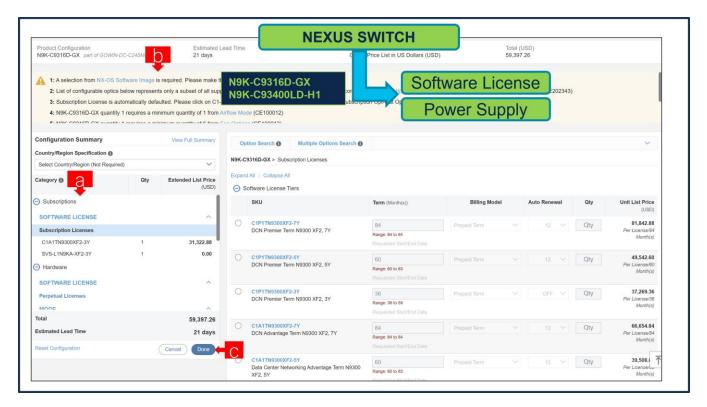

- a. Software Subscription License is default selection. User may select other available options.
- b. Please follow the warning messages and make the minimum required selections.
- c. Click Done when completed.

Note: If Order is through Distributor, please select C1-SUBS-OPTOUT from Perpetual License Option


Step 14.

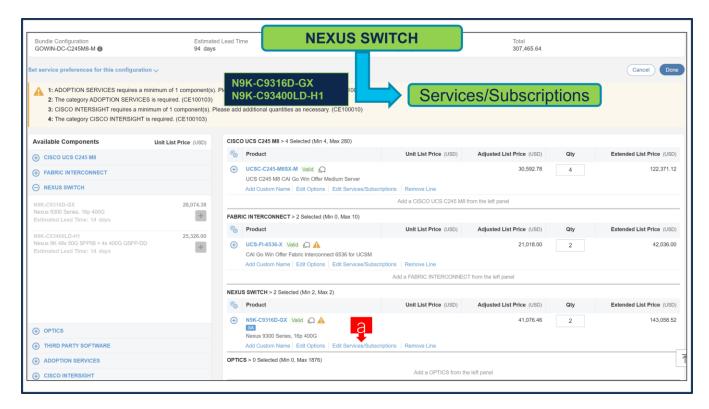

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 15.

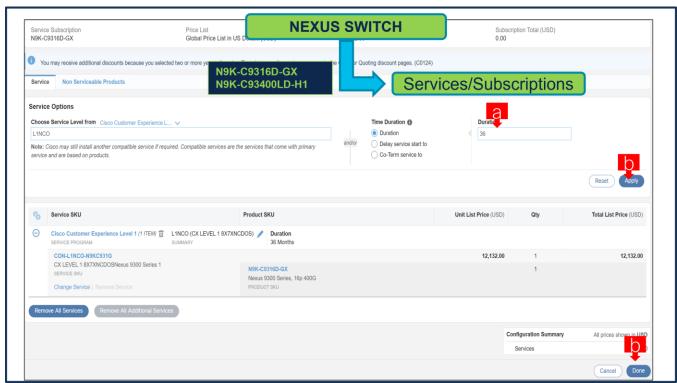

a. Enter the Term Duration

b. Click on "Apply" and "Done"

Step 16.




a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 17.

OPTICS Reference Guide							
		A	В	С	D		
1	GOWIN-DC	C2xxMx-M	C2xxMx-M	C2xxMx-L	C2xxMx-L		
2	FI Present	Yes	No	Yes	No		
3	Nexus	9316D-GX	93400LD-H1	9316D-GX	9316D-GX		
4	# of Servers	N, where Min=4, Max=280	N, where Min=4, Max=24	N, where Min=4, Max=140	N, where Min=4, Max=40		
5	# of FI	(ROUNDUP(A4/56))*2	-	(ROUNDUP(C4/28))*2	-		
6	QSFP-4SFP25G-CU5M location	Server uplinks & FI downlinks	-	-	-		
7	QSFP-4SFP25G-CU5M	A4	-	-	-		
8	SFP-50G-CU5M location	-	Server uplinks & Nexus downlinks	-	-		
9	SFP-50G-CU5M	-	B4*4	-	-		
10	QSFP-100G-CU5M location			Server uplinks & FI downlinks	-		
11	QSFP-100G-CU5M			C4*2	-		
12	OR, SFP-25G-SL location	Server uplinks	Server uplinks & Nexus downlinks	-	-		
13	SFP-25G-SL	A4*4	B4*8	-	-		
14	OR, QSFP-100G-SL4 location	FI downlinks	-	-	-		
15	QSFP-100G-SL4	A13/4	-	-	-		
16	OR, QSFP-100G-SR1.2 location	-	-	Server uplinks & FI downlinks	-		
17	QSFP-100G-SR1.2	-		C4*2*2	-		
18	QSFP-100G-SR1.2 location	FI uplinks	-	FI uplinks	Server Uplinks		
19	QSFP-100G-SR1.2	EVEN(A4/3.5)	-	EVEN((C4*2)/3.5)	D4*2		
20	QDD-400G-SR4.2-BD location	Nexus downlinks	-	Nexus downlinks	Nexus downlinks		
21	ODD-400G-SR4.2-BD	A19/4	-	C19/4	D19/4		


- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 18.

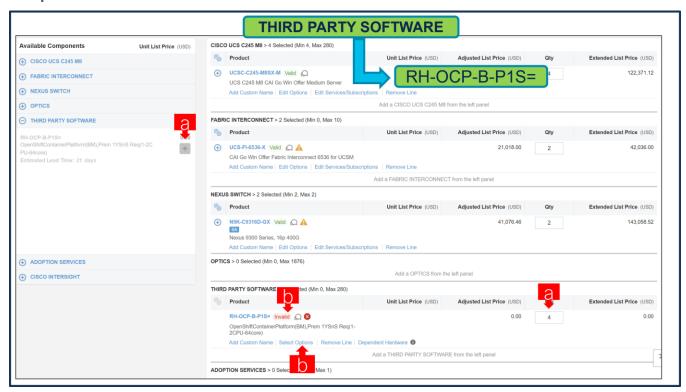


- a. THIRD PARTY SOFTWARE: RH-OCP-B-P1S= is an optional selection and QTY must be equal to Server QTY when selected.
- b. Notice the PID: RH-OCP-B-P1S= Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Step 19.

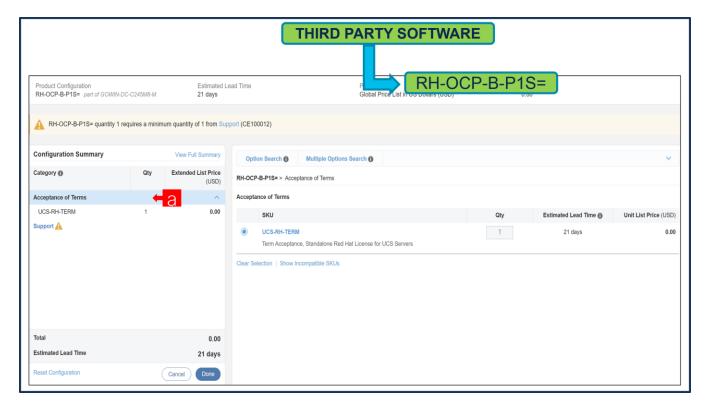


a. Select Acceptance of Terms Option.

Step 20.

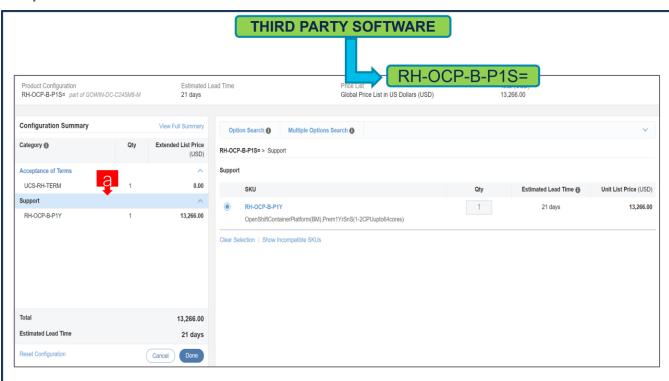

a. Select Support Option.

Step 21.

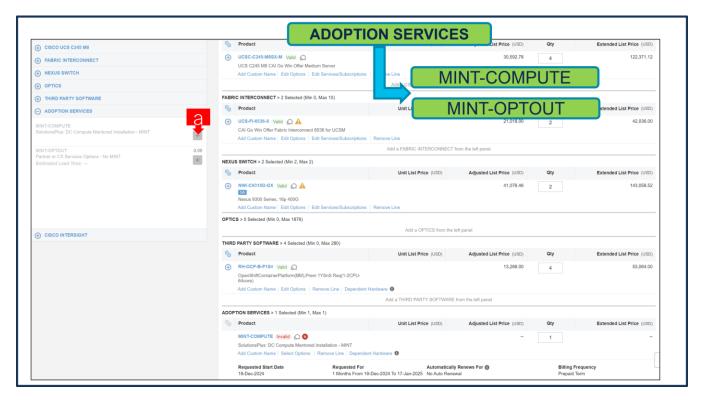

- a. Please select at least one option from ADOPTION SERVICES Category.
- b. User can select either MINT Services or can optout.

Note: Please select MINT-OPTOUT, if Order is through Distributor.

Step 22.




a. Please select appropriate QTY of MINT Service Units.

Step 23.




 a. CNDL-DESELECT-D is meant to select only if Customer has already purchased Cisco Intersight License via EA Contract or order is for Disti Fulfillment.

Step 24.

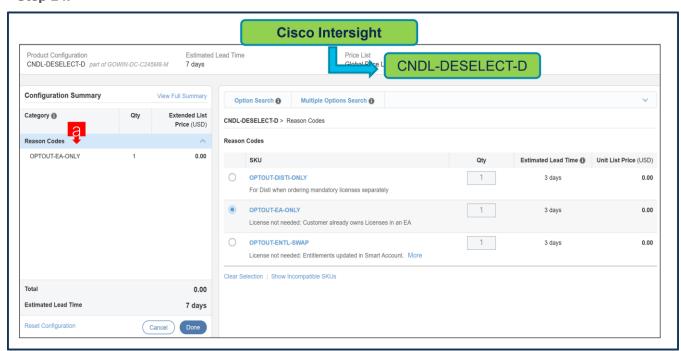

a. Please select appropriate Reason Code

Step 25.

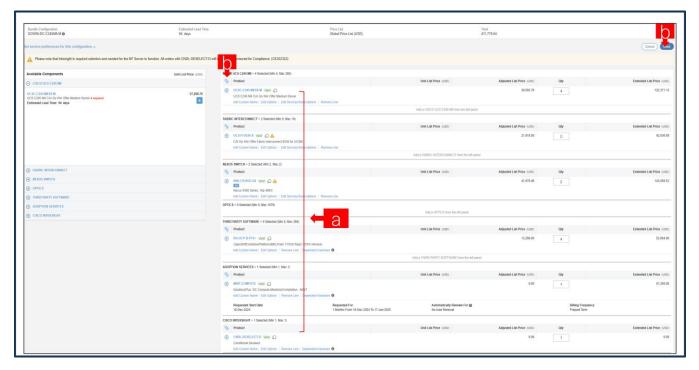

- a. Configuration for MLB is completed when status of each Product is Valid and warning messages are cleared.
- b. Click on the "PLUS" to expand and view the selections made for each Product.
- c. Click on the "DONE" to complete the MLB Configuration.


Buy Method Through Distributor (Eg: Direct Customer & Tier 1 Partners)

Scenario 1: Customer Without Enterprise Agreement for Cisco Intersight Software License Step 1.




- a. In CCW, search for MLB PID and click on "Add"
- b. Click on "Select Options" to enter the configurator.

Step 2.

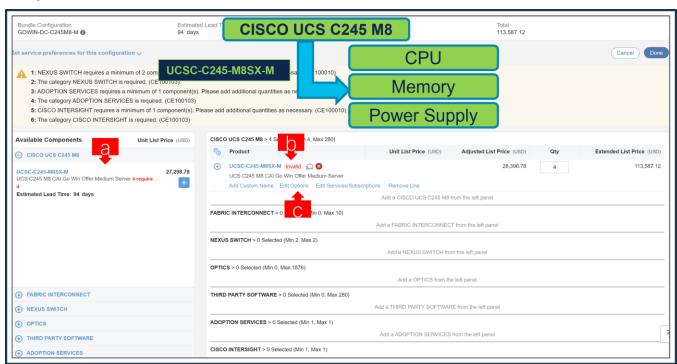


- a. ATO: UCSC-C245-M8SX-M is preselected with 4 QTY from Category: CISCO UCS C245 M8.
- b. Notice the ATO: UCSC-C245-M8SX-M Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 3.

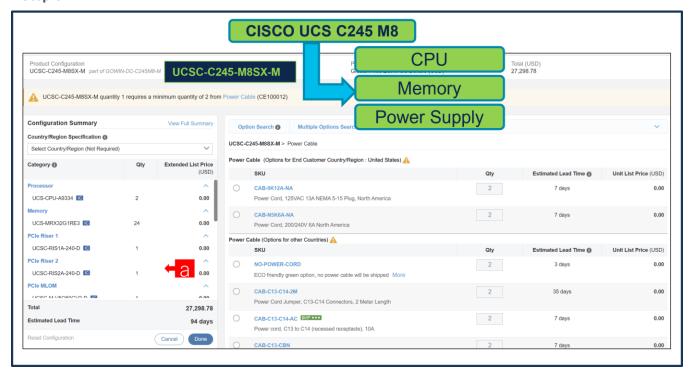

 All Server Components are Auto Included in the configuration. Please select appropriate Power Cable.

Step 4.

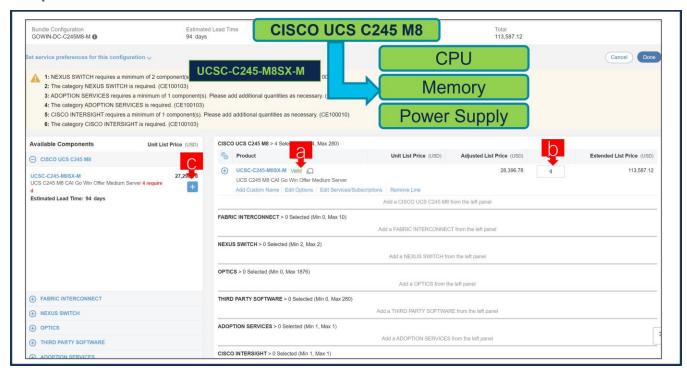

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.

c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 5.



a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 6.

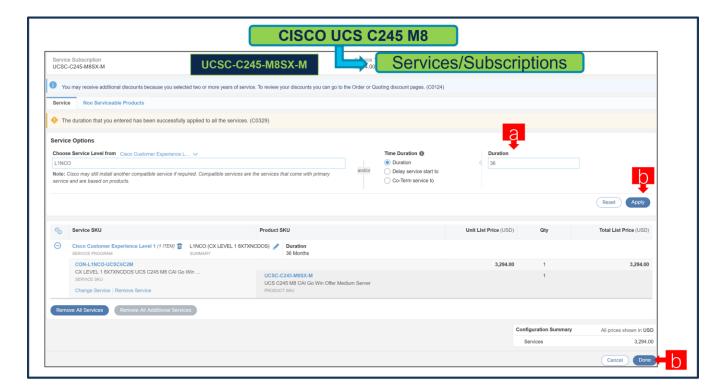

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"


Step 7.



- FABRIC INTERCONNECT: UCS-FI-6536-X is an optional selection and minimum 2 QTY is required if selected.
- b. Notice the UCS-FI-6536-X ATO Status is invalid as further configuration is needed.


c. Select 'Edit Options' to enter the configurator.

Step 8.

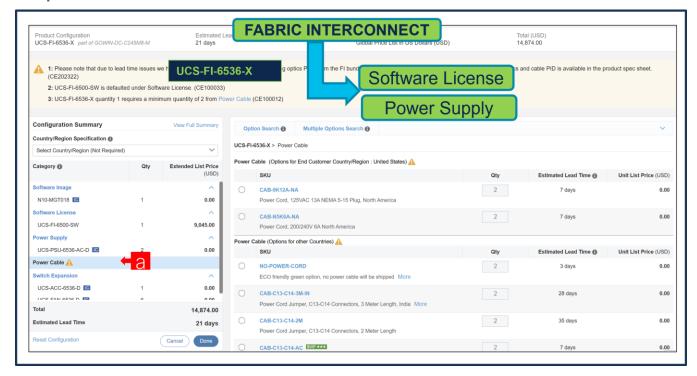

a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 9.

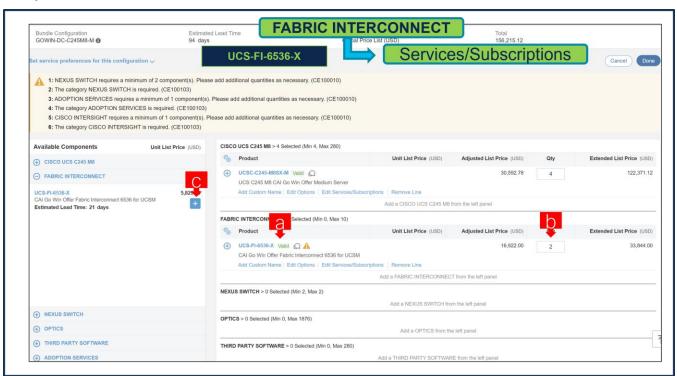

a. Note Status is now showing as Valid.

- b. Increase the quantity for multiples of same configuration.
- Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 10.



a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 11.

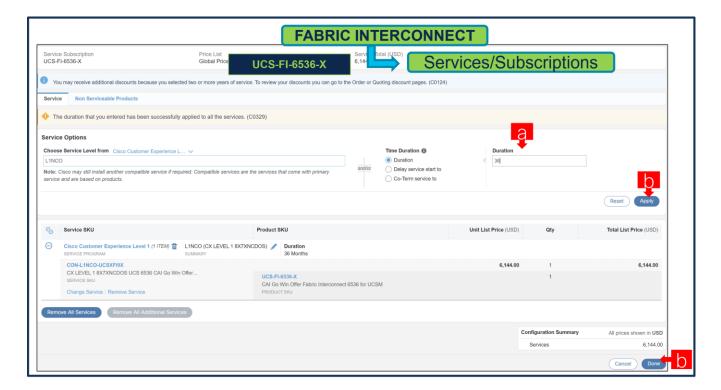

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"

Step 12.

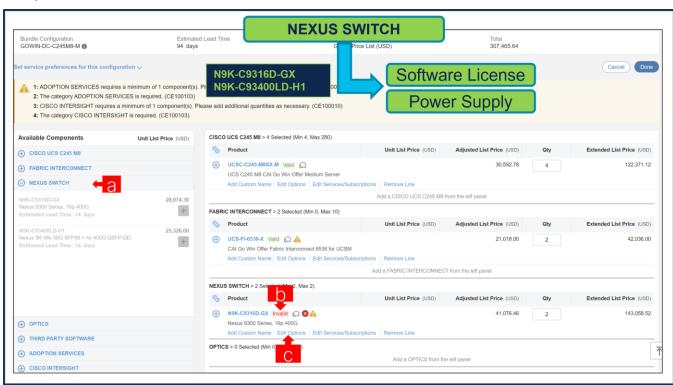


- a. At least one selection is required from NEXUS SWITCH Category.
- b. Notice the ATO: N9K-C9316D-GX Status is invalid as further configuration needed.

c. Select 'Edit Options' to enter the configurator.

Note:

- If FI: UCS-FI-6536-X is selected, then user must select 2 QTY of N9K-C9316D-GX.
- If FI: UCS-FI-6536-X is not selected, then user must select 2 QTY of N9K-C93400LD-H1.


Step 13.

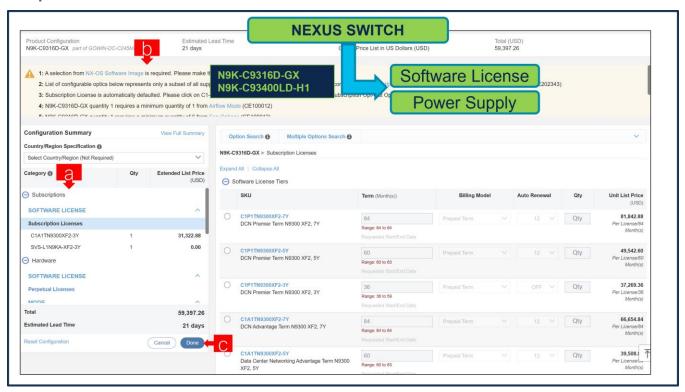

- a. Software Subscription License is default selection. User may select other available options.
- b. Please follow the warning messages and make the minimum required selections.
- c. Click Done when completed.

Note: If Order is through Distributor, please select C1-SUBS-OPTOUT from Perpetual License Option


Step 14.

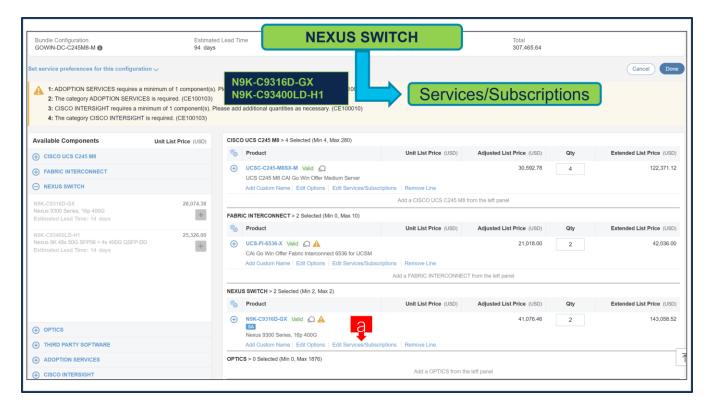

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 15.

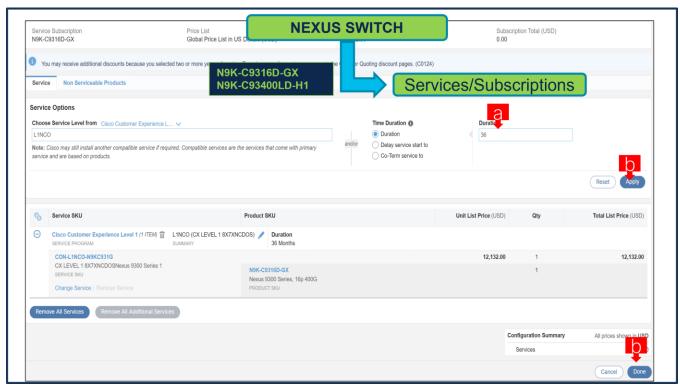

a. Enter the Term Duration

b. Click on "Apply" and "Done"

Step 16.




a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 17.

OPTICS Reference Guide							
		A	В	С	D		
1	GOWIN-DC	C2xxMx-M	C2xxMx-M	C2xxMx-L	C2xxMx-L		
2	FI Present	Yes	No	Yes	No		
3	Nexus	9316D-GX	93400LD-H1	9316D-GX	9316D-GX		
4	# of Servers	N, where Min=4, Max=280	N, where Min=4, Max=24	N, where Min=4, Max=140	N, where Min=4, Max=40		
5	# of FI	(ROUNDUP(A4/56))*2	-	(ROUNDUP(C4/28))*2	-		
6	QSFP-4SFP25G-CU5M location	Server uplinks & FI downlinks	-	-	-		
7	QSFP-4SFP25G-CU5M	A4	-	-	-		
8	SFP-50G-CU5M location	-	Server uplinks & Nexus downlinks	-	-		
9	SFP-50G-CU5M	-	B4*4	-	-		
10	QSFP-100G-CU5M location			Server uplinks & FI downlinks	-		
11	QSFP-100G-CU5M			C4*2	-		
12	OR, SFP-25G-SL location	Server uplinks	Server uplinks & Nexus downlinks	-	-		
13	SFP-25G-SL	A4*4	B4*8	-	-		
14	OR, QSFP-100G-SL4 location	FI downlinks	-	-	-		
15	QSFP-100G-SL4	A13/4	-	-	-		
16	OR, QSFP-100G-SR1.2 location	-	-	Server uplinks & FI downlinks	-		
17	QSFP-100G-SR1.2	-		C4*2*2	-		
18	QSFP-100G-SR1.2 location	FI uplinks	-	FI uplinks	Server Uplinks		
19	QSFP-100G-SR1.2	EVEN(A4/3.5)	-	EVEN((C4*2)/3.5)	D4*2		
20	QDD-400G-SR4.2-BD location	Nexus downlinks	-	Nexus downlinks	Nexus downlinks		
21	ODD-400G-SR4.2-BD	A19/4	-	C19/4	D19/4		


- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 18.

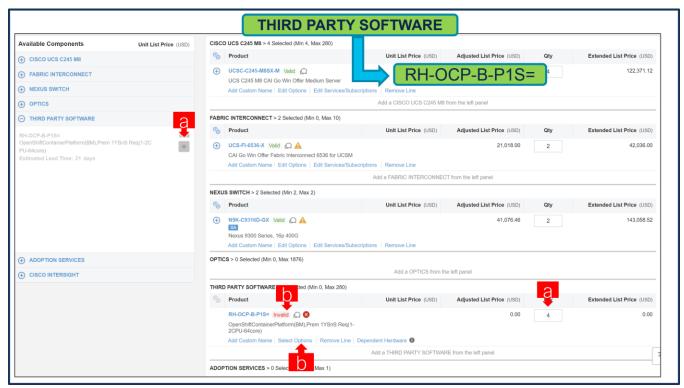


- a. THIRD PARTY SOFTWARE: RH-OCP-B-P1S= is an optional selection and QTY must be equal to Server QTY when selected.
- b. Notice the PID: RH-OCP-B-P1S= Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Step 19.

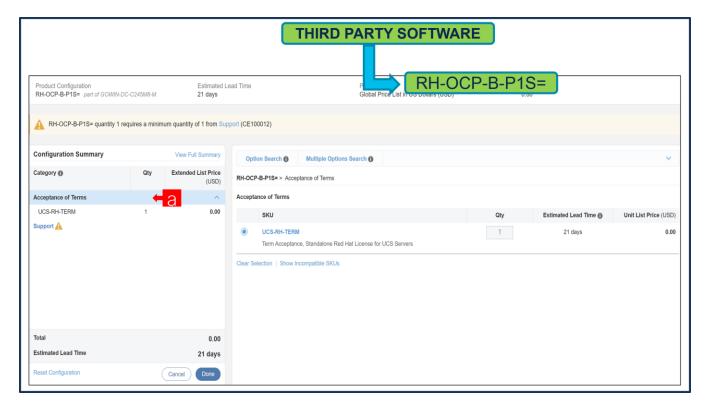


a. Select Acceptance of Terms Option.

Step 20.

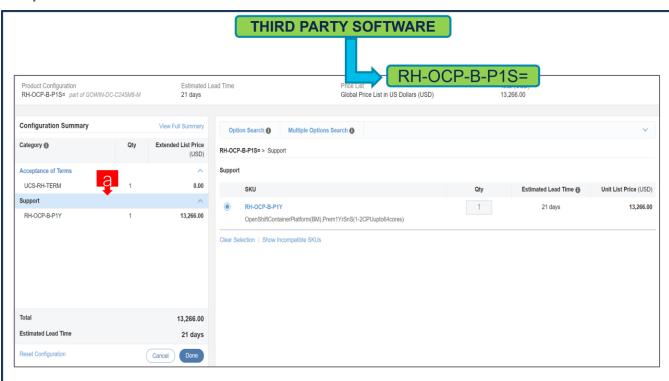

a. Select Support Option.

Step 21.

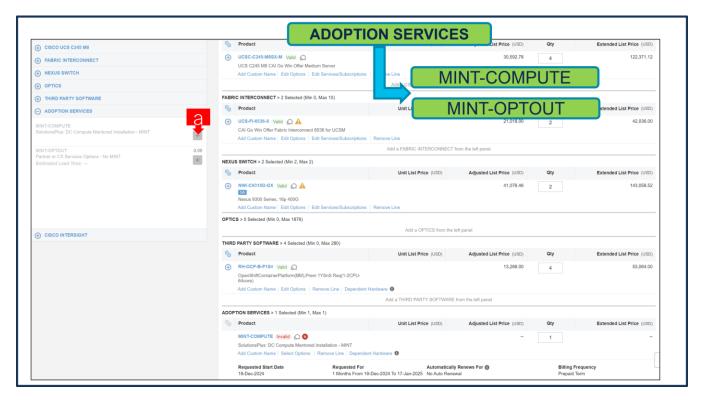

- a. Please select at least one option from ADOPTION SERVICES Category.
- b. User can select either MINT Services or can optout.


Note: Please select MINT-OPTOUT, if Order is through Distributor.

Step 22.




a. Please select appropriate QTY of MINT Service Units.

Step 23.

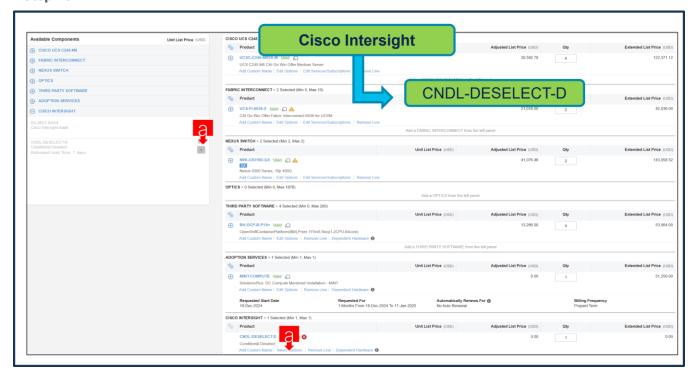


a. **CNDL-DESELECT-D** is meant to select only if Customer has already purchased Cisco Intersight License via EA Contract or order is for Disti Fulfillment.

Step 24.

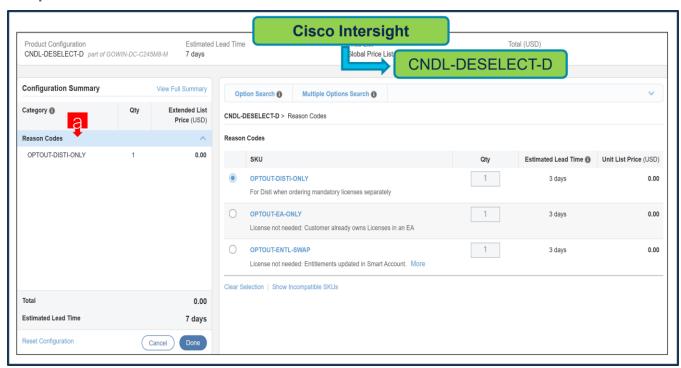


a. Please select appropriate Reason Code

Step 25.

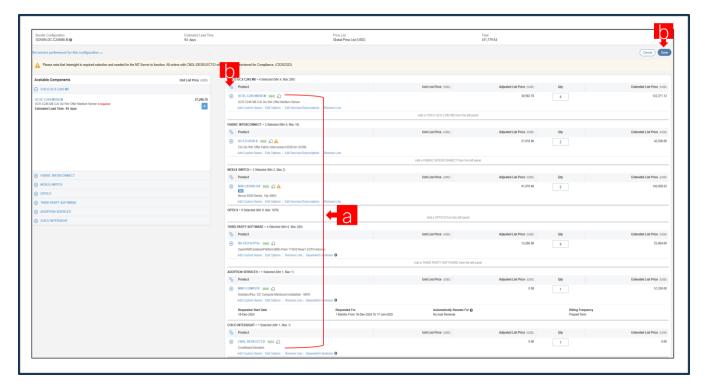

- Configuration for MLB is completed when status of each Product is Valid, and warning messages are cleared.
- b. Click on the "PLUS" to expand and view the selections made for each Product.
- c. Click on the "DONE" to complete the MLB Configuration.


Step 26.

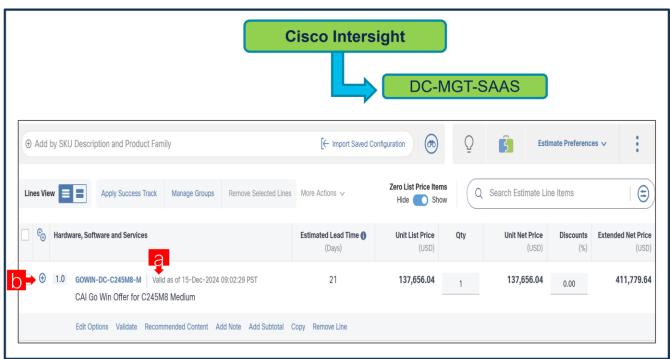

a. Configuration of MLB is now Valid and Line No. 1.0 represents HW only Configuration.

b. Intersight is a required selection, if you have not previously purchased Cisco Intersight Software and needs to added in Line 2.0 which will represent SW only Configuration.

Step 27.

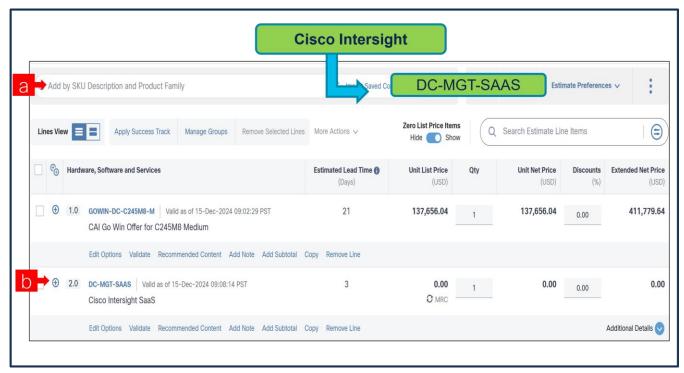


- a. In CCW, search for DC-MGT-SAAS and click on "ADD".
- b. Intersight is a required selection, if you have not previously purchased Cisco Intersight Software. Click on Select Options to enter the configurator.

Step 28.




- a. **Requested Start Date (RSD)** It is recommended that when you book your SaaS Product, you select a Request Start Date (RSD) 90 days into the future.
- b. **End Date** (duration in months) is defaulted to **36 Months**, **Auto Renewal** (on/off) is defaulted to **On** and **Billing Frequency** is defaulted to **Prepaid Term**. You can still change the setting accordingly.

Step 29.

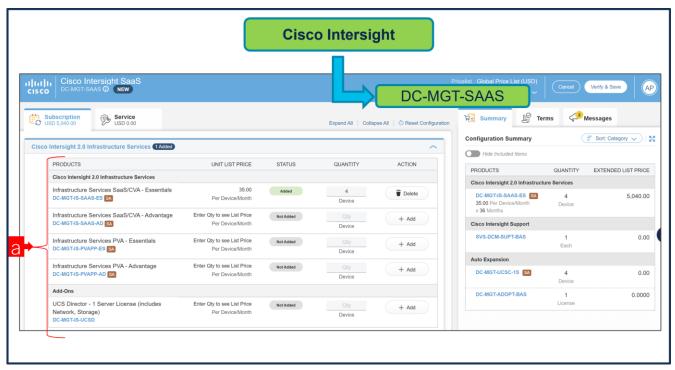


 The quantity of Cisco Intersight 2.0 Infrastructure Services License under Offer: DC-MGT-SAAS should be equal to the quantity of Server selected. Enter the quantity.

Step 30.

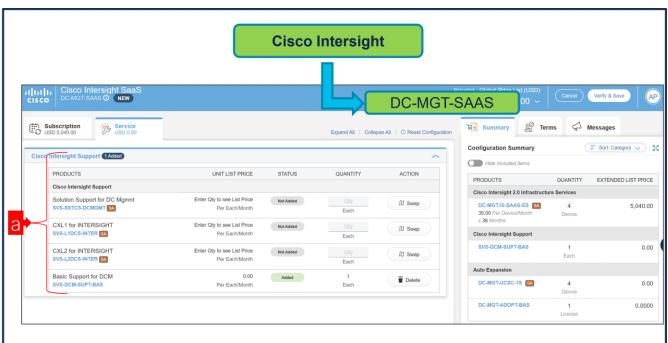


a. The Cisco Intersight License comes with separate Support. Basic Embedded Support is the default selection. It is recommended that Customer should upgrade to Solution Support or CX Success Track L1 or L2 for the HW.

Step 31.

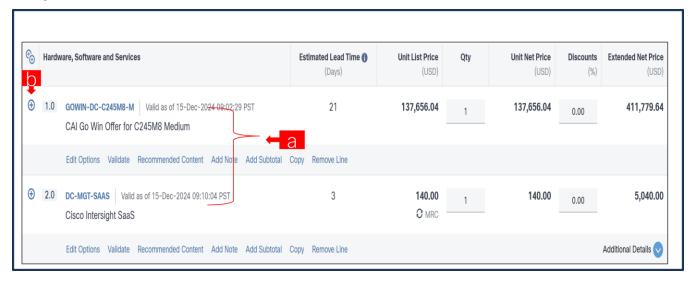


- a. Configuration for MLB and DC-MGT-SAAS is now completed, and status of each Product is Valid.
- b. Click on the "PLUS" to expand and view the selections made for each Product.

Scenario 2: Customer With Enterprise Agreement for Cisco Intersight Software License Step 1.

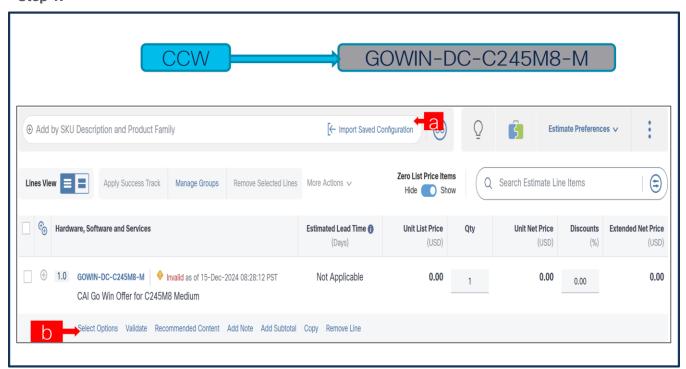


- a. In CCW, search for MLB PID and click on "Add"
- b. Click on "Select Options" to enter the configurator.

Step 2.

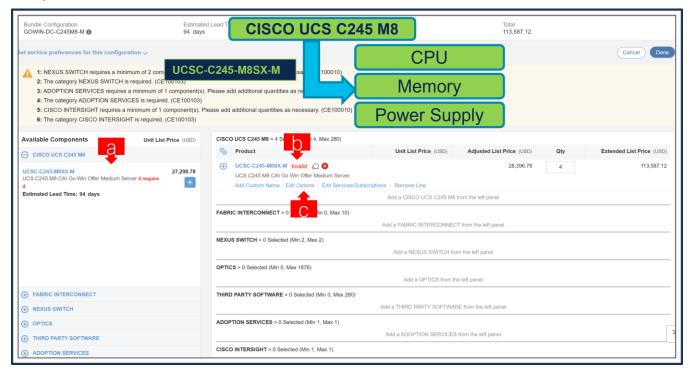

- a. ATO: UCSC-C245-M8SX-M is preselected with 4 QTY from Category: CISCO UCS C245 M8.
- b. Notice the ATO: UCSC-C245-M8SX-M Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 3.

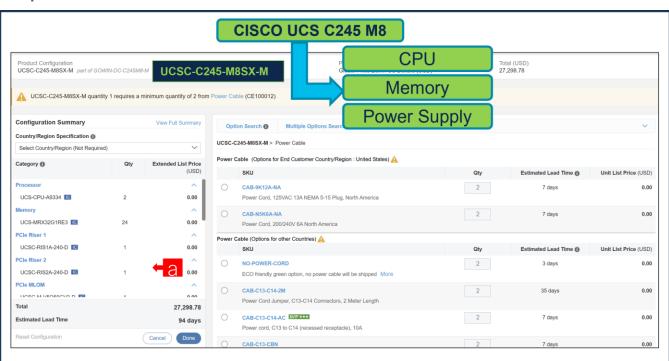


 All Server Components are Auto Included in the configuration. Please select appropriate Power Cable.

Step 4.



- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 5.

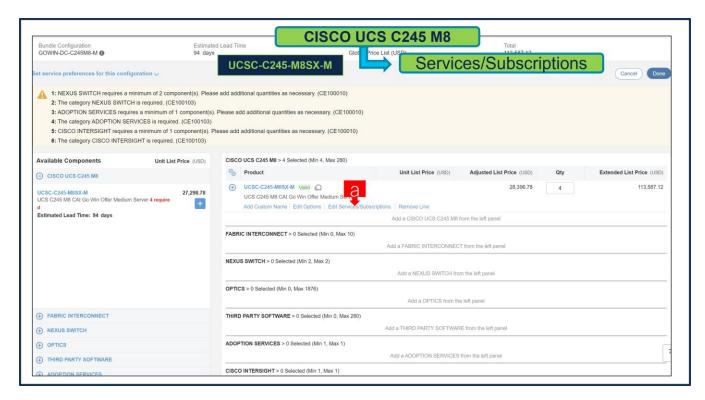

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.


Step 6.

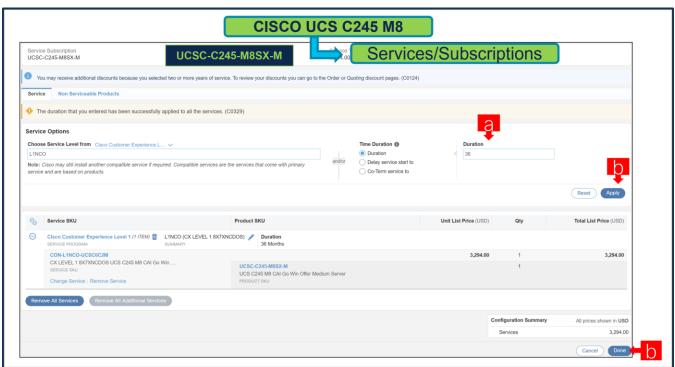

a. Enter the Term Duration


b. Click on "Apply" and "Done"

Step 7.

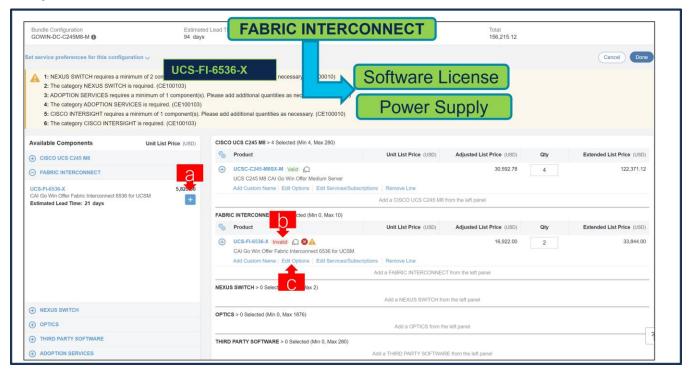


- FABRIC INTERCONNECT: UCS-FI-6536-X is an optional selection and minimum 2 QTY is required if selected.
- b. Notice the UCS-FI-6536-X ATO Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 8.

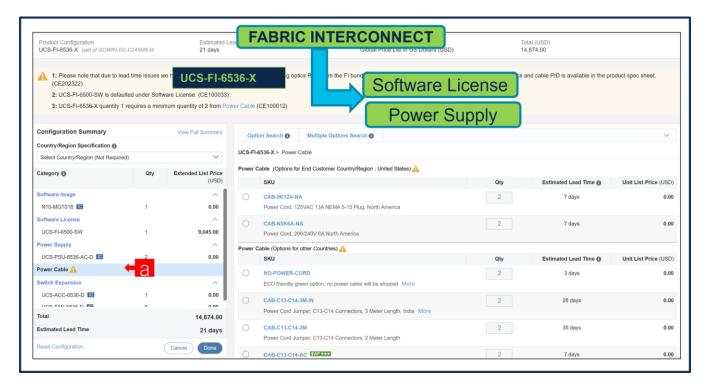

a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 9.

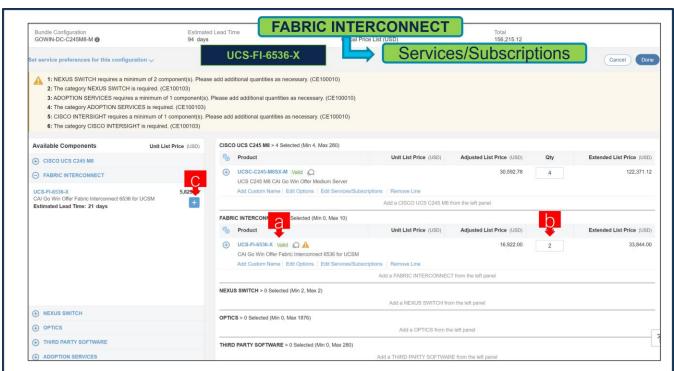

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.

c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 10.



a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 11.

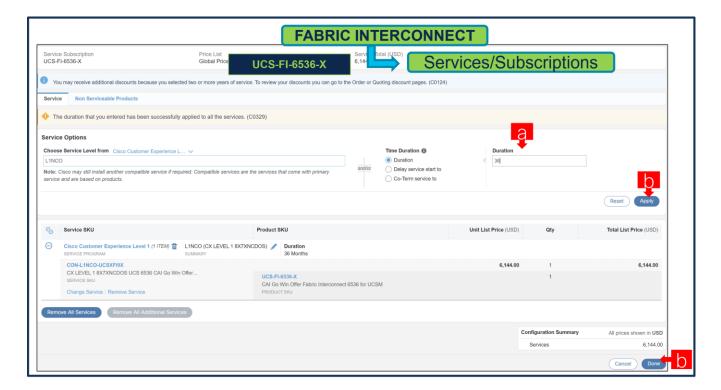

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"

Step 12.

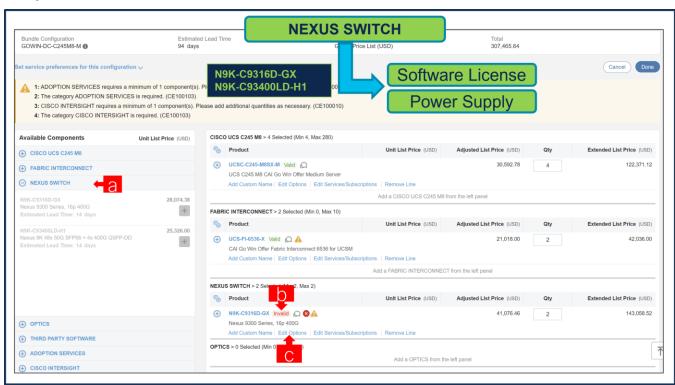


- a. At least one selection is required from NEXUS SWITCH Category.
- b. Notice the ATO: N9K-C9316D-GX Status is invalid as further configuration needed.

c. Select 'Edit Options' to enter the configurator.

Note:

- If FI: UCS-FI-6536-X is selected, then user must select 2 QTY of N9K-C9316D-GX.
- If FI: UCS-FI-6536-X is not selected, then user must select 2 QTY of N9K-C93400LD-H1.


Step 13.

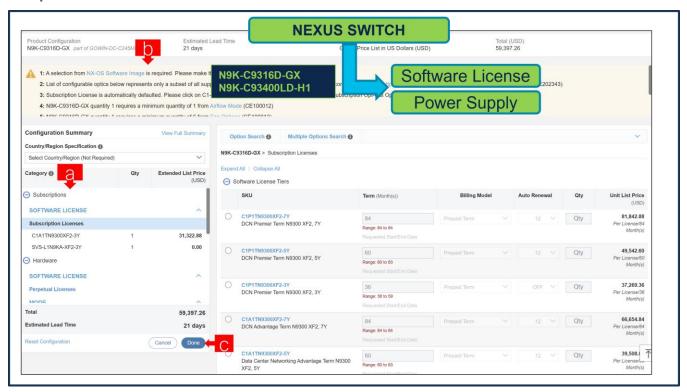

- a. Software Subscription License is default selection. User may select other available options.
- b. Please follow the warning messages and make the minimum required selections.
- c. Click Done when completed.

Note: If Order is through Distributor, please select C1-SUBS-OPTOUT from Perpetual License Option


Step 14.

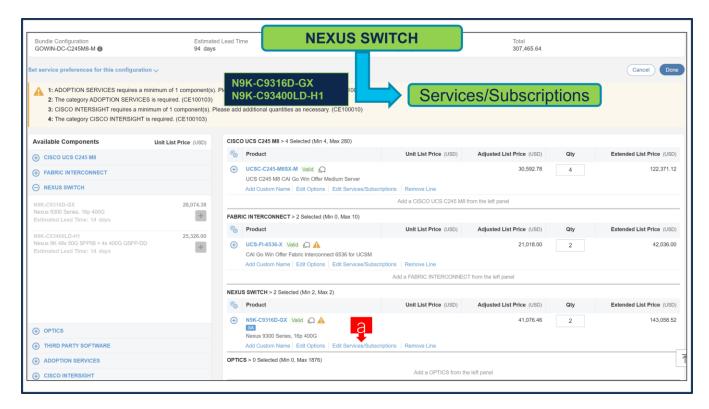

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 15.

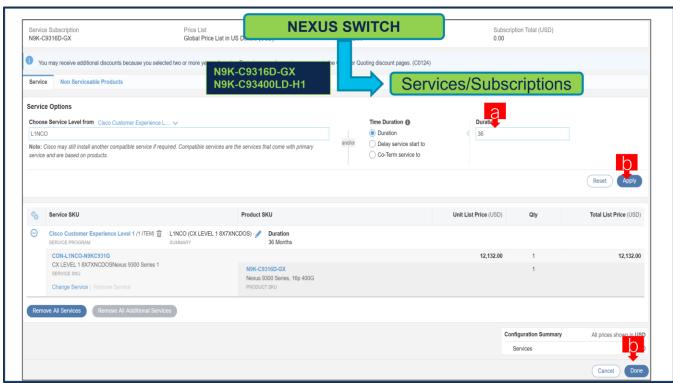

a. Enter the Term Duration

b. Click on "Apply" and "Done"

Step 16.




a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 17.

OPTICS Reference Guide							
		A	В	С	D		
1	GOWIN-DC	C2xxMx-M	C2xxMx-M	C2xxMx-L	C2xxMx-L		
2	FI Present	Yes	No	Yes	No		
3	Nexus	9316D-GX	93400LD-H1	9316D-GX	9316D-GX		
4	# of Servers	N, where Min=4, Max=280	N, where Min=4, Max=24	N, where Min=4, Max=140	N, where Min=4, Max=40		
5	# of FI	(ROUNDUP(A4/56))*2	-	(ROUNDUP(C4/28))*2	-		
6	QSFP-4SFP25G-CU5M location	Server uplinks & FI downlinks	-	-	-		
7	QSFP-4SFP25G-CU5M	A4	-	-	-		
8	SFP-50G-CU5M location	-	Server uplinks & Nexus downlinks	-	-		
9	SFP-50G-CU5M	-	B4*4	-	-		
10	QSFP-100G-CU5M location			Server uplinks & FI downlinks	-		
11	QSFP-100G-CU5M			C4*2	-		
12	OR, SFP-25G-SL location	Server uplinks	Server uplinks & Nexus downlinks	-	-		
13	SFP-25G-SL	A4*4	B4*8	-	-		
14	OR, QSFP-100G-SL4 location	FI downlinks	-	-	-		
15	QSFP-100G-SL4	A13/4	-	-	-		
16	OR, QSFP-100G-SR1.2 location	-	-	Server uplinks & FI downlinks	-		
17	QSFP-100G-SR1.2	-		C4*2*2	-		
18	QSFP-100G-SR1.2 location	FI uplinks	-	FI uplinks	Server Uplinks		
19	QSFP-100G-SR1.2	EVEN(A4/3.5)	-	EVEN((C4*2)/3.5)	D4*2		
20	QDD-400G-SR4.2-BD location	Nexus downlinks	-	Nexus downlinks	Nexus downlinks		
21	ODD-400G-SR4.2-BD	A19/4	-	C19/4	D19/4		


- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 18.

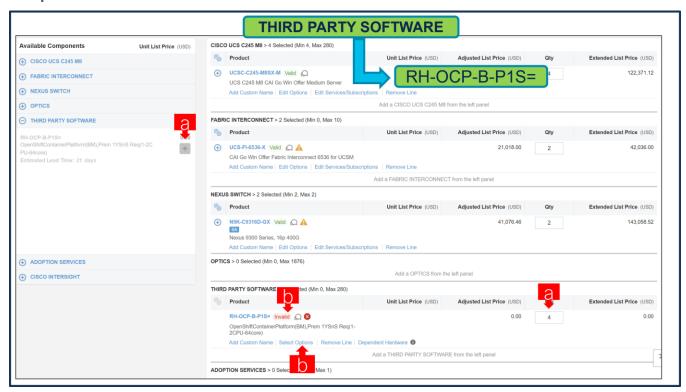


- a. THIRD PARTY SOFTWARE: RH-OCP-B-P1S= is an optional selection and QTY must be equal to Server QTY when selected.
- b. Notice the PID: RH-OCP-B-P1S= Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Step 19.

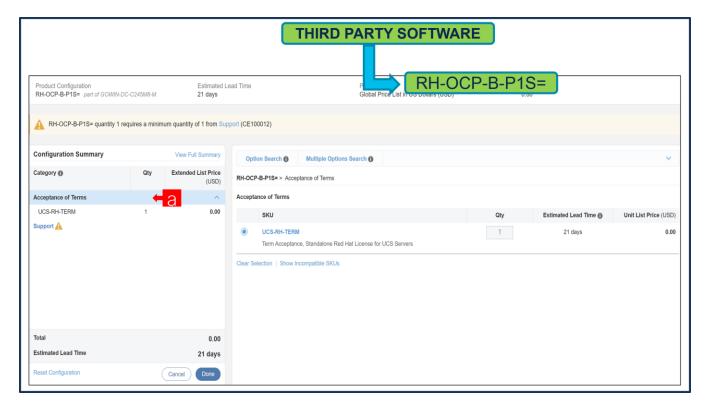


a. Select Acceptance of Terms Option.

Step 20.

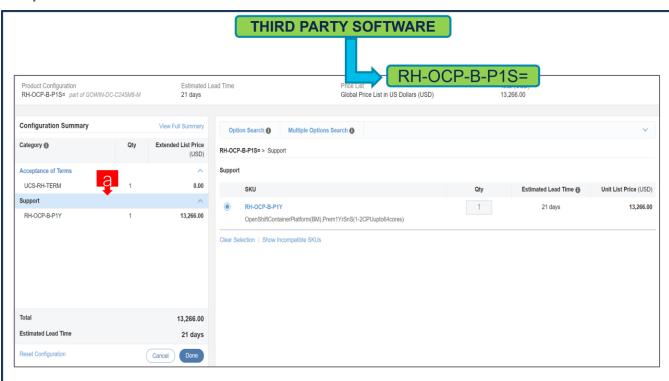

a. Select Support Option.

Step 21.

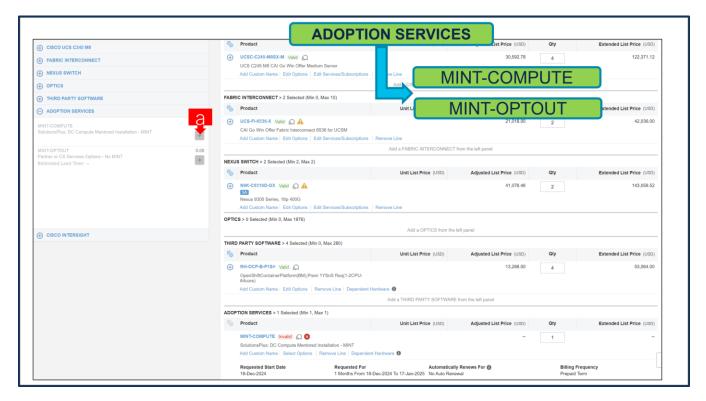

- a. Please select at least one option from ADOPTION SERVICES Category.
- b. User can select either MINT Services or can optout.


Note: Please select MINT-OPTOUT, if Order is through Distributor.

Step 22.




a. Please select appropriate QTY of MINT Service Units.

Step 23.

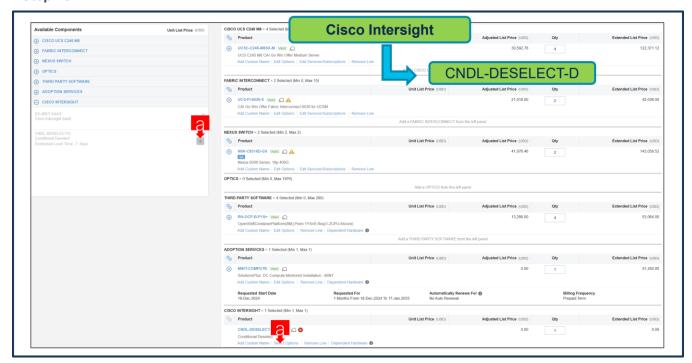


 a. CNDL-DESELECT-D is meant to select only if Customer has already purchased Cisco Intersight License via EA Contract or order is for Disti Fulfillment.

Step 24.

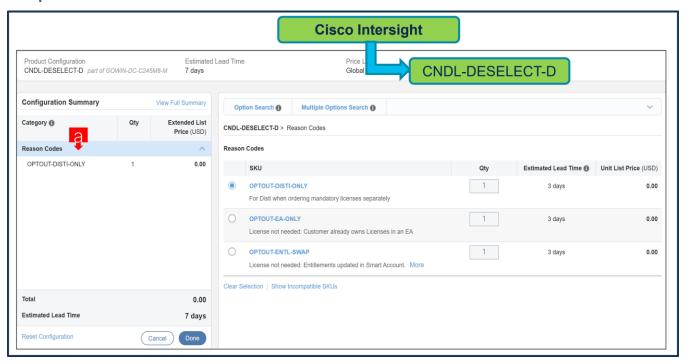

a. Please select appropriate Reason Code

Step 25.

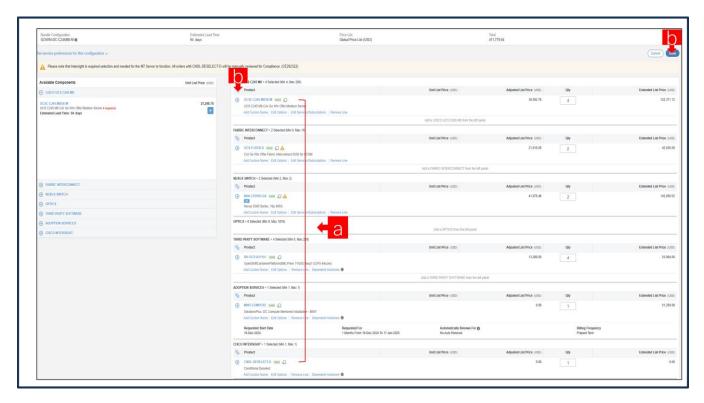

- a. Configuration for MLB is completed when status of each Product is Valid and warning messages are cleared.
- b. Click on the "PLUS" to expand and view the selections made for each Product.
- c. Click on the "DONE" to complete the MLB Configuration.

GOWIN-DC-C245M8-L Ordering Process


Buy Method Through Cisco (Eg: Direct Customer & Tier 1 Partners)

Scenario 1: Customer Without Enterprise Agreement for Cisco Intersight Software License Step 1.



- a. In CCW, search for MLB PID and click on "Add"
- b. Click on "Select Options" to enter the configurator.

Step 2.

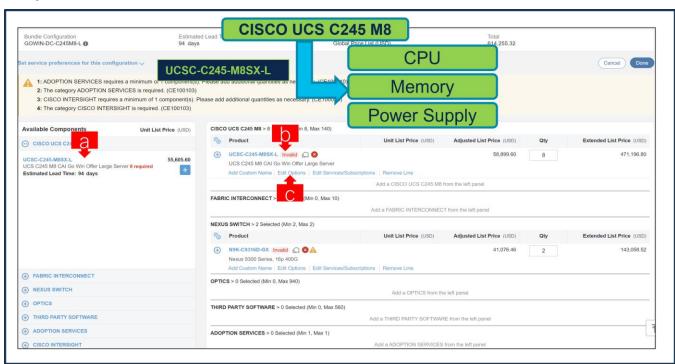


- ATO: UCSC-C245-M8SX-L is preselected with 4 QTY from Category: CISCO UCS C245 M8.
- b. Notice the ATO: UCSC-C245-M8SX-L Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 3.



 All Server Components are Auto Included in the configuration. Please select appropriate Power Cable.


Step 4.

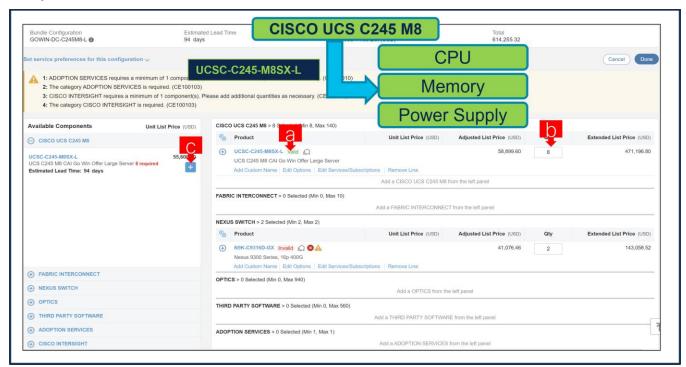

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.

c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 5.

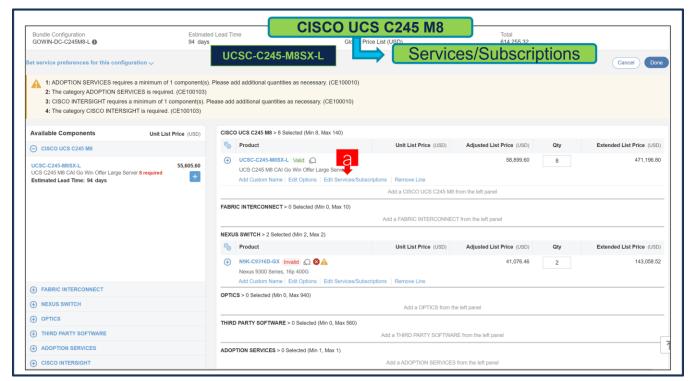

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 6.

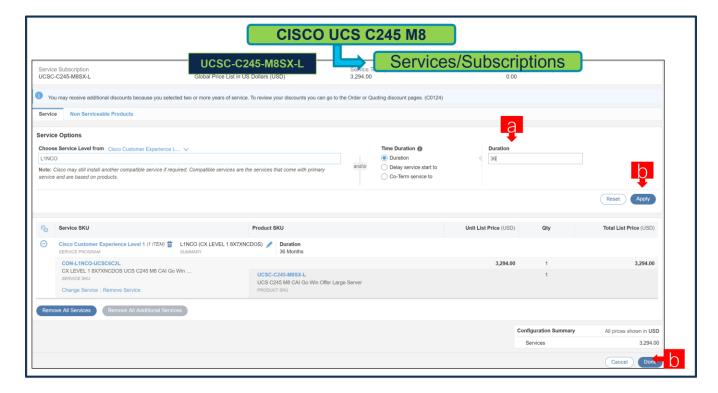

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"


Step 7.

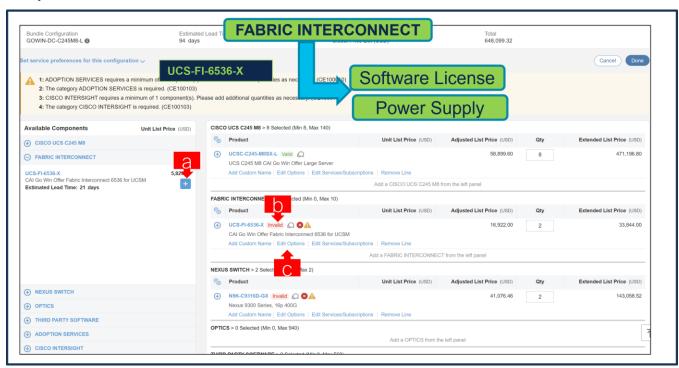

- FABRIC INTERCONNECT: UCS-FI-6536-X is an optional selection and minimum 2 QTY is required if selected.
- b. Notice the UCS-FI-6536-X ATO Status is invalid as further configuration is needed.


c. Select 'Edit Options' to enter the configurator.

Step 8.

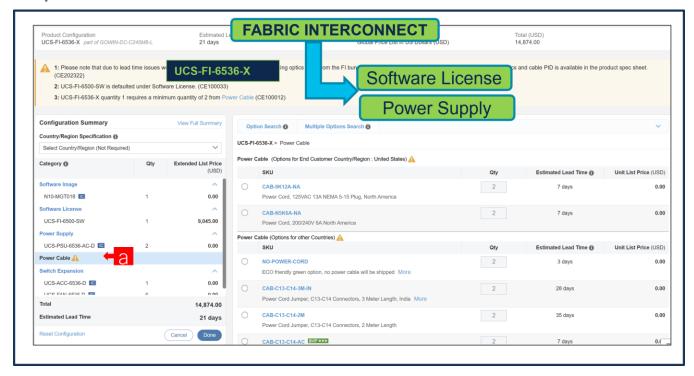

a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.


Step 9.

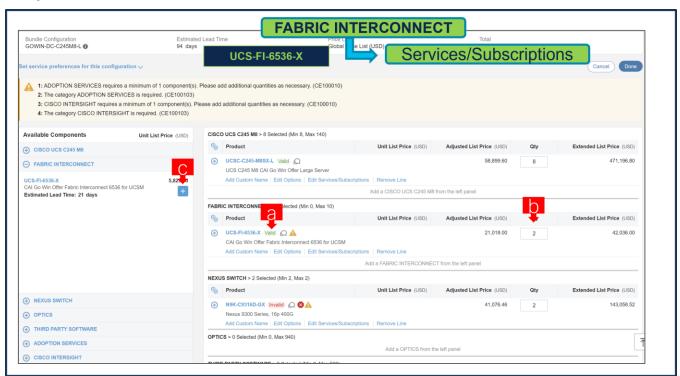

a. Note Status is now showing as Valid.

- b. Increase the quantity for multiples of same configuration.
- Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 10.

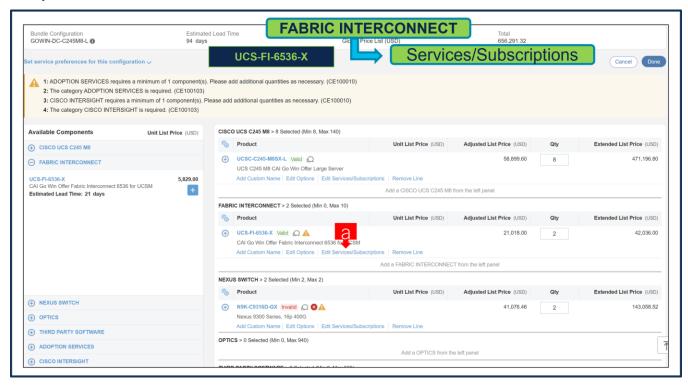

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 11.

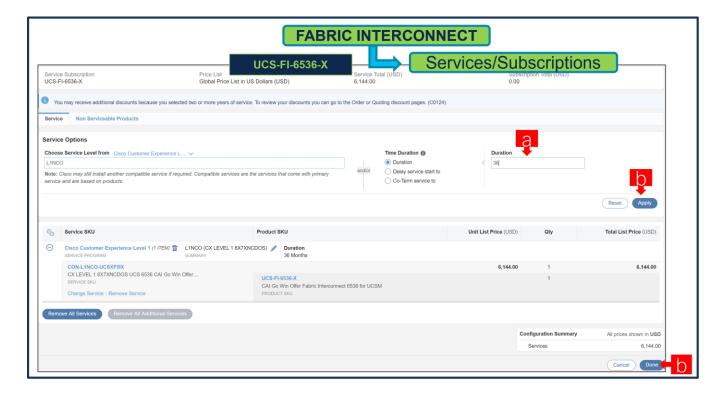

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"


Step 12.

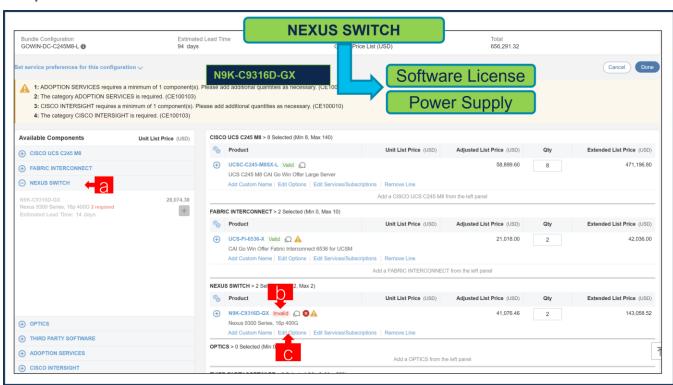

- ATO: N9K-C9316D-GX is preselected with 2 QTY from NEXUS SWITCH Category
- Notice the ATO: N9K-C9316D-GX Status is invalid as further configuration needed.

c. Select 'Edit Options' to enter the configurator


Step 13.

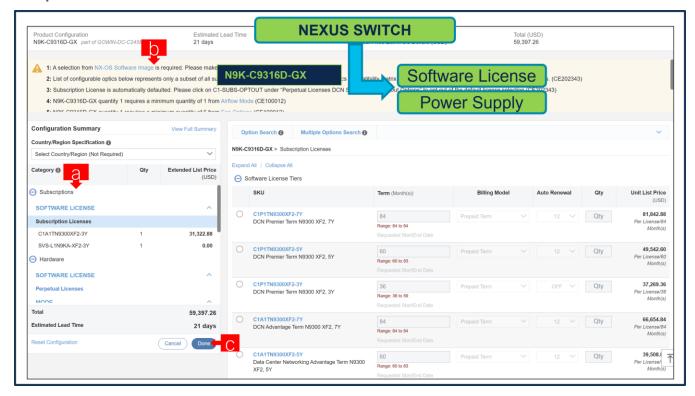

- a. Software Subscription License is default selection. User may select other available options.
- b. Please follow the warning messages and make the minimum required selections.
- c. Click Done when completed.

Note: If Order is through Distributor, please select C1-SUBS-OPTOUT from Perpetual License Option

Step 14.

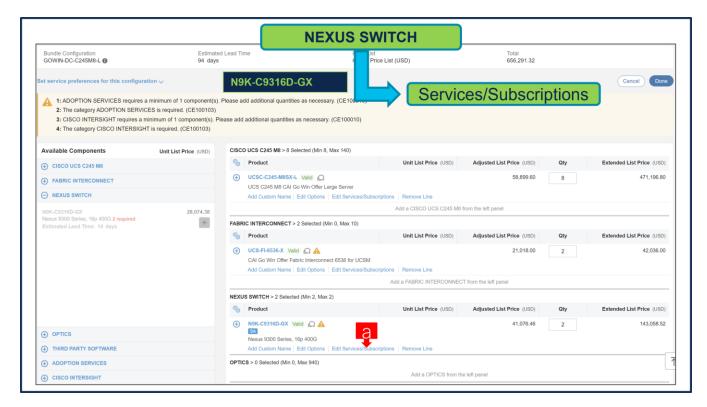

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.


Step 15.



a. Enter the Term Duration

b. Click on "Apply" and "Done"

Step 16.

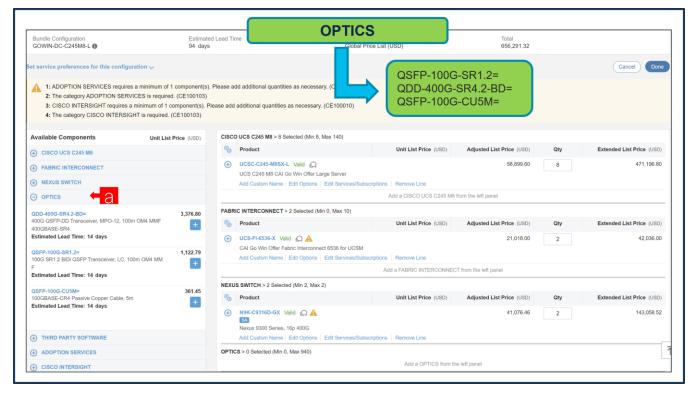


a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 17.

OPTICS Reference Guide							
		A	В	С	D		
1	GOWIN-DC	C2xxMx-M	C2xxMx-M	C2xxMx-L	C2xxMx-L		
2	FI Present	Yes	No	Yes	No		
3	Nexus	9316D-GX	93400LD-H1	9316D-GX	9316D-GX		
4	# of Servers	N, where Min=4, Max=280	N, where Min=4, Max=24	N, where Min=4, Max=140	N, where Min=4, Max=40		
5	# of FI	(ROUNDUP(A4/56))*2	-	(ROUNDUP(C4/28))*2	-		
6	QSFP-4SFP25G-CU5M location	Server uplinks & FI downlinks	-	-	-		
7	QSFP-4SFP25G-CU5M	A4	-	-	-		
8	SFP-50G-CU5M location	-	Server uplinks & Nexus downlinks	-	-		
9	SFP-50G-CU5M	-	B4*4	-	-		
10	QSFP-100G-CU5M location			Server uplinks & FI downlinks	-		
11	QSFP-100G-CU5M			C4*2	-		
12	OR, SFP-25G-SL location	Server uplinks	Server uplinks & Nexus downlinks	-	-		
13	SFP-25G-SL	A4*4	B4*8	-	-		
14	OR, QSFP-100G-SL4 location	FI downlinks	-	-	-		
15	QSFP-100G-SL4	A13/4	-	-	-		
16	OR, QSFP-100G-SR1.2 location	-	-	Server uplinks & FI downlinks	-		
17	QSFP-100G-SR1.2	-		C4*2*2	-		
18	QSFP-100G-SR1.2 location	FI uplinks	-	FI uplinks	Server Uplinks		
19	QSFP-100G-SR1.2	EVEN(A4/3.5)	-	EVEN((C4*2)/3.5)	D4*2		
20	QDD-400G-SR4.2-BD location	Nexus downlinks	-	Nexus downlinks	Nexus downlinks		
21	ODD-400G-SR4.2-BD	A19/4	-	C19/4	D19/4		


- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 18.

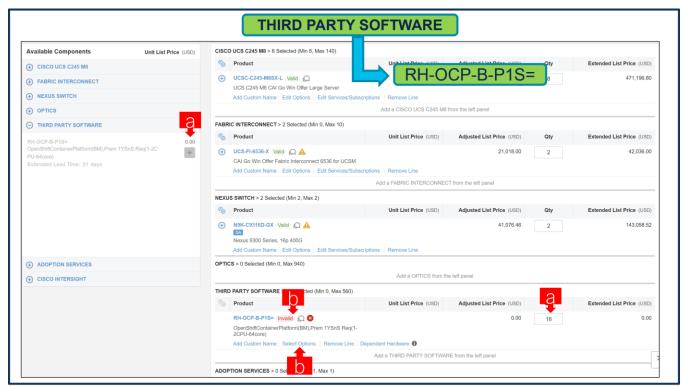


- a. THIRD PARTY SOFTWARE: RH-OCP-B-P1S= is an optional selection and QTY must be equal to Server QTY when selected.
- b. Notice the PID: RH-OCP-B-P1S= Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Step 19.

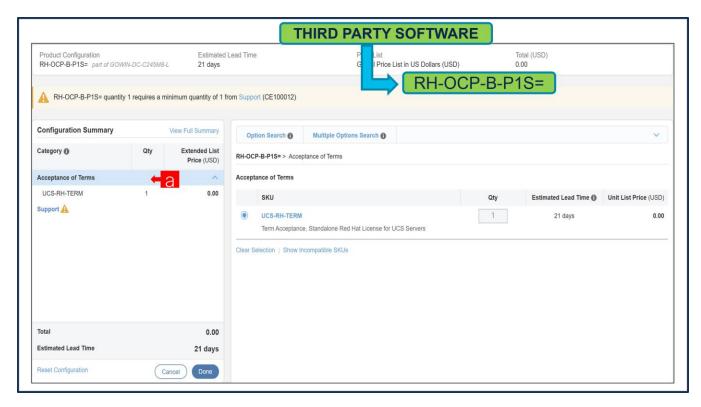


a. Select Acceptance of Terms Option.

Step 20.

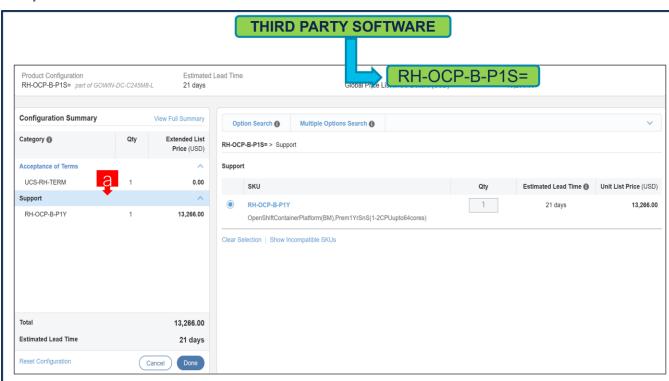

a. Select Support Option.

Step 21.

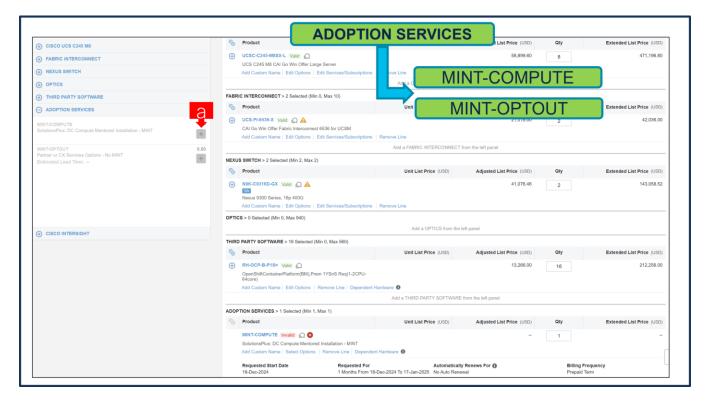

- a. Please select at least one option from ADOPTION SERVICES Category.
- b. User can select either MINT Services or can optout.


Note: Please select MINT-OPTOUT, if Order is through Distributor.

Step 22.



a. Please select appropriate QTY of MINT Service Units.

Step 23.

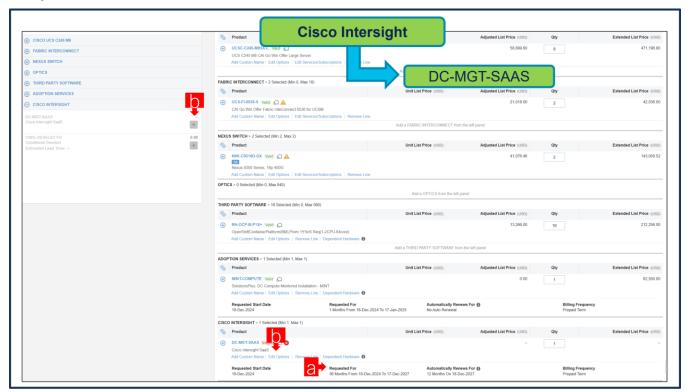


- a. It is recommended that Term Duration for HW Support align with Software Subscription Duration.
- b. Intersight is a required selection, if you have not previously purchased Cisco Intersight Software. Please make selection by clicking "ADD". Click on "Edit Options" to configure.

Step 24.



- a. Requested Start Date (RSD) is now dependent on HW Ship Date and will automatically starts when the HW ships. If you change the RSD, the Software will start either on the RSD you picked or the HW Ship Date whichever is later.
- b. **End Date** (duration in months) is defaulted to **36 Months**, **Auto Renewal** (on/off) is defaulted to **On** and **Billing Frequency** is defaulted to **Prepaid Term**. You can still change the setting accordingly.

Step 25.

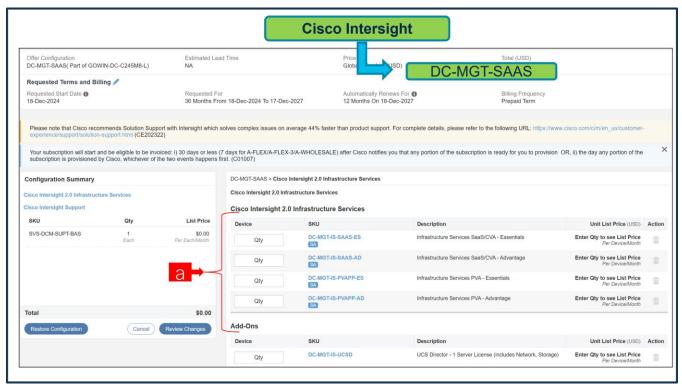


a. The quantity of Cisco Intersight 2.0 Infrastructure Services License under Offer: DC-MGT-SAAS should be equal to the quantity of Server selected. Enter the quantity.

Step 26.



a. The Cisco Intersight License comes with separate Support. Basic Embedded Support is the default selection. However, it is recommended that Customer upgrade to CX Success Track Level 1 or Level 2 to ensure consistent SLA response time between Hardware and Software.

Step 27.

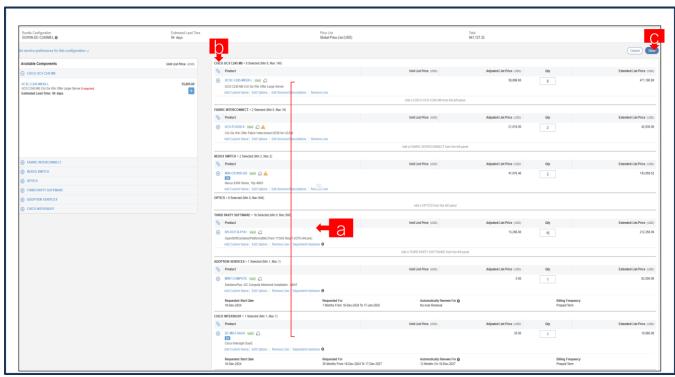

a. Configuration for MLB is completed when status of each Product is Valid and warning messages are cleared.

- b. Click on the "PLUS" to expand and view the selections made for each Product.
- c. Click on the "DONE" to complete the MLB Configuration.


Scenario 2: Customer With Enterprise Agreement for Cisco Intersight Software License

Step 1.




- a. In CCW, search for MLB PID and click on "Add"
- b. Click on "Select Options" to enter the configurator.

Step 2.

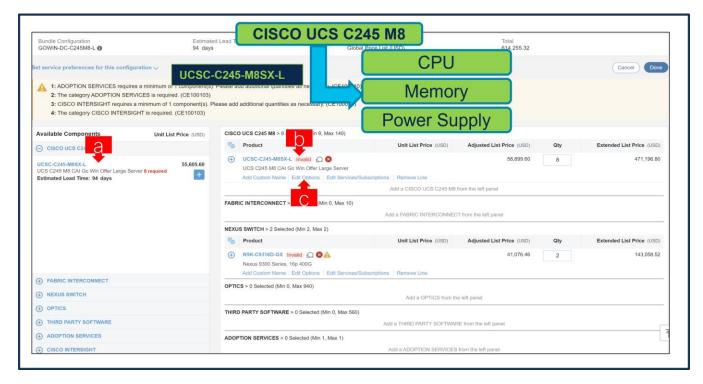


- a. ATO: UCSC-C245-M8SX-L is preselected with 4 QTY from Category: CISCO UCS C245 M8.
- b. Notice the ATO: UCSC-C245-M8SX-L Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 3.

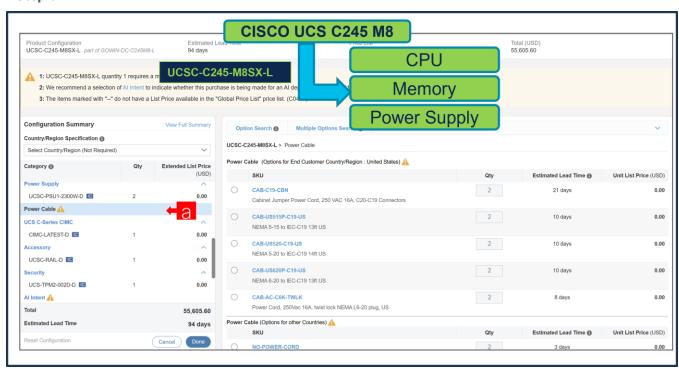


 All Server Components are Auto Included in the configuration. Please select appropriate Power Cable.

Step 4.

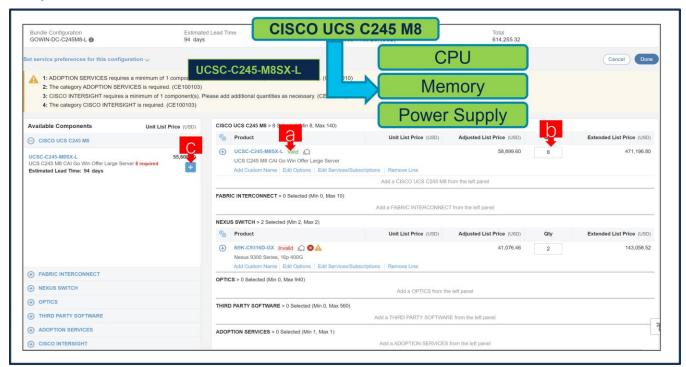

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 5.

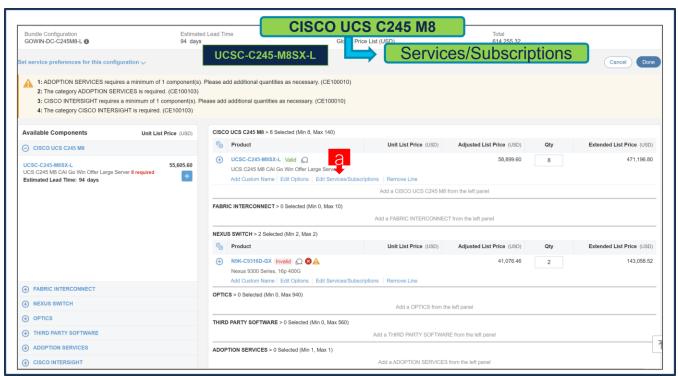

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 6.

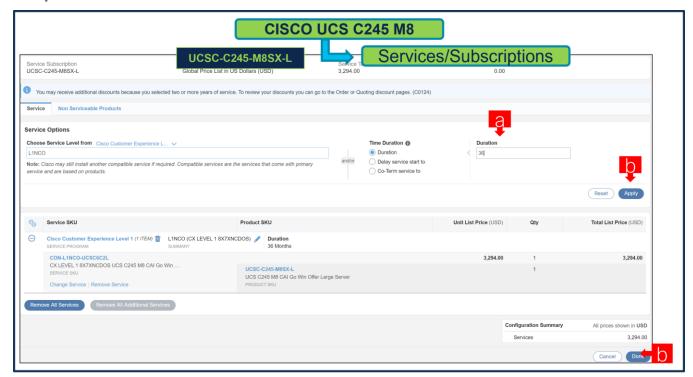


- a. Enter the Term Duration
- b. Click on "Apply" and "Done"

Step 7.

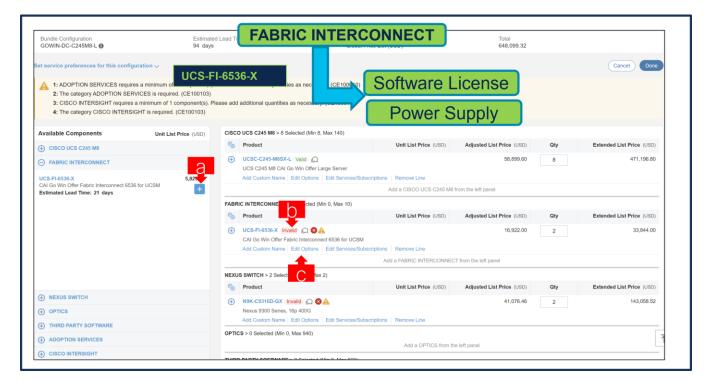


- FABRIC INTERCONNECT: UCS-FI-6536-X is an optional selection and minimum 2 QTY is required if selected.
- b. Notice the UCS-FI-6536-X ATO Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 8.

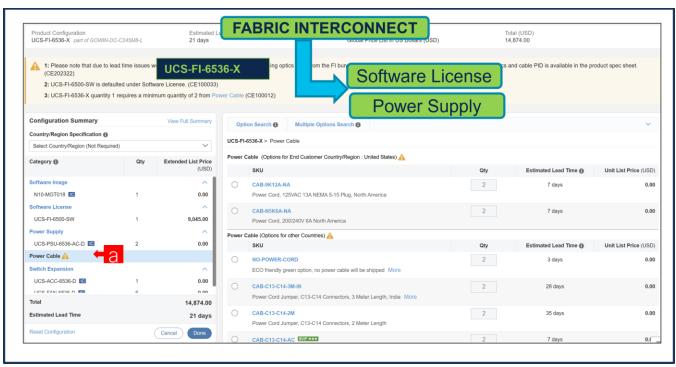


a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 9.

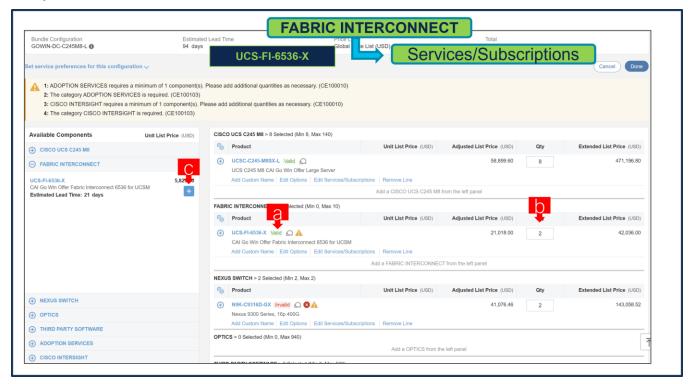

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 10.

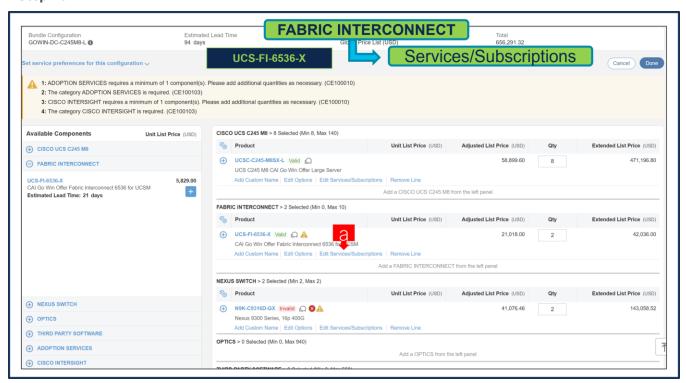

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 11.

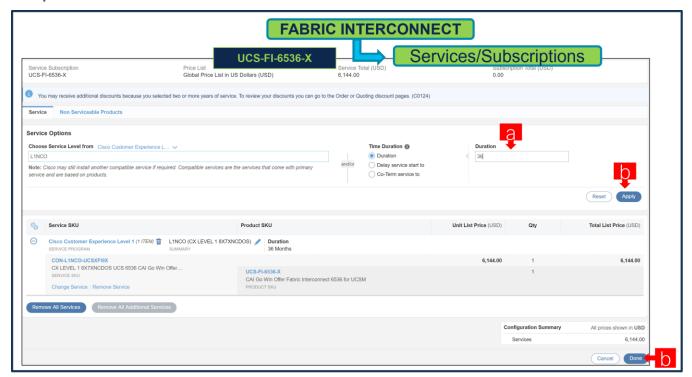


- a. Enter the Term Duration
- b. Click on "Apply" and "Done"

Step 12.

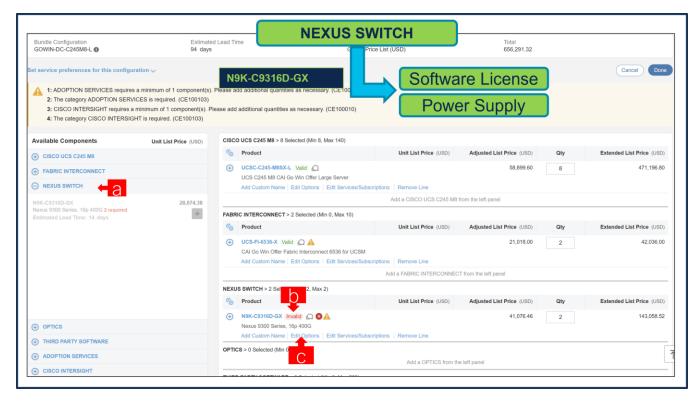

- a. ATO: N9K-C9316D-GX is preselected with 2 QTY from NEXUS SWITCH Category
- b. Notice the ATO: N9K-C9316D-GX Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Step 13.

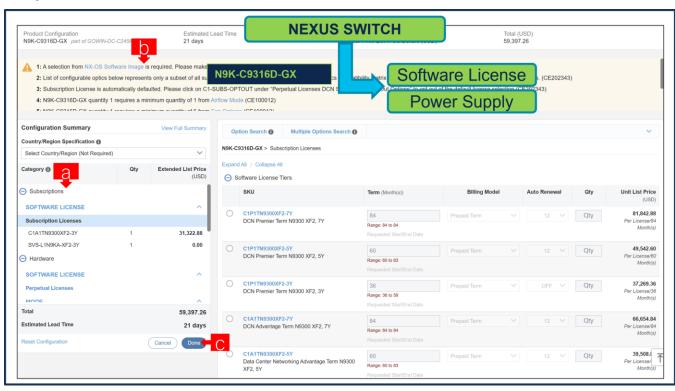


a. Software Subscription License is default selection. User may select other available options.

- b. Please follow the warning messages and make the minimum required selections.
- c. Click Done when completed.

Note: If Order is through Distributor, please select C1-SUBS-OPTOUT from Perpetual License Option


Step 14.

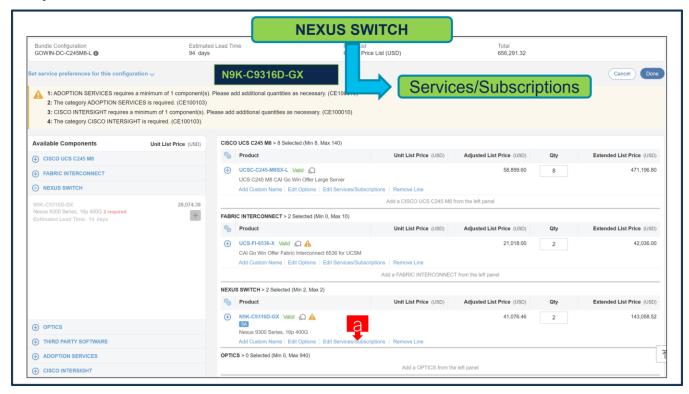

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 15.

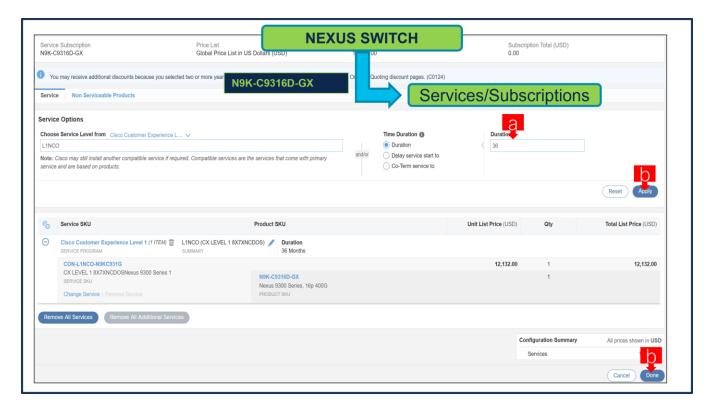

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"

Step 16.

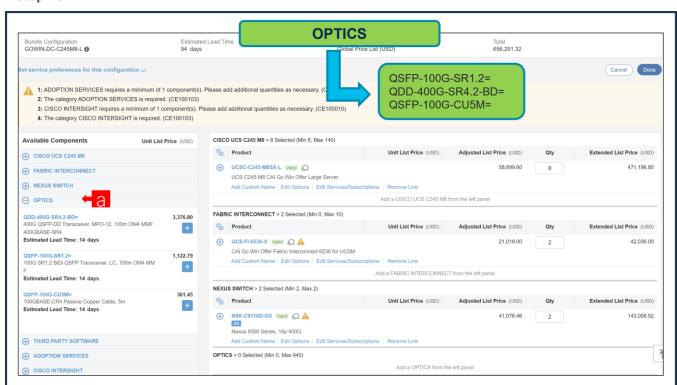


a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 17.

	OPTICS Reference Guide					
		A	В	С	D	
1	GOWIN-DC	C2xxMx-M	C2xxMx-M	C2xxMx-L	C2xxMx-L	
2	FI Present	Yes	No	Yes	No	
3	Nexus	9316D-GX	93400LD-H1	9316D-GX	9316D-GX	
4	# of Servers	N, where Min=4, Max=280	N, where Min=4, Max=24	N, where Min=4, Max=140	N, where Min=4, Max=40	
5	# of FI	(ROUNDUP(A4/56))*2	-	(ROUNDUP(C4/28))*2	-	
6	QSFP-4SFP25G-CU5M location	Server uplinks & FI downlinks	-	-	-	
7	QSFP-4SFP25G-CU5M	A4	-	-	-	
8	SFP-50G-CU5M location	-	Server uplinks & Nexus downlinks	-	-	
9	SFP-50G-CU5M	-	B4*4	-	-	
10	QSFP-100G-CU5M location			Server uplinks & FI downlinks	-	
11	QSFP-100G-CU5M			C4*2	-	
12	OR, SFP-25G-SL location	Server uplinks	Server uplinks & Nexus downlinks	-	-	
13	SFP-25G-SL	A4*4	B4*8	-	-	
14	OR, QSFP-100G-SL4 location	FI downlinks	-	-	-	
15	QSFP-100G-SL4	A13/4	-	-	-	
16	OR, QSFP-100G-SR1.2 location	-	-	Server uplinks & FI downlinks	-	
17	QSFP-100G-SR1.2	-		C4*2*2	-	
18	QSFP-100G-SR1.2 location	FI uplinks	-	FI uplinks	Server Uplinks	
19	QSFP-100G-SR1.2	EVEN(A4/3.5)	-	EVEN((C4*2)/3.5)	D4*2	
20	QDD-400G-SR4.2-BD location	Nexus downlinks	-	Nexus downlinks	Nexus downlinks	
21	QDD-400G-SR4.2-BD	A19/4	-	C19/4	D19/4	


- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 18.

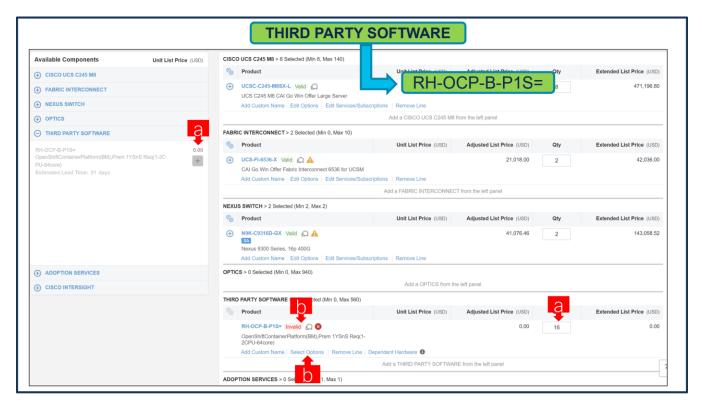


- a. THIRD PARTY SOFTWARE: RH-OCP-B-P1S= is an optional selection and QTY must be equal to Server QTY when selected.
- b. Notice the PID: RH-OCP-B-P1S= Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Step 19.

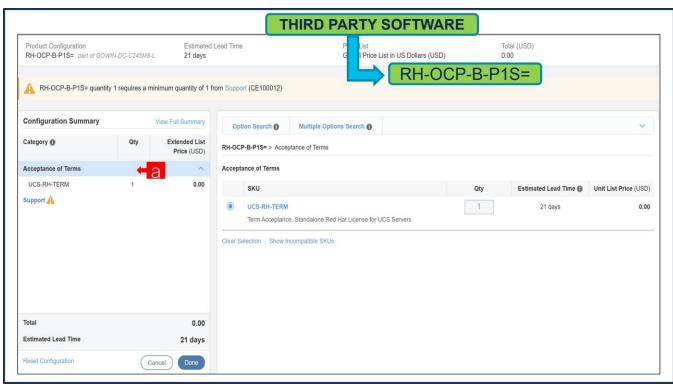


a. Select Acceptance of Terms Option.

Step 20.

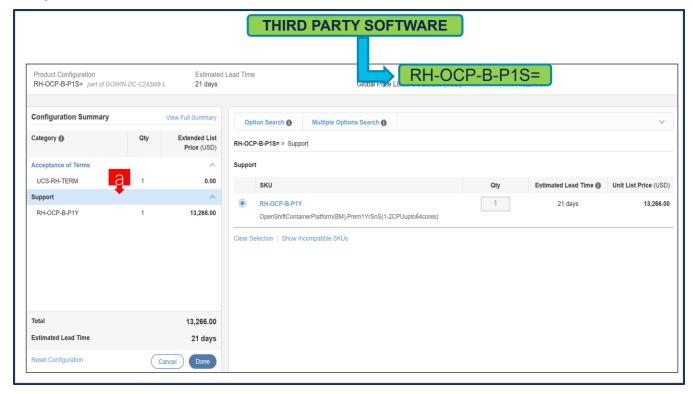

a. Select Support Option.

Step 21.

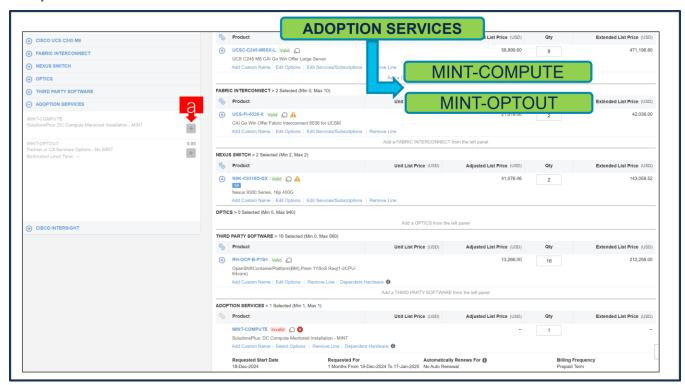

a. Please select at least one option from ADOPTION SERVICES Category.

b. User can select either MINT Services or can optout.


Note: Please select MINT-OPTOUT, if Order is through Distributor.

Step 22.




a. Please select appropriate QTY of MINT Service Units.

Step 23.

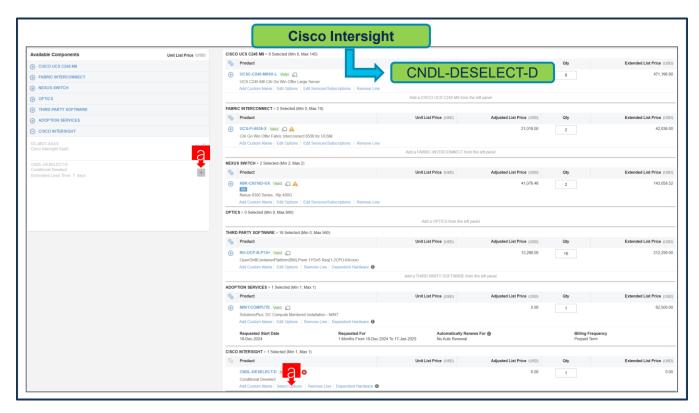


a. **CNDL-DESELECT-D** is meant to select only if Customer has already purchased Cisco Intersight License via EA Contract or order is for Disti Fulfillment.

Step 24.

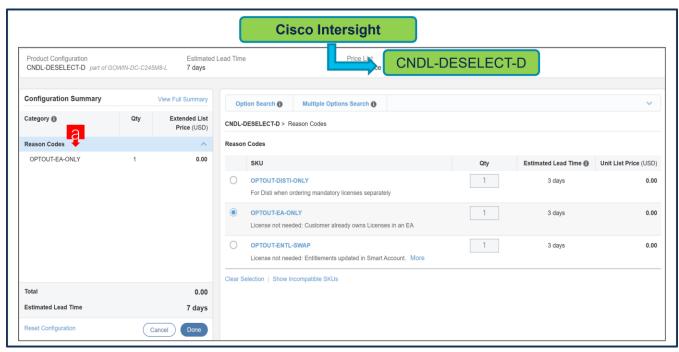

a. Please select appropriate Reason Code

Step 25.

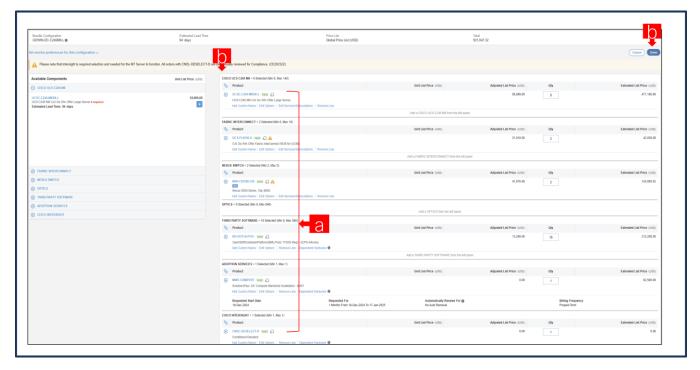

- Configuration for MLB is completed when status of each Product is Valid and warning messages are cleared.
- b. Click on the "PLUS" to expand and view the selections made for each Product.
- c. Click on the "DONE" to complete the MLB Configuration.


Buy Method Through Distributor (Eg: Direct Customer & Tier 1 Partners)

Scenario 1: Customer Without Enterprise Agreement for Cisco Intersight Software License Step 1.



- a. In CCW, search for MLB PID and click on "Add"
- b. Click on "Select Options" to enter the configurator.

Step 2.

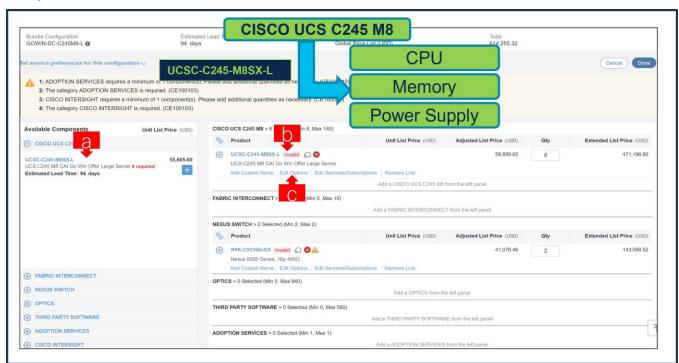


- ATO: UCSC-C245-M8SX-L is preselected with 4 QTY from Category: CISCO UCS C245 M8.
- b. Notice the ATO: UCSC-C245-M8SX-L Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 3.



 All Server Components are Auto Included in the configuration. Please select appropriate Power Cable.


Step 4.

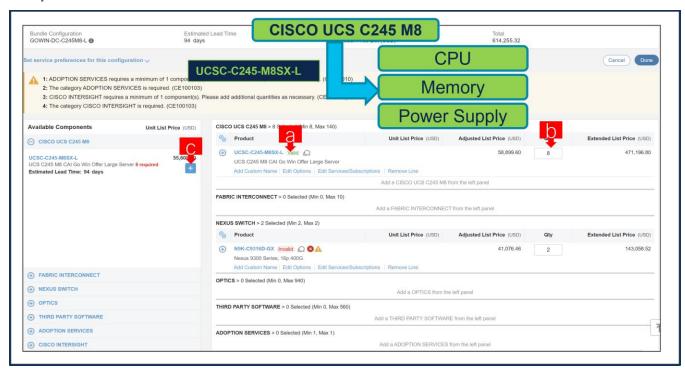

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.

c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 5.

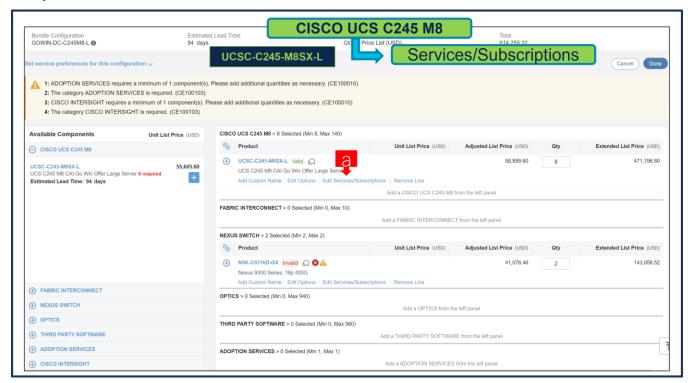

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 6.



- a. Enter the Term Duration
- b. Click on "Apply" and "Done"


Step 7.

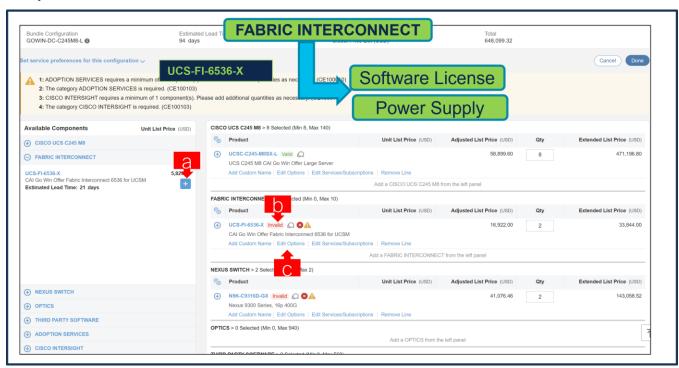

- FABRIC INTERCONNECT: UCS-FI-6536-X is an optional selection and minimum 2 QTY is required if selected.
- b. Notice the UCS-FI-6536-X ATO Status is invalid as further configuration is needed.


c. Select 'Edit Options' to enter the configurator.

Step 8.

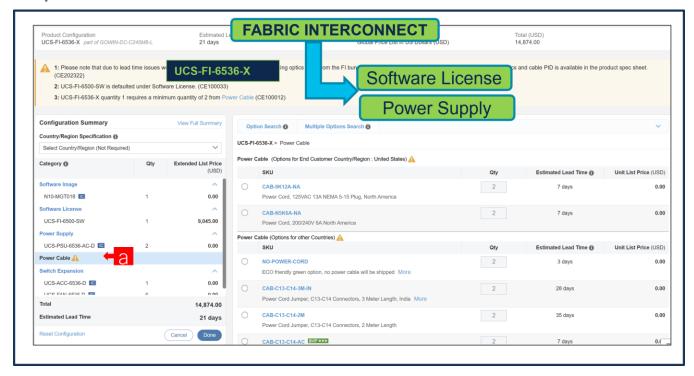

a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.


Step 9.

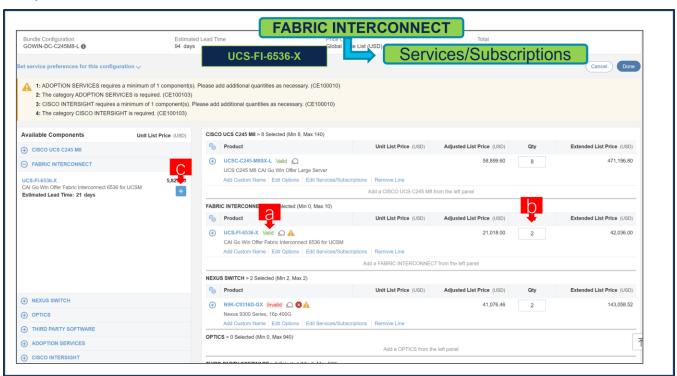

a. Note Status is now showing as Valid.

- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 10.

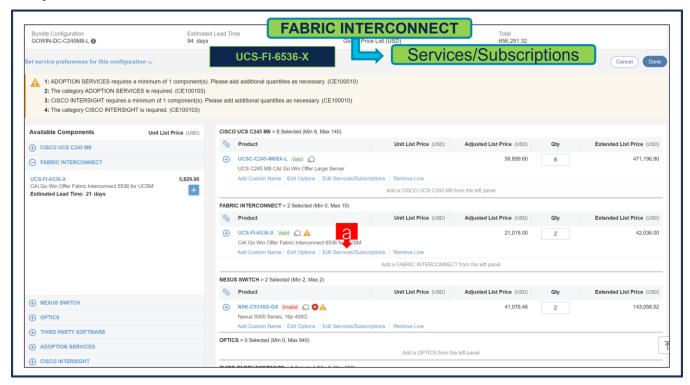

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 11.

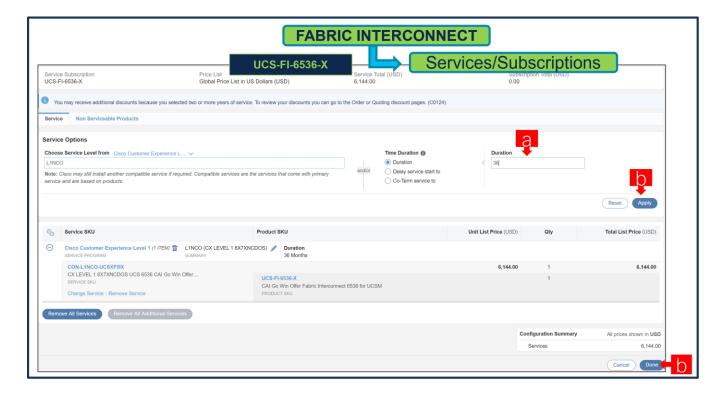

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"


Step 12.



- a. ATO: N9K-C9316D-GX is preselected with 2 QTY from NEXUS SWITCH Category
- Notice the ATO: N9K-C9316D-GX Status is invalid as further configuration needed.

c. Select 'Edit Options' to enter the configurator.


Step 13.

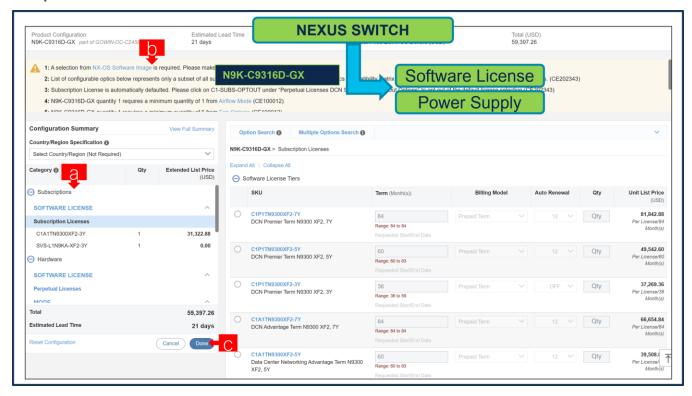

- a. Software Subscription License is default selection. User may select other available options.
- b. Please follow the warning messages and make the minimum required selections.
- c. Click Done when completed.

Note: If Order is through Distributor, please select C1-SUBS-OPTOUT from Perpetual License Option


Step 14.

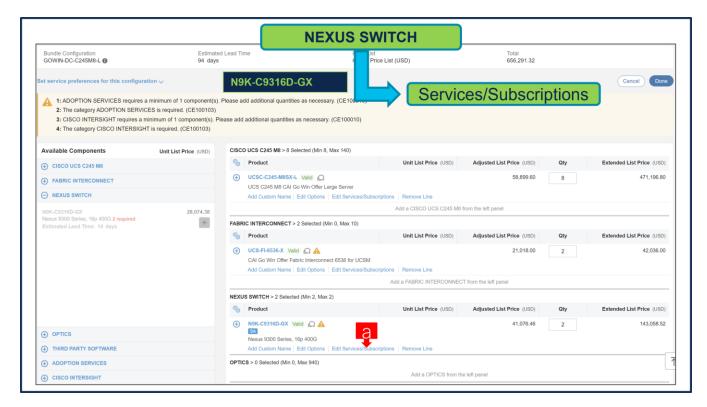

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.


Step 15.

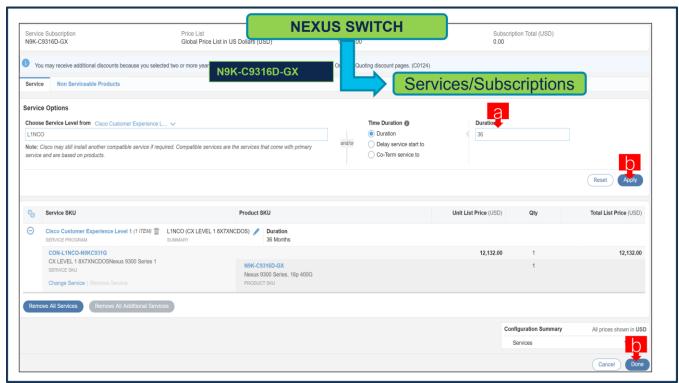

a. Enter the Term Duration

b. Click on "Apply" and "Done"

Step 16.

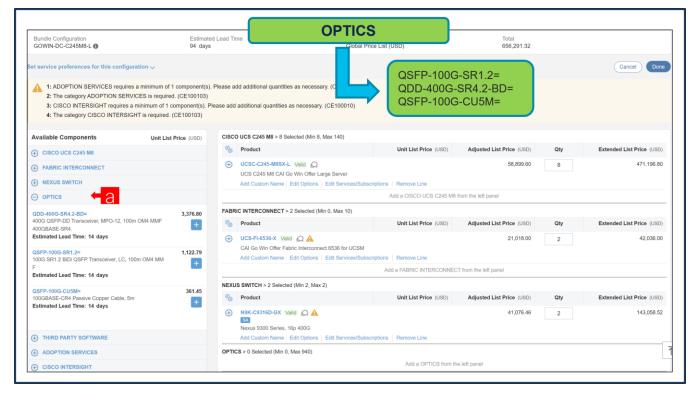


a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 17.

OPTICS Reference Guide							
		A	В	С	D		
1	GOWIN-DC	C2xxMx-M	C2xxMx-M	C2xxMx-L	C2xxMx-L		
2	FI Present	Yes	No	Yes	No		
3	Nexus	9316D-GX	93400LD-H1	9316D-GX	9316D-GX		
4	# of Servers	N, where Min=4, Max=280	N, where Min=4, Max=24	N, where Min=4, Max=140	N, where Min=4, Max=40		
5	# of FI	(ROUNDUP(A4/56))*2	-	(ROUNDUP(C4/28))*2	-		
6	QSFP-4SFP25G-CU5M location	Server uplinks & FI downlinks	-	-	-		
7	QSFP-4SFP25G-CU5M	A4	-	-	-		
8	SFP-50G-CU5M location	-	Server uplinks & Nexus downlinks	-	-		
9	SFP-50G-CU5M	-	B4*4	-	-		
10	QSFP-100G-CU5M location			Server uplinks & FI downlinks	-		
11	QSFP-100G-CU5M			C4*2	-		
12	OR, SFP-25G-SL location	Server uplinks	Server uplinks & Nexus downlinks	-	-		
13	SFP-25G-SL	A4*4	B4*8	-	-		
14	OR, QSFP-100G-SL4 location	FI downlinks	-	-	-		
15	QSFP-100G-SL4	A13/4	-	-	-		
16	OR, QSFP-100G-SR1.2 location	-	-	Server uplinks & FI downlinks	-		
17	QSFP-100G-SR1.2	-		C4*2*2	-		
18	QSFP-100G-SR1.2 location	FI uplinks	-	FI uplinks	Server Uplinks		
19	QSFP-100G-SR1.2	EVEN(A4/3.5)	-	EVEN((C4*2)/3.5)	D4*2		
20	QDD-400G-SR4.2-BD location	Nexus downlinks	-	Nexus downlinks	Nexus downlinks		
21	ODD-400G-SR4.2-BD	A19/4	-	C19/4	D19/4		


- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 18.

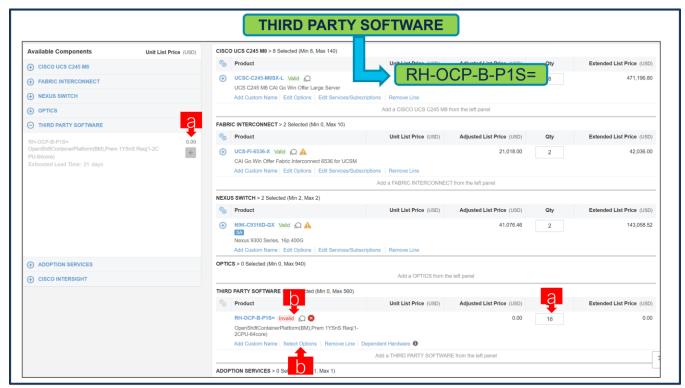


- a. THIRD PARTY SOFTWARE: RH-OCP-B-P1S= is an optional selection and QTY must be equal to Server QTY when selected.
- b. Notice the PID: RH-OCP-B-P1S= Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Step 19.

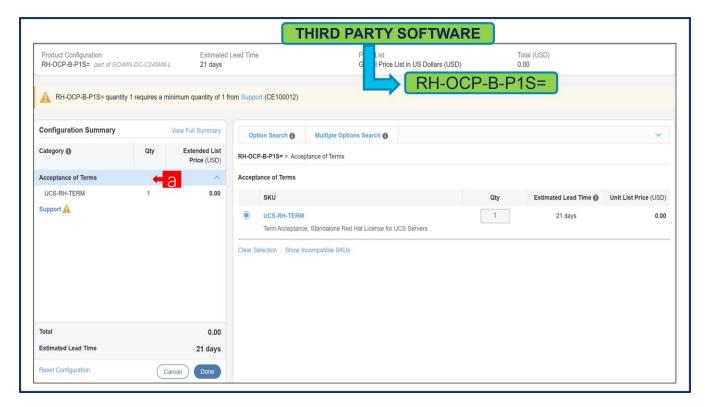


a. Select Acceptance of Terms Option.

Step 20.

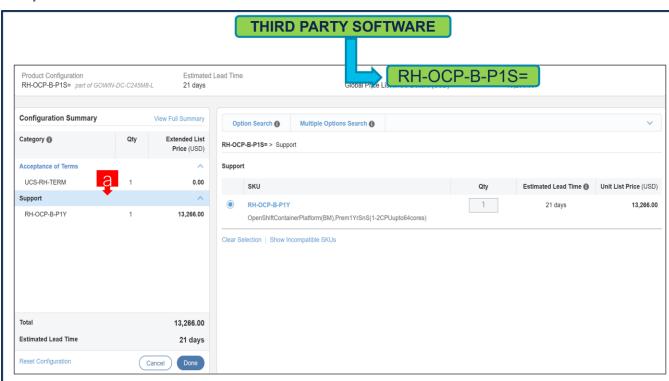

a. Select Support Option.

Step 21.

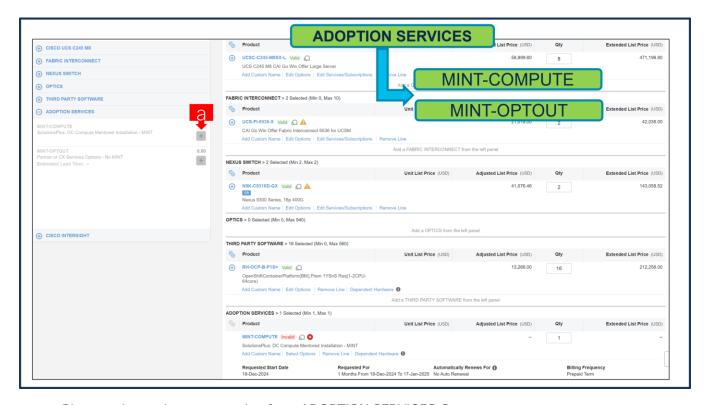

- a. Please select at least one option from ADOPTION SERVICES Category.
- b. User can select either MINT Services or can optout.


Note: Please select MINT-OPTOUT, if Order is through Distributor.

Step 22.




a. Please select appropriate QTY of MINT Service Units.

Step 23.

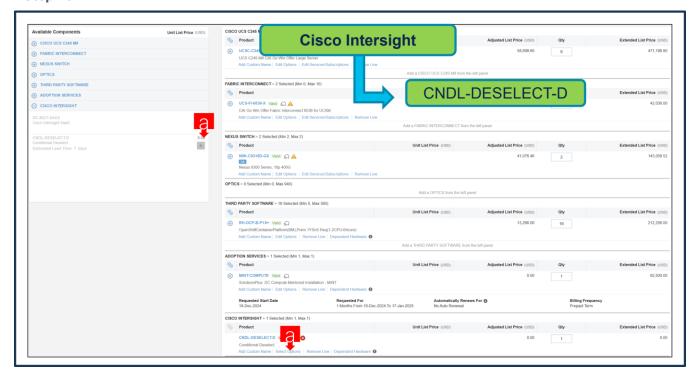


a. **CNDL-DESELECT-D** is meant to select only if Customer has already purchased Cisco Intersight License via EA Contract or order is for Disti Fulfillment.

Step 24.

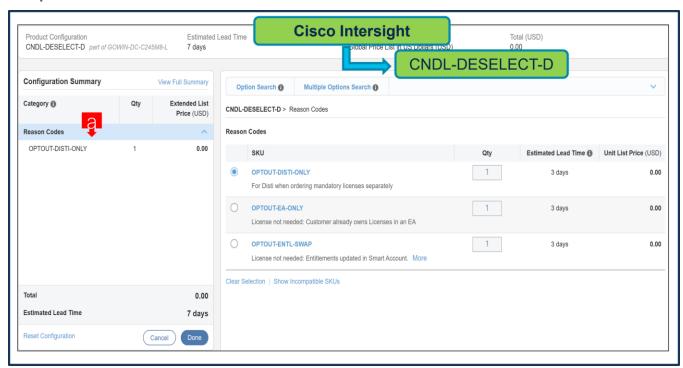


a. Please select appropriate Reason Code

Step 25.

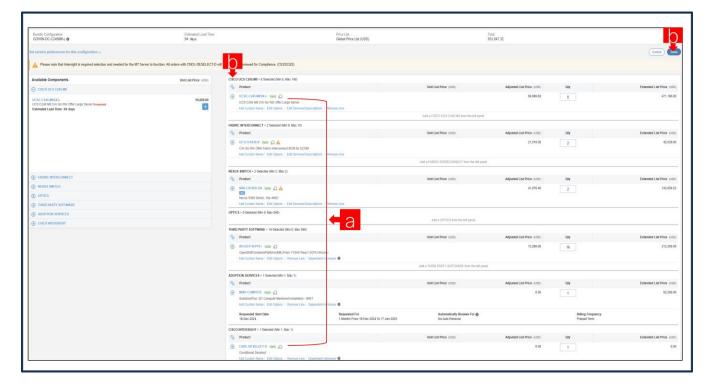

- Configuration for MLB is completed when status of each Product is Valid, and warning messages are cleared.
- b. Click on the "PLUS" to expand and view the selections made for each Product.
- c. Click on the "DONE" to complete the MLB Configuration.


Step 26.

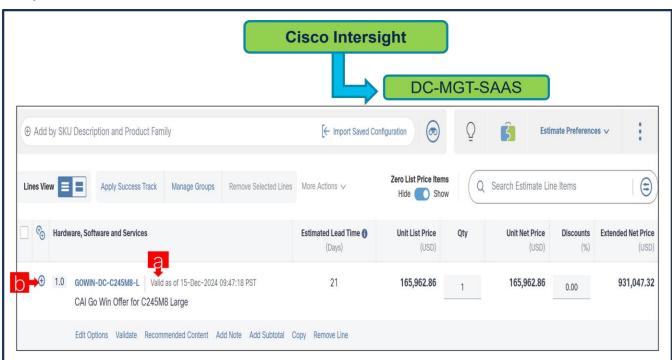

a. Configuration of MLB is now Valid and Line No. 1.0 represents HW only Configuration.

b. Intersight is a required selection, if you have not previously purchased Cisco Intersight Software and needs to added in Line 2.0 which will represent SW only Configuration.

Step 27.

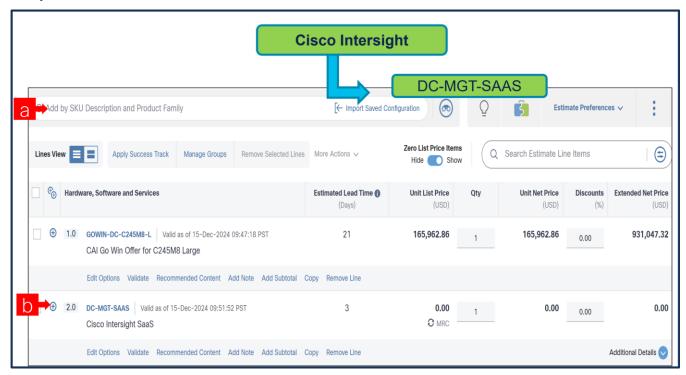


- a. In CCW, search for DC-MGT-SAAS and click on "ADD".
- b. Intersight is a required selection, if you have not previously purchased Cisco Intersight Software. Click on Select Options to enter the configurator.

Step 28.




- a. Requested Start Date (RSD) It is recommended that when you book your SaaS Product, you select
 a Request Start Date (RSD) 90 days into the future.
- b. **End Date** (duration in months) is defaulted to **36 Months**, **Auto Renewal** (on/off) is defaulted to **On** and **Billing Frequency** is defaulted to **Prepaid Term**. You can still change the setting accordingly.

Step 29.

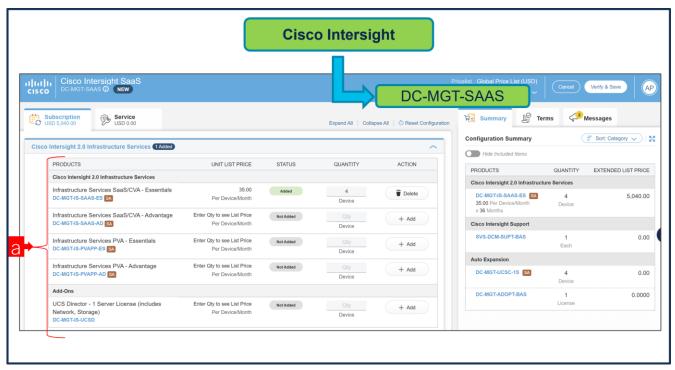


a. The quantity of Cisco Intersight 2.0 Infrastructure Services License under Offer: DC-MGT-SAAS should be equal to the quantity of Server selected. Enter the quantity.

Step 30.

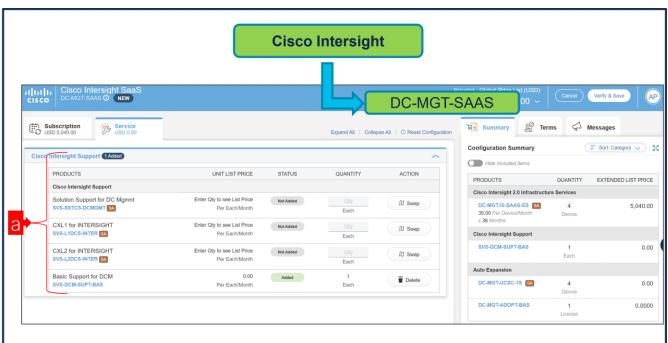


a. The Cisco Intersight License comes with separate Support. Basic Embedded Support is the default selection. It is recommended that Customer should upgrade to Solution Support or CX Success Track L1 or L2 for the HW.

Step 31.

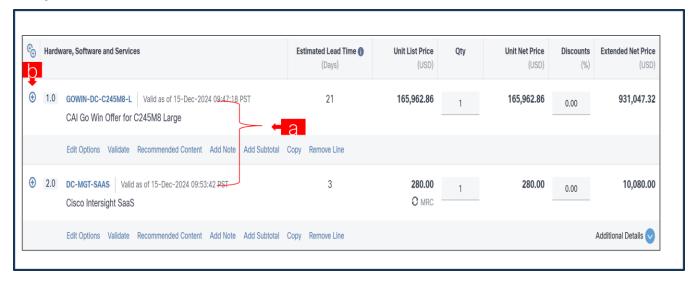


- a. Configuration for MLB and DC-MGT-SAAS is now completed, and status of each Product is Valid.
- b. Click on the "PLUS" to expand and view the selections made for each Product.

Scenario 2: Customer With Enterprise Agreement for Cisco Intersight Software License Step 1.

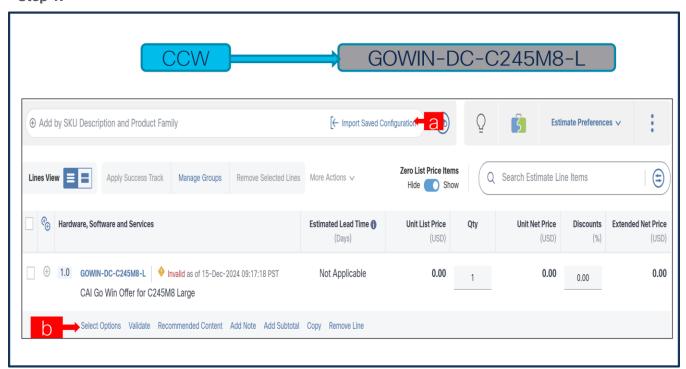


- a. In CCW, search for MLB PID and click on "Add"
- b. Click on "Select Options" to enter the configurator.

Step 2.

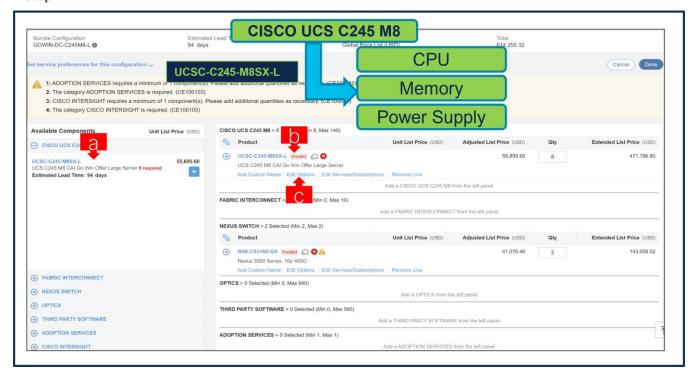

- a. ATO: UCSC-C245-M8SX-L is preselected with 4 QTY from Category: CISCO UCS C245 M8.
- b. Notice the ATO: UCSC-C245-M8SX-L Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 3.

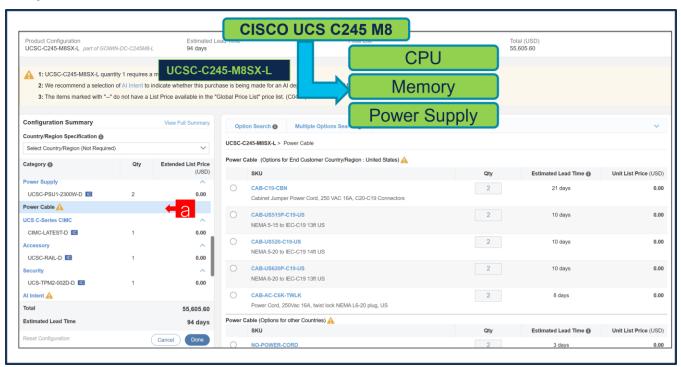

a. All Server Components are Auto Included in the configuration. Please select appropriate Power Cable.

Step 4.



- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 5.



a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.


Step 6.

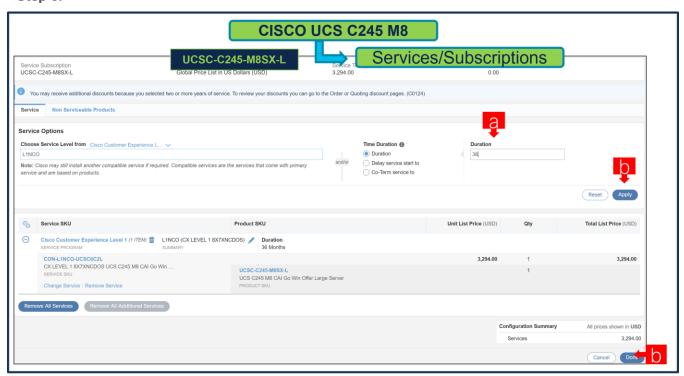

a. Enter the Term Duration


b. Click on "Apply" and "Done"

Step 7.

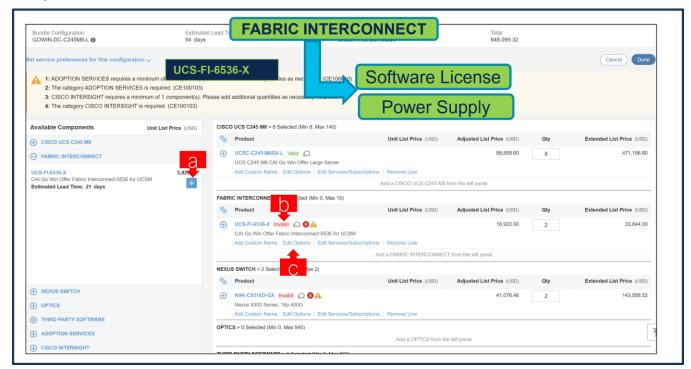


- FABRIC INTERCONNECT: UCS-FI-6536-X is an optional selection and minimum 2 QTY is required if selected.
- b. Notice the UCS-FI-6536-X ATO Status is invalid as further configuration is needed.
- c. Select 'Edit Options' to enter the configurator.

Step 8.

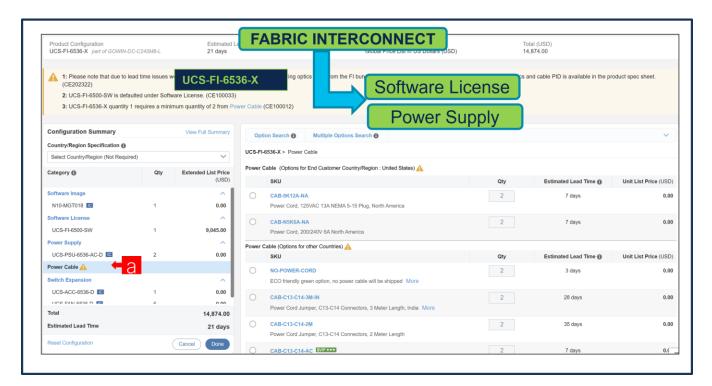

a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.


Step 9.

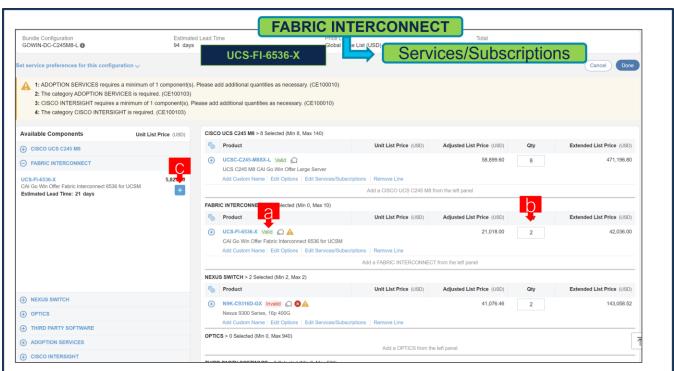

- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.

c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.


Step 10.

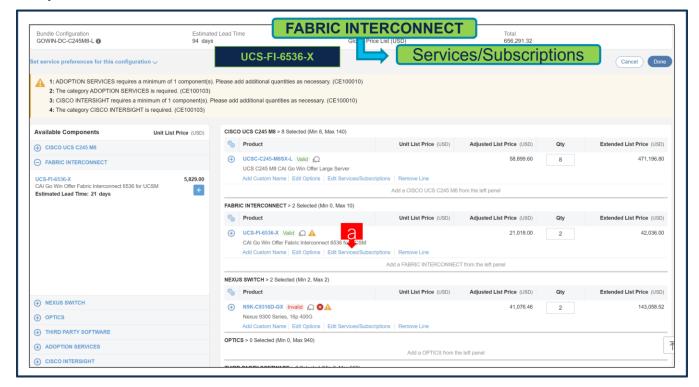

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.


Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.

Step 11.

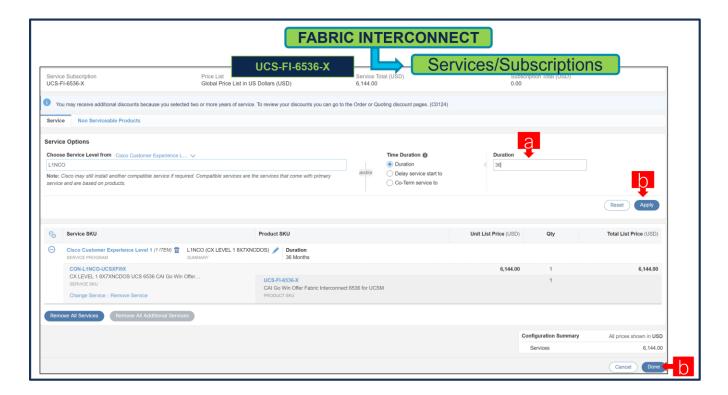

- a. Enter the Term Duration
- b. Click on "Apply" and "Done"


Step 12.

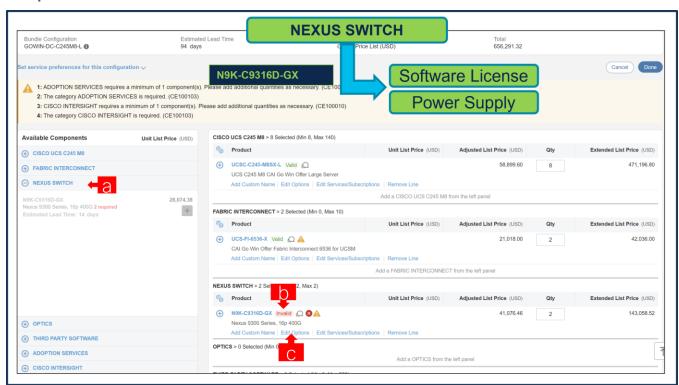

- ATO: N9K-C9316D-GX is preselected with 2 QTY from NEXUS SWITCH Category
- Notice the ATO: N9K-C9316D-GX Status is invalid as further configuration needed.

c. Select 'Edit Options' to enter the configurator.


Step 13.

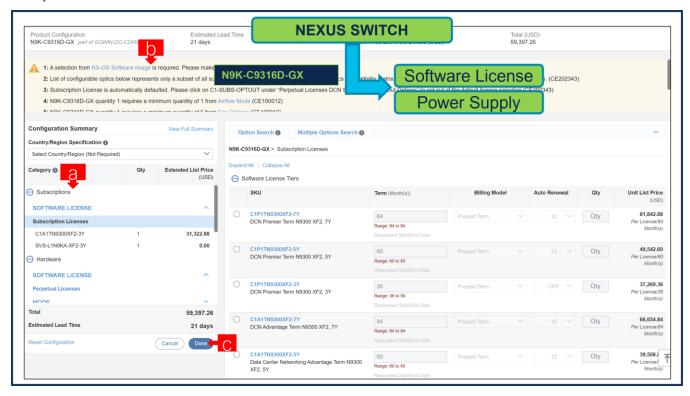

- a. Software Subscription License is default selection. User may select other available options.
- b. Please follow the warning messages and make the minimum required selections.
- c. Click Done when completed.

Note: If Order is through Distributor, please select C1-SUBS-OPTOUT from Perpetual License Option


Step 14.

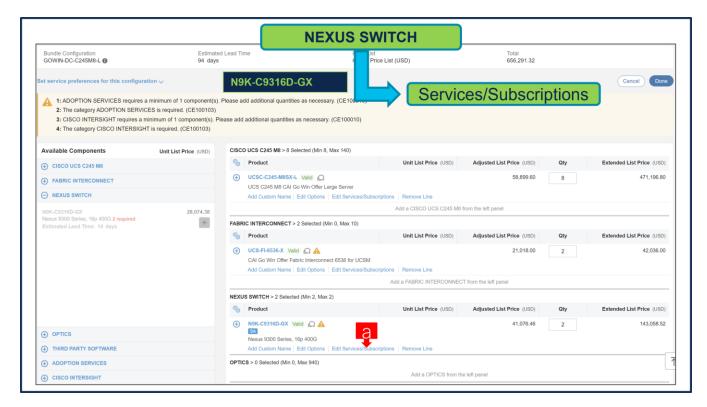

a. Click on "Edit Services/Subscriptions" to edit Term Duration for HW Support.

Note: It is recommended that Term Duration for HW Support must align with Software Subscription Duration.


Step 15.

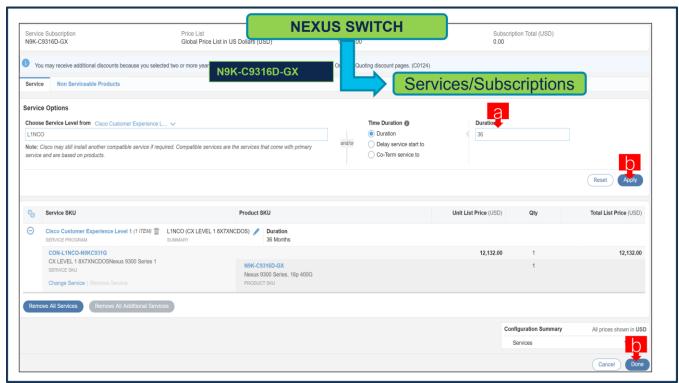

a. Enter the Term Duration

b. Click on "Apply" and "Done"

Step 16.

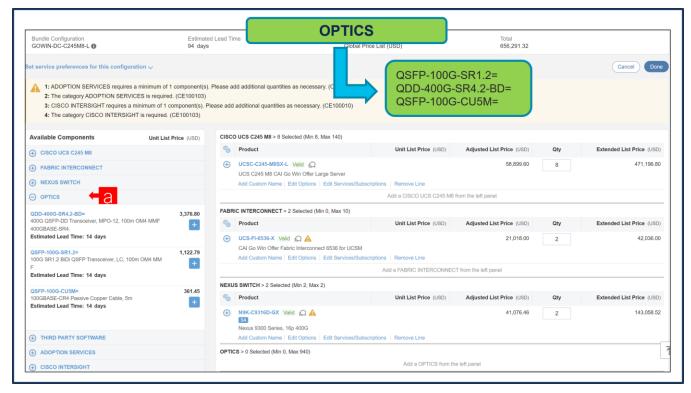


a. All FI Components are Auto Included in the configuration and Software License is preselected at price. Please select appropriate Power Cable.

Step 17.

OPTICS Reference Guide					
		A	В	С	D
1	GOWIN-DC	C2xxMx-M	C2xxMx-M	C2xxMx-L	C2xxMx-L
2	FI Present	Yes	No	Yes	No
3	Nexus	9316D-GX	93400LD-H1	9316D-GX	9316D-GX
4	# of Servers	N, where Min=4, Max=280	N, where Min=4, Max=24	N, where Min=4, Max=140	N, where Min=4, Max=40
5	# of FI	(ROUNDUP(A4/56))*2	-	(ROUNDUP(C4/28))*2	-
6	QSFP-4SFP25G-CU5M location	Server uplinks & FI downlinks	-	-	-
7	QSFP-4SFP25G-CU5M	A4	-	-	-
8	SFP-50G-CU5M location	-	Server uplinks & Nexus downlinks	-	-
9	SFP-50G-CU5M	-	B4*4	-	-
10	QSFP-100G-CU5M location			Server uplinks & FI downlinks	-
11	QSFP-100G-CU5M			C4*2	-
12	OR, SFP-25G-SL location	Server uplinks	Server uplinks & Nexus downlinks	-	-
13	SFP-25G-SL	A4*4	B4*8	-	-
14	OR, QSFP-100G-SL4 location	FI downlinks	-	-	-
15	QSFP-100G-SL4	A13/4	-	-	-
16	OR, QSFP-100G-SR1.2 location	-	-	Server uplinks & FI downlinks	-
17	QSFP-100G-SR1.2	-		C4*2*2	-
18	QSFP-100G-SR1.2 location	FI uplinks	-	FI uplinks	Server Uplinks
19	QSFP-100G-SR1.2	EVEN(A4/3.5)	-	EVEN((C4*2)/3.5)	D4*2
20	QDD-400G-SR4.2-BD location	Nexus downlinks	-	Nexus downlinks	Nexus downlinks
21	ODD-400G-SR4.2-BD	A19/4	-	C19/4	D19/4


- a. Note Status is now showing as Valid.
- b. Increase the quantity for multiples of same configuration.
- c. Click the "PLUS" to add and configure the same product with different option/quantities or select a different product.

Step 18.

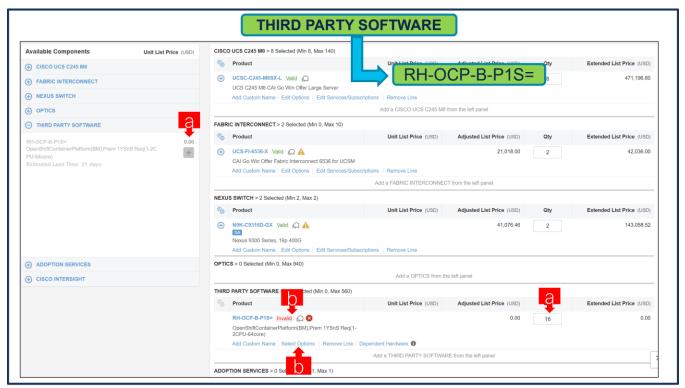


- a. THIRD PARTY SOFTWARE: RH-OCP-B-P1S= is an optional selection and QTY must be equal to Server QTY when selected.
- b. Notice the PID: RH-OCP-B-P1S= Status is invalid as further configuration needed.
- c. Select 'Edit Options' to enter the configurator.

Step 19.

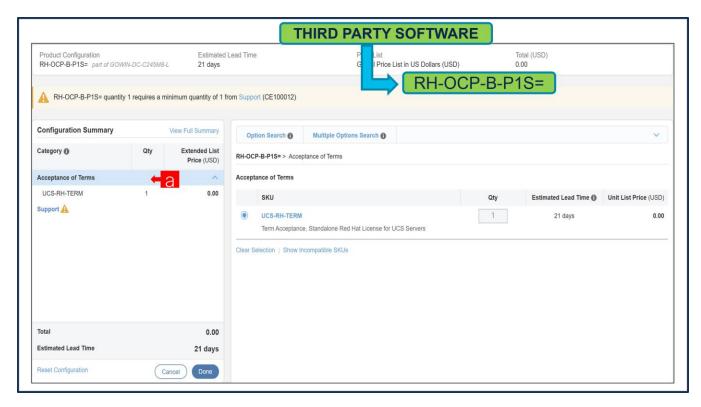


a. Select Acceptance of Terms Option.

Step 20.

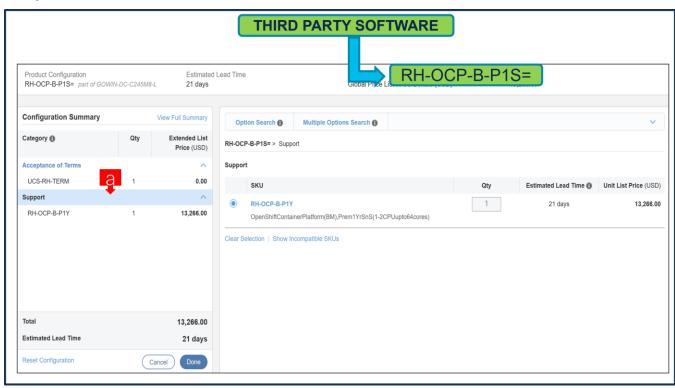

a. Select Support Option.

Step 21.

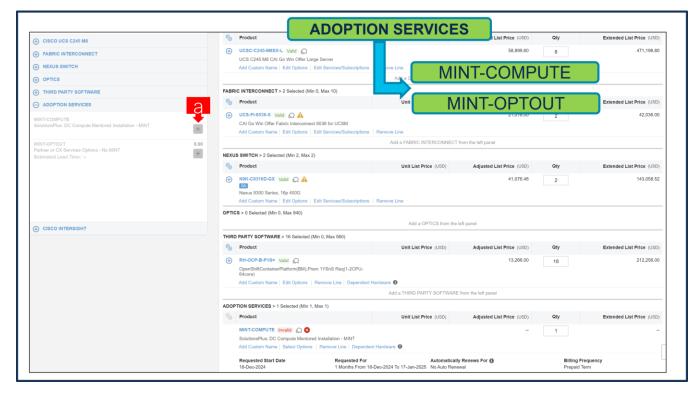

- a. Please select at least one option from ADOPTION SERVICES Category.
- b. User can select either MINT Services or can optout.

Note: Please select MINT-OPTOUT, if Order is through Distributor.

Step 22.




a. Please select appropriate QTY of MINT Service Units.

Step 23.




 a. CNDL-DESELECT-D is meant to select only if Customer has already purchased Cisco Intersight License via EA Contract or order is for Disti Fulfillment.

Step 24.

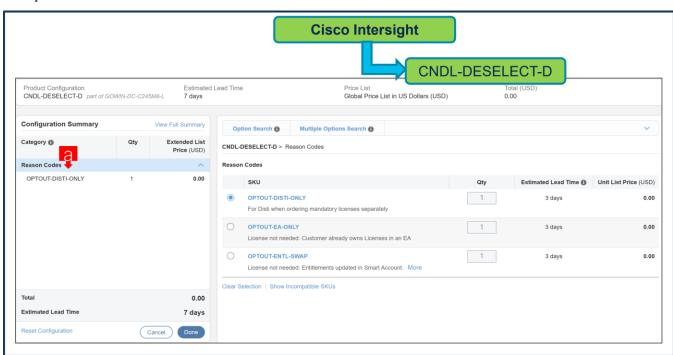

a. Please select appropriate Reason Code

Step 25.

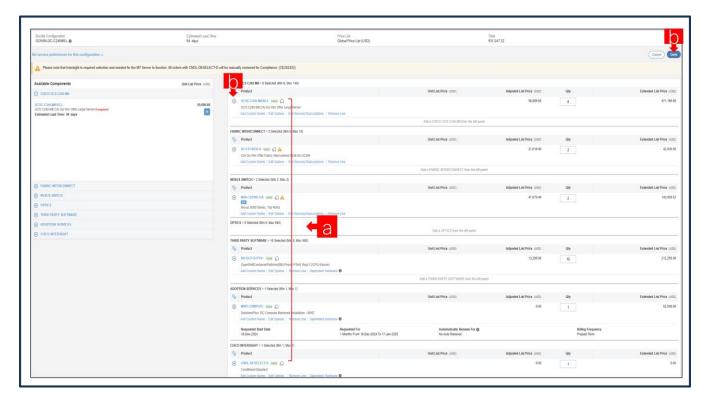

- a. Configuration for MLB is completed when status of each Product is Valid and warning messages are cleared.
- b. Click on the "PLUS" to expand and view the selections made for each Product.
- c. Click on the "DONE" to complete the MLB Configuration.