



## Installation for Cisco UCS Manager Integration

---

Cisco UCS manager integration requires Cisco UCS Manager 3.1(2) or later. You can integrate a system that has either M3 or M4 server nodes, but the system must be using Cisco IMC 2.0(13) or later firmware.



---

**Note** UCS S3260's default mode is standalone. If you are integrating the Cisco UCS S3260 Server chassis with Cisco UCS Manager, refer to [Resetting Cisco IMC to Factory Defaults](#) to reset the server to factory defaults.

---

The Cisco UCS integration instructions are in the GUI and CLI integration guides found here:

[Cisco UCS S3260 Server Integration with UCS Manager Guides](#)

Refer to the guide that is for the version of Cisco UCS Manager that you are using.

