



# Configuring Server-Related Policies

---

This chapter includes the following sections:

- [Configuring Boot Policies, page 1](#)
- [Configuring Chassis Discovery Policies, page 7](#)
- [Configuring IPMI Access Profiles, page 8](#)
- [Configuring Local Disk Configuration Policies, page 12](#)
- [Configuring Scrub Policies, page 13](#)
- [Configuring Serial over LAN Policies, page 15](#)
- [Configuring Server Autoconfiguration Policies, page 16](#)
- [Configuring Server Discovery Policies, page 18](#)
- [Configuring Server Inheritance Policies, page 20](#)
- [Configuring Server Pool Policies, page 22](#)
- [Configuring Server Pool Policy Qualifications, page 23](#)
- [Configuring vNIC/vHBA Placement Profiles, page 32](#)

## Configuring Boot Policies

### Boot Policy

The boot policy determines the following:

- Configuration of the boot device
- Location from which the server boots
- Order in which boot devices are invoked

For example, you can choose to have associated servers boot from a local device, such as a local disk or CD-ROM (VMedia), or you can select a SAN boot or a LAN (PXE) boot.

You must include this policy in a service profile, and that service profile must be associated with a server for it to take effect. If you do not include a boot policy in a service profile, the server uses the default settings in the BIOS to determine the boot order.

**Important**

Changes to a boot policy may be propagated to all servers created with an updating service profile template that includes that boot policy. Reassociation of the service profile with the server to rewrite the boot order information in the BIOS is auto-triggered.

**Guidelines**

When you create a boot policy, you can add one or more of the following to the boot policy and specify their boot order:

| Boot type          | Description  |
|--------------------|--|
| SAN boot           | Boots from an operating system image on the SAN. You can specify a primary and a secondary SAN boot. If the primary boot fails, the server attempts to boot from the secondary.<br><br>We recommend that you use a SAN boot, because it offers the most service profile mobility within the system. If you boot from the SAN, when you move a service profile from one server to another, the new server boots from the exact same operating system image. Therefore, the new server appears to be the exact same server to the network. |
| LAN boot           | Boots from a centralized provisioning server. It is frequently used to install operating systems on a server from that server.   |
| Local disk boot    | If the server has a local drive, boots from that drive.  |
| Virtual media boot | Mimics the insertion of a physical CD-ROM disk (read-only) or floppy disk (read-write) into a server. It is typically used to manually install operating systems on a server.  |

**Note**

The default boot order is as follows:

- 1 Local disk boot
- 2 LAN boot
- 3 Virtual media read-only boot
- 4 Virtual media read-write boot

## Configuring a Boot Policy

### Procedure

|               | Command or Action  | Purpose   |
|---------------|--|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>  | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> .   |
| <b>Step 2</b> | UCS-A /org# <b>create boot-policy</b> <i>policy-name</i> [ <b>purpose</b> { <b>operational</b>   <b>utility</b> }] | Creates a boot policy with the specified policy name, and enters organization boot policy mode.<br><br>When you create the boot policy, specify the <b>operational</b> option. This ensures that the server boots from the operating system installed on the server. The <b>utility</b> options is reserved and should only be used if instructed to do so by a Cisco representative. |
| <b>Step 3</b> | UCS-A /org/boot-policy # <b>set descr</b> <i>description</i>   | (Optional)<br>Provides a description for the boot policy.<br><br><b>Note</b> If your description includes spaces, special characters, or punctuation, you must begin and end your description with quotation marks. The quotation marks do not appear in the description field of any <b>show</b> command output.   |
| <b>Step 4</b> | UCS-A /org/boot-policy # <b>set reboot-on-update</b> { <b>no</b>   <b>yes</b> }                                    | Specifies whether the servers using this boot policy are automatically rebooted after you make changes to the boot order.   |
| <b>Step 5</b> | UCS-A /org/boot-policy # <b>commit-buffer</b>  | Commits the transaction to the system configuration.  |

The following example creates a boot policy named boot-policy-LAN, provides a description for the boot policy, specifies that servers using this policy will not be automatically rebooted when the boot order is changed, and commits the transaction:

```
UCS-A# scope org /
UCS-A /org* # create boot-policy boot-policy-LAN purpose operational
UCS-A /org/boot-policy* # set descr "Boot policy that boots from the LAN."
UCS-A /org/boot-policy* # set reboot-on-update no
UCS-A /org/boot-policy* # commit-buffer
UCS-A /org/boot-policy #
```

### What to Do Next

Configure one or more of the following boot options for the boot policy and set their boot order:

- **LAN Boot**—Boots from a centralized provisioning server. It is frequently used to install operating systems on a server from that server.

If you choose the LAN Boot option, continue to ["Configuring a LAN Boot for a Boot Policy, page 4."](#)

- **Storage Boot**—Boots from an operating system image on the SAN. You can specify a primary and a secondary SAN boot. If the primary boot fails, the server attempts to boot from the secondary.

Cisco recommends that you use a SAN boot, because it offers the most service profile mobility within the system. If you boot from the SAN, when you move a service profile from one server to another, the new server will boot from the exact same operating system image. Therefore, the new server will appear to be the exact same server to the network.

If you choose the Storage Boot option, continue to "[Configuring a Storage Boot for a Boot Policy, page 5.](#)"

- **Virtual Media Boot**—Mimics the insertion of a physical CD into a server. It is typically used to manually install operating systems on a server.

If you choose the Virtual Media boot option, continue to "[Configuring a Virtual Media Boot for a Boot Policy, page 6.](#)"


**Tip**

We recommend that the boot order in a boot policy include either a local disk or a SAN LUN, but not both, to avoid the possibility of the server booting from the wrong storage type. If you configure a local disk and a SAN LUN for the boot order storage type and the operating system or logical volume manager (LVM) is configured incorrectly, the server may boot from the local disk rather than the SAN LUN.

For example, on a server with Red Hat Linux installed, where the LVM is configured with default LV names and the boot order is configured with a SAN LUN and a local disk, Linux reports that there are two LVs with the same name and boots from the LV with the lowest SCSI ID, which could be the local disk.

Include the boot policy in a service profile and/or template.

## Configuring a LAN Boot for a Boot Policy

### Before You Begin

Create a boot policy to contain the LAN boot configuration.

### Procedure

|               | Command or Action   | Purpose   |
|---------------|---|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>                               | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>scope boot-policy</b> <i>policy-name</i>              | Enters organization boot policy mode for the specified boot policy.   |
| <b>Step 3</b> | UCS-A /org/boot-policy # <b>create lan</b>                            | Creates a LAN boot for the boot policy and enters organization boot policy LAN mode.  |
| <b>Step 4</b> | UCS-A /org/boot-policy/lan # <b>set order</b> {1   2   3   4}         | Specifies the boot order for the LAN boot.  |
| <b>Step 5</b> | UCS-A /org/boot-policy/lan # <b>create path</b> {primary   secondary} | Creates a primary or secondary LAN boot path and enters organization boot policy LAN path mode.                               |

|               | Command or Action   | Purpose   |
|---------------|---|---|
| <b>Step 6</b> | UCS-A /org/boot-policy/lan/path # <b>set vnic vnic-name</b> | Specifies the vNIC to use for the LAN path to the boot image. |
| <b>Step 7</b> | UCS-A /org/boot-policy/lan/path # <b>commit-buffer</b>      | Commits the transaction to the system configuration.          |

The following example enters the boot policy named lab2-boot-policy, creates a LAN boot for the policy, sets the boot order to 2, creates primary and secondary paths using the vNICs named vNIC1 and vNIC2, and commits the transaction:

```
UCS-A# scope org /
UCS-A /org* # scope boot-policy lab2-boot-policy
UCS-A /org/boot-policy* # create lan
UCS-A /org/boot-policy/lan* # set order 2
UCS-A /org/boot-policy/lan* # create path primary
UCS-A /org/boot-policy/lan/path* # set vnic vNIC1
UCS-A /org/boot-policy/lan/path* # exit
UCS-A /org/boot-policy/lan* # create path secondary
UCS-A /org/boot-policy/lan/path* # set vnic vNIC2
UCS-A /org/boot-policy/lan/path* # commit-buffer
UCS-A /org/boot-policy/lan/path #
```

### What to Do Next

Include the boot policy in a service profile and/or template.

## Configuring a Storage Boot for a Boot Policy

### Before You Begin

Create a boot policy to contain the storage boot configuration.

### Procedure

|               | Command or Action  | Purpose  |
|---------------|--|--|
| <b>Step 1</b> | UCS-A# <b>scope org org-name</b>   | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> .                    |
| <b>Step 2</b> | UCS-A /org # <b>scope boot-policy policy-name</b>  | Enters organization boot policy mode for the specified boot policy.  |
| <b>Step 3</b> | UCS-A /org/boot-policy # <b>create storage</b>   | Creates a storage boot for the boot policy and enters organization boot policy storage mode.   |
| <b>Step 4</b> | UCS-A /org/boot-policy/storage # <b>set order {1   2   3   4}</b>                        | Sets the boot order for the storage boot.  |
| <b>Step 5</b> | UCS-A /org/boot-policy/storage # <b>create {local   san-image {primary   secondary}}</b> | Creates a local or SAN image storage location, and if the san-image option is specified, enters organization boot policy storage SAN image mode. |

|               | Command or Action   | Purpose   |
|---------------|---|---|
| <b>Step 6</b> | UCS-A /org/boot-policy/storage/san-image<br># <b>set vhma</b> <i>vhba-name</i>  | Specifies the vHBA to be used for the storage boot.   |
| <b>Step 7</b> | UCS-A /org/boot-policy/storage/san-image<br># <b>create path</b> { <b>primary</b>   <b>secondary</b> }                    | Creates a primary or secondary storage boot path and enters organization boot policy LAN path mode. |
| <b>Step 8</b> | UCS-A<br>/org/boot-policy/storage/san-image/path #<br><b>set</b> { <b>lun</b> <i>lun-id</i>   <b>wwn</b> <i>wwn-num</i> } | Specifies the LUN or WWN to be used for the storage path to the boot image.                         |
| <b>Step 9</b> | UCS-A<br>/org/boot-policy/storage/san-image/path #<br><b>commit-buffer</b>  | Commits the transaction to the system configuration.  |

The following example enters the boot policy named lab1-boot-policy, creates a storage boot for the policy, sets the boot order to 1, creates a primary SAN image, uses a vHBA named vHBA2, creates primary path using LUN 967295200, and commits the transaction:

```
UCS-A# scope org /
UCS-A /org* # scope boot-policy lab1-boot-policy
UCS-A /org/boot-policy* # create storage
UCS-A /org/boot-policy/storage* # set order 1
UCS-A /org/boot-policy/storage* # create san-image primary
UCS-A /org/boot-policy/storage* # set vhma vHBA2
UCS-A /org/boot-policy/storage/san-image* # create path primary
UCS-A /org/boot-policy/storage/san-image/path* # set lun 967295200
UCS-A /org/boot-policy/storage/san-image/path* # commit-buffer
UCS-A /org/boot-policy/storage/san-image/path #
```

### What to Do Next

Include the boot policy in a service profile and/or template.

## Configuring a Virtual Media Boot for a Boot Policy

### Before You Begin

Create a boot policy to contain the virtual media boot configuration.

### Procedure

|               | Command or Action   | Purpose   |
|---------------|---|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>   | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>scope boot-policy</b><br><i>policy-name</i>   | Enters organization boot policy mode for the specified boot policy.   |
| <b>Step 3</b> | UCS-A /org/boot-policy # <b>create</b><br><b>virtual-media</b> { <b>read-only</b>   <b>read-write</b> } | Creates a virtual media boot for the boot policy, specifies whether the virtual media is has read-only                        |

|               | Command or Action  | Purpose   |
|---------------|--|---|
|               |  | or read-write privileges, and enters organization boot policy virtual media mode. |
| <b>Step 4</b> | UCS-A /org/boot-policy/virtual-media #<br><b>set order</b> {1   2   3   4} | Sets the boot order for the virtual-media boot.                                   |
| <b>Step 5</b> | UCS-A /org/boot-policy/virtual-media #<br><b>commit-buffer</b>             | Commits the transaction to the system configuration.                              |

The following example enters the boot policy named lab3-boot-policy, creates a virtual media boot with read-only privileges for the policy, sets the boot order to 3, and commits the transaction:

```
UCS-A# scope org /
UCS-A /org* # scope boot-policy lab3-boot-policy
UCS-A /org/boot-policy* # create virtual-media read-only
UCS-A /org/boot-policy/virtual-media* # set order 3
UCS-A /org/boot-policy/virtual-media* # commit-buffer
```

### What to Do Next

Include the boot policy in a service profile and/or template.

## Deleting a Boot Policy

### Procedure

|               | Command or Action  | Purpose   |
|---------------|--|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>                      | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>delete boot-policy</b><br><i>policy-name</i> | Deletes the specified boot policy.  |
| <b>Step 3</b> | UCS-A /org # <b>commit-buffer</b>                            | Commits the transaction to the system configuration.  |

The following example deletes the boot policy named boot-policy-LAN and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # delete boot-policy boot-policy-LAN
UCS-A /org* # commit-buffer
UCS-A /org #
```

## Configuring Chassis Discovery Policies

### Chassis Discovery Policy

This discovery policy determines how the system reacts when you add a new chassis. If you create a chassis discovery policy, Cisco UCS Manager configures the chassis for the number of links between the chassis and the fabric interconnect specified in the policy.

## Configuring the Chassis Discovery Policy

### Procedure

|               | Command or Action   | Purpose  |
|---------------|---|--|
| <b>Step 1</b> | UCS-A# <b>scope org /</b>   | Enters the root organization mode.<br><b>Note</b> The chassis discovery policy can only be accessed from the root organization.  |
| <b>Step 2</b> | UCS-A /org # <b>scope chassis-disc-policy</b>                                 | Enters organization chassis discovery policy mode.   |
| <b>Step 3</b> | UCS-A /org/chassis-disc-policy # <b>set action {1-link   2-link   4-link}</b> | Specifies the number of links to the fabric interconnect that the chassis must have before it can be discovered.   |
| <b>Step 4</b> | UCS-A /org/chassis-disc-policy # <b>set descr description</b>                 | (Optional)<br>Provides a description for the chassis discovery policy.<br><b>Note</b> If your description includes spaces, special characters, or punctuation, you must begin and end your description with quotation marks. The quotation marks will not appear in the description field of any <b>show</b> command output. |
| <b>Step 5</b> | UCS-A /org/chassis-disc-policy # <b>set qualifier qualifier</b>               | (Optional)<br>Uses the specified server pool policy qualifications to associates this policy with a server pool.   |
| <b>Step 6</b> | UCS-A /org/chassis-disc-policy # <b>commit-buffer</b>                         | Commits the transaction to the system configuration.   |

The following example scopes to the default chassis discovery policy, sets it to discover chassis with four links to a fabric interconnect, provides a description for the policy, and specifies the server pool policy qualifications that will be used to qualify the chassis, and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # scope chassis-disc-policy
UCS-A /org/chassis-disc-policy* # set action 4-link
UCS-A /org/chassis-disc-policy* # set descr "This is an example chassis discovery policy."
UCS-A /org/chassis-disc-policy* # set qualifier ExampleQual
UCS-A /org/chassis-disc-policy* # commit-buffer
UCS-A /org/chassis-disc-policy #
```

## Configuring IPMI Access Profiles

### IPMI Access Profile

This policy allows you to determine whether IPMI commands can be sent directly to the server, using the IP address. For example, you can send commands to retrieve sensor data from the BMC. This policy defines the IPMI access, including a username and password that can be authenticated locally on the server, and whether the access is read-only or read-write.

You must include this policy in a service profile and that service profile must be associated with a server for it to take effect.

## Configuring an IPMI Access Profile

### Before You Begin

- Username with appropriate permissions that can be authenticated by the operating system of the server
- Password for the username
- Permissions associated with the username

### Procedure

|               | Command or Action  | Purpose  |
|---------------|--|--|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>  | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> .  |
| <b>Step 2</b> | UCS-A /org # <b>create ipmi-access-profile</b> <i>profile-name</i>                 | Creates the specified IPMI access profile and enters organization IPMI access profile mode.  |
| <b>Step 3</b> | UCS-A /org/ipmi-access-profile # <b>create epuser</b> <i>epuser-name</i>           | Creates the specified endpoint user and enters organization IPMI access profile endpoint user mode.<br><br><b>Note</b> More than one endpoint user can be created within an IPMI access profile, with each endpoint user having its own password and privileges. |
| <b>Step 4</b> | UCS-A<br>/org/ipmi-access-profile/epuser # <b>set password</b>                     | Sets the password for the endpoint user.<br><br>After entering the <b>set password</b> command, you are prompted to enter and confirm the password. For security purposes, the password that you type does not appear in the CLI.                                |
| <b>Step 5</b> | UCS-A<br>/org/ipmi-access-profile/epuser # <b>set privilege {admin   readonly}</b> | Specifies whether the endpoint user has administrative or read-only privileges.  |
| <b>Step 6</b> | UCS-A<br>/org/ipmi-access-profile/epuser # <b>commit-buffer</b>                    | Commits the transaction to the system configuration.   |

The following example creates an IPMI access profile named ReadOnly, creates an endpoint user named bob, sets the password and the privileges for bob, and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # create ipmi-access-profile ReadOnly
UCS-A /org/ipmi-access-profile* # create epuser bob
UCS-A /org/ipmi-access-profile/epuser* # set password
Enter a password:
Confirm the password:
UCS-A /org/ipmi-access-profile/epuser* # set privilege readonly
```

```
UCS-A /org/ipmi-access-profile/epuser* # commit-buffer
UCS-A /org/ipmi-access-profile/epuser #
```

### What to Do Next

Include the IPMI profile in a service profile and/or template.

## Deleting an IPMI Access Profile

### Procedure

|               | Command or Action  | Purpose   |
|---------------|--|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>                            | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>delete ipmi-access-profile</b> <i>profile-name</i> | Deletes the specified IPMI access profile.  |
| <b>Step 3</b> | UCS-A /org # <b>commit-buffer</b>                                  | Commits the transaction to the system configuration.  |

The following example deletes the IPMI access profile named ReadOnly and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # delete ipmi-access-profile ReadOnly
UCS-A /org* # commit-buffer
UCS-A /org #
```

## Adding an Endpoint User to an IPMI Access Profile

### Procedure

|               | Command or Action  | Purpose  |
|---------------|--|--|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>                                  | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> .  |
| <b>Step 2</b> | UCS-A /org # <b>scope ipmi-access-profile</b> <i>profile-name</i>        | Enters organization IPMI access profile mode for the specified IPMI access profile.  |
| <b>Step 3</b> | UCS-A /org/ipmi-access-profile # <b>create epuser</b> <i>epuser-name</i> | Creates the specified endpoint user and enters organization IPMI access profile endpoint user mode.<br><b>Note</b> More than one endpoint user can be created within an IPMI access profile, with each endpoint user having its own password and privileges. |
| <b>Step 4</b> | UCS-A<br>/org/ipmi-access-profile/epuser # <b>set password</b>           | Sets the password for the endpoint user.<br>After entering the <b>set password</b> command, you are prompted to enter and confirm the password. For security   |

|               | Command or Action  | Purpose   |
|---------------|--|---|
|               |  | purposes, the password that you type does not appear in the CLI.                |
| <b>Step 5</b> | UCS-A<br>/org/ipmi-access-profile/epuser # <b>set privilege {admin   readonly}</b> | Specifies whether the endpoint user has administrative or read-only privileges. |
| <b>Step 6</b> | UCS-A<br>/org/ipmi-access-profile/epuser # <b>commit-buffer</b>                    | Commits the transaction to the system configuration.                            |

The following example adds an endpoint user named alice to the IPMI access profile named ReadOnly and commits the transaction:

```
UCS-A# scope org /
UCS-A /org* # scope ipmi-access-profile ReadOnly
UCS-A /org/ipmi-access-profile* # create epuser alice
UCS-A /org/ipmi-access-profile/epuser* # set password
Enter a password:
Confirm the password:
UCS-A /org/ipmi-access-profile/epuser* # set privilege readonly
UCS-A /org/ipmi-access-profile/epuser* # commit-buffer
UCS-A /org/ipmi-access-profile/epuser #
```

## Deleting an Endpoint User from an IPMI Access Profile

### Procedure

|               | Command or Action   | Purpose   |
|---------------|---|---|
| <b>Step 1</b> | UCS-A# <b>scope org org-name</b>                                  | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>scope ipmi-access-profile profile-name</b>        | Enters organization IPMI access profile mode for the specified IPMI access profile.   |
| <b>Step 3</b> | UCS-A /org/ipmi-access-profile # <b>delete epuser epuser-name</b> | Deletes the specified endpoint user from the IPMI access profile.   |
| <b>Step 4</b> | UCS-A /org/ipmi-access-profile # <b>commit-buffer</b>             | Commits the transaction to the system configuration.  |

The following example deletes the endpoint user named alice from the IPMI access profile named ReadOnly and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # scope ipmi-access-profile ReadOnly
UCS-A /org/ipmi-access-profile # delete epuser alice
UCS-A /org/ipmi-access-profile* # commit-buffer
UCS-A /org/ipmi-access-profile #
```

# Configuring Local Disk Configuration Policies

## Local Disk Configuration Policy

This policy configures any optional SAS local drives that have been installed on a server through the onboard RAID controller of the local drive. This policy enables you to set a local disk mode for all servers that are associated with a service profile that includes the local disk configuration policy. The local disk modes include the following:

- **Any Configuration**—For a server configuration that carries forward the local disk configuration without any changes.
- **No Local Storage**—For a diskless workstation or a SAN only configuration. If you select this option, you cannot associate any service profile which uses this policy with a server that has a local disk.
- **No RAID**—For a server configuration that removes the RAID and leaves the disk MBR and payload unaltered.
- **RAID Mirrored**—For a 2-disk RAID 1 server configuration.
- **RAID Stripes**—For a 2-disk RAID 0 server configuration.

You must include this policy in a service profile, and that service profile must be associated with a server for it to take effect.

## Configuring a Local Disk Configuration Policy

### Procedure

|               | Command or Action  | Purpose  |
|---------------|--|--|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>  | Enters organization mode for the specified organization. To enter the root organization mode, type <i>/</i> as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>create local-disk-config-policy</b> <i>policy-name</i>   | Creates a local disk configuration policy and enters local disk configuration policy mode.   |
| <b>Step 3</b> | UCS-A /org/local-disk-config-policy # <b>set descr</b> <i>description</i>  | (Optional)<br>Provides a description for the local disk configuration policy.  |
| <b>Step 4</b> | UCS-A /org/local-disk-config-policy # <b>set mode</b> { <b>any-configuration</b>   <b>no-local-storage</b>   <b>no-raid</b>   <b>raid-mirrored</b>   <b>raid-striped</b> } | Specifies the mode for the local disk configuration policy.  |
| <b>Step 5</b> | UCS-A /org/local-disk-config-policy # <b>commit-buffer</b>   | Commits the transaction to the system configuration.   |

The following example configures a local disk configuration policy and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # create local-disk-config-policy DiskPolicy7
UCS-A /org/local-disk-config-policy* # set mode raid-mirrored
UCS-A /org/local-disk-config-policy* # commit-buffer
UCS-A /org/local-disk-config-policy #
```

## Deleting a Local Disk Configuration Policy

### Procedure

|               | Command or Action  | Purpose   |
|---------------|--|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>                                | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>delete local-disk-config-policy</b> <i>policy-name</i> | Deletes the specified local disk configuration policy.  |
| <b>Step 3</b> | UCS-A /org # <b>commit-buffer</b>                                      | Commits the transaction to the system configuration.  |

The following example deletes the local disk configuration policy named DiskPolicy7 and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # delete local-disk-config-policy DiskPolicy7
UCS-A /org* # commit-buffer
UCS-A /org #
```

## Configuring Scrub Policies

### Scrub Policy

This policy determines what happens to local data on a server during the discovery process and when the server is disassociated from a service profile. This policy can ensure that the data on local drives is erased at those times.

### Configuring a Scrub Policy

#### Procedure

|               | Command or Action  | Purpose   |
|---------------|--|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>                    | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>create scrub-policy</b> <i>policy-name</i> | Creates a scrub policy with the specified policy name, and enters organization scrub policy mode.                             |

|               | Command or Action   | Purpose  |
|---------------|---|--|
| <b>Step 3</b> | UCS-A /org/scrub-policy # <b>set descr</b> <i>description</i> | (Optional)<br>Provides a description for the scrub policy.<br><br><b>Note</b> If your description includes spaces, special characters, or punctuation, you must begin and end your description with quotation marks. The quotation marks will not appear in the description field of any <b>show</b> command output. |
| <b>Step 4</b> | UCS-A /org/scrub-policy # <b>set disk-scrub</b> {no   yes}    | Disables or enables disk scrubbing on servers using this scrub policy.   |
| <b>Step 5</b> | UCS-A /org/scrub-policy # <b>commit-buffer</b>                | Commits the transaction to the system configuration.   |

The following example creates a scrub policy named ScrubPolicy2, enables disk scrubbing on servers using the scrub policy, and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # create scrub-policy ScrubPolicy2
UCS-A /org/scrub-policy* # set descr "Scrub policy set to yes."
UCS-A /org/scrub-policy* # set disk-scrub yes
UCS-A /org/scrub-policy* # commit-buffer
UCS-A /org/scrub-policy #
```

## Deleting a Scrub Policy

### Procedure

|               | Command or Action  | Purpose  |
|---------------|--|--|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>                    | Enters organization mode for the specified organization. To enter the root organization mode, type <i>/</i> as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>delete scrub-policy</b> <i>policy-name</i> | Deletes the specified scrub policy.  |
| <b>Step 3</b> | UCS-A /org # <b>commit-buffer</b>                          | Commits the transaction to the system configuration.   |

The following example deletes the scrub policy named ScrubPolicy2 and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # delete scrub-policy ScrubPolicy2
UCS-A /org* # commit-buffer
UCS-A /org #
```

# Configuring Serial over LAN Policies

## Serial over LAN Policy

This policy sets the configuration for the serial over LAN connection for all servers associated with service profiles that use the policy. By default, the serial over LAN connection is disabled.

If you implement a serial over LAN policy, we recommend that you also create an IPMI profile.

You must include this policy in a service profile and that service profile must be associated with a server for it to take effect.

## Configuring a Serial over LAN Policy

### Procedure

|               | Command or Action  | Purpose  |
|---------------|--|--|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>  | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> .  |
| <b>Step 2</b> | UCS-A /org # <b>create sol-policy</b> <i>policy-name</i>                         | Creates a serial over LAN policy and enters organization serial over LAN policy mode.  |
| <b>Step 3</b> | UCS-A /org/sol-policy # <b>set descr</b> <i>description</i>                      | (Optional)<br>Provides a description for the policy.<br><br><b>Note</b> If your description includes spaces, special characters, or punctuation, you must begin and end your description with quotation marks. The quotation marks will not appear in the description field of any <b>show</b> command output. |
| <b>Step 4</b> | UCS-A /org/sol-policy # <b>set speed</b> {115200   19200   38400   57600   9600} | Specifies the serial baud rate.  |
| <b>Step 5</b> | UCS-A /org/sol-policy # { <b>disable</b>   <b>enable</b> }                       | Disables or enables the serial over LAN policy. By default, the serial over LAN policy is disabled; you must enable it before it can be applied.   |
| <b>Step 6</b> | UCS-A /org/sol-policy # <b>commit-buffer</b>                                     | Commits the transaction to the system configuration.   |

The following example creates a serial over LAN policy named Sol9600, provides a description for the policy, sets the speed to 9,600 baud, enables the policy, and commits the transaction:

```
UCS-A# scope org /
UCS-A /org* # create sol-policy Sol9600
UCS-A /org/sol-policy* # set descr "Sets serial over LAN policy to 9600 baud."
UCS-A /org/sol-policy* # set speed 9600
UCS-A /org/sol-policy* # enable
```

```
UCS-A /org/sol-policy* # commit-buffer
UCS-A /org/sol-policy #
```

## Deleting a Serial over LAN Policy

### Procedure

|               | Command or Action  | Purpose   |
|---------------|--|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>                  | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>delete sol-policy</b> <i>policy-name</i> | Deletes the specified serial over LAN policy.   |
| <b>Step 3</b> | UCS-A /org # <b>commit-buffer</b>                        | Commits the transaction to the system configuration.  |

The following example deletes the serial over LAN policy named Sol9600 and commits the transaction:

```
UCS-A# scope org /
UCS-A /org* # delete sol-policy Sol9600
UCS-A /org* # commit-buffer
UCS-A /org #
```

## Configuring Server Autoconfiguration Policies

### Server Autoconfiguration Policy

Cisco UCS Manager uses this policy to determine how to configure a new server. If you create a server autoconfiguration policy, the following occurs when a new server starts:

- 1 The qualification in the server autoconfiguration policy is executed against the server.
- 2 If the server meets the required qualifications, the server is associated with a service profile created from the service profile template configured in the server autoconfiguration policy. The name of that service profile is based on the name given to the server by Cisco UCS Manager.
- 3 The service profile is assigned to the organization configured in the server autoconfiguration policy.

### Configuring a Server Autoconfiguration Policy

#### Procedure

|               | Command or Action                       | Purpose   |
|---------------|---|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i> | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |

|               | Command or Action  | Purpose  |
|---------------|--|--|
| <b>Step 2</b> | UCS-A /org # <b>create server-autoconfig-policy</b> <i>policy-name</i>             | Creates a server autoconfiguration policy with the specified policy name, and enters organization server autoconfiguration policy mode.  |
| <b>Step 3</b> | UCS-A /org/server-autoconfig-policy # <b>set descr</b> <i>description</i>          | (Optional)<br>Provides a description for the policy.<br><br><b>Note</b> If your description includes spaces, special characters, or punctuation, you must begin and end your description with quotation marks. The quotation marks will not appear in the description field of any <b>show</b> command output. |
| <b>Step 4</b> | UCS-A /org/server-autoconfig-policy # <b>set destination org</b> <i>org-name</i>   | (Optional)<br>Specifies the organization for which the server is to be used.   |
| <b>Step 5</b> | UCS-A /org/server-autoconfig-policy # <b>set qualifier</b> <i>server-qual-name</i> | (Optional)<br>Specifies server pool policy qualification to use for qualifying the server.   |
| <b>Step 6</b> | UCS-A /org/server-autoconfig-policy # <b>set template</b> <i>profile-name</i>      | (Optional)<br>Specifies a service profile template to use for creating a service profile instance for the server.  |
| <b>Step 7</b> | UCS-A /org/server-autoconfig-policy # <b>commit-buffer</b>                         | Commits the transaction to the system configuration.   |

The following example creates a server autoconfiguration policy named AutoConfigFinance, provides a description for the policy, specifies finance as the destination organization, ServPoolQual22 as the server pool policy qualification, and ServTemp2 as the service profile template, and commits the transaction:

```
UCS-A# scope org /
UCS-A /org* # create server-autoconfig-policy AutoConfigFinance
UCS-A /org/server-autoconfig-policy* # set descr "Server Autoconfiguration Policy for Finance"
UCS-A /org/server-autoconfig-policy* # set destination org finance
UCS-A /org/server-autoconfig-policy* # set qualifier ServPoolQual22
UCS-A /org/server-autoconfig-policy* # set template ServTemp2
UCS-A /org/server-autoconfig-policy* # commit-buffer
UCS-A /org/server-autoconfig-policy #
```

## Deleting a Server Autoconfiguration Policy

### Procedure

|               | Command or Action                       | Purpose   |
|---------------|---|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i> | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |

|               | Command or Action  | Purpose  |
|---------------|--|--|
| <b>Step 2</b> | UCS-A /org # <b>delete</b><br><b>server-autoconfig-policy</b> <i>policy-name</i> | Deletes the specified server autoconfiguration policy. |
| <b>Step 3</b> | UCS-A /org # <b>commit-buffer</b>  | Commits the transaction to the system configuration.   |

The following example deletes the server autoconfiguration policy named AutoConfigFinance and commits the transaction:

```
UCS-A# scope org /
UCS-A /org* # delete server-autoconfig-policy AutoConfigFinance
UCS-A /org* # commit-buffer
UCS-A /org #
```

## Configuring Server Discovery Policies

### Server Discovery Policy

This discovery policy determines how the system reacts when you add a new server. If you create a server discovery policy, you can control whether the system conducts a deep discovery when a server is added to a chassis, or whether a user must first acknowledge the new server. By default, the system conducts a full discovery.

If you create a server discovery policy, the following occurs when a new server starts:

- 1 The qualification in the server discovery policy is executed against the server.
- 2 If the server meets the required qualifications, Cisco UCS Manager applies the following to the server:
  - Depending upon the option selected for the action, either discovers the new server immediately or waits for a user to acknowledge the new server
  - Applies the scrub policy to the server

## Configuring a Server Discovery Policy

### Before You Begin

If you plan to associate this policy with a server pool, create server pool policy qualifications.

### Procedure

|               | Command or Action         | Purpose   |
|---------------|---------------------------|---|
| <b>Step 1</b> | UCS-A# <b>scope</b> org / | Enters the root organization mode.<br><br><b>Note</b> Chassis discovery policies can only be accessed from the root organization. |

|               | Command or Action   | Purpose   |
|---------------|---|---|
| <b>Step 2</b> | UCS-A /org # <b>create server-disc-policy</b> <i>policy-name</i>  | Creates a server discovery policy with the specified policy name, and enters org server discovery policy mode.  |
| <b>Step 3</b> | UCS-A /org/server-disc-policy # <b>set action</b> { <b>diag</b>   <b>immediate</b>   <b>user-acknowledged</b> } | Specifies when the system will attempt to discover new servers.   |
| <b>Step 4</b> | UCS-A /org/chassis-disc-policy # <b>set descr</b> <i>description</i>  | (Optional)<br>Provides a description for the server discovery policy.<br><br><b>Note</b> If your description includes spaces, special characters, or punctuation, you must begin and end your description with quotation marks. The quotation marks will not appear in the description field of any <b>show</b> command output. |
| <b>Step 5</b> | UCS-A /org/server-disc-policy # <b>set qualifier</b> <i>qualifier</i>   | (Optional)<br>Uses the specified server pool policy qualifications to associates this policy with a server pool.  |
| <b>Step 6</b> | UCS-A /org/server-disc-policy # <b>set scrub-policy</b>   | Specifies the scrub policy to be used by this policy. The scrub policy defines whether the disk drive on a server should be scrubbed clean upon discovery.  |
| <b>Step 7</b> | UCS-A /org/server-disc-policy # <b>commit-buffer</b>  | Commits the transaction to the system configuration.  |

The following example creates a server discovery policy named ServDiscPolExample, sets it to immediately discover new servers, provides a description for the policy, specifies the server pool policy qualifications and scrub policy, and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # create server-disc-policy ServDiscPolExample
UCS-A /org/server-disc-policy* # set action immediate
UCS-A /org/server-disc-policy* # set descr "This is an example server discovery policy."
UCS-A /org/server-disc-policy* # set qualifier ExampleQual
UCS-A /org/server-disc-policy* # set scrub-policy NoScrub
UCS-A /org/server-disc-policy # commit-buffer
```

### What to Do Next

Include the server discovery policy in a service profile and/or template.

## Deleting a Server Discovery Policy

### Procedure

|               | Command or Action                       | Purpose   |
|---------------|---|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i> | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |

|               | Command or Action   | Purpose  |
|---------------|---|--|
| <b>Step 2</b> | UCS-A /org # <b>Delete server-disc-policy</b><br><i>policy-name</i> | Deletes the specified server discovery policy.       |
| <b>Step 3</b> | UCS-A /org/server-disc-policy #<br><b>commit-buffer</b>             | Commits the transaction to the system configuration. |

The following example deletes the server discovery policy named ServDiscPolExample and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # delete server-disc-policy ServDiscPolExample
UCS-A /org* # commit-buffer
UCS-A /org #
```

## Configuring Server Inheritance Policies

### Server Inheritance Policy

This policy is invoked during the server discovery process to create a service profile for the server. All service profiles created from this policy use the values burned into the blade at manufacture. The policy performs the following:

- Analyzes the inventory of the server
- If configured, assigns the server to the selected organization
- Creates a service profile for the server with the identity burned into the server at manufacture

You cannot migrate a service profile created with this policy to another server.

### Configuring a Server Inheritance Policy

#### Procedure

|               | Command or Action   | Purpose   |
|---------------|---|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>                                   | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>create server-inherit-policy</b> <i>policy-name</i>       | Creates a server inheritance policy with the specified policy name, and enters organization server inheritance policy mode.   |
| <b>Step 3</b> | UCS-A /org/server-inherit-policy #<br><b>set descr</b> <i>description</i> | (Optional)<br>Provides a description for the policy.  |

|               | Command or Action  | Purpose  |
|---------------|--|--|
|               |  | <b>Note</b> If your description includes spaces, special characters, or punctuation, you must begin and end your description with quotation marks. The quotation marks will not appear in the description field of any <b>show</b> command output. |
| <b>Step 4</b> | UCS-A /org/server-inherit-policy #<br><b>set destination org</b> <i>org-name</i>   | (Optional)<br>Specifies the organization for which the server is to be used.   |
| <b>Step 5</b> | UCS-A /org/server-inherit-policy #<br><b>set qualifier</b> <i>server-qual-name</i> | (Optional)<br>Specifies server pool policy qualification to use for qualifying the server.   |
| <b>Step 6</b> | UCS-A /org/server-inherit-policy #<br><b>commit-buffer</b>                         | Commits the transaction to the system configuration.   |

The following example creates a server inheritance policy named InheritEngineering, provides a description for the policy, specifies engineering as the destination organization and ServPoolQual22 as the server pool policy qualification, and commits the transaction:

```
UCS-A# scope org /
UCS-A /org* # create server-inherit-policy InheritEngineering
UCS-A /org/server-inherit-policy* # set descr "Server Inheritance Policy for Engineering"
UCS-A /org/server-inherit-policy* # set destination org engineering
UCS-A /org/server-inherit-policy* # set qualifier ServPoolQual22
UCS-A /org/server-inherit-policy* # commit-buffer
UCS-A /org/server-inherit-policy #
```

## Deleting a Server Inheritance Policy

### Procedure

|               | Command or Action   | Purpose   |
|---------------|---|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>                             | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>delete server-inherit-policy</b> <i>policy-name</i> | Deletes the specified server inheritance policy.  |
| <b>Step 3</b> | UCS-A /org # <b>commit-buffer</b>                                   | Commits the transaction to the system configuration.  |

The following example deletes the server inheritance policy named InheritEngineering and commits the transaction:

```
UCS-A# scope org /
UCS-A /org* # delete server-inherit-policy InheritEngineering
UCS-A /org* # commit-buffer
UCS-A /org #
```

# Configuring Server Pool Policies

## Server Pool Policy

This policy is invoked during the server discovery process. It determines what happens if server pool policy qualifications match a server to the target pool specified in the policy.

If a server qualifies for more than one pool and those pools have server pool policies, the server is added to all those pools.

## Configuring a Server Pool Policy

### Procedure

|               | Command or Action  | Purpose  |
|---------------|--|--|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>                                    | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> .  |
| <b>Step 2</b> | UCS-A /org # <b>create pooling-policy</b> <i>policy-name</i>               | Creates a server pool policy with the specified name, and enters organization pooling policy mode.   |
| <b>Step 3</b> | UCS-A /org/pooling-policy # <b>set descr</b> <i>description</i>            | (Optional)<br>Provides a description for the server pool policy.<br><b>Note</b> If your description includes spaces, special characters, or punctuation, you must begin and end your description with quotation marks. The quotation marks will not appear in the description field of any <b>show</b> command output. |
| <b>Step 4</b> | UCS-A /org/pooling-policy # <b>set pool</b> <i>pool-distinguished-name</i> | Specifies the server pool to use with the server pool policy. You must specify the full distinguished name for the pool.   |
| <b>Step 5</b> | UCS-A /org/pooling-policy # <b>set qualifier</b> <i>qualifier-name</i>     | Specifies the server pool qualifier to use with the server pool policy.  |
| <b>Step 6</b> | UCS-A /org/pooling-policy # <b>commit-buffer</b>                           | Commits the transaction to the system configuration.   |

The following example creates a server pool policy named PoolPolicy4 and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # create pooling-policy ServerPoolPolicy4
UCS-A /org/pooling-policy* # set pool org-root/compute-pool-pool3
UCS-A /org/pooling-policy* # set qualifier ServPoolQual8
UCS-A /org/pooling-policy* # commit-buffer
UCS-A /org/pooling-policy #
```

## Deleting a Server Pool Policy

### Procedure

|               | Command or Action  | Purpose   |
|---------------|--|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>                      | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>delete pooling-policy</b> <i>policy-name</i> | Deletes the specified server pool policy.   |
| <b>Step 3</b> | UCS-A /org # <b>commit-buffer</b>                            | Commits the transaction to the system configuration.  |

The following example deletes the server pool policy named PoolPolicy4 and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # delete pooling-policy ServerPoolPolicy4
UCS-A /org/pooling-policy* # commit-buffer
UCS-A /org/pooling-policy #
```

## Configuring Server Pool Policy Qualifications

### Server Pool Policy Qualifications

This policy qualifies servers based on the inventory of a server conducted during the discovery process. The qualifications are individual rules that you configure in the policy to determine whether a server meets the selection criteria. For example, you can create a rule that specifies the minimum memory capacity for servers in a data center pool.

Qualifications are used in other policies to place servers, not just by the server pool policies. For example, if a server meets the criteria in a qualification policy, it can be added to one or more server pools or have a service profile automatically associated with it.

Depending upon the implementation, you may include server pool policy qualifications in the following policies:

- Autoconfiguration policy
- Chassis discovery policy
- Server discovery policy
- Server inheritance policy
- Server pool policy

## Creating a Server Pool Policy Qualification

### Procedure

|               | Command or Action  | Purpose   |
|---------------|--|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>                        | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>create server-qual</b> <i>server-qual-name</i> | Creates a server pool qualification with the specified name, and enters organization server qualification mode.               |
| <b>Step 3</b> | UCS-A /org/server-qual # <b>commit-buffer</b>                  | Commits the transaction to the system configuration.  |

The following example creates a server pool qualification named ServPoolQual22 and commits the transaction:

```
UCS-A# scope org /
UCS-A /org* # create server-qual ServPoolQual22
UCS-A /org/server-qual* # commit-buffer
UCS-A /org/server-qual #
```

### What to Do Next

Configure one or more of the following server component qualifications:

- Adapter qualification
- Chassis qualification
- Memory qualification
- Processor qualification
- Storage qualification

## Deleting a Server Pool Policy Qualification

### Procedure

|               | Command or Action  | Purpose   |
|---------------|--|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>                        | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>delete server-qual</b> <i>server-qual-name</i> | Deletes the specified server pool qualification.  |
| <b>Step 3</b> | UCS-A /org/server-qual # <b>commit-buffer</b>                  | Commits the transaction to the system configuration.  |

The following example deletes the server pool qualification named ServPoolQual22 and commits the transaction:

```
UCS-A# scope org /
UCS-A /org* # delete server-qual ServPoolQual22
UCS-A /org* # commit-buffer
UCS-A /org #
```

## Configuring an Adapter Qualification

### Before You Begin

Create a server pool policy qualification.

### Procedure

|               | Command or Action   | Purpose  |
|---------------|---|--|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>                                     | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> .  |
| <b>Step 2</b> | UCS-A /org # <b>scope server-qual</b> <i>server-qual-name</i>               | Enters organization server qualification mode for the specified server pool policy qualification.  |
| <b>Step 3</b> | UCS-A /org/server-qual # <b>create adapter</b>                              | Creates an adapter qualification and enters organization server qualification adapter mode.  |
| <b>Step 4</b> | UCS-A /org/server-qual/adapter # <b>create cap-qual</b> <i>adapter-type</i> | Creates an adapter capacity qualification for the specified adapter type and enters organization server qualification adapter capacity qualification mode. The <i>adapter-type</i> argument can be any of the following values: <ul style="list-style-type: none"> <li>• fcoe—Fibre Channel over Ethernet</li> <li>• non-virtualized-eth-if—Non-virtualized Ethernet interface</li> <li>• non-virtualized-fc-if—Non-virtualized Fibre Channel interface</li> <li>• path-encap-consolidated—Path encapsulation consolidated</li> <li>• path-encap-virtual—Path encapsulation virtual</li> <li>• protected-eth-if—Protected Ethernet interface</li> <li>• protected-fc-if—Protected Fibre Channel interface</li> <li>• protected-fcoe—Protected Fibre Channel over Ethernet</li> <li>• virtualized-eth-if—Virtualized Ethernet interface</li> <li>• virtualized-fc-if—Virtualized Fibre Channel interface</li> <li>• virtualized-scsi-if—Virtualized SCSI interface</li> </ul> |
| <b>Step 5</b> | UCS-A<br>/org/server-qual/adapter/cap-qual                                  | Specifies the maximum capacity for the selected adapter type.  |

|               | Command or Action   | Purpose  |
|---------------|---|--|
|               | # set maximum { <i>max-cap</i>   unspecified}                 |  |
| <b>Step 6</b> | UCS-A<br>/org/server-qual/adapter/cap-qual<br># commit-buffer | Commits the transaction to the system configuration. |

The following example configures an adapter qualification for a non-virtualized Ethernet interface and commits the transaction:

```
UCS-A# scope org /
UCS-A /org* # scope server-qual ServPoolQual22
UCS-A /org/server-qual* # create adapter
UCS-A /org/server-qual/adapter* # create cap-qual non-virtualized-eth-if
UCS-A /org/server-qual/adapter/cap-qual* # set maximum 2500000000
UCS-A /org/server-qual/adapter/cap-qual* # commit-buffer
UCS-A /org/server-qual/adapter/cap-qual #
```

## Deleting an Adapter Qualification

### Procedure

|               | Command or Action                                      | Purpose   |
|---------------|--|---|
| <b>Step 1</b> | UCS-A# scope org <i>org-name</i>                       | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # scope server-qual <i>server-qual-name</i> | Enters organization server qualification mode for the specified server pool policy qualification.                             |
| <b>Step 3</b> | UCS-A /org/server-qual # delete adapter                | Deletes the adapter qualification from the server pool policy qualification.  |
| <b>Step 4</b> | UCS-A /org/server-qual # commit-buffer                 | Commits the transaction to the system configuration.  |

The following example deletes the adapter qualification from the server pool policy qualification named ServPoolQual22 and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # scope server-qual ServPoolQual22
UCS-A /org/server-qual # delete adapter
UCS-A /org/server-qual* # commit-buffer
UCS-A /org/server-qual #
```

## Configuring a Chassis Qualification

### Before You Begin

Create a server pool policy qualification.

**Procedure**

|               | <b>Command or Action</b>  | <b>Purpose</b>  |
|---------------|---|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>   | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> .     |
| <b>Step 2</b> | UCS-A /org # <b>scope server-qual</b> <i>server-qual-name</i>                         | Enters organization server qualification mode for the specified server pool policy qualification.                                 |
| <b>Step 3</b> | UCS-A /org/server-qual # <b>create chassis</b> <i>min-chassis-num max-chassis-num</i> | Creates a chassis qualification for the specified chassis range and enters organization server qualification chassis mode.        |
| <b>Step 4</b> | UCS-A /org/server-qual/chassis # <b>create slot</b> <i>min-slot-num max-slot-num</i>  | Creates a chassis slot qualification for the specified slot range and enters organization server qualification chassis slot mode. |
| <b>Step 5</b> | UCS-A /org/server-qual/chassis/slot # <b>commit-buffer</b>                            | Commits the transaction to the system configuration.  |

The following example configures a chassis qualification for slots 1 to 4 on chassis 1 and 2 and commits the transaction:

```
UCS-A# scope org /
UCS-A /org* # scope server-qual ServPoolQual22
UCS-A /org/server-qual* # create chassis 1 2
UCS-A /org/server-qual/chassis* # create slot 1 4
UCS-A /org/server-qual/chassis/slot* # commit-buffer
UCS-A /org/server-qual/chassis/slot #
```

## Deleting a Chassis Qualification

**Procedure**

|               | <b>Command or Action</b>  | <b>Purpose</b>  |
|---------------|---|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>   | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>scope server-qual</b> <i>server-qual-name</i>                         | Enters organization server qualification mode for the specified server pool policy qualification.                             |
| <b>Step 3</b> | UCS-A /org/server-qual # <b>delete chassis</b> <i>min-chassis-num max-chassis-num</i> | Deletes the chassis qualification for the specified chassis range.  |
| <b>Step 4</b> | UCS-A /org/server-qual # <b>commit-buffer</b>   | Commits the transaction to the system configuration.  |

The following example deletes the chassis qualification for chassis 1 and 2 and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # scope server-qual ServPoolQual22
UCS-A /org/server-qual # delete chassis 1 2
```

```
UCS-A /org/server-qual* # commit-buffer
UCS-A /org/server-qual #
```

## Configuring a Memory Qualification

### Before You Begin

Create a server pool policy qualification.

### Procedure

|                | Command or Action   | Purpose   |
|----------------|---|---|
| <b>Step 1</b>  | UCS-A# <b>scope org</b> <i>org-name</i>   | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b>  | UCS-A /org # <b>scope server-qual</b> <i>server-qual-name</i>                   | Enters organization server qualification mode for the specified server pool policy qualification.                             |
| <b>Step 3</b>  | UCS-A /org/server-qual # <b>create memory</b>                                   | Creates a memory qualification and enters organization server qualification memory mode.                                      |
| <b>Step 4</b>  | UCS-A /org/server-qual/memory # <b>set clock</b> <i>{clock-num   unspec}</i>    | Specifies the memory clock speed.   |
| <b>Step 5</b>  | UCS-A /org/server-qual/memory # <b>set maxcap</b> <i>{max-cap-num   unspec}</i> | Specifies the maximum capacity of the memory array.   |
| <b>Step 6</b>  | UCS-A /org/server-qual/memory # <b>set mincap</b> <i>{min-cap-num   unspec}</i> | Specifies the minimum capacity of the memory array.   |
| <b>Step 7</b>  | UCS-A /org/server-qual/memory # <b>set speed</b> <i>{speed-num   unspec}</i>    | Specifies the memory data rate.   |
| <b>Step 8</b>  | UCS-A /org/server-qual/memory # <b>set units</b> <i>{unit-num   unspec}</i>     | Specifies the number of memory units (DRAM chips mounted to the PCB).   |
| <b>Step 9</b>  | UCS-A /org/server-qual/memory # <b>set width</b> <i>{width-num   unspec}</i>    | Specifies the bit width of the data bus.  |
| <b>Step 10</b> | UCS-A /org/server-qual/memory # <b>commit-buffer</b>                            | Commits the transaction to the system configuration.  |

The following example configures a memory qualification and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # scope server-qual ServPoolQual22
UCS-A /org/server-qual # create memory
UCS-A /org/server-qual/memory* # set clock 1067
UCS-A /org/server-qual/memory* # set maxcap 4096
UCS-A /org/server-qual/memory* # set mincap 2048
UCS-A /org/server-qual/memory* # set speed unspec
UCS-A /org/server-qual/memory* # set units 16
UCS-A /org/server-qual/memory* # set width 64
UCS-A /org/server-qual/memory* # commit-buffer
UCS-A /org/server-qual/memory #
```

## Deleting a Memory Qualification

### Procedure

|               | Command or Action   | Purpose   |
|---------------|---|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>                       | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>scope server-qual</b> <i>server-qual-name</i> | Enters organization server qualification mode for the specified server pool policy qualification.                             |
| <b>Step 3</b> | UCS-A /org/server-qual # <b>delete memory</b>                 | Deletes the memory qualification.   |
| <b>Step 4</b> | UCS-A /org/server-qual # <b>commit-buffer</b>                 | Commits the transaction to the system configuration.  |

The following example deletes the memory qualification and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # scope server-qual ServPoolQual22
UCS-A /org/server-qual # delete memory
UCS-A /org/server-qual* # commit-buffer
UCS-A /org/server-qual #
```

## Configuring a Processor Qualification

### Before You Begin

Create a server pool policy qualification.

### Procedure

|               | Command or Action  | Purpose   |
|---------------|--|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>  | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>scope server-qual</b> <i>server-qual-name</i>  | Enters organization server qualification mode for the specified server pool policy qualification.                             |
| <b>Step 3</b> | UCS-A /org/server-qual # <b>create processor</b>   | Creates a processor qualification and enters organization server qualification processor mode.                                |
| <b>Step 4</b> | UCS-A /org/server-qual/processor # <b>set arch</b> { <b>any</b>   <b>dual-core-opteron</b>   <b>intel-p4-c</b>   <b>opteron</b>   <b>pentium-4</b>   <b>turion-64</b>   <b>xeon</b>   <b>xeon-mp</b> } | Specifies the processor architecture type.  |

|                | Command or Action   | Purpose  |
|----------------|---|--|
| <b>Step 5</b>  | UCS-A /org/server-qual/processor # <b>set maxcores</b> { <i>max-core-num</i>   <b>unspecified</b> }     | Specifies the maximum number of processor cores.     |
| <b>Step 6</b>  | UCS-A /org/server-qual/processor # <b>set mincores</b> { <i>min-core-num</i>   <b>unspecified</b> }     | Specifies the minimum number of processor cores.     |
| <b>Step 7</b>  | UCS-A /org/server-qual/processor # <b>set maxprocs</b> { <i>max-proc-num</i>   <b>unspecified</b> }     | Specifies the maximum number of processors.          |
| <b>Step 8</b>  | UCS-A /org/server-qual/processor # <b>set minprocs</b> { <i>min-proc-num</i>   <b>unspecified</b> }     | Specifies the minimum number of processors.          |
| <b>Step 9</b>  | UCS-A /org/server-qual/processor # <b>set maxthreads</b> { <i>max-thread-num</i>   <b>unspecified</b> } | Specifies the maximum number of threads.             |
| <b>Step 10</b> | UCS-A /org/server-qual/processor # <b>set minthreads</b> { <i>min-thread-num</i>   <b>unspecified</b> } | Specifies the minimum number of threads.             |
| <b>Step 11</b> | UCS-A /org/server-qual/processor # <b>set stepping</b> { <i>step-num</i>   <b>unspecified</b> }         | Specifies the processor stepping number.             |
| <b>Step 12</b> | UCS-A /org/server-qual/processor # <b>commit-buffer</b>   | Commits the transaction to the system configuration. |

The following example configures a processor qualification and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # scope server-qual ServPoolQual22
UCS-A /org/server-qual # create processor
UCS-A /org/server-qual/processor* # set arch xeon
UCS-A /org/server-qual/processor* # set maxcores 8
UCS-A /org/server-qual/processor* # set mincores 4
UCS-A /org/server-qual/processor* # set maxprocs 2
UCS-A /org/server-qual/processor* # set minprocs 1
UCS-A /org/server-qual/processor* # set maxthreads 16
UCS-A /org/server-qual/processor* # set minthreads 8
UCS-A /org/server-qual/processor* # set stepping 5
UCS-A /org/server-qual/processor* # commit-buffer
UCS-A /org/server-qual/processor #
```

## Deleting a Processor Qualification

### Procedure

|               | Command or Action   | Purpose   |
|---------------|---|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>                       | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>scope server-qual</b> <i>server-qual-name</i> | Enters organization server qualification mode for the specified server pool policy qualification.                             |

|               | Command or Action                                | Purpose  |
|---------------|--|--|
| <b>Step 3</b> | UCS-A /org/server-qual # <b>delete processor</b> | Deletes the processor qualification.                 |
| <b>Step 4</b> | UCS-A /org/server-qual # <b>commit-buffer</b>    | Commits the transaction to the system configuration. |

The following example deletes the processor qualification and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # scope server-qual ServPoolQual122
UCS-A /org/server-qual # delete processor
UCS-A /org/server-qual* # commit-buffer
UCS-A /org/server-qual #
```

## Configuring a Storage Qualification

### Before You Begin

Create a server pool policy qualification.

### Procedure

|               | Command or Action   | Purpose   |
|---------------|---|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>   | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>scope server-qual</b> <i>server-qual-name</i>                               | Enters organization server qualification mode for the specified server pool policy qualification.                             |
| <b>Step 3</b> | UCS-A /org/server-qual # <b>create storage</b>  | Creates a storage qualification and enters organization server qualification storage mode.                                    |
| <b>Step 4</b> | UCS-A /org/server-qual/storage # <b>set blocksize</b> <i>{block-size-num   unspecified}</i> | Specifies the storage block size.   |
| <b>Step 5</b> | UCS-A /org/server-qual/storage # <b>set maxcap</b> <i>{max-cap-num   unspecified}</i>       | Specifies the maximum capacity of the storage array.  |
| <b>Step 6</b> | UCS-A /org/server-qual/storage # <b>set mincap</b> <i>{min-cap-num   unspecified}</i>       | Specifies the minimum capacity of the storage array.  |
| <b>Step 7</b> | UCS-A /org/server-qual/storage # <b>set numberofblocks</b> <i>{block-num   unspecified}</i> | Specifies the number of blocks.   |
| <b>Step 8</b> | UCS-A /org/server-qual/storage # <b>set perdiskcap</b> <i>{disk-cap-num   unspecified}</i>  | Specifies the per-disk capacity.  |
| <b>Step 9</b> | UCS-A /org/server-qual/storage # <b>set units</b> <i>{unit-num   unspecified}</i>           | Specifies the number of storage units.  |

|                | Command or Action  | Purpose  |
|----------------|--|--|
| <b>Step 10</b> | UCS-A /org/server-qual/storage #<br><b>commit-buffer</b> | Commits the transaction to the system configuration. |

The following example configures a storage qualification and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # scope server-qual ServPoolQual122
UCS-A /org/server-qual # create storage
UCS-A /org/server-qual/storage* # set blocksize 512
UCS-A /org/server-qual/storage* # set maxcap 420000
UCS-A /org/server-qual/storage* # set mincap 140000
UCS-A /org/server-qual/storage* # set numberofblocks 287277984
UCS-A /org/server-qual/storage* # set perdiskcap 140000
UCS-A /org/server-qual/storage* # set units 1
UCS-A /org/server-qual/storage* # commit-buffer
UCS-A /org/server-qual/storage #
```

## Deleting a Storage Qualification

### Procedure

|               | Command or Action                                      | Purpose   |
|---------------|--|---|
| <b>Step 1</b> | UCS-A# <b>scope org org-name</b>                       | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>scope server-qual server-qual-name</b> | Enters organization server qualification mode for the specified server pool policy qualification.                             |
| <b>Step 3</b> | UCS-A /org/server-qual # <b>delete storage</b>         | Deletes the storage qualification.  |
| <b>Step 4</b> | UCS-A /org/server-qual/ #<br><b>commit-buffer</b>      | Commits the transaction to the system configuration.  |

The following example deletes the storage qualification and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # scope server-qual ServPoolQual122
UCS-A /org/server-qual # delete storage
UCS-A /org/server-qual* # commit-buffer
UCS-A /org/server-qual #
```

## Configuring vNIC/vHBA Placement Profiles

### vNIC/vHBA Placement Profiles

vNIC/vHBA placement profiles are used to assign vNICs or vHBAs to the physical adapters on a server. Each vNIC/vHBA placement profile contains two virtual network interface connections (vCons) that are virtual representations of the physical adapters. When a vNIC/vHBA placement profile is assigned to a service profile,

and the service profile is associated to a server, the vCons in the vNIC/vHBA placement profile are assigned to the physical adapters. For servers with only one adapter, both vCons are assigned to the adapter; for servers with two adapters, one vCon is assigned to each adapter.

You can assign vNICs or vHBAs to either of the two vCons, and they are then assigned to the physical adapters based on the vCon assignment during server association. Additionally, vCons use the following selection preference criteria to assign vHBAs and vNICs:

|                           |   |
|---------------------------|---|
| <b>All</b>                | The vCon is used for vNICs or vHBAs assigned to it, vNICs or vHBAs not assigned to either vCon, and dynamic vNICs or vHBAs. |
| <b>Assigned-Only</b>      | The vCon is reserved for only vNICs or vHBAs assigned to it.  |
| <b>Exclude-Dynamic</b>    | The vCon is not used for dynamic vNICs or vHBAs.  |
| <b>Exclude-Unassigned</b> | The vCon is not used for vNICs or vHBAs not assigned to the vCon. The vCon is used for dynamic vNICs and vHBAs.             |

For servers with two adapters, if you do not include a vNIC/vHBA placement profile in a service profile, or you do not configure vCons for a service profile, Cisco UCS equally distributes the vNICs and vHBAs between the two adapters.

## Configuring a vNIC/vHBA Placement Profile

### Procedure

|               | Command or Action  | Purpose   |
|---------------|--|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>  | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> .   |
| <b>Step 2</b> | UCS-A /org # <b>create vcon-policy</b> <i>policy-name</i>  | Creates the specified vNIC/vHBA placement profile and enters organization vcon policy mode.   |
| <b>Step 3</b> | UCS-A /org/vcon-policy # <b>set descr</b> <i>description</i>   | (Optional)<br>Provides a description for the vNIC/vHBA Placement Profile.<br><br><b>Note</b> If your description includes spaces, special characters, or punctuation, you must begin and end your description with quotation marks. The quotation marks will not appear in the description field of any <b>show</b> command output. |
| <b>Step 4</b> | UCS-A /org/vcon-policy # <b>set vcon</b> {1   2} <b>selection</b> {all   assigned-only   exclude-dynamic   exclude-unassigned} | Specifies the selection preference for the specified vCon.  |
| <b>Step 5</b> | UCS-A /org/vcon-policy # <b>commit-buffer</b>  | Commits the transaction.  |

The following example creates a vNIC/vHBA placement policy named Adapter1All, places all vNICs and vHBAs on adapter 1, and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # create vcon-policy Adapter1
UCS-A /org/vcon-policy* # set descr "This profile places all vNICs and vHBAs on adapter 1.
UCS-A /org/vcon-policy* # set vcon 1 selection all
UCS-A /org/vcon-policy* # commit-buffer
UCS-A /org/vcon-policy* #
UCS-A /org #
```

## Deleting a vNIC/vHBA Placement Profile

### Procedure

|               | Command or Action   | Purpose   |
|---------------|---|---|
| <b>Step 1</b> | UCS-A# <b>scope org</b> <i>org-name</i>                   | Enters organization mode for the specified organization. To enter the root organization mode, type / as the <i>org-name</i> . |
| <b>Step 2</b> | UCS-A /org # <b>delete vcon-policy</b> <i>policy-name</i> | deletes the specified vNIC/vHBA placement profile.  |
| <b>Step 3</b> | UCS-A /org # <b>commit-buffer</b>                         | Commits the transaction.  |

The following example deletes the vNIC/vHBA placement profile named Adapter1All and commits the transaction:

```
UCS-A# scope org /
UCS-A /org # delete vcon-policy Adapter1All
UCS-A /org* # commit-buffer
UCS-A /org #
```