



# Configuring LAN Pin Groups

---

This chapter includes the following sections:

- [LAN Pin Groups, page 1](#)
- [Configuring a LAN Pin Group, page 1](#)

## LAN Pin Groups

Cisco UCS uses LAN pin groups to pin Ethernet traffic from a vNIC on a server to an uplink Ethernet port or port channel on the fabric interconnect. You can use this pinning to manage the distribution of traffic from the servers.

To configure pinning for a server, you must include the LAN pin group in a vNIC policy. The vNIC policy is then included in the service profile assigned to that server. All traffic from the vNIC travels through the I/O module to the specified uplink Ethernet port.



### Note

If you do not assign a pin group to a server interface through a vNIC policy, Cisco UCS Manager chooses an uplink Ethernet port or port channel for traffic from that server interface dynamically. This choice is not permanent. A different uplink Ethernet port or port channel may be used for traffic from that server interface after an interface flap or a server reboot.

## Configuring a LAN Pin Group

In a system with two fabric interconnects, you can associate the pin group with only one fabric interconnect or with both fabric interconnects.

### Before You Begin

Configure the ports and port channels with which you want to configure the pin group. You can only include ports and port channels configured as uplink ports in a LAN pin group.

## Procedure

|               | Command or Action                                                                                                                                                      | Purpose                                                                                                                                                                                                                                                                                                           |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Step 1</b> | UCS-A# <b>scope eth-uplink</b>                                                                                                                                         | Enters Ethernet uplink mode.                                                                                                                                                                                                                                                                                      |
| <b>Step 2</b> | UCS-A /eth-uplink # <b>create pin-group</b> <i>pin-group-name</i>                                                                                                      | Creates an Ethernet (LAN) pin group with the specified name, and enters Ethernet uplink pin group mode.                                                                                                                                                                                                           |
| <b>Step 3</b> | UCS-A /eth-uplink/pin-group # <b>set descr</b> <i>description</i>                                                                                                      | (Optional)<br>Provides a description for the pin group.<br><br><b>Note</b> If your description includes spaces, special characters, or punctuation, you must begin and end your description with quotation marks. The quotation marks will not appear in the description field of any <b>show</b> command output. |
| <b>Step 4</b> | UCS-A /eth-uplink/pin-group # <b>set target</b> { <b>a</b>   <b>b</b>   <b>dual</b> } { <b>port slot-num</b> / <b>port-num</b>   <b>port-channel</b> <b>port-num</b> } | (Optional)<br>Sets the Ethernet pin target to the specified fabric and port, or fabric and port channel.                                                                                                                                                                                                          |
| <b>Step 5</b> | UCS-A /eth-uplink/pin-group # <b>commit-buffer</b>                                                                                                                     | Commits the transaction to the system configuration.                                                                                                                                                                                                                                                              |

The following example creates a LAN pin group named pingroup54 on fabric A, provides a description for the pin group, sets the pin group target to port channel 28, and commits the transaction:

```
UCS-A# scope eth-uplink
UCS-A /eth-uplink # create pin-group pingroup54
UCS-A /eth-uplink/pin-group* # set descr "This is my pin group #54"
UCS-A /eth-uplink/pin-group* # set target a port-channel 28
UCS-A /eth-uplink/pin-group* # commit-buffer
UCS-A /eth-uplink/pin-group #
```

## What to Do Next

Include the pin group in a vNIC template.