



Configuring DNS Servers

This chapter includes the following sections:

- [DNS Servers in Cisco UCS, page 1](#)
- [Adding a DNS Server, page 1](#)
- [Deleting a DNS Server, page 2](#)

DNS Servers in Cisco UCS

You need to specify an external DNS server for each Cisco UCS instance to use if the system requires name resolution of hostnames. For example, you cannot use a name such as `www.cisco.com` when you are configuring a setting on a fabric interconnect if you do not configure a DNS server. You would need to use the IP address of the server.

Adding a DNS Server

Procedure

- Step 1** In the **Navigation** pane, click the **Admin** tab.
 - Step 2** In the **Admin** tab, expand **All ► Communication Services**.
 - Step 3** Click **DNS Management**.
 - Step 4** In the **Work** pane, click the **General** tab.
 - Step 5** In the **DNS Server** area, click **+**.
 - Step 6** In the **Specify DNS Server** dialog box, enter the IP address of the DNS server.
 - Step 7** Click **OK**.
-

Deleting a DNS Server

Procedure

- Step 1** In the **Navigation** pane, click the **Admin** tab.
 - Step 2** In the **Admin** tab, expand **All ► Communication Services**.
 - Step 3** Click **DNS Management**.
 - Step 4** In the **Work** pane, click the **General** tab.
 - Step 5** In the **DNS Server** area, right-click the DNS server you want to delete and choose **Delete**.
 - Step 6** If Cisco UCS Manager GUI displays a confirmation dialog box, click **Yes**.
 - Step 7** Click **Save Changes**.
-