



Viewing Server Information

This chapter contains the following sections:

- [About Server Information, page 1](#)
- [Viewing Server details, page 1](#)

About Server Information

The **Server Information** section displays the following information about your server:

- **Overview**—Displays server properties, such as the manufacturer name and product name, and Server Summary, CPU Processors, and CPU Cores.
- **Inventory**—Displays detailed information about CPUs, Memory, IO, Storage, BIOS, and PCI.
- **Status**—Displays the health of the subsystems on your server such as CPUs, memory, storage, Peripheral Component Interconnect (PCI) devices, BIOS, and CIMC.
- **Sensors**—Displays current sensor readings, such as memory temperature and error codes (ECC), from Intelligent Platform Management Interface (IPMI).

Viewing Server details

Procedure

- Step 1** In the **Navigation** pane, expand **Server Information**.
 - Step 2** Click the option for which you want to display the details in the **Contents** pane. For example, click **Inventory** to view information about your server's subsystems.
-

