



Configuring Port Profiles

This chapter includes the following sections:

- [Port Profiles, page 1](#)
- [Creating a Port Profile, page 2](#)
- [Modifying the VLANs in a Port Profile, page 3](#)
- [Changing the Native VLAN for a Port Profile, page 4](#)
- [Adding a VLAN to a Port Profile, page 4](#)
- [Removing a VLAN from a Port Profile, page 5](#)
- [Deleting a Port Profile, page 5](#)
- [Port Profile Clients, page 5](#)
- [Creating a Profile Client, page 6](#)
- [Modifying a Profile Client, page 6](#)
- [Deleting a Profile Client, page 7](#)

Port Profiles

Port profiles contain the properties and settings that you can use to configure virtual interfaces in Cisco UCS for VM-FEX. The port profiles are created and administered in Cisco UCS Manager. After a port profile is created, assigned to, and actively used by one or more DVSEs, any changes made to the networking properties of the port profile in Cisco UCS Manager are immediately applied to those DVSEs.

In VMware vCenter, a port profile is represented as a port group. Cisco UCS Manager pushes the port profile names to VMware vCenter, which displays the names as port groups. None of the specific networking properties or settings in the port profile are visible in VMware vCenter. You must configure at least one port profile client for a port profile if you want Cisco UCS Manager to push the port profile to VMware vCenter.

Creating a Port Profile



Note If you are configuring VMDirectPath Gen 2, you need to set the **Host Network IO Performance** field to **High Performance**.

Procedure

- Step 1** In the **Navigation** pane, click the **VM** tab.
- Step 2** On the **VM** tab, expand the **All** node.
- Step 3** Right-click the **Port Profiles** node and choose **Create Port Profile**.
- Step 4** In the **Create Port Profile** dialog box, complete the following fields:

Name	Description
Name field	The user-defined name for the port profile. This name can be between 1 and 31 ASCII alphanumeric characters. You cannot use spaces or any special characters other than - (hyphen), _ (underscore), and : (colon), and you cannot change this name after the object has been saved.
Description field	The user-defined description for the port profile. Enter up to 256 characters. You can use any characters or spaces except ` (accent mark), \ (backslash), ^ (carat), " (double quote), = (equal sign), > (greater than), < (less than), or ' (single quote).
QoS Policy drop-down list	The quality of service policy associated with this port profile.
Network Control Policy drop-down list	The network control policy associated with this port profile.
Max Ports field	The maximum number of ports that can be associated to a port profile is 4096. The default is 64 ports. If the DVS has more than one associated port profile, each port profile client can be set to use a maximum of 4096 ports.
Host Network IO Performance field	This can be one of the following: <ul style="list-style-type: none"> • None—Traffic to and from a virtual machine passes through the DVS. • High Performance— Traffic to and from a virtual machine bypasses the DVS and hypervisor and travels directly between the virtual machines and a virtual interface card (VIC) adapter.
Pin Group drop-down list	The pin group associated with this port profile.

Name	Description
Type field	The type of port profile. This can be one of the following: <ul style="list-style-type: none"> • Regular—Used for all port profiles except for SCVMM. Select regular port profile for KVM and VMware hypervisors. • SLA Only—Used for SCVMM only. <p>Note This field is not displayed for port profile clients used by logical switches.</p>

Step 5 In the **VLANs** area, complete the following fields:

Name	Description
Select column	Check the check box in this column for each VLAN that you want to use.
Name column	The name of the VLAN.
Native VLAN column	To designate one of the VLANs as the native VLAN, click the radio button in this column.

Step 6 Click **OK**.

Modifying the VLANs in a Port Profile

Procedure

- Step 1** In the **Navigation** pane, click the **VM** tab.
- Step 2** On the **VM** tab, expand **All > Port Profiles**.
- Step 3** Right-click the port profile for which you want to modify the VLANs and choose **Modify VLANs**.
- Step 4** In the **Modify VLANs** dialog box, change one or more of the following:

Name	Description
Select column	Check the check box in this column for each VLAN that you want to use. <p>Note VLANs and PVLANS can not be assigned to the same vNIC.</p>
Name column	The name of the VLAN.

Name	Description
Native VLAN column	To designate one of the VLANs as the native VLAN, click the radio button in this column.
Create VLAN link	Click this link if you want to create a VLAN.

Step 5 Click **OK**.

Changing the Native VLAN for a Port Profile

Procedure

- Step 1** In the **Navigation** pane, click the **VM** tab.
- Step 2** On the **VM** tab, expand **All > Port Profiles**.
- Step 3** Right-click the port profile for which you want to change the native VLAN and choose **Modify VLANs**.
- Step 4** In the **Modify VLANs** dialog box, do the following:
- In the **Native VLAN** column, click the radio button in the row for the VLAN that you want to become the native VLAN.
 - Click **OK**.
-

Adding a VLAN to a Port Profile

Procedure

- Step 1** In the **Navigation** pane, click the **VM** tab.
- Step 2** On the **VM** tab, expand **All > Port Profiles**.
- Step 3** Right-click the port profile to which you want to add a VLAN and choose **Modify VLANs**.
- Step 4** In the **Modify VLANs** dialog box, do the following:
- In the **Select** column, check the check box in the row for the VLAN that you want to add to the port profile.
 - (Optional) If you want this VLAN to be the native VLAN, click the radio button in the **Native VLAN** column.
 - Click **OK**.
-

Removing a VLAN from a Port Profile

You can remove a VLAN from a port profile or change the VLAN that you have assigned as the native VLAN.

Procedure

- Step 1** In the **Navigation** pane, click the **VM** tab.
 - Step 2** On the **VM** tab, expand **All > Port Profiles**.
 - Step 3** Right-click the port profile from which you want to remove a VLAN and choose **Modify VLANs**.
 - Step 4** In the **Modify VLANs** dialog box, do the following:
 - a) In the **Select** column, uncheck the check box in the row for the VLAN that you want to remove from the port profile.
 - b) (Optional) You can change the native VLAN to a different VLAN by clicking the radio button in the **Native VLAN** column for a different VLAN.
 - c) Click **OK**.
-

Deleting a Port Profile

You cannot delete a port profile if a VM is actively using that port profile.

Procedure

- Step 1** In the **Navigation** pane, click the **VM** tab.
 - Step 2** On the **VM** tab, expand **All > Port Profiles**.
 - Step 3** Right-click the port profile you want to delete and choose **Delete**.
 - Step 4** If a confirmation dialog box displays, click **Yes**.
 - Step 5** Click **OK**.
Cisco UCS Manager deletes the port profile and all associated port profile clients.
-

Port Profile Clients

The port profile client determines the DVSEs to which a port profile is applied. By default, the port profile client specifies that the associated port profile applies to all DVSEs in the VMware vCenter. However, you can configure the client to apply the port profile to all DVSEs in a specific datacenter or datacenter folder or only to one DVS.

Creating a Profile Client

You can create a profile client.

Procedure

- Step 1** In the **Navigation** pane, click the **VM** tab.
- Step 2** On the **VM** tab, expand **All > Port Profiles**.
- Step 3** Right-click the port profile for which you want to create a profile client and choose **Create Profile Client**.
- Step 4** In the **Create Profile Client** dialog box, complete the following fields:

Name	Description
Name field	The user-defined name for the profile client. This name can be between 1 and 16 ASCII alphanumeric characters. You cannot use spaces or any special characters other than - (hyphen), _ (underscore), and : (colon), and you cannot change this name after the object has been saved.
Description field	The user-defined description of the client. Enter up to 256 characters. You can use any characters or spaces except ` (accent mark), \ (backslash), ^ (carat), " (double quote), = (equal sign), > (greater than), < (less than), or ' (single quote).
Datacenter drop-down list	Choose a datacenter from the drop-down list or choose All if this profile client applies to all datacenters.
Folder drop-down list	Choose a folder from the drop-down list or choose All if this profile client applies to all folders.
Distributed Virtual Switch drop-down list	Choose a virtual switch from the drop-down list or choose All if this profile client applies to all virtual switches.

- Step 5** Click **OK**.

What to Do Next

Complete the configuration of the virtual machines in VMware vCenter.

Modifying a Profile Client

You can modify a profile client.

Procedure

-
- Step 1** In the **Navigation** pane, click the **VM** tab.
 - Step 2** On the **VM** tab, expand **All > Port Profiles**.
 - Step 3** Click the port profile for which you want to modify the profile client.
 - Step 4** In the **Work** pane, click the **Profile Clients** tab.
 - Step 5** Right-click the profile client you want to modify and choose **Show Navigator**.
 - Step 6** In the Navigator for the profile client, change the values for one or more of the following fields:

Name	Description
Name field	The user-defined name for the profile client.
Description field	The user-defined description of the client. Enter up to 256 characters. You can use any characters or spaces except ` (accent mark), \ (backslash), ^ (carat), " (double quote), = (equal sign), > (greater than), < (less than), or ' (single quote).
Datacenter field	A regular expression used to select the appropriate datacenter.
Folder field	A regular expression used to select the appropriate datacenter folder.
Distributed Virtual Switch field	A regular expression used to select the appropriate virtual switch.

- Step 7** Click **OK**.
-

Deleting a Profile Client

You cannot delete a port profile client if a VM is actively using the port profile with which the client is associated.

Procedure

-
- Step 1** In the **Navigation** pane, click the **VM** tab.
 - Step 2** On the **VM** tab, expand **All > Port Profiles**.
 - Step 3** Click the port profile from which you want to delete a profile client.
 - Step 4** In the **Work** pane, click the **Profile Clients** tab.
 - Step 5** Right-click the profile client that you want to delete and choose **Delete**.
 - Step 6** If a confirmation dialog box displays, click **Yes**.
 - Step 7** Click **Save Changes**.
-

