



CHAPTER 3

FSM Faults

This chapter provides information about the faults that may be raised during one or more stages of an FSM task.



Note

Unless an FSM fault appears on the Faults tab, you do not need to take any action to resolve the fault. FSM stages fail and retry for many reasons. These faults do not always indicate an issue with a component or the FSM.

fsmFailAaaEpUpdateEp

Fault Code:F999619

Message

[FSM:FAILED]: sam:dme:AaaEpUpdateEp

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 999619
mibFaultName: fsmFailAaaEpUpdateEp
moClass: aaa:Ep
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmFailAaaRealmUpdateRealm

Fault Code:F999620

Message

[FSM:FAILED]: sam:dme:AaaRealmUpdateRealm

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 999620
mibFaultName: fsmFailAaaRealmUpdateRealm
moClass: aaa:Realm
Type: fsm
```

fsmFailAaaUserEpUpdateUserEp

Fault Code:F999621

Message

[FSM:FAILED]: sam:dme:AaaUserEpUpdateUserEp

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 999621
mibFaultName: fsmFailAaaUserEpUpdateUserEp
moClass: aaa:UserEp
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmFailAdaptorExtEthIfPathReset

Fault Code:F999892

Message

[FSM:FAILED]: sam:dme:AdaptorExtEthIfPathReset

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999892
mibFaultName: fsmFailAdaptorExtEthIfPathReset
moClass: adaptor:ExtEthIf
Type: fsm

fsmFailAdaptorHostEthIfCircuitReset

Fault Code:F999897

Message

[FSM:FAILED]: sam:dme:AdaptorHostEthIfCircuitReset

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999897
mibFaultName: fsmFailAdaptorHostEthIfCircuitReset
moClass: adaptor:HostEthIf
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailAdaptorHostFcIfCircuitReset

Fault Code:F999897

Message

[FSM:FAILED]: sam:dme:AdaptorHostFcIfCircuitReset

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 999897
mibFaultName: fsmFailAdaptorHostFcIfCircuitReset
moClass: adaptor:HostFcIf
Type: fsm
```

fsmFailAdaptorHostFcIfResetFcPersBinding

Fault Code:F999574

Message

[FSM:FAILED]: sam:dme:AdaptorHostFcIfResetFcPersBinding

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 999574
mibFaultName: fsmFailAdaptorHostFcIfResetFcPersBinding
moClass: adaptor:HostFcIf
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmFailCallhomeEpConfigCallhome

Fault Code:F999710

Message

[FSM:FAILED]: sam:dme:CallhomeEpConfigCallhome

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999710
mibFaultName: fsmFailCallhomeEpConfigCallhome
moClass: callhome:Ep
Type: fsm

fsmFailCapabilityCatalogueActivateCatalog

Fault Code:F1000085

Message

[FSM:FAILED]: sam:dme:CapabilityCatalogueActivateCatalog

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000085
mibFaultName: fsmFailCapabilityCatalogueActivateCatalog
moClass: capability:Catalogue
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailCapabilityCatalogueDeployCatalogue

Fault Code:F999971

Message

[FSM:FAILED]: sam:dme:CapabilityCatalogueDeployCatalogue

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 999971
mibFaultName: fsmFailCapabilityCatalogueDeployCatalogue
moClass: capability:Catalogue
Type: fsm
```

fsmFailCapabilityMgmtExtensionActivateMgmtExt

Fault Code:F100086

Message

[FSM:FAILED]: sam:dme:CapabilityMgmtExtensionActivateMgmtExt

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 1000086
mibFaultName: fsmFailCapabilityMgmtExtensionActivateMgmtExt
moClass: capability:MgmtExtension
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmFailCapabilityUpdaterUpdater

Fault Code:F999944

Message

[FSM:FAILED]: sam:dme:CapabilityUpdaterUpdater

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999944
mibFaultName: fsmFailCapabilityUpdaterUpdater
moClass: capability:Updater
Type: fsm

fsmFailCommSvcEpRestartWebSvc

Fault Code:F999617

Message

[FSM:FAILED]: sam:dme:CommSvcEpRestartWebSvc

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999617
mibFaultName: fsmFailCommSvcEpRestartWebSvc
moClass: comm:SvcEp
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailCommSvcEpUpdateSvcEp

Fault Code:F999616

Message

[FSM:FAILED]: sam:dme:CommSvcEpUpdateSvcEp

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999616
mibFaultName: fsmFailCommSvcEpUpdateSvcEp
moClass: comm:SvcEp
Type: fsm

fsmFailComputeBladeDiag

Fault Code:F999575

Message

[FSM:FAILED]: sam:dme:ComputeBladeDiag

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999575
mibFaultName: fsmFailComputeBladeDiag
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailComputeBladeDiscover

Fault Code:F999560

Message

[FSM:FAILED]: sam:dme:ComputeBladeDiscover

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999560
mibFaultName: fsmFailComputeBladeDiscover
moClass: compute:Blade
Type: fsm

fsmFailComputeBladeUpdateBoardController

Fault Code:F999970

Message

[FSM:FAILED]: sam:dme:ComputeBladeUpdateBoardController

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999970
mibFaultName: fsmFailComputeBladeUpdateBoardController
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailComputePhysicalActivateAdaptor

Fault Code:F100084

Message

[FSM:FAILED]: sam:dme:ComputePhysicalActivateAdaptor

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 1000084
mibFaultName: fsmFailComputePhysicalActivateAdaptor
moClass: compute:Physical
Type: fsm
```

fsmFailComputePhysicalAssociate

Fault Code:F100013

Message

[FSM:FAILED]: sam:dme:ComputePhysicalAssociate

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 1000013
mibFaultName: fsmFailComputePhysicalAssociate
moClass: compute:Physical
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmFailComputePhysicalBiosRecovery

Fault Code:F1000024

Message

[FSM:FAILED]: sam:dme:ComputePhysicalBiosRecovery

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000024
mibFaultName: fsmFailComputePhysicalBiosRecovery
moClass: compute:Physical
Type: fsm

fsmFailComputePhysicalCmosReset

Fault Code:F1000026

Message

[FSM:FAILED]: sam:dme:ComputePhysicalCmosReset

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000026
mibFaultName: fsmFailComputePhysicalCmosReset
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailComputePhysicalConfigSoL

Fault Code:F1000123

Message

[FSM:FAILED]: sam:dme:ComputePhysicalConfigSoL

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000123
mibFaultName: fsmFailComputePhysicalConfigSoL
moClass: compute:Physical
Type: fsm

fsmFailComputePhysicalDecommission

Fault Code:F1000016

Message

[FSM:FAILED]: sam:dme:ComputePhysicalDecommission

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000016
mibFaultName: fsmFailComputePhysicalDecommission
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailComputePhysicalDiagnosticInterrupt

Fault Code:F1000156

Message

[FSM:FAILED]: sam:dme:ComputePhysicalDiagnosticInterrupt

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000156
mibFaultName: fsmFailComputePhysicalDiagnosticInterrupt
moClass: compute:Physical
Type: fsm

fsmFailComputePhysicalDisassociate

Fault Code:F1000014

Message

[FSM:FAILED]: sam:dme:ComputePhysicalDisassociate

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000014
mibFaultName: fsmFailComputePhysicalDisassociate
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailComputePhysicalHardShutdown

Fault Code:F1000018

Message

[FSM:FAILED]: sam:dme:ComputePhysicalHardShutdown

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 1000018
mibFaultName: fsmFailComputePhysicalHardShutdown
moClass: compute:Physical
Type: fsm
```

fsmFailComputePhysicalHardreset

Fault Code:F1000021

Message

[FSM:FAILED]: sam:dme:ComputePhysicalHardreset

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 1000021
mibFaultName: fsmFailComputePhysicalHardreset
moClass: compute:Physical
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmFailComputePhysicalPowerCap

Fault Code:F1000015

Message

[FSM:FAILED]: sam:dme:ComputePhysicalPowerCap

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 1000015
mibFaultName: fsmFailComputePhysicalPowerCap
moClass: compute:Physical
Type: fsm
```

fsmFailComputePhysicalPowercycle

Fault Code:F1000020

Message

[FSM:FAILED]: sam:dme:ComputePhysicalPowercycle

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 1000020
mibFaultName: fsmFailComputePhysicalPowercycle
moClass: compute:Physical
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmFailComputePhysicalResetBmc

Fault Code:F100027

Message

[FSM:FAILED]: sam:dme:ComputePhysicalResetBmc

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000027
mibFaultName: fsmFailComputePhysicalResetBmc
moClass: compute:Physical
Type: fsm

fsmFailComputePhysicalResetKvm

Fault Code:F1000203

Message

[FSM:FAILED]: sam:dme:ComputePhysicalResetKvm

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000203
mibFaultName: fsmFailComputePhysicalResetKvm
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailComputePhysicalSoftShutdown

Fault Code:F1000017

Message

[FSM:FAILED]: sam:dme:ComputePhysicalSoftShutdown

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000017
mibFaultName: fsmFailComputePhysicalSoftShutdown
moClass: compute:Physical
Type: fsm

fsmFailComputePhysicalSoftreset

Fault Code:F1000022

Message

[FSM:FAILED]: sam:dme:ComputePhysicalSoftreset

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000022
mibFaultName: fsmFailComputePhysicalSoftreset
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailComputePhysicalSwConnUpd

Fault Code:F100023

Message

[FSM:FAILED]: sam:dme:ComputePhysicalSwConnUpd

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000023
mibFaultName: fsmFailComputePhysicalSwConnUpd
moClass: compute:Physical
Type: fsm

fsmFailComputePhysicalTurnup

Fault Code:F100019

Message

[FSM:FAILED]: sam:dme:ComputePhysicalTurnup

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000019
mibFaultName: fsmFailComputePhysicalTurnup
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailComputePhysicalUnconfigSoL

Fault Code:F1000124

Message

[FSM:FAILED]: sam:dme:ComputePhysicalUnconfigSoL

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000124
mibFaultName: fsmFailComputePhysicalUnconfigSoL
moClass: compute:Physical
Type: fsm

fsmFailComputePhysicalUpdateAdaptor

Fault Code:F1000083

Message

[FSM:FAILED]: sam:dme:ComputePhysicalUpdateAdaptor

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000083
mibFaultName: fsmFailComputePhysicalUpdateAdaptor
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailComputePhysicalUpdateExtUsers

Fault Code:F1000048

Message

[FSM:FAILED]: sam:dme:ComputePhysicalUpdateExtUsers

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 1000048
mibFaultName: fsmFailComputePhysicalUpdateExtUsers
moClass: compute:Physical
Type: fsm
```

fsmFailComputeRackUnitDiscover

Fault Code:F999560

Message

[FSM:FAILED]: sam:dme:ComputeRackUnitDiscover

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 999560
mibFaultName: fsmFailComputeRackUnitDiscover
moClass: compute:RackUnit
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmFailComputeRackUnitOffline

Fault Code:F1000210

Message

[FSM:FAILED]: sam:dme:ComputeRackUnitOffline

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000210
mibFaultName: fsmFailComputeRackUnitOffline
moClass: compute:RackUnit
Type: fsm

fsmFailEpgosDefinitionDelTaskRemove

Fault Code:F999790

Message

[FSM:FAILED]: sam:dme:EpgosDefinitionDelTaskRemove

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999790
mibFaultName: fsmFailEpgosDefinitionDelTaskRemove
moClass: epqos:DefinitionDelTask
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailEpposDefinitionDeploy

Fault Code:F999789

Message

[FSM:FAILED]: sam:dme:EpposDefinitionDeploy

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999789
mibFaultName: fsmFailEpposDefinitionDeploy
moClass: eppos:Definition
Type: fsm

fsmFailEquipmentChassisDynamicReallocation

Fault Code:F1000174

Message

[FSM:FAILED]: sam:dme:EquipmentChassisDynamicReallocation

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000174
mibFaultName: fsmFailEquipmentChassisDynamicReallocation
moClass: equipment:Chassis
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailEquipmentChassisPowerCap

Fault Code:F1000015

Message

[FSM:FAILED]: sam:dme:EquipmentChassisPowerCap

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000015
mibFaultName: fsmFailEquipmentChassisPowerCap
moClass: equipment:Chassis
Type: fsm

fsmFailEquipmentChassisPsuPolicyConfig

Fault Code:F999573

Message

[FSM:FAILED]: sam:dme:EquipmentChassisPsuPolicyConfig

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999573
mibFaultName: fsmFailEquipmentChassisPsuPolicyConfig
moClass: equipment:Chassis
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailEquipmentChassisRemoveChassis

Fault Code:F999447

Message

[FSM:FAILED]: sam:dme:EquipmentChassisRemoveChassis

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999447
mibFaultName: fsmFailEquipmentChassisRemoveChassis
moClass: equipment:Chassis
Type: fsm

fsmFailEquipmentFexRemoveFex

Fault Code:F999982

Message

[FSM:FAILED]: sam:dme:EquipmentFexRemoveFex

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999982
mibFaultName: fsmFailEquipmentFexRemoveFex
moClass: equipment:Fex
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailEquipmentIOCardFeConn

Fault Code:F999446

Message

[FSM:FAILED]: sam:dme:EquipmentIOCardFeConn

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999446
mibFaultName: fsmFailEquipmentIOCardFeConn
moClass: equipment:IOCard
Type: fsm

fsmFailEquipmentIOCardFePresence

Fault Code:F999445

Message

[FSM:FAILED]: sam:dme:EquipmentIOCardFePresence

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999445
mibFaultName: fsmFailEquipmentIOCardFePresence
moClass: equipment:IOCard
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailEquipmentIOCardMuxOffline

Fault Code:F999985

Message

[FSM:FAILED]: sam:dme:EquipmentIOCardMuxOffline

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999985
mibFaultName: fsmFailEquipmentIOCardMuxOffline
moClass: equipment:IOCard
Type: fsm

fsmFailEquipmentIOCardResetCmc

Fault Code:F999843

Message

[FSM:FAILED]: sam:dme:EquipmentIOCardResetCmc

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999843
mibFaultName: fsmFailEquipmentIOCardResetCmc
moClass: equipment:IOCard
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailEquipmentIOCardResetIom

Fault Code:F1000028

Message

[FSM:FAILED]: sam:dme:EquipmentIOCardResetIom

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000028
mibFaultName: fsmFailEquipmentIOCardResetIom
moClass: equipment:IOCard
Type: fsm

fsmFailEquipmentLocatorLedSetFeLocatorLed

Fault Code:F999983

Message

[FSM:FAILED]: sam:dme:EquipmentLocatorLedSetFeLocatorLed

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999983
mibFaultName: fsmFailEquipmentLocatorLedSetFeLocatorLed
moClass: equipment:LocatorLed
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailEquipmentLocatorLedSetLocatorLed

Fault Code:F999448

Message

[FSM:FAILED]: sam:dme:EquipmentLocatorLedSetLocatorLed

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999448
mibFaultName: fsmFailEquipmentLocatorLedSetLocatorLed
moClass: equipment:LocatorLed
Type: fsm

fsmFailExtvmmKeyStoreCertInstall

Fault Code:F999920

Message

[FSM:FAILED]: sam:dme:ExtvmmKeyStoreCertInstall

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999920
mibFaultName: fsmFailExtvmmKeyStoreCertInstall
moClass: extvmm:KeyStore
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailExtvmmMasterExtKeyConfig

Fault Code:F999919

Message

[FSM:FAILED]: sam:dme:ExtvmmMasterExtKeyConfig

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999919
mibFaultName: fsmFailExtvmmMasterExtKeyConfig
moClass: extvmm:MasterExtKey
Type: fsm

fsmFailExtvmmProviderConfig

Fault Code:F999919

Message

[FSM:FAILED]: sam:dme:ExtvmmProviderConfig

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999919
mibFaultName: fsmFailExtvmmProviderConfig
moClass: extvmm:Provider
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailExtvmmSwitchDelTaskRemoveProvider

Fault Code:F999921

Message

[FSM:FAILED]: sam:dme:ExtvmmSwitchDelTaskRemoveProvider

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999921
mibFaultName: fsmFailExtvmmSwitchDelTaskRemoveProvider
moClass: extvmm:SwitchDelTask
Type: fsm

fsmFailFabricComputeSlotEpIdentify

Fault Code:F999559

Message

[FSM:FAILED]: sam:dme:FabricComputeSlotEpIdentify

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999559
mibFaultName: fsmFailFabricComputeSlotEpIdentify
moClass: fabric:ComputeSlotEp
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailFabricLanCloudSwitchMode

Fault Code:F999579

Message

[FSM:FAILED]: sam:dme:FabricLanCloudSwitchMode

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999579
mibFaultName: fsmFailFabricLanCloudSwitchMode
moClass: fabric:LanCloud
Type: fsm

fsmFailFabricSanCloudSwitchMode

Fault Code:F999579

Message

[FSM:FAILED]: sam:dme:FabricSanCloudSwitchMode

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999579
mibFaultName: fsmFailFabricSanCloudSwitchMode
moClass: fabric:SanCloud
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailFirmwareDistributableDelete

Fault Code:F999691

Message

[FSM:FAILED]: sam:dme:FirmwareDistributableDelete

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999691
mibFaultName: fsmFailFirmwareDistributableDelete
moClass: firmware:Distributable
Type: fsm

fsmFailFirmwareDownloaderDownload

Fault Code:F999690

Message

[FSM:FAILED]: sam:dme:FirmwareDownloaderDownload

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999690
mibFaultName: fsmFailFirmwareDownloaderDownload
moClass: firmware:Downloader
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailFirmwareImageDelete

Fault Code:F999691

Message

[FSM:FAILED]: sam:dme:FirmwareImageDelete

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999691
mibFaultName: fsmFailFirmwareImageDelete
moClass: firmware:Image
Type: fsm

fsmFailLicenseDownloaderDownload

Fault Code:F999690

Message

[FSM:FAILED]: sam:dme:LicenseDownloaderDownload

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999690
mibFaultName: fsmFailLicenseDownloaderDownload
moClass: license:Downloader
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailLicenseFileClear

Fault Code:F100092

Message

[FSM:FAILED]: sam:dme:LicenseFileClear

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 1000092
mibFaultName: fsmFailLicenseFileClear
moClass: license:File
Type: fsm
```

fsmFailLicenseFileInstall

Fault Code:F100091

Message

[FSM:FAILED]: sam:dme:LicenseFileInstall

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 1000091
mibFaultName: fsmFailLicenseFileInstall
moClass: license:File
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmFailLicenseInstanceUpdateFlexlm

Fault Code:F1000093

Message

[FSM:FAILED]: sam:dme:LicenseInstanceUpdateFlexlm

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000093
mibFaultName: fsmFailLicenseInstanceUpdateFlexlm
moClass: license:Instance
Type: fsm

fsmFailLsServerConfigure

Fault Code:F1000035

Message

[FSM:FAILED]: sam:dme:LsServerConfigure

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000035
mibFaultName: fsmFailLsServerConfigure
moClass: ls:Server
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailMgmtBackupBackup

Fault Code:F999723

Message

[FSM:FAILED]: sam:dme:MgmtBackupBackup

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 999723
mibFaultName: fsmFailMgmtBackupBackup
moClass: mgmt:Backup
Type: fsm
```

fsmFailMgmtControllerActivateBMC

Fault Code:F999697

Message

[FSM:FAILED]: sam:dme:MgmtControllerActivateBMC

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 999697
mibFaultName: fsmFailMgmtControllerActivateBMC
moClass: mgmt:Controller
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmFailMgmtControllerActivateIOM

Fault Code:F999695

Message

[FSM:FAILED]: sam:dme:MgmtControllerActivateIOM

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999695
mibFaultName: fsmFailMgmtControllerActivateIOM
moClass: mgmt:Controller
Type: fsm

fsmFailMgmtControllerExtMgmtIfConfig

Fault Code:F999558

Message

[FSM:FAILED]: sam:dme:MgmtControllerExtMgmtIfConfig

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999558
mibFaultName: fsmFailMgmtControllerExtMgmtIfConfig
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailMgmtControllerOnline

Fault Code:F1000209

Message

[FSM:FAILED]: sam:dme:MgmtControllerOnline

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 1000209
mibFaultName: fsmFailMgmtControllerOnline
moClass: mgmt:Controller
Type: fsm
```

fsmFailMgmtControllerSysConfig

Fault Code:F999863

Message

[FSM:FAILED]: sam:dme:MgmtControllerSysConfig

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 999863
mibFaultName: fsmFailMgmtControllerSysConfig
moClass: mgmt:Controller
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmFailMgmtControllerUpdateBMC

Fault Code:F999696

Message

[FSM:FAILED]: sam:dme:MgmtControllerUpdateBMC

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999696
mibFaultName: fsmFailMgmtControllerUpdateBMC
moClass: mgmt:Controller
Type: fsm

fsmFailMgmtControllerUpdateIOM

Fault Code:F999694

Message

[FSM:FAILED]: sam:dme:MgmtControllerUpdateIOM

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999694
mibFaultName: fsmFailMgmtControllerUpdateIOM
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailMgmtControllerUpdateSwitch

Fault Code:F999693

Message

[FSM:FAILED]: sam:dme:MgmtControllerUpdateSwitch

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999693
mibFaultName: fsmFailMgmtControllerUpdateSwitch
moClass: mgmt:Controller
Type: fsm

fsmFailMgmtControllerUpdateUCSManager

Fault Code:F999855

Message

[FSM:FAILED]: sam:dme:MgmtControllerUpdateUCSManager

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999855
mibFaultName: fsmFailMgmtControllerUpdateUCSManager
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailMgmtIfDisableVip

Fault Code:F999721

Message

[FSM:FAILED]: sam:dme:MgmtIfDisableVip

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999721
mibFaultName: fsmFailMgmtIfDisableVip
moClass: mgmt:If
Type: fsm

fsmFailMgmtIfEnableHA

Fault Code:F999722

Message

[FSM:FAILED]: sam:dme:MgmtIfEnableHA

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999722
mibFaultName: fsmFailMgmtIfEnableHA
moClass: mgmt:If
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailMgmtIfEnableVip

Fault Code:F999720

Message

[FSM:FAILED]: sam:dme:MgmtIfEnableVip

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 999720
mibFaultName: fsmFailMgmtIfEnableVip
moClass: mgmt:If
Type: fsm
```

fsmFailMgmtIfSwMgmtInbandIfConfig

Fault Code:F999714

Message

[FSM:FAILED]: sam:dme:MgmtIfSwMgmtInbandIfConfig

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 999714
mibFaultName: fsmFailMgmtIfSwMgmtInbandIfConfig
moClass: mgmt:If
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmFailMgmtIfSwMgmtOobIfConfig

Fault Code:F999713

Message

[FSM:FAILED]: sam:dme:MgmtIfSwMgmtOobIfConfig

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999713
mibFaultName: fsmFailMgmtIfSwMgmtOobIfConfig
moClass: mgmt:If
Type: fsm

fsmFailMgmtIfVirtualIfConfig

Fault Code:F999719

Message

[FSM:FAILED]: sam:dme:MgmtIfVirtualIfConfig

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999719
mibFaultName: fsmFailMgmtIfVirtualIfConfig
moClass: mgmt:If
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailMgmtImporterImport

Fault Code:F999724

Message

[FSM:FAILED]: sam:dme:MgmtImporterImport

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999724
mibFaultName: fsmFailMgmtImporterImport
moClass: mgmt:Importer
Type: fsm

fsmFailPkiEpUpdateEp

Fault Code:F999619

Message

[FSM:FAILED]: sam:dme:PkiEpUpdateEp

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999619
mibFaultName: fsmFailPkiEpUpdateEp
moClass: pki:Ep
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailPortPloInCompatSfpPresence

Fault Code:F1000129

Message

[FSM:FAILED]: sam:dme:PortPloInCompatSfpPresence

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000129
mibFaultName: fsmFailPortPloInCompatSfpPresence
moClass: port:Plo
Type: fsm

fsmFailQosclassDefinitionConfigGlobalQoS

Fault Code:F999785

Message

[FSM:FAILED]: sam:dme:QosclassDefinitionConfigGlobalQoS

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999785
mibFaultName: fsmFailQosclassDefinitionConfigGlobalQoS
moClass: qosclass:Definition
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailStatsCollectionPolicyUpdateEp

Fault Code:F999619

Message

[FSM:FAILED]: sam:dme:StatsCollectionPolicyUpdateEp

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999619
mibFaultName: fsmFailStatsCollectionPolicyUpdateEp
moClass: stats:CollectionPolicy
Type: fsm

fsmFailSwAccessDomainDeploy

Fault Code:F999789

Message

[FSM:FAILED]: sam:dme:SwAccessDomainDeploy

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999789
mibFaultName: fsmFailSwAccessDomainDeploy
moClass: sw:AccessDomain
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailSwEthLanBorderDeploy

Fault Code:F999789

Message

[FSM:FAILED]: sam:dme:SwEthLanBorderDeploy

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999789
mibFaultName: fsmFailSwEthLanBorderDeploy
moClass: sw:EthLanBorder
Type: fsm

fsmFailSwEthMonDeploy

Fault Code:F999789

Message

[FSM:FAILED]: sam:dme:SwEthMonDeploy

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999789
mibFaultName: fsmFailSwEthMonDeploy
moClass: sw:EthMon
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailSwFcMonDeploy

Fault Code:F999789

Message

[FSM:FAILED]: sam:dme:SwFcMonDeploy

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999789
mibFaultName: fsmFailSwFcMonDeploy
moClass: sw:FcMon
Type: fsm

fsmFailSwFcSanBorderDeploy

Fault Code:F999789

Message

[FSM:FAILED]: sam:dme:SwFcSanBorderDeploy

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999789
mibFaultName: fsmFailSwFcSanBorderDeploy
moClass: sw:FcSanBorder
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailSwUtilityDomainDeploy

Fault Code:F999789

Message

[FSM:FAILED]: sam:dme:SwUtilityDomainDeploy

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999789
mibFaultName: fsmFailSwUtilityDomainDeploy
moClass: sw:UtilityDomain
Type: fsm

fsmFailSyntheticFsObjCreate

Fault Code:F999681

Message

[FSM:FAILED]: sam:dme:SyntheticFsObjCreate

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999681
mibFaultName: fsmFailSyntheticFsObjCreate
moClass: synthetic:FsoObj
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailSysdebugAutoCoreFileExportTargetConfigure

Fault Code:F100035

Message

[FSM:FAILED]: sam:dme:SysdebugAutoCoreFileExportTargetConfigure

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 1000035
mibFaultName: fsmFailSysdebugAutoCoreFileExportTargetConfigure
moClass: sysdebug:AutoCoreFileExportTarget
Type: fsm
```

fsmFailSysdebugCoreDownload

Fault Code:F999690

Message

[FSM:FAILED]: sam:dme:SysdebugCoreDownload

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 999690
mibFaultName: fsmFailSysdebugCoreDownload
moClass: sysdebug:Core
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmFailSysdebugLogControlEpLogControlPersist

Fault Code:F999646

Message

[FSM:FAILED]: sam:dme:SysdebugLogControlEpLogControlPersist

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999646
mibFaultName: fsmFailSysdebugLogControlEpLogControlPersist
moClass: sysdebug:LogControlEp
Type: fsm

fsmFailSysdebugManualCoreFileExportTargetExport

Fault Code:F999644

Message

[FSM:FAILED]: sam:dme:SysdebugManualCoreFileExportTargetExport

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999644
mibFaultName: fsmFailSysdebugManualCoreFileExportTargetExport
moClass: sysdebug:ManualCoreFileExportTarget
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailSysdebugTechSupportDeleteTechSupFile

Fault Code:F100053

Message

[FSM:FAILED]: sam:dme:SysdebugTechSupportDeleteTechSupFile

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 1000053
mibFaultName: fsmFailSysdebugTechSupportDeleteTechSupFile
moClass: sysdebug:TechSupport
Type: fsm
```

fsmFailSysdebugTechSupportDownload

Fault Code:F999690

Message

[FSM:FAILED]: sam:dme:SysdebugTechSupportDownload

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: critical
Cause: fsm-failed
mibFaultCode: 999690
mibFaultName: fsmFailSysdebugTechSupportDownload
moClass: sysdebug:TechSupport
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmFailSysdebugTechSupportInitiate

Fault Code:F1000052

Message

[FSM:FAILED]: sam:dme:SysdebugTechSupportInitiate

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 1000052
mibFaultName: fsmFailSysdebugTechSupportInitiate
moClass: sysdebug:TechSupport
Type: fsm

fsmFailSysfileMutationGlobal

Fault Code:F999641

Message

[FSM:FAILED]: sam:dme:SysfileMutationGlobal

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999641
mibFaultName: fsmFailSysfileMutationGlobal
moClass: sysfile:Mutation
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmFailSysfileMutationSingle

Fault Code:F999640

Message

[FSM:FAILED]: sam:dme:SysfileMutationSingle

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999640
mibFaultName: fsmFailSysfileMutationSingle
moClass: sysfile:Mutation
Type: fsm

fsmFailVnicProfileSetDeploy

Fault Code:F999789

Message

[FSM:FAILED]: sam:dme:VnicProfileSetDeploy

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: critical
Cause: fsm-failed
mibFaultCode: 999789
mibFaultName: fsmFailVnicProfileSetDeploy
moClass: vnic:ProfileSet
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrAaaEpUpdateEp:SetEpLocal

Fault Code:F78019

Message

[FSM:STAGE:REMOTE-ERROR]: external aaa server configuration to primary(FSM-STAGE:sam:dme:AaaEpUpdateEp:SetEpLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-ep-local-failed
mibFaultCode: 78019
mibFaultName: fsmRmtErrAaaEpUpdateEpSetEpLocal
moClass: aaa:Ep
Type: fsm

fsmRmtErrAaaEpUpdateEp:SetEpPeer

Fault Code:F78019

Message

[FSM:STAGE:REMOTE-ERROR]: external aaa server configuration to secondary(FSM-STAGE:sam:dme:AaaEpUpdateEp:SetEpPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-ep-peer-failed
mibFaultCode: 78019
mibFaultName: fsmRmtErrAaaEpUpdateEpSetEpPeer
moClass: aaa:Ep
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrAaaRealmUpdateRealm:SetRealmLocal

Fault Code:F78020

Message

[FSM:STAGE:REMOTE-ERROR]: realm configuration to primary(FSM-STAGE:sam:dme:AaaRealmUpdateRealm:SetRealmLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-realm-local-failed
mibFaultCode: 78020
mibFaultName: fsmRmtErrAaaRealmUpdateRealmSetRealmLocal
moClass: aaa:Realm
Type: fsm

fsmRmtErrAaaRealmUpdateRealm:SetRealmPeer

Fault Code:F78020

Message

[FSM:STAGE:REMOTE-ERROR]: realm configuration to secondary(FSM-STAGE:sam:dme:AaaRealmUpdateRealm:SetRealmPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-realm-peer-failed
mibFaultCode: 78020
mibFaultName: fsmRmtErrAaaRealmUpdateRealmSetRealmPeer
moClass: aaa:Realm
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrAaaUserEpUpdateUserEp:SetUserLocal

Fault Code:F78021

Message

[FSM:STAGE:REMOTE-ERROR]: user configuration to primary(FSM-STAGE:sam:dme:AaaUserEpUpdateUserEp:SetUserLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-user-local-failed
mibFaultCode: 78021
mibFaultName: fsmRmtErrAaaUserEpUpdateUserEpSetUserLocal
moClass: aaa:UserEp
Type: fsm

fsmRmtErrAaaUserEpUpdateUserEp:SetUserPeer

Fault Code:F78021

Message

[FSM:STAGE:REMOTE-ERROR]: user configuration to secondary(FSM-STAGE:sam:dme:AaaUserEpUpdateUserEp:SetUserPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-user-peer-failed
mibFaultCode: 78021
mibFaultName: fsmRmtErrAaaUserEpUpdateUserEpSetUserPeer
moClass: aaa:UserEp
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrAdaptorExtEthIfPathReset:Disable

Fault Code:F78292

Message

[FSM:STAGE:REMOTE-ERROR]: Disable path [side]([switchId]) on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorExtEthIfPathReset:Disable)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: disable-failed
mibFaultCode: 78292
mibFaultName: fsmRmtErrAdaptorExtEthIfPathResetDisable
moClass: adaptor:ExtEthIf
Type: fsm

fsmRmtErrAdaptorExtEthIfPathReset:Enable

Fault Code:F78292

Message

[FSM:STAGE:REMOTE-ERROR]: Enabe path [side]([switchId]) on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorExtEthIfPathReset:Enable)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: enable-failed
mibFaultCode: 78292
mibFaultName: fsmRmtErrAdaptorExtEthIfPathResetEnable
moClass: adaptor:ExtEthIf
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrAdaptorHostEthIfCircuitReset:DisableA

Fault Code:F78297

Message

[FSM:STAGE:REMOTE-ERROR]: Disable circuit A for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostEthIfCircuitReset:DisableA)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: disable-afailed
mibFaultCode: 78297
mibFaultName: fsmRmtErrAdaptorHostEthIfCircuitResetDisableA
moClass: adaptor:HostEthIf
Type: fsm

fsmRmtErrAdaptorHostEthIfCircuitReset:DisableB

Fault Code:F78297

Message

[FSM:STAGE:REMOTE-ERROR]: Disable circuit B for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostEthIfCircuitReset:DisableB)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: disable-bfailed
mibFaultCode: 78297
mibFaultName: fsmRmtErrAdaptorHostEthIfCircuitResetDisableB
moClass: adaptor:HostEthIf
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrAdaptorHostEthIfCircuitReset:EnableA

Fault Code:F78297

Message

[FSM:STAGE:REMOTE-ERROR]: Enable circuit A for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostEthIfCircuitReset:EnableA)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: enable-afailed
mibFaultCode: 78297
mibFaultName: fsmRmtErrAdaptorHostEthIfCircuitResetEnableA
moClass: adaptor:HostEthIf
Type: fsm

fsmRmtErrAdaptorHostEthIfCircuitReset:EnableB

Fault Code:F78297

Message

[FSM:STAGE:REMOTE-ERROR]: Enable circuit B for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostEthIfCircuitReset:EnableB)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: enable-bfailed
mibFaultCode: 78297
mibFaultName: fsmRmtErrAdaptorHostEthIfCircuitResetEnableB
moClass: adaptor:HostEthIf
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrAdaptorHostFcIfCircuitReset:DisableA

Fault Code:F78297

Message

[FSM:STAGE:REMOTE-ERROR]: Disable circuit A for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostFcIfCircuitReset:DisableA)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: disable-afailed
mibFaultCode: 78297
mibFaultName: fsmRmtErrAdaptorHostFcIfCircuitResetDisableA
moClass: adaptor:HostFcIf
Type: fsm

fsmRmtErrAdaptorHostFcIfCircuitReset:DisableB

Fault Code:F78297

Message

[FSM:STAGE:REMOTE-ERROR]: Disable circuit B for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostFcIfCircuitReset:DisableB)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: disable-bfailed
mibFaultCode: 78297
mibFaultName: fsmRmtErrAdaptorHostFcIfCircuitResetDisableB
moClass: adaptor:HostFcIf
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrAdaptorHostFcIfCircuitReset:EnableA

Fault Code:F78297

Message

[FSM:STAGE:REMOTE-ERROR]: Enable circuit A for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostFcIfCircuitReset:EnableA)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: enable-afailed
mibFaultCode: 78297
mibFaultName: fsmRmtErrAdaptorHostFcIfCircuitResetEnableA
moClass: adaptor:HostFcIf
Type: fsm

fsmRmtErrAdaptorHostFcIfCircuitReset:EnableB

Fault Code:F78297

Message

[FSM:STAGE:REMOTE-ERROR]: Enable circuit B for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostFcIfCircuitReset:EnableB)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: enable-bfailed
mibFaultCode: 78297
mibFaultName: fsmRmtErrAdaptorHostFcIfCircuitResetEnableB
moClass: adaptor:HostFcIf
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrAdaptorHostFcIfResetFcPersBinding:ExecuteLocal

Fault Code:F77974

Message

[FSM:STAGE:REMOTE-ERROR]: Resetting FC persistent bindings on host interface [dn](FSM-STAGE:sam:dme:AdaptorHostFcIfResetFcPersBinding:ExecuteLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-local-failed
mibFaultCode: 77974
mibFaultName: fsmRmtErrAdaptorHostFcIfResetFcPersBindingExecuteLocal
moClass: adaptor:HostFcIf
Type: fsm

fsmRmtErrAdaptorHostFcIfResetFcPersBinding:ExecutePeer

Fault Code:F77974

Message

[FSM:STAGE:REMOTE-ERROR]: Resetting FC persistent bindings on host interface [dn](FSM-STAGE:sam:dme:AdaptorHostFcIfResetFcPersBinding:ExecutePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-peer-failed
mibFaultCode: 77974
mibFaultName: fsmRmtErrAdaptorHostFcIfResetFcPersBindingExecutePeer
moClass: adaptor:HostFcIf
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCallhomeEpConfigCallhome:SetLocal

Fault Code:F78110

Message

[FSM:STAGE:REMOTE-ERROR]: call-home configuration on primary(FSM-STAGE:sam:dme:CallhomeEpConfigCallhome:SetLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-local-failed
mibFaultCode: 78110
mibFaultName: fsmRmtErrCallhomeEpConfigCallhomeSetLocal
moClass: callhome:Ep
Type: fsm

fsmRmtErrCallhomeEpConfigCallhome:SetPeer

Fault Code:F78110

Message

[FSM:STAGE:REMOTE-ERROR]: call-home configuration on secondary(FSM-STAGE:sam:dme:CallhomeEpConfigCallhome:SetPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-peer-failed
mibFaultCode: 78110
mibFaultName: fsmRmtErrCallhomeEpConfigCallhomeSetPeer
moClass: callhome:Ep
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCapabilityCatalogueActivateCatalog:ApplyCatalog

Fault Code:F78485

Message

[FSM:STAGE:REMOTE-ERROR]: applying changes to catalog(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:ApplyCatalog)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: apply-catalog-failed
mibFaultCode: 78485
mibFaultName: fsmRmtErrCapabilityCatalogueActivateCatalogApplyCatalog
moClass: capability:Catalogue
Type: fsm

fsmRmtErrCapabilityCatalogueActivateCatalog:CopyRemote

Fault Code:F78485

Message

[FSM:STAGE:REMOTE-ERROR]: syncing catalog changes to subordinate(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:CopyRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: copy-remote-failed
mibFaultCode: 78485
mibFaultName: fsmRmtErrCapabilityCatalogueActivateCatalogCopyRemote
moClass: capability:Catalogue
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCapabilityCatalogueActivateCatalog:EvaluateStatus

Fault Code:F78485

Message

[FSM:STAGE:REMOTE-ERROR]: evaluating status of activation(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:EvaluateStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: evaluate-status-failed
mibFaultCode: 78485
mibFaultName: fsmRmtErrCapabilityCatalogueActivateCatalogEvaluateStatus
moClass: capability:Catalogue
Type: fsm

fsmRmtErrCapabilityCatalogueActivateCatalog:RescanImages

Fault Code:F78485

Message

[FSM:STAGE:REMOTE-ERROR]: rescanning image files(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:RescanImages)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: rescan-images-failed
mibFaultCode: 78485
mibFaultName: fsmRmtErrCapabilityCatalogueActivateCatalogRescanImages
moClass: capability:Catalogue
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCapabilityCatalogueActivateCatalog:UnpackLocal

Fault Code:F78485

Message

[FSM:STAGE:REMOTE-ERROR]: activating catalog changes(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:UnpackLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: unpack-local-failed
mibFaultCode: 78485
mibFaultName: fsmRmtErrCapabilityCatalogueActivateCatalogUnpackLocal
moClass: capability:Catalogue
Type: fsm

fsmRmtErrCapabilityCatalogueDeployCatalogue:SyncBladeAGLocal

Fault Code:F78371

Message

[FSM:STAGE:REMOTE-ERROR]: Sending capability catalogue [version] to local bladeAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncBladeAGLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sync-bladeaglocal-failed
mibFaultCode: 78371
mibFaultName: fsmRmtErrCapabilityCatalogueDeployCatalogueSyncBladeAGLocal
moClass: capability:Catalogue
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCapabilityCatalogueDeployCatalogue:SyncBladeAGRemote

Fault Code:F78371

Message

[FSM:STAGE:REMOTE-ERROR]: Sending capability catalogue [version] to remote bladeAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncBladeAGRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sync-bladeagremote-failed
mibFaultCode: 78371
mibFaultName: fsmRmtErrCapabilityCatalogueDeployCatalogueSyncBladeAGRemote
moClass: capability:Catalogue
Type: fsm

fsmRmtErrCapabilityCatalogueDeployCatalogue:SyncHostagentAGLocal

Fault Code:F78371

Message

[FSM:STAGE:REMOTE-ERROR]: Sending capability catalogue [version] to local hostagentAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncHostagentAGLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sync-hostagentaglocal-failed
mibFaultCode: 78371
mibFaultName: fsmRmtErrCapabilityCatalogueDeployCatalogueSyncHostagentAGLocal
moClass: capability:Catalogue
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCapabilityCatalogueDeployCatalogue:SyncHostagentAGRemote

Fault Code:F78371

Message

[FSM:STAGE:REMOTE-ERROR]: Sending capability catalogue [version] to remote hostagentAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncHostagentAGRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sync-hostagentagremote-failed
mibFaultCode: 78371
mibFaultName: fsmRmtErrCapabilityCatalogueDeployCatalogueSyncHostagentAGRemote
moClass: capability:Catalogue
Type: fsm

fsmRmtErrCapabilityCatalogueDeployCatalogue:SyncNicAGLocal

Fault Code:F78371

Message

[FSM:STAGE:REMOTE-ERROR]: Sending capability catalogue [version] to local nicAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncNicAGLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sync-nicaglocal-failed
mibFaultCode: 78371
mibFaultName: fsmRmtErrCapabilityCatalogueDeployCatalogueSyncNicAGLocal
moClass: capability:Catalogue
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCapabilityCatalogueDeployCatalogue:SyncNicAGRemote

Fault Code:F78371

Message

[FSM:STAGE:REMOTE-ERROR]: Sending capability catalogue [version] to remote nicAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncNicAGRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sync-nicagremote-failed
mibFaultCode: 78371
mibFaultName: fsmRmtErrCapabilityCatalogueDeployCatalogueSyncNicAGRemote
moClass: capability:Catalogue
Type: fsm

fsmRmtErrCapabilityCatalogueDeployCatalogue:SyncPortAGLocal

Fault Code:F78371

Message

[FSM:STAGE:REMOTE-ERROR]: Sending capability catalogue [version] to local portAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncPortAGLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sync-portaglocal-failed
mibFaultCode: 78371
mibFaultName: fsmRmtErrCapabilityCatalogueDeployCatalogueSyncPortAGLocal
moClass: capability:Catalogue
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCapabilityCatalogueDeployCatalogue:SyncPortAGRemote

Fault Code:F78371

Message

[FSM:STAGE:REMOTE-ERROR]: Sending capability catalogue [version] to remote portAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncPortAGRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sync-portagremote-failed
mibFaultCode: 78371
mibFaultName: fsmRmtErrCapabilityCatalogueDeployCatalogueSyncPortAGRemote
moClass: capability:Catalogue
Type: fsm

fsmRmtErrCapabilityCatalogueDeployCatalogue:finalize

Fault Code:F78371

Message

[FSM:STAGE:REMOTE-ERROR]: Finalizing capability catalogue [version] deployment(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:finalize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: finalize-failed
mibFaultCode: 78371
mibFaultName: fsmRmtErrCapabilityCatalogueDeployCatalogueFinalize
moClass: capability:Catalogue
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCapabilityMgmtExtensionActivateMgmtExt:ApplyCatalog

Fault Code:F78486

Message

[FSM:STAGE:REMOTE-ERROR]: applying changes to catalog(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:ApplyCatalog)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: apply-catalog-failed
mibFaultCode: 78486
mibFaultName: fsmRmtErrCapabilityMgmtExtensionActivateMgmtExtApplyCatalog
moClass: capability:MgmtExtension
Type: fsm

fsmRmtErrCapabilityMgmtExtensionActivateMgmtExt:CopyRemote

Fault Code:F78486

Message

[FSM:STAGE:REMOTE-ERROR]: syncing management extension changes to subordinate(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:CopyRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: copy-remote-failed
mibFaultCode: 78486
mibFaultName: fsmRmtErrCapabilityMgmtExtensionActivateMgmtExtCopyRemote
moClass: capability:MgmtExtension
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCapabilityMgmtExtensionActivateMgmtExt:EvaluateStatus

Fault Code:F78486

Message

[FSM:STAGE:REMOTE-ERROR]: evaluating status of activation(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:EvaluateStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: evaluate-status-failed
mibFaultCode: 78486
mibFaultName: fsmRmtErrCapabilityMgmtExtensionActivateMgmtExtEvaluateStatus
moClass: capability:MgmtExtension
Type: fsm

fsmRmtErrCapabilityMgmtExtensionActivateMgmtExt:RescanImages

Fault Code:F78486

Message

[FSM:STAGE:REMOTE-ERROR]: rescanning image files(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:RescanImages)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: rescan-images-failed
mibFaultCode: 78486
mibFaultName: fsmRmtErrCapabilityMgmtExtensionActivateMgmtExtRescanImages
moClass: capability:MgmtExtension
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCapabilityMgmtExtensionActivateMgmtExt:UnpackLocal

Fault Code:F78486

Message

[FSM:STAGE:REMOTE-ERROR]: activating management extension changes(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:UnpackLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: unpack-local-failed
mibFaultCode: 78486
mibFaultName: fsmRmtErrCapabilityMgmtExtensionActivateMgmtExtUnpackLocal
moClass: capability:MgmtExtension
Type: fsm

fsmRmtErrCapabilityUpdaterUpdater:Apply

Fault Code:F78344

Message

[FSM:STAGE:REMOTE-ERROR]: applying changes to catalog(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:Apply)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: apply-failed
mibFaultCode: 78344
mibFaultName: fsmRmtErrCapabilityUpdaterUpdaterApply
moClass: capability:Updater
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCapabilityUpdaterUpdater:CopyRemote

Fault Code:F78344

Message

[FSM:STAGE:REMOTE-ERROR]: syncing catalog files to subordinate(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:CopyRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: copy-remote-failed
mibFaultCode: 78344
mibFaultName: fsmRmtErrCapabilityUpdaterUpdaterCopyRemote
moClass: capability:Updater
Type: fsm

fsmRmtErrCapabilityUpdaterUpdater>DeleteLocal

Fault Code:F78344

Message

[FSM:STAGE:REMOTE-ERROR]: deleting temp image [fileName] on local(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater>DeleteLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: delete-local-failed
mibFaultCode: 78344
mibFaultName: fsmRmtErrCapabilityUpdaterUpdaterDeleteLocal
moClass: capability:Updater
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCapabilityUpdaterUpdater:EvaluateStatus

Fault Code:F78344

Message

[FSM:STAGE:REMOTE-ERROR]: evaluating status of update(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:EvaluateStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: evaluate-status-failed
mibFaultCode: 78344
mibFaultName: fsmRmtErrCapabilityUpdaterUpdaterEvaluateStatus
moClass: capability:Updater
Type: fsm

fsmRmtErrCapabilityUpdaterUpdater:Local

Fault Code:F78344

Message

[FSM:STAGE:REMOTE-ERROR]: downloading catalog file [fileName] from [server](FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78344
mibFaultName: fsmRmtErrCapabilityUpdaterUpdaterLocal
moClass: capability:Updater
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCapabilityUpdaterUpdater:RescanImages

Fault Code:F78344

Message

[FSM:STAGE:REMOTE-ERROR]: rescanning image
files(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:RescanImages)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: rescan-images-failed
mibFaultCode: 78344
mibFaultName: fsmRmtErrCapabilityUpdaterUpdaterRescanImages
moClass: capability:Updater
Type: fsm

fsmRmtErrCapabilityUpdaterUpdater:UnpackLocal

Fault Code:F78344

Message

[FSM:STAGE:REMOTE-ERROR]: unpacking catalog file [fileName] on
primary(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:UnpackLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: unpack-local-failed
mibFaultCode: 78344
mibFaultName: fsmRmtErrCapabilityUpdaterUpdaterUnpackLocal
moClass: capability:Updater
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCommSvcEpRestartWebSvc:restart

Fault Code:F78017

Message

[FSM:STAGE:REMOTE-ERROR]: restart web services(FSM-STAGE:sam:dme:CommSvcEpRestartWebSvc:restart)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: restart-failed
mibFaultCode: 78017
mibFaultName: fsmRmtErrCommSvcEpRestartWebSvcRestart
moClass: comm:SvcEp
Type: fsm

fsmRmtErrCommSvcEpUpdateSvcEp:PropogateEpSettings

Fault Code:F78016

Message

[FSM:STAGE:REMOTE-ERROR]: propogate updated settings (eg. timezone)(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpSettings)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: propogate-ep-settings-failed
mibFaultCode: 78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpPropogateEpSettings
moClass: comm:SvcEp
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsLocal

Fault Code:F78016

Message

[FSM:STAGE:REMOTE-ERROR]: propogate updated timezone settings to management controllers.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: propogate-ep-time-zone-settings-local-failed
mibFaultCode: 78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsLocal
moClass: comm:SvcEp
Type: fsm

fsmRmtErrCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsPeer

Fault Code:F78016

Message

[FSM:STAGE:REMOTE-ERROR]: propogate updated timezone settings to management controllers.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: propogate-ep-time-zone-settings-peer-failed
mibFaultCode: 78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsPeer
moClass: comm:SvcEp
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToAdaptorsLocal

Fault Code:F78016

Message

[FSM:STAGE:REMOTE-ERROR]: propogate updated timezone settings to NICs.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToAdaptorsLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: propogate-ep-time-zone-settings-to-adaptors-local-failed
mibFaultCode: 78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsToAdaptorsLocal
moClass: comm:SvcEp
Type: fsm

fsmRmtErrCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToAdaptorsPeer

Fault Code:F78016

Message

[FSM:STAGE:REMOTE-ERROR]: propogate updated timezone settings to NICs.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToAdaptorsPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: propogate-ep-time-zone-settings-to-adaptors-peer-failed
mibFaultCode: 78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsToAdaptorsPeer
moClass: comm:SvcEp
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToFexIomLocal

Fault Code:F78016

Message

[FSM:STAGE:REMOTE-ERROR]: propogate updated timezone settings to FEXs and IOMs.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToFexIomLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: propogate-ep-time-zone-settings-to-fex-iom-local-failed
mibFaultCode: 78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsToFexIomLocal
moClass: comm:SvcEp
Type: fsm

fsmRmtErrCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToFexIomPeer

Fault Code:F78016

Message

[FSM:STAGE:REMOTE-ERROR]: propogate updated timezone settings to FEXs and IOMs.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToFexIomPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: propogate-ep-time-zone-settings-to-fex-iom-peer-failed
mibFaultCode: 78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsToFexIomPeer
moClass: comm:SvcEp
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrCommSvcEpUpdateSvcEp:SetEpLocal

Fault Code:F78016

Message

[FSM:STAGE:REMOTE-ERROR]: communication service [name] configuration to primary(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:SetEpLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-ep-local-failed
mibFaultCode: 78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpSetEpLocal
moClass: comm:SvcEp
Type: fsm

fsmRmtErrCommSvcEpUpdateSvcEp:SetEpPeer

Fault Code:F78016

Message

[FSM:STAGE:REMOTE-ERROR]: communication service [name] configuration to secondary(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:SetEpPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-ep-peer-failed
mibFaultCode: 78016
mibFaultName: fsmRmtErrCommSvcEpUpdateSvcEpSetEpPeer
moClass: comm:SvcEp
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:BiosPostCompletion

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for BIOS POST completion from CIMC on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:BiosPostCompletion)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagBiosPostCompletion
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:BladeBoot

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Power-on server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:BladeBoot)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-boot-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagBladeBoot
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:BladeBootWait

Fault Code:F7975

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for system reset on server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:BladeBootWait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-boot-wait-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagBladeBootWait
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:BladePowerOn

Fault Code:F7975

Message

[FSM:STAGE:REMOTE-ERROR]: Power on server [chassisId]/[slotId] for
diagnostics(FSM-STAGE:sam:dme:ComputeBladeDiag:BladePowerOn)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-power-on-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagBladePowerOn
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:BladeReadSmbios

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Read SMBIOS tables on server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:BladeReadSmbios)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-read-smbios-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagBladeReadSmbios
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:BmcConfigPnuOS

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: provisioning a bootable device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputeBladeDiag:BmcConfigPnuOS)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagBmcConfigPnuOS
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:BmcInventory

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Getting inventory of server [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:ComputeBladeDiag:BmcInventory)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-inventory-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagBmcInventory
mcClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:BmcPresence

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Checking CIMC of server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:BmcPresence)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-presence-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagBmcPresence
mcClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:BmcShutdownDiagCompleted

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Shutdown server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:BmcShutdownDiagCompleted)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-shutdown-diag-completed-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagBmcShutdownDiagCompleted
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:CleanupServerConnSwA

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Cleaning up server [chassisId]/[slotId] interface on fabric A(FSM-STAGE:sam:dme:ComputeBladeDiag:CleanupServerConnSwA)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: cleanup-server-conn-sw-afailed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagCleanupServerConnSwA
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:CleanupServerConnSwB

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Cleaning up server [chassisId]/[slotId] interface on fabric B(FSM-STAGE:sam:dme:ComputeBladeDiag:CleanupServerConnSwB)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: cleanup-server-conn-sw-bfailed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagCleanupServerConnSwB
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:ConfigFeLocal

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Configuring primary fabric interconnect access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:ConfigFeLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-fe-local-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagConfigFeLocal
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:ConfigFePeer

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Configuring secondary fabric interconnect access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:ConfigFePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-fe-peer-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagConfigFePeer
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:ConfigSol

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Configuring SoL access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:ConfigSol)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-sol-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagConfigSol
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:ConfigUserAccess

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Configuring external user access to server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:ConfigUserAccess)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-user-access-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagConfigUserAccess
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:DebugWait

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for debugging for server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:DebugWait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: debug-wait-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagDebugWait
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:DeriveConfig

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Derive diag config for server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:DeriveConfig)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: derive-config-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagDeriveConfig
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:DisableServerConnSwA

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Disable server [chassisId]/[slotId] interface on fabric A after completion of network traffic tests on fabric A(FSM-STAGE:sam:dme:ComputeBladeDiag:DisableServerConnSwA)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: disable-server-conn-sw-afailed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagDisableServerConnSwA
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:DisableServerConnSwB

Fault Code:F7975

Message

[FSM:STAGE:REMOTE-ERROR]: Disable server [chassisId]/[slotId] connectivity on fabric B in preparation for network traffic tests on fabric A(FSM-STAGE:sam:dme:ComputeBladeDiag:DisableServerConnSwB)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: disable-server-conn-sw-bfailed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagDisableServerConnSwB
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:EnableServerConnSwA

Fault Code:F7975

Message

[FSM:STAGE:REMOTE-ERROR]: Enable server [chassisId]/[slotId] connectivity on fabric A in preparation for network traffic tests on fabric A(FSM-STAGE:sam:dme:ComputeBladeDiag:EnableServerConnSwA)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: enable-server-conn-sw-afailed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagEnableServerConnSwA
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:EnableServerConnSwB

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Enable server [chassisId]/[slotId] connectivity on fabric B in preparation for network traffic tests on fabric B(FSM-STAGE:sam:dme:ComputeBladeDiag:EnableServerConnSwB)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: enable-server-conn-sw-bfailed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagEnableServerConnSwB
moClass: compute:Blade
Type: fsm
```

fsmRmtErrComputeBladeDiag:EvaluateStatus

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Evaluating status; diagnostics completed(FSM-STAGE:sam:dme:ComputeBladeDiag:EvaluateStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: evaluate-status-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagEvaluateStatus
moClass: compute:Blade
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:FabricATrafficTestStatus

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Gather status of network traffic tests on fabric A for server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:FabricATrafficTestStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: fabricatraffic-test-status-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagFabricATrafficTestStatus
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:FabricBTrafficTestStatus

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Gather status of network tests on fabric B for server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:FabricBTrafficTestStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: fabricbtraffic-test-status-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagFabricBTrafficTestStatus
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:GenerateLogWait

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for collection of diagnostic logs from server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:GenerateLogWait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: generate-log-wait-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagGenerateLogWait
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:GenerateReport

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Generating report for server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:GenerateReport)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: generate-report-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagGenerateReport
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:HostConnect

Fault Code:F7975

Message

[FSM:STAGE:REMOTE-ERROR]: Connect to diagnostics environment agent on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:HostConnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: host-connect-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagHostConnect
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:HostDisconnect

Fault Code:F7975

Message

[FSM:STAGE:REMOTE-ERROR]: Disconnect diagnostics environment agent for server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:HostDisconnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: host-disconnect-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagHostDisconnect
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:HostIdent

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Identify diagnostics environment agent on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:HostIdent)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: host-ident-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagHostIdent
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:HostInventory

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Perform inventory of server [chassisId]/[slotId] in diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:HostInventory)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: host-inventory-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagHostInventory
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:HostPolicy

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Populate diagnostics environment behavior policy to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:HostPolicy)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: host-policy-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagHostPolicy
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:HostServerDiag

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Trigger diagnostics on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:HostServerDiag)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: host-server-diag-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagHostServerDiag
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:HostServerDiagStatus

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Diagnostics status on server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:HostServerDiagStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: host-server-diag-status-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagHostServerDiagStatus
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:NicConfigLocal

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Configure adapter in server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:NicConfigLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-local-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagNicConfigLocal
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:NicConfigPeer

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Configure adapter in server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:NicConfigPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-peer-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagNicConfigPeer
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:NicInventoryLocal

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Retrieve adapter inventory in server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:NicInventoryLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-inventory-local-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagNicInventoryLocal
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:NicInventoryPeer

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Retrieve adapter inventory in server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:NicInventoryPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-inventory-peer-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagNicInventoryPeer
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:NicPresenceLocal

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Detect adapter in server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:NicPresenceLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-presence-local-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagNicPresenceLocal
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:NicPresencePeer

Fault Code:F7975

Message

[FSM:STAGE:REMOTE-ERROR]: Detect adapter in server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:NicPresencePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-presence-peer-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagNicPresencePeer
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:NicUnconfigLocal

Fault Code:F7975

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure adapter of server [chassisId]/[slotId] diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:NicUnconfigLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-local-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagNicUnconfigLocal
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:NicUnconfigPeer

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure adapter of server [chassisId]/[slotId] diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:NicUnconfigPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-peer-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagNicUnconfigPeer
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:PollMemoryTestStatus

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Check diagnostics environment boot status on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:PollMemoryTestStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: poll-memory-test-status-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagPollMemoryTestStatus
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:RemoveConfig

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Derive diag config for server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:RemoveConfig)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: remove-config-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagRemoveConfig
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:RemoveVMediaLocal

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Remove VMedia for server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:RemoveVMediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: removevmedia-local-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagRemoveVMediaLocal
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:RemoveVMediaPeer

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Remove VMedia for server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:RemoveVMediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: removevmedia-peer-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagRemoveVMediaPeer
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:RestoreConfigFeLocal

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Reconfiguring primary fabric interconnect access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:RestoreConfigFeLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: restore-config-fe-local-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagRestoreConfigFeLocal
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:RestoreConfigFePeer

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Reconfiguring secondary fabric interconnect access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:RestoreConfigFePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: restore-config-fe-peer-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagRestoreConfigFePeer
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:SetDiagUser

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Populate diagnostics environment with a user account to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:SetDiagUser)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-diag-user-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagSetDiagUser
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:SetupVMediaLocal

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Setup VMedia for server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:SetupVMediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setupvmedia-local-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagSetupVMediaLocal
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:SetupVMediaPeer

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Setup VMedia for server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:SetupVMediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setupvmedia-peer-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagSetupVMediaPeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:StartFabricATrafficTest

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Trigger network traffic tests on fabric A on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:StartFabricATrafficTest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: start-fabricatraffic-test-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagStartFabricATrafficTest
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:StartFabricBTrafficTest

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Trigger network tests on fabric B for server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:StartFabricBTrafficTest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: start-fabricbtraffic-test-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagStartFabricBTrafficTest
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:StartMemoryTestStatus

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Check diagnostics environment boot status on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:StartMemoryTestStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: start-memory-test-status-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagStartMemoryTestStatus
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:StopVMediaLocal

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Stop VMedia for server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:StopVMediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: stopvmedia-local-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagStopVMediaLocal
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:StopVMediaPeer

Fault Code:F7975

Message

[FSM:STAGE:REMOTE-ERROR]: Stop VMedia for server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:StopVMediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: stopvmedia-peer-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagStopVMediaPeer
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:SwConfigLocal

Fault Code:F7975

Message

[FSM:STAGE:REMOTE-ERROR]: Configure primary fabric interconnect in server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:SwConfigLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-local-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagSwConfigLocal
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:SwConfigPeer

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Configure secondary fabric interconnect in server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:SwConfigPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-peer-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagSwConfigPeer
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:SwUnconfigLocal

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure primary fabric interconnect for server [chassisId]/[slotId] in diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:SwUnconfigLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-local-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagSwUnconfigLocal
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:SwUnconfigPeer

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure secondary fabric interconnect for server [chassisId]/[slotId] in diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:SwUnconfigPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-peer-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagSwUnconfigPeer
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiag:UnconfigSol

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure SoL access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:UnconfigSol)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: unconfig-sol-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagUnconfigSol
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiag:UnconfigUserAccess

Fault Code:F77975

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure external user access to server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:UnconfigUserAccess)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: unconfig-user-access-failed
mibFaultCode: 77975
mibFaultName: fsmRmtErrComputeBladeDiagUnconfigUserAccess
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:BiosPostCompletion

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for BIOS POST completion from CIMC on server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:BiosPostCompletion)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBiosPostCompletion
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:BladeBootPnuos

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: power server [chassisId]/[slotId] on with pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:BladeBootPnuos)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-boot-pnuos-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBladeBootPnuos
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:BladeBootWait

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for system reset on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:BladeBootWait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-boot-wait-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBladeBootWait
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:BladePowerOn

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: power on server [chassisId]/[slotId] for discovery(FSM-STAGE:sam:dme:ComputeBladeDiscover:BladePowerOn)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-power-on-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBladePowerOn
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:BladeReadSmbios

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for SMBIOS table from CIMC on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:BladeReadSmbios)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-read-smbios-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBladeReadSmbios
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:BmcConfigPnuOS

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: provisioning a bootable device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcConfigPnuOS)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBmcConfigPnuOS
mcClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:BmcInventory

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: getting inventory of server [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcInventory)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-inventory-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBmcInventory
mcClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:BmcPreConfigPnuOSLocal

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: prepare configuration for preboot environment(FSM-STAGE:sam:dmc:ComputeBladeDiscover:BmcPreConfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-pre-config-pnuoslocal-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBmcPreConfigPnuOSLocal
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:BmcPreConfigPnuOSPeer

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: prepare configuration for preboot environment(FSM-STAGE:sam:dmc:ComputeBladeDiscover:BmcPreConfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-pre-config-pnuospeer-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBmcPreConfigPnuOSPeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:BmcPresence

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: checking CIMC of server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcPresence)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-presence-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBmcPresence
mcClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:BmcShutdownDiscovered

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Shutdown the server [chassisId]/[slotId]; deep discovery completed(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcShutdownDiscovered)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-shutdown-discovered-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverBmcShutdownDiscovered
mcClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:ConfigFeLocal

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: configuring primary fabric interconnect access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:ConfigFeLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-fe-local-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverConfigFeLocal
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:ConfigFePeer

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: configuring secondary fabric interconnect access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:ConfigFePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-fe-peer-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverConfigFePeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:ConfigUserAccess

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: configuring external user access to server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:ConfigUserAccess)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-user-access-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverConfigUserAccess
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:HandlePooling

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Invoke post-discovery policies on server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:HandlePooling)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: handle-pooling-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverHandlePooling
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:NicConfigPnuOSLocal

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: configure primary adapter in [chassisId]/[slotId] for pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:NicConfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-pnuoslocal-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverNicConfigPnuOSLocal
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:NicConfigPnuOSPeer

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: configure secondary adapter in [chassisId]/[slotId] for pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:NicConfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-pnuospeer-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverNicConfigPnuOSPeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:NicPresenceLocal

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: detect mezz cards in
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:NicPresenceLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-presence-local-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverNicPresenceLocal
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:NicPresencePeer

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: detect mezz cards in
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:NicPresencePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-presence-peer-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverNicPresencePeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:NicUnconfigPnuOSLocal

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure adapter of server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:NicUnconfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-pnuoslocal-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverNicUnconfigPnuOSLocal
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:NicUnconfigPnuOSPeer

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure adapter of server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:NicUnconfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-pnuospeer-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverNicUnconfigPnuOSPeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:PnuOSIdent

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Identify pre-boot environment agent on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSIdent)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosident-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverPnuOSIdent
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:PnuOSInventory

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Perform inventory of server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSInventory)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosinventory-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverPnuOSInventory
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:PnuOSPolicy

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Populate pre-boot environment behavior policy to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSPolicy)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuospolicy-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverPnuOSPolicy
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:PnuOSScrub

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Scrub server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSScrub)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosscrub-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverPnuOSScrub
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:PnuOSSelfTest

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Trigger self-test of server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSSelfTest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosself-test-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverPnuOSSelfTest
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:PreSanitize

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PreSanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverPreSanitize
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:Sanitize

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:Sanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sanitize-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSanitize
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:SetupVmediaLocal

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: provisioning a Virtual Media device with a bootable pre-boot image for blade [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:SetupVmediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setup-vmedia-local-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSetupVmediaLocal
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:SetupVmediaPeer

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: provisioning a Virtual Media device with a bootable pre-boot image for blade [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:SetupVmediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setup-vmedia-peer-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSetupVmediaPeer
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:SwConfigPnuOSLocal

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: configure primary fabric interconnect in [chassisId]/[slotId] for pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:SwConfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-pnuoslocal-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSwConfigPnuOSLocal
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:SwConfigPnuOSPeer

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: configure secondary fabric interconnect in [chassisId]/[slotId] for pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:SwConfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-pnuospeer-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSwConfigPnuOSPeer
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:SwUnconfigPnuOSLocal

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure primary fabric interconnect for server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:SwUnconfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-pnuoslocal-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSwUnconfigPnuOSLocal
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:SwUnconfigPnuOSPeer

Fault Code:F7960

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure secondary fabric interconnect for server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:SwUnconfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-pnuospeer-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverSwUnconfigPnuOSPeer
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:TeardownVmediaLocal

Fault Code:F7960

Message

[FSM:STAGE:REMOTE-ERROR]: unprovisioning the Virtual Media bootable device for blade [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:TeardownVmediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: teardown-vmedia-local-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverTeardownVmediaLocal
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:TeardownVmediaPeer

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: unprovisioning the Virtual media bootable device for blade [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:TeardownVmediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: teardown-vmedia-peer-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverTeardownVmediaPeer
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeDiscover:hagConnect

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Connect to pre-boot environment agent on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:hagConnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hag-connect-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverHagConnect
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeDiscover:hagDisconnect

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Disconnect pre-boot environment agent for server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:hagDisconnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hag-disconnect-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeBladeDiscoverHagDisconnect
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeUpdateBoardController:BladePowerOff

Fault Code:F78370

Message

[FSM:STAGE:REMOTE-ERROR]: Power off server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeUpdateBoardController:BladePowerOff)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-power-off-failed
mibFaultCode: 78370
mibFaultName: fsmRmtErrComputeBladeUpdateBoardControllerBladePowerOff
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeUpdateBoardController:BladePowerOn

Fault Code:F78370

Message

[FSM:STAGE:REMOTE-ERROR]: Power on server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeUpdateBoardController:BladePowerOn)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-power-on-failed
mibFaultCode: 78370
mibFaultName: fsmRmtErrComputeBladeUpdateBoardControllerBladePowerOn
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeUpdateBoardController:PollUpdateStatus

Fault Code:F78370

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for Board Controller update to complete(FSM-STAGE:sam:dme:ComputeBladeUpdateBoardController:PollUpdateStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: 78370
mibFaultName: fsmRmtErrComputeBladeUpdateBoardControllerPollUpdateStatus
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeBladeUpdateBoardController:PrepareForUpdate

Fault Code:F78370

Message

[FSM:STAGE:REMOTE-ERROR]: Prepare for BoardController update(FSM-STAGE:sam:dme:ComputeBladeUpdateBoardController:PrepareForUpdate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: prepare-for-update-failed
mibFaultCode: 78370
mibFaultName: fsmRmtErrComputeBladeUpdateBoardControllerPrepareForUpdate
moClass: compute:Blade
Type: fsm

fsmRmtErrComputeBladeUpdateBoardController:UpdateRequest

Fault Code:F78370

Message

[FSM:STAGE:REMOTE-ERROR]: Sending Board Controller update request to CIMC(FSM-STAGE:sam:dme:ComputeBladeUpdateBoardController:UpdateRequest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: 78370
mibFaultName: fsmRmtErrComputeBladeUpdateBoardControllerUpdateRequest
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalActivateAdaptor:ActivateLocal

Fault Code:F78484

Message

[FSM:STAGE:REMOTE-ERROR]: activating backup image of Adaptor(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:ActivateLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: activate-local-failed
mibFaultCode: 78484
mibFaultName: fsmRmtErrComputePhysicalActivateAdaptorActivateLocal
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalActivateAdaptor:ActivatePeer

Fault Code:F78484

Message

[FSM:STAGE:REMOTE-ERROR]: activating backup image of Adaptor(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:ActivatePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: activate-peer-failed
mibFaultCode: 78484
mibFaultName: fsmRmtErrComputePhysicalActivateAdaptorActivatePeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalActivateAdaptor:PowerOn

Fault Code:F78484

Message

[FSM:STAGE:REMOTE-ERROR]: power on the blade(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:PowerOn)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: power-on-failed
mibFaultCode: 78484
mibFaultName: fsmRmtErrComputePhysicalActivateAdaptorPowerOn
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalActivateAdaptor:Reset

Fault Code:F78484

Message

[FSM:STAGE:REMOTE-ERROR]: resetting the blade(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:Reset)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: reset-failed
mibFaultCode: 78484
mibFaultName: fsmRmtErrComputePhysicalActivateAdaptorReset
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:BioImgUpdate

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Update blade BIOS image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BioImgUpdate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bios-img-update-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBioImgUpdate
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:BioPostCompletion

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for BIOS POST completion from CIMC on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:BioPostCompletion)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBioPostCompletion
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:BladePowerOff

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Power off server for configuration of service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:BladePowerOff)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-power-off-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBladePowerOff
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:BmcConfigPnuOS

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: provisioning a bootable device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BmcConfigPnuOS)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBmcConfigPnuOS
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:BmcPreconfigPnuOSLocal

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BmcPreconfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-preconfig-pnuoslocal-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBmcPreconfigPnuOSLocal
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:BmcPreconfigPnuOSPeer

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BmcPreconfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-preconfig-pnuospeer-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBmcPreconfigPnuOSPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:BmcUnconfigPnuOS

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: unprovisioning the bootable device for server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BmcUnconfigPnuOS)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-unconfig-pnuos-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBmcUnconfigPnuOS
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:BootHost

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Boot host OS for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BootHost)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: boot-host-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBootHost
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:BootPnuos

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Bring-up pre-boot environment for association with [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:BootPnuos)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: boot-pnuos-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBootPnuos
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:BootWait

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for system reset(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BootWait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: boot-wait-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateBootWait
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:ConfigSoL

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Configuring SoL interface on server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigSoL)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-so-lfailed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateConfigSoL
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:ConfigUserAccess

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Configuring external user access(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigUserAccess)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-user-access-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateConfigUserAccess
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:ConfigUuid

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Configure logical UUID for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigUuid)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-uuid-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateConfigUuid
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:HbaImgUpdate

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Update Host Bus Adapter image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HbaImgUpdate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hba-img-update-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateHbaImgUpdate
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:HostOSConfig

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Configure host OS components on server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HostOSConfig)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hostosconfig-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateHostOSConfig
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:HostOSIdent

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Identify host agent on server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HostOSIdent)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hostosident-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateHostOSIdent
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:HostOSPolicy

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Upload host agent policy to host agent on server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HostOSPolicy)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hostospolicy-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateHostOSPolicy
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:HostOSValidate

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Validate host OS on server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HostOSValidate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hostosvalidate-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateHostOSValidate
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:LocalDiskFwUpdate

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Update LocalDisk firmware image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:LocalDiskFwUpdate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-disk-fw-update-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateLocalDiskFwUpdate
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:NicConfigHostOSLocal

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Configure adapter in server for host OS (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigHostOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-hostoslocal-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateNicConfigHostOSLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:NicConfigHostOSPeer

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Configure adapter in server for host OS (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigHostOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-hostospeer-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateNicConfigHostOSPeer
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:NicConfigPnuOSLocal

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Configure adapter for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-pnuoslocal-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateNicConfigPnuOSLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:NicConfigPnuOSPeer

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Configure adapter for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-pnuospeer-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateNicConfigPnuOSPeer
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:NicImgUpdate

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Update adapter image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicImgUpdate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-img-update-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateNicImgUpdate
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:NicUnconfigPnuOSLocal

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicUnconfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-pnuoslocal-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateNicUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:NicUnconfigPnuOSPeer

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicUnconfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-pnuospeer-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateNicUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:PnuOSConfig

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Configure server with service profile [assignedToDn] pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSConfig)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosconfig-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePnuOSConfig
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:PnuOSIdent

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Identify pre-boot environment agent(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSIdent)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosident-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePnuOSIdent
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:PnuOSInventory

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Perform inventory of server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSInventory)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosinventory-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePnuOSInventory
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:PnuOSLocalDiskConfig

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Configure local disk on server with service profile [assignedToDn] pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSLocalDiskConfig)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuoslocal-disk-config-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePnuOSLocalDiskConfig
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:PnuOSPolicy

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Populate pre-boot environment behavior policy(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSPolicy)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuospolicy-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePnuOSPolicy
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:PnuOSSelfTest

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Trigger self-test on pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSSelfTest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosself-test-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePnuOSSelfTest
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:PnuOSUnloadDrivers

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Unload drivers on server with service profile
[assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSUnloadDrivers)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosunload-drivers-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePnuOSUnloadDrivers
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:PnuOSValidate

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Pre-boot environment validation for association with
[assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSValidate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosvalidate-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePnuOSValidate
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:PollBoardCtrlUpdateStatus

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for Board Controller update to complete(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PollBoardCtrlUpdateStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: poll-board-ctrl-update-status-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePollBoardCtrlUpdateStatus
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:PowerOn

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Power on server for configuration of service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:PowerOn)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: power-on-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePowerOn
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:PreSanitize

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PreSanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePreSanitize
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:PrepareForBoot

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Prepare server for booting host OS(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PrepareForBoot)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: prepare-for-boot-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociatePrepareForBoot
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:Sanitize

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalAssociate:Sanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sanitize-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSanitize
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:SetupVmediaLocal

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: provisioning a Virtual Media device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SetupVmediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setup-vmedia-local-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSetupVmediaLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:SetupVmediaPeer

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: provisioning a Virtual Media device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SetupVmediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setup-vmedia-peer-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSetupVmediaPeer
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:StorageCtrlrImgUpdate

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Update storage controller image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:StorageCtrlrImgUpdate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: storage-ctrlr-img-update-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateStorageCtrlrImgUpdate
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:SwConfigHostOSLocal

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Configure primary fabric interconnect for server host os (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigHostOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-hostoslocal-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSwConfigHostOSLocal
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:SwConfigHostOSPeer

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Configure secondary fabric interconnect for server host OS (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigHostOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-hostospeer-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSwConfigHostOSPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:SwConfigPnuOSLocal

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Configure primary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-pnuoslocal-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSwConfigPnuOSLocal
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:SwConfigPnuOSPeer

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Configure secondary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-pnuospeer-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSwConfigPnuOSPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:SwConfigPortNivLocal

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: configuring primary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigPortNivLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-port-niv-local-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSwConfigPortNivLocal
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:SwConfigPortNivPeer

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: configuring secondary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigPortNivPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-port-niv-peer-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSwConfigPortNivPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:SwUnconfigPnuOSLocal

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure primary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwUnconfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-pnuoslocal-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSwUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:SwUnconfigPnuOSPeer

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure secondary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwUnconfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-pnuospeer-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateSwUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:TeardownVmediaLocal

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: unprovisioning the Virtual Media bootable device for server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:TeardownVmediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: teardown-vmedia-local-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateTeardownVmediaLocal
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:TeardownVmediaPeer

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: unprovisioning the Virtual media bootable device for server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:TeardownVmediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: teardown-vmedia-peer-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateTeardownVmediaPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:UpdateBoardCtrlRequest

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Sending Board Controller update request to CIMC(FSM-STAGE:sam:dme:ComputePhysicalAssociate:UpdateBoardCtrlRequest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-board-ctrl-request-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateUpdateBoardCtrlRequest
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:activateAdaptorNwFwLocal

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Activate adapter network firmware on(FSM-STAGE:sam:dme:ComputePhysicalAssociate:activateAdaptorNwFwLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: activate-adaptor-nw-fw-local-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateActivateAdaptorNwFwLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:activateAdaptorNwFwPeer

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Activate adapter network firmware on(FSM-STAGE:sam:dme:ComputePhysicalAssociate:activateAdaptorNwFwPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: activate-adaptor-nw-fw-peer-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateActivateAdaptorNwFwPeer
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:activateIBMCFw

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Activate CIMC firmware of server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:activateIBMCFw)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: activateibmcfw-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateActivateIBMCFw
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:hagHostOSConnect

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Connect to host agent on server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:hagHostOSConnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hag-hostosconnect-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateHagHostOSConnect
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:hagPnuOSConnect

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Connect to pre-boot environment agent for association with [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:hagPnuOSConnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hag-pnuosconnect-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateHagPnuOSConnect
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:hagPnuOSDisconnect

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Disconnect pre-boot environment agent(FSM-STAGE:sam:dme:ComputePhysicalAssociate:hagPnuOSDisconnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hag-pnuosdisconnect-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateHagPnuOSDisconnect
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:resetBMC

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Reset CIMC of server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:resetBMC)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: resetibmc-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateResetBMC
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:updateAdaptorNwFwLocal

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Update adapter network firmware(FSM-STAGE:sam:dme:ComputePhysicalAssociate:updateAdaptorNwFwLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-adaptor-nw-fw-local-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateUpdateAdaptorNwFwLocal
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:updateAdaptorNwFwPeer

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Update adapter network firmware(FSM-STAGE:sam:dme:ComputePhysicalAssociate:updateAdaptorNwFwPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-adaptor-nw-fw-peer-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateUpdateAdaptorNwFwPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:updateIBMCFw

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Update CIMC firmware of server
[serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:updateIBMCFw)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: updateibmcfw-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateUpdateIBMCFw
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:waitForAdaptorNwFwUpdateLocal

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Wait for adapter network firmware update
completion(FSM-STAGE:sam:dme:ComputePhysicalAssociate:waitForAdaptorNwFwUpdateLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: wait-for-adaptor-nw-fw-update-local-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateWaitForAdaptorNwFwUpdateLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalAssociate:waitForAdaptorNwFwUpdatePeer

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Wait for adapter network firmware update completion(FSM-STAGE:sam:dme:ComputePhysicalAssociate:waitForAdaptorNwFwUpdatePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: wait-for-adaptor-nw-fw-update-peer-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateWaitForAdaptorNwFwUpdatePeer
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalAssociate:waitForIBMCFwUpdate

Fault Code:F78413

Message

[FSM:STAGE:REMOTE-ERROR]: Wait for CIMC firmware completion on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:waitForIBMCFwUpdate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: wait-foribmcfw-update-failed
mibFaultCode: 78413
mibFaultName: fsmRmtErrComputePhysicalAssociateWaitForIBMCFwUpdate
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalBiosRecovery:BiosPostCompletion

Fault Code:F78424

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for BIOS POST completion from CIMC on server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:BiosPostCompletion)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: 78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryBiosPostCompletion
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalBiosRecovery:Cleanup

Fault Code:F78424

Message

[FSM:STAGE:REMOTE-ERROR]: Completing BIOS recovery mode for server [dn], and shutting it down(FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Cleanup)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: cleanup-failed
mibFaultCode: 78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryCleanup
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalBiosRecovery:PreSanitize

Fault Code:F78424

Message

[FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:PreSanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: 78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryPreSanitize
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalBiosRecovery:Reset

Fault Code:F78424

Message

[FSM:STAGE:REMOTE-ERROR]: Resetting server [dn] power state after BIOS recovery(FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Reset)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: reset-failed
mibFaultCode: 78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryReset
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalBiosRecovery:Sanitize

Fault Code:F78424

Message

[FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server
[dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Sanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sanitize-failed
mibFaultCode: 78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoverySanitize
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalBiosRecovery:SetupVmediaLocal

Fault Code:F78424

Message

[FSM:STAGE:REMOTE-ERROR]: Provisioning a V-Media device with a bootable BIOS image for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:SetupVmediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setup-vmedia-local-failed
mibFaultCode: 78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoverySetupVmediaLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalBiosRecovery:SetupVmediaPeer

Fault Code:F78424

Message

[FSM:STAGE:REMOTE-ERROR]: Provisioning a V-Media device with a bootable BIOS image for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:SetupVmediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setup-vmedia-peer-failed
mibFaultCode: 78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoverySetupVmediaPeer
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalBiosRecovery:Shutdown

Fault Code:F78424

Message

[FSM:STAGE:REMOTE-ERROR]: Shutting down server [dn] to prepare for BIOS recovery(FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Shutdown)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support command** and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: shutdown-failed
mibFaultCode: 78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryShutdown
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalBiosRecovery:Start

Fault Code:F78424

Message

[FSM:STAGE:REMOTE-ERROR]: Running BIOS recovery on server
[dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Start)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: start-failed
mibFaultCode: 78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryStart
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalBiosRecovery:StopVMediaLocal

Fault Code:F78424

Message

[FSM:STAGE:REMOTE-ERROR]: Unprovisioning the V-Media bootable device for server
[dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:StopVMediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: stopvmedia-local-failed
mibFaultCode: 78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryStopVMediaLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalBiosRecovery:StopVMediaPeer

Fault Code:F78424

Message

[FSM:STAGE:REMOTE-ERROR]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:StopVMediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: stopvmedia-peer-failed
mibFaultCode: 78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryStopVMediaPeer
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalBiosRecovery:TeardownVmediaLocal

Fault Code:F78424

Message

[FSM:STAGE:REMOTE-ERROR]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:TeardownVmediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: teardown-vmedia-local-failed
mibFaultCode: 78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryTeardownVmediaLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalBiosRecovery:TeardownVmediaPeer

Fault Code:F78424

Message

[FSM:STAGE:REMOTE-ERROR]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:TeardownVmediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: teardown-vmedia-peer-failed
mibFaultCode: 78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryTeardownVmediaPeer
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalBiosRecovery:Wait

Fault Code:F78424

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for completion of BIOS recovery for server [dn] (up to 10 min)(FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Wait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: wait-failed
mibFaultCode: 78424
mibFaultName: fsmRmtErrComputePhysicalBiosRecoveryWait
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalCmosReset:BladePowerOn

Fault Code:F78426

Message

[FSM:STAGE:REMOTE-ERROR]: Power on server
[serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:BladePowerOn)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-power-on-failed
mibFaultCode: 78426
mibFaultName: fsmRmtErrComputePhysicalCmosResetBladePowerOn
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalCmosReset:Execute

Fault Code:F78426

Message

[FSM:STAGE:REMOTE-ERROR]: Resetting CMOS for server
[serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support command** and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78426
mibFaultName: fsmRmtErrComputePhysicalCmosResetExecute
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalCmosReset:PreSanitize

Fault Code:F78426

Message

[FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server [serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:PreSanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: 78426
mibFaultName: fsmRmtErrComputePhysicalCmosResetPreSanitize
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalCmosReset:ReconfigBios

Fault Code:F78426

Message

[FSM:STAGE:REMOTE-ERROR]: Reconfiguring BIOS Settings and Boot Order of server [serverId] for service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:ReconfigBios)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support command** and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: reconfig-bios-failed
mibFaultCode: 78426
mibFaultName: fsmRmtErrComputePhysicalCmosResetReconfigBios
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalCmosReset:ReconfigUuid

Fault Code:F78426

Message

[FSM:STAGE:REMOTE-ERROR]: Reconfiguring logical UUID of server [serverId] for service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:ReconfigUuid)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: reconfig-uuid-failed
mibFaultCode: 78426
mibFaultName: fsmRmtErrComputePhysicalCmosResetReconfigUuid
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalCmosReset:Sanitize

Fault Code:F78426

Message

[FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server [serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:Sanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sanitize-failed
mibFaultCode: 78426
mibFaultName: fsmRmtErrComputePhysicalCmosResetSanitize
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalConfigSoL:Execute

Fault Code:F78523

Message

[FSM:STAGE:REMOTE-ERROR]: configuring SoL interface on server
[dn](FSM-STAGE:sam:dme:ComputePhysicalConfigSoL:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78523
mibFaultName: fsmRmtErrComputePhysicalConfigSoLExecute
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDecommission:Execute

Fault Code:F78416

Message

[FSM:STAGE:REMOTE-ERROR]: Decommissioning server
[dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support command** and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78416
mibFaultName: fsmRmtErrComputePhysicalDecommissionExecute
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDecommission:StopVMediaLocal

Fault Code:F78416

Message

[FSM:STAGE:REMOTE-ERROR]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:StopVMediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: stopvmedia-local-failed
mibFaultCode: 78416
mibFaultName: fsmRmtErrComputePhysicalDecommissionStopVMediaLocal
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDecommission:StopVMediaPeer

Fault Code:F78416

Message

[FSM:STAGE:REMOTE-ERROR]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:StopVMediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: stopvmedia-peer-failed
mibFaultCode: 78416
mibFaultName: fsmRmtErrComputePhysicalDecommissionStopVMediaPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDiagnosticInterrupt:Execute

Fault Code:F78556

Message

[FSM:STAGE:REMOTE-ERROR]: Execute Diagnostic Interrupt(NMI) for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDiagnosticInterrupt:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78556
mibFaultName: fsmRmtErrComputePhysicalDiagnosticInterruptExecute
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:BiosPostCompletion

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for BIOS POST completion from CIMC on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BiosPostCompletion)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateBiosPostCompletion
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:BmcConfigPnuOS

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: provisioning a bootable device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BmcConfigPnuOS)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateBmcConfigPnuOS
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:BmcPreconfigPnuOSLocal

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BmcPreconfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-preconfig-pnuoslocal-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateBmcPreconfigPnuOSLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:BmcPreconfigPnuOSPeer

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BmcPreconfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-preconfig-pnuospeer-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateBmcPreconfigPnuOSPeer
mcClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:BmcUnconfigPnuOS

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: unprovisioning the bootable device for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BmcUnconfigPnuOS)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support command** and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-unconfig-pnuos-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateBmcUnconfigPnuOS
mcClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:BootPnuos

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Bring-up pre-boot environment on server for disassociation with service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BootPnuos)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: boot-pnuos-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateBootPnuos
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:BootWait

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for system reset on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BootWait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support command** and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: boot-wait-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateBootWait
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:ConfigBios

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Configuring BIOS Defaults on server
[serverId](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:ConfigBios)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-bios-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateConfigBios
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:ConfigUserAccess

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Configuring external user
access(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:ConfigUserAccess)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support command** and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-user-access-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateConfigUserAccess
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:HandlePooling

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Apply post-disassociation policies to server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:HandlePooling)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: handle-pooling-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateHandlePooling
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:NicConfigPnuOSLocal

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Configure adapter for pre-boot environment on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicConfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-pnuoslocal-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateNicConfigPnuOSLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:NicConfigPnuOSPeer

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Configure adapter for pre-boot environment on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicConfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-pnuospeer-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateNicConfigPnuOSPeer
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:NicUnconfigHostOSLocal

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure host OS connectivity from server adapter(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigHostOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-hostoslocal-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateNicUnconfigHostOSLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:NicUnconfigHostOSPeer

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure host OS connectivity from server adapter(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigHostOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-hostospeer-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateNicUnconfigHostOSPeer
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:NicUnconfigPnuOSLocal

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-pnuoslocal-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateNicUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:NicUnconfigPnuOSPeer

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-pnuospeer-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateNicUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:PnuOSIdent

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Identify pre-boot environment agent on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSIdent)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support command** and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosident-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociatePnuOSIdent
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:PnuOSPolicy

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Populate pre-boot environment behavior policy to server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSPolicy)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuospolicy-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociatePnuOSPolicy
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:PnuOSScrub

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Scrub server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSScrub)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosscrub-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociatePnuOSScrub
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:PnuOSSelfTest

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Trigger self-test of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSSelfTest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosself-test-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociatePnuOSSelfTest
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:PnuOSUnconfig

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure server from service profile [assignedToDn] pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSUnconfig)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosunconfig-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociatePnuOSUnconfig
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:PnuOSValidate

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Pre-boot environment validate server for disassociation with service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSValidate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosvalidate-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociatePnuOSValidate
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:PowerOn

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Power on server for unconfiguration of service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PowerOn)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: power-on-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociatePowerOn
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:PreSanitize

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PreSanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociatePreSanitize
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:Sanitize

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:Sanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sanitize-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSanitize
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:SetupVmediaLocal

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: provisioning a Virtual Media device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SetupVmediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setup-vmedia-local-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSetupVmediaLocal
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:SetupVmediaPeer

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: provisioning a Virtual Media device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SetupVmediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setup-vmedia-peer-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSetupVmediaPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:Shutdown

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Shutdown
server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:Shutdown)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: shutdown-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateShutdown
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:SwConfigPnuOSLocal

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Configure primary fabric interconnect for pre-boot environment on
server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwConfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-pnuoslocal-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSwConfigPnuOSLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:SwConfigPnuOSPeer

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Configure secondary fabric interconnect for pre-boot environment on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwConfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-pnuospeer-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSwConfigPnuOSPeer
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:SwConfigPortNivLocal

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: configuring primary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwConfigPortNivLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-port-niv-local-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSwConfigPortNivLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:SwConfigPortNivPeer

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: configuring secondary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwConfigPortNivPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-port-niv-peer-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSwConfigPortNivPeer
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:SwUnconfigHostOSLocal

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure host OS connectivity from server to primary fabric interconnect(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwUnconfigHostOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-hostoslocal-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSwUnconfigHostOSLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:SwUnconfigHostOSPeer

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure host OS connectivity from server to secondary fabric interconnect(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwUnconfigHostOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-hostospeer-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSwUnconfigHostOSPeer
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:SwUnconfigPnuOSLocal

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure primary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwUnconfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-pnuoslocal-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSwUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:SwUnconfigPnuOSPeer

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfigure secondary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwUnconfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-pnuospeer-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateSwUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:TeardownVmediaLocal

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: unprovisioning the Virtual Media bootable device for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:TeardownVmediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: teardown-vmedia-local-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateTeardownVmediaLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:TeardownVmediaPeer

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: unprovisioning the Virtual media bootable device for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:TeardownVmediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: teardown-vmedia-peer-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateTeardownVmediaPeer
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:UnconfigBios

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfiguring BIOS Settings and Boot Order of server [serverId] (service profile [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigBios)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: unconfig-bios-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateUnconfigBios
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:UnconfigSoL

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Removing SoL configuration from server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigSoL)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: unconfig-so-lfailed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateUnconfigSoL
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:UnconfigUuid

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Restore original UUID for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigUuid)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: unconfig-uuid-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateUnconfigUuid
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalDisassociate:hagPnuOSConnect

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Connect to pre-boot environment agent on server for disassociation with service profile
[assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:hagPnuOSConnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hag-pnuosconnect-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateHagPnuOSConnect
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalDisassociate:hagPnuOSDisconnect

Fault Code:F78414

Message

[FSM:STAGE:REMOTE-ERROR]: Disconnect pre-boot environment agent for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:hagPnuOSDisconnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hag-pnuosdisconnect-failed
mibFaultCode: 78414
mibFaultName: fsmRmtErrComputePhysicalDisassociateHagPnuOSDisconnect
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalHardShutdown:Execute

Fault Code:F78418

Message

[FSM:STAGE:REMOTE-ERROR]: Hard shutdown of server
[dn](FSM-STAGE:sam:dme:ComputePhysicalHardShutdown:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78418
mibFaultName: fsmRmtErrComputePhysicalHardShutdownExecute
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalHardreset:Execute

Fault Code:F78421

Message

[FSM:STAGE:REMOTE-ERROR]: Hard-reset server
[dn](FSM-STAGE:sam:dme:ComputePhysicalHardreset:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78421
mibFaultName: fsmRmtErrComputePhysicalHardresetExecute
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalHardreset:PreSanitize

Fault Code:F78421

Message

[FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server
[dn](FSM-STAGE:sam:dme:ComputePhysicalHardreset:PreSanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: 78421
mibFaultName: fsmRmtErrComputePhysicalHardresetPreSanitize
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalHardreset:Sanitize

Fault Code:F78421

Message

[FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server
[dn](FSM-STAGE:sam:dme:ComputePhysicalHardreset:Sanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sanitize-failed
mibFaultCode: 78421
mibFaultName: fsmRmtErrComputePhysicalHardresetSanitize
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalPowerCap:Config

Fault Code:F78415

Message

[FSM:STAGE:REMOTE-ERROR]: Configuring power cap of server
[dn](FSM-STAGE:sam:dme:ComputePhysicalPowerCap:Config)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-failed
mibFaultCode: 78415
mibFaultName: fsmRmtErrComputePhysicalPowerCapConfig
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalPowercycle:Execute

Fault Code:F78420

Message

[FSM:STAGE:REMOTE-ERROR]: Power-cycle server
[dn](FSM-STAGE:sam:dme:ComputePhysicalPowercycle:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78420
mibFaultName: fsmRmtErrComputePhysicalPowercycleExecute
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalPowercycle:PreSanitize

Fault Code:F78420

Message

[FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server
[dn](FSM-STAGE:sam:dme:ComputePhysicalPowercycle:PreSanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: 78420
mibFaultName: fsmRmtErrComputePhysicalPowercyclePreSanitize
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalPowercycle:Sanitize

Fault Code:F78420

Message

[FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server
[dn](FSM-STAGE:sam:dme:ComputePhysicalPowercycle:Sanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sanitize-failed
mibFaultCode: 78420
mibFaultName: fsmRmtErrComputePhysicalPowercycleSanitize
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalResetBmc:Execute

Fault Code:F78427

Message

[FSM:STAGE:REMOTE-ERROR]: Resetting Management Controller on server
[dn](FSM-STAGE:sam:dme:ComputePhysicalResetBmc:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78427
mibFaultName: fsmRmtErrComputePhysicalResetBmcExecute
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalResetKvm:Execute

Fault Code:F78603

Message

[FSM:STAGE:REMOTE-ERROR]: Execute KVM Reset for server
[dn](FSM-STAGE:sam:dme:ComputePhysicalResetKvm:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78603
mibFaultName: fsmRmtErrComputePhysicalResetKvmExecute
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalSoftShutdown:Execute

Fault Code:F78417

Message

[FSM:STAGE:REMOTE-ERROR]: Soft shutdown of server
[dn](FSM-STAGE:sam:dme:ComputePhysicalSoftShutdown:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78417
mibFaultName: fsmRmtErrComputePhysicalSoftShutdownExecute
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalSoftreset:Execute

Fault Code:F78422

Message

[FSM:STAGE:REMOTE-ERROR]: Soft-reset server
[dn](FSM-STAGE:sam:dme:ComputePhysicalSoftreset:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78422
mibFaultName: fsmRmtErrComputePhysicalSoftresetExecute
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalSoftreset:PreSanitize

Fault Code:F78422

Message

[FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server
[dn](FSM-STAGE:sam:dme:ComputePhysicalSoftreset:PreSanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: 78422
mibFaultName: fsmRmtErrComputePhysicalSoftresetPreSanitize
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalSoftreset:Sanitize

Fault Code:F78422

Message

[FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server
[dn](FSM-STAGE:sam:dme:ComputePhysicalSoftreset:Sanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sanitize-failed
mibFaultCode: 78422
mibFaultName: fsmRmtErrComputePhysicalSoftresetSanitize
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalSwConnUpd:A

Fault Code:F78423

Message

[FSM:STAGE:REMOTE-ERROR]: Updating fabric A for server
[dn](FSM-STAGE:sam:dme:ComputePhysicalSwConnUpd:A)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: a-failed
mibFaultCode: 78423
mibFaultName: fsmRmtErrComputePhysicalSwConnUpdA
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalSwConnUpd:B

Fault Code:F78423

Message

[FSM:STAGE:REMOTE-ERROR]: Updating fabric B for server
[dn](FSM-STAGE:sam:dme:ComputePhysicalSwConnUpd:B)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: b-failed
mibFaultCode: 78423
mibFaultName: fsmRmtErrComputePhysicalSwConnUpdB
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalTurnup:Execute

Fault Code:F78419

Message

[FSM:STAGE:REMOTE-ERROR]: Power-on server
[dn](FSM-STAGE:sam:dme:ComputePhysicalTurnup:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78419
mibFaultName: fsmRmtErrComputePhysicalTurnupExecute
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalUnconfigSoL:Execute

Fault Code:F78524

Message

[FSM:STAGE:REMOTE-ERROR]: removing SoL interface configuration from server
[dn](FSM-STAGE:sam:dme:ComputePhysicalUnconfigSoL:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78524
mibFaultName: fsmRmtErrComputePhysicalUnconfigSoLExecute
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalUpdateAdaptor:PollUpdateStatusLocal

Fault Code:F78483

Message

[FSM:STAGE:REMOTE-ERROR]: waiting for update to complete(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:PollUpdateStatusLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: poll-update-status-local-failed
mibFaultCode: 78483
mibFaultName: fsmRmtErrComputePhysicalUpdateAdaptorPollUpdateStatusLocal
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalUpdateAdaptor:PollUpdateStatusPeer

Fault Code:F78483

Message

[FSM:STAGE:REMOTE-ERROR]: waiting for update to complete(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:PollUpdateStatusPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: poll-update-status-peer-failed
mibFaultCode: 78483
mibFaultName: fsmRmtErrComputePhysicalUpdateAdaptorPollUpdateStatusPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalUpdateAdaptor:PowerOff

Fault Code:F78483

Message

[FSM:STAGE:REMOTE-ERROR]: Power off the server(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:PowerOff)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: power-off-failed
mibFaultCode: 78483
mibFaultName: fsmRmtErrComputePhysicalUpdateAdaptorPowerOff
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalUpdateAdaptor:PowerOn

Fault Code:F78483

Message

[FSM:STAGE:REMOTE-ERROR]: power on the blade(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:PowerOn)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: power-on-failed
mibFaultCode: 78483
mibFaultName: fsmRmtErrComputePhysicalUpdateAdaptorPowerOn
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalUpdateAdaptor:UpdateRequestLocal

Fault Code:F78483

Message

[FSM:STAGE:REMOTE-ERROR]: sending update request to Adaptor(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:UpdateRequestLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-request-local-failed
mibFaultCode: 78483
mibFaultName: fsmRmtErrComputePhysicalUpdateAdaptorUpdateRequestLocal
moClass: compute:Physical
Type: fsm

fsmRmtErrComputePhysicalUpdateAdaptor:UpdateRequestPeer

Fault Code:F78483

Message

[FSM:STAGE:REMOTE-ERROR]: sending update request to Adaptor(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:UpdateRequestPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-request-peer-failed
mibFaultCode: 78483
mibFaultName: fsmRmtErrComputePhysicalUpdateAdaptorUpdateRequestPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputePhysicalUpdateExtUsers:Deploy

Fault Code:F78448

Message

[FSM:STAGE:REMOTE-ERROR]: external mgmt user deployment on server [dn] (profile [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalUpdateExtUsers:Deploy)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: deploy-failed
mibFaultCode: 78448
mibFaultName: fsmRmtErrComputePhysicalUpdateExtUsersDeploy
moClass: compute:Physical
Type: fsm

fsmRmtErrComputeRackUnitDiscover:BiosPostCompletion

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for BIOS POST completion from CIMC on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BiosPostCompletion)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBiosPostCompletion
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:BmcConfigPnuOS

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: provisioning a bootable device with a bootable pre-boot image for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcConfigPnuOS)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcConfigPnuOS
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:BmcConfigureConnLocal

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Configuring connectivity on CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcConfigureConnLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-configure-conn-local-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcConfigureConnLocal
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:BmcConfigureConnPeer

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Configuring connectivity on CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcConfigureConnPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-configure-conn-peer-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcConfigureConnPeer
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:BmcInventory

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: getting inventory of server [id] via CIMC(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcInventory)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-inventory-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcInventory
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:BmcPreconfigPnuOSLocal

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: prepare configuration for preboot environment(FSM-STAGE:sam:dmc:ComputeRackUnitDiscover:BmcPreconfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-preconfig-pnuoslocal-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcPreconfigPnuOSLocal
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:BmcPreconfigPnuOSPeer

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: prepare configuration for preboot environment(FSM-STAGE:sam:dmc:ComputeRackUnitDiscover:BmcPreconfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-preconfig-pnuospeer-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcPreconfigPnuOSPeer
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:BmcPresence

Fault Code:F7960

Message

[FSM:STAGE:REMOTE-ERROR]: checking CIMC of server
[id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcPresence)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-presence-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcPresence
mcClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:BmcShutdownDiscovered

Fault Code:F7960

Message

[FSM:STAGE:REMOTE-ERROR]: Shutdown the server [id]; deep discovery
completed(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcShutdownDiscovered)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-shutdown-discovered-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcShutdownDiscovered
mcClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:BmcUnconfigPnuOS

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: unprovisioning the bootable device for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcUnconfigPnuOS)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-unconfig-pnuos-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBmcUnconfigPnuOS
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:BootPnuos

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: power server [id] on with pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BootPnuos)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: boot-pnuos-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBootPnuos
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:BootWait

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for system reset on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BootWait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: boot-wait-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverBootWait
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:ConfigDiscoveryMode

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: setting adapter mode to discovery for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:ConfigDiscoveryMode)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-discovery-mode-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverConfigDiscoveryMode
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:ConfigNivMode

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: setting adapter mode to NIV for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:ConfigNivMode)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-niv-mode-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverConfigNivMode
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:ConfigUserAccess

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: configuring external user access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:ConfigUserAccess)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-user-access-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverConfigUserAccess
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:HandlePooling

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Invoke post-discovery policies on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:HandlePooling)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: handle-pooling-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverHandlePooling
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:NicInventoryLocal

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: detect and get mezz cards information from [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:NicInventoryLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-inventory-local-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverNicInventoryLocal
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:NicInventoryPeer

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: detect and get mezz cards information from [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:NicInventoryPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-inventory-peer-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverNicInventoryPeer
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:PnuOSConnStatus

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Explore connectivity of server [id] in pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSConnStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosconn-status-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPnuOSConnStatus
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:PnuOSConnectivity

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Explore connectivity of server [id] in pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSConnectivity)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosconnectivity-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPnuOSConnectivity
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:PnuOSIdent

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Identify pre-boot environment agent on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSIdent)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosident-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPnuOSIdent
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:PnuOSInventory

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Perform inventory of server [id] pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSInventory)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosinventory-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPnuOSInventory
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:PnuOSPolicy

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Populate pre-boot environment behavior policy to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSPolicy)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuospolicy-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPnuOSPolicy
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:PnuOSScrub

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Scrub server
[id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSScrub)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosscrub-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPnuOSScrub
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:PnuOSSelfTest

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Trigger self-test of server [id] pre-boot
environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSSelfTest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosself-test-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPnuOSSelfTest
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:PreSanitize

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Preparing to check hardware configuration server
[id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PreSanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverPreSanitize
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:ReadSmbios

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for SMBIOS table from CIMC on server
[id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:ReadSmbios)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: read-smbios-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverReadSmbios
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:Sanitize

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Checking hardware configuration server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:Sanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sanitize-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSanitize
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:SwConfigPnuOSLocal

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: configure primary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-pnuoslocal-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwConfigPnuOSLocal
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:SwConfigPnuOSPeer

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: configure secondary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-pnuospeer-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwConfigPnuOSPeer
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:SwConfigPortNivLocal

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: configuring primary fabric interconnect access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigPortNivLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-port-niv-local-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwConfigPortNivLocal
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:SwConfigPortNivPeer

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: configuring secondary fabric interconnect access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigPortNivPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-port-niv-peer-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwConfigPortNivPeer
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:SwConfigureConnLocal

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Configuring fabric-interconnect connectivity to CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigureConnLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-configure-conn-local-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwConfigureConnLocal
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:SwConfigureConnPeer

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Configuring fabric-interconnect connectivity to CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigureConnPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-configure-conn-peer-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwConfigureConnPeer
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:SwPnuOSConnectivityLocal

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: determine connectivity of server [id] to fabric(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwPnuOSConnectivityLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-pnuosconnectivity-local-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwPnuOSConnectivityLocal
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:SwPnuOSConnectivityPeer

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: determine connectivity of server [id] to fabric(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwPnuOSConnectivityPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-pnuosconnectivity-peer-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwPnuOSConnectivityPeer
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:SwUnconfigPortNivLocal

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfiguring primary fabric interconnect access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwUnconfigPortNivLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-port-niv-local-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwUnconfigPortNivLocal
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:SwUnconfigPortNivPeer

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfiguring secondary fabric interconnect access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwUnconfigPortNivPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-port-niv-peer-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverSwUnconfigPortNivPeer
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:hagConnect

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Connect to pre-boot environment agent on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:hagConnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hag-connect-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverHagConnect
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitDiscover:hagDisconnect

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: Disconnect pre-boot environment agent for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:hagDisconnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hag-disconnect-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverHagDisconnect
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitDiscover:waitForConnReady

Fault Code:F77960

Message

[FSM:STAGE:REMOTE-ERROR]: wait for connection to be established(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:waitForConnReady)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: wait-for-conn-ready-failed
mibFaultCode: 77960
mibFaultName: fsmRmtErrComputeRackUnitDiscoverWaitForConnReady
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitOffline:CleanupLocal

Fault Code:F78610

Message

[FSM:STAGE:REMOTE-ERROR]: cleaning host entries on local fabric-interconnect(FSM-STAGE:sam:dme:ComputeRackUnitOffline:CleanupLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: cleanup-local-failed
mibFaultCode: 78610
mibFaultName: fsmRmtErrComputeRackUnitOfflineCleanupLocal
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitOffline:CleanupPeer

Fault Code:F78610

Message

[FSM:STAGE:REMOTE-ERROR]: cleaning host entries on peer fabric-interconnect(FSM-STAGE:sam:dme:ComputeRackUnitOffline:CleanupPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: cleanup-peer-failed
mibFaultCode: 78610
mibFaultName: fsmRmtErrComputeRackUnitOfflineCleanupPeer
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrComputeRackUnitOffline:SwUnconfigureLocal

Fault Code:F78610

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfiguring fabric-interconnect connectivity to CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitOffline:SwUnconfigureLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfigure-local-failed
mibFaultCode: 78610
mibFaultName: fsmRmtErrComputeRackUnitOfflineSwUnconfigureLocal
moClass: compute:RackUnit
Type: fsm

fsmRmtErrComputeRackUnitOffline:SwUnconfigurePeer

Fault Code:F78610

Message

[FSM:STAGE:REMOTE-ERROR]: Unconfiguring fabric-interconnect connectivity to CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitOffline:SwUnconfigurePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfigure-peer-failed
mibFaultCode: 78610
mibFaultName: fsmRmtErrComputeRackUnitOfflineSwUnconfigurePeer
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrEpqosDefinitionDelTaskRemove:Local

Fault Code:F78190

Message

[FSM:STAGE:REMOTE-ERROR]: vnic qos policy [name] removal from primary(FSM-STAGE:sam:dme:EpqosDefinitionDelTaskRemove:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78190
mibFaultName: fsmRmtErrEpqosDefinitionDelTaskRemoveLocal
moClass: epqos:DefinitionDelTask
Type: fsm

fsmRmtErrEpqosDefinitionDelTaskRemove:Peer

Fault Code:F78190

Message

[FSM:STAGE:REMOTE-ERROR]: vnic qos policy [name] removal from secondary(FSM-STAGE:sam:dme:EpqosDefinitionDelTaskRemove:Peer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: peer-failed
mibFaultCode: 78190
mibFaultName: fsmRmtErrEpqosDefinitionDelTaskRemovePeer
moClass: epqos:DefinitionDelTask
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrEpqosDefinitionDeploy:Local

Fault Code:F78189

Message

[FSM:STAGE:REMOTE-ERROR]: vnic qos policy [name] configuration to primary(FSM-STAGE:sam:dme:EpqosDefinitionDeploy:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78189
mibFaultName: fsmRmtErrEpqosDefinitionDeployLocal
moClass: epqos:Definition
Type: fsm

fsmRmtErrEpqosDefinitionDeploy:Peer

Fault Code:F78189

Message

[FSM:STAGE:REMOTE-ERROR]: vnic qos policy [name] configuration to secondary(FSM-STAGE:sam:dme:EpqosDefinitionDeploy:Peer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: peer-failed
mibFaultCode: 78189
mibFaultName: fsmRmtErrEpqosDefinitionDeployPeer
moClass: epqos:Definition
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrEquipmentChassisDynamicReallocation:Config

Fault Code:F78574

Message

[FSM:STAGE:REMOTE-ERROR]:
(FSM-STAGE:sam:dme:EquipmentChassisDynamicReallocation:Config)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-failed
mibFaultCode: 78574
mibFaultName: fsmRmtErrEquipmentChassisDynamicReallocationConfig
moClass: equipment:Chassis
Type: fsm

fsmRmtErrEquipmentChassisPowerCap:Config

Fault Code:F78415

Message

[FSM:STAGE:REMOTE-ERROR]: (FSM-STAGE:sam:dme:EquipmentChassisPowerCap:Config)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-failed
mibFaultCode: 78415
mibFaultName: fsmRmtErrEquipmentChassisPowerCapConfig
moClass: equipment:Chassis
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrEquipmentChassisPsuPolicyConfig:Execute

Fault Code:F7973

Message

[FSM:STAGE:REMOTE-ERROR]: Deploying Power Management policy changes on chassis [id](FSM-STAGE:sam:dme:EquipmentChassisPsuPolicyConfig:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 77973
mibFaultName: fsmRmtErrEquipmentChassisPsuPolicyConfigExecute
moClass: equipment:Chassis
Type: fsm

fsmRmtErrEquipmentChassisRemoveChassis:DisableEndPoint

Fault Code:F7847

Message

[FSM:STAGE:REMOTE-ERROR]: unconfiguring access to chassis [id](FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:DisableEndPoint)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: disable-end-point-failed
mibFaultCode: 77847
mibFaultName: fsmRmtErrEquipmentChassisRemoveChassisDisableEndPoint
moClass: equipment:Chassis
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrEquipmentChassisRemoveChassis:UnIdentifyLocal

Fault Code:F77847

Message

[FSM:STAGE:REMOTE-ERROR]: erasing chassis identity [id] from primary(FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:UnIdentifyLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: un-identify-local-failed
mibFaultCode: 77847
mibFaultName: fsmRmtErrEquipmentChassisRemoveChassisUnIdentifyLocal
moClass: equipment:Chassis
Type: fsm

fsmRmtErrEquipmentChassisRemoveChassis:UnIdentifyPeer

Fault Code:F77847

Message

[FSM:STAGE:REMOTE-ERROR]: erasing chassis identity [id] from secondary(FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:UnIdentifyPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: un-identify-peer-failed
mibFaultCode: 77847
mibFaultName: fsmRmtErrEquipmentChassisRemoveChassisUnIdentifyPeer
moClass: equipment:Chassis
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrEquipmentChassisRemoveChassis:Wait

Fault Code:F77847

Message

[FSM:STAGE:REMOTE-ERROR]: waiting for clean up of resources for chassis [id] (approx. 2 min)(FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:Wait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: wait-failed
mibFaultCode: 77847
mibFaultName: fsmRmtErrEquipmentChassisRemoveChassisWait
moClass: equipment:Chassis
Type: fsm

fsmRmtErrEquipmentChassisRemoveChassis:decomission

Fault Code:F77847

Message

[FSM:STAGE:REMOTE-ERROR]: decomissioning chassis [id](FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:decomission)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: decomission-failed
mibFaultCode: 77847
mibFaultName: fsmRmtErrEquipmentChassisRemoveChassisDecomission
moClass: equipment:Chassis
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrEquipmentFexRemoveFex:CleanupEntries

Fault Code:F78382

Message

[FSM:STAGE:REMOTE-ERROR]: cleaning host entries(FSM-STAGE:sam:dme:EquipmentFexRemoveFex:CleanupEntries)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: cleanup-entries-failed
mibFaultCode: 78382
mibFaultName: fsmRmtErrEquipmentFexRemoveFexCleanupEntries
moClass: equipment:Fex
Type: fsm

fsmRmtErrEquipmentFexRemoveFex:UnIdentifyLocal

Fault Code:F78382

Message

[FSM:STAGE:REMOTE-ERROR]: erasing fex identity [id] from primary(FSM-STAGE:sam:dme:EquipmentFexRemoveFex:UnIdentifyLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: un-identify-local-failed
mibFaultCode: 78382
mibFaultName: fsmRmtErrEquipmentFexRemoveFexUnIdentifyLocal
moClass: equipment:Fex
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrEquipmentFexRemoveFex:Wait

Fault Code:F78382

Message

[FSM:STAGE:REMOTE-ERROR]: waiting for clean up of resources for chassis [id] (approx. 2 min)(FSM-STAGE:sam:dme:EquipmentFexRemoveFex:Wait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: wait-failed
mibFaultCode: 78382
mibFaultName: fsmRmtErrEquipmentFexRemoveFexWait
moClass: equipment:Fex
Type: fsm

fsmRmtErrEquipmentFexRemoveFex:decomission

Fault Code:F78382

Message

[FSM:STAGE:REMOTE-ERROR]: decomissioning fex [id](FSM-STAGE:sam:dme:EquipmentFexRemoveFex:decomission)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: decomission-failed
mibFaultCode: 78382
mibFaultName: fsmRmtErrEquipmentFexRemoveFexDecomission
moClass: equipment:Fex
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrEquipmentIOCardFeConn:ConfigureEndPoint

Fault Code:F77846

Message

[FSM:STAGE:REMOTE-ERROR]: configuring management identity to IOM
[chassisId]/[id]([side])(FSM-STAGE:sam:dme:EquipmentIOCardFeConn:ConfigureEndPoint)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: configure-end-point-failed
mibFaultCode: 77846
mibFaultName: fsmRmtErrEquipmentIOCardFeConnConfigureEndPoint
moClass: equipment:IOCard
Type: fsm

fsmRmtErrEquipmentIOCardFeConn:ConfigureSwMgmtEndPoint

Fault Code:F77846

Message

[FSM:STAGE:REMOTE-ERROR]: configuring fabric interconnect [switchId] mgmt connectivity to IOM
[chassisId]/[id]([side])(FSM-STAGE:sam:dme:EquipmentIOCardFeConn:ConfigureSwMgmtEndPoint
)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: configure-sw-mgmt-end-point-failed
mibFaultCode: 77846
mibFaultName: fsmRmtErrEquipmentIOCardFeConnConfigureSwMgmtEndPoint
moClass: equipment:IOCard
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrEquipmentIOCardFeConn:ConfigureVifNs

Fault Code:F77846

Message

[FSM:STAGE:REMOTE-ERROR]: configuring IOM [chassisId]/[id]([side]) virtual name space(FSM-STAGE:sam:dme:EquipmentIOCardFeConn:ConfigureVifNs)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: configure-vif-ns-failed
mibFaultCode: 77846
mibFaultName: fsmRmtErrEquipmentIOCardFeConnConfigureVifNs
moClass: equipment:IOCard
Type: fsm

fsmRmtErrEquipmentIOCardFeConn:DiscoverChassis

Fault Code:F77846

Message

[FSM:STAGE:REMOTE-ERROR]: triggerring chassis discovery via IOM [chassisId]/[id]([side])(FSM-STAGE:sam:dme:EquipmentIOCardFeConn:DiscoverChassis)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: discover-chassis-failed
mibFaultCode: 77846
mibFaultName: fsmRmtErrEquipmentIOCardFeConnDiscoverChassis
moClass: equipment:IOCard
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrEquipmentIOCardFeConn:EnableChassis

Fault Code:F77846

Message

[FSM:STAGE:REMOTE-ERROR]: enabling chassis [chassisId] on [side]
side(FSM-STAGE:sam:dme:EquipmentIOCardFeConn:EnableChassis)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: enable-chassis-failed
mibFaultCode: 77846
mibFaultName: fsmRmtErrEquipmentIOCardFeConnEnableChassis
moClass: equipment:IOCard
Type: fsm

fsmRmtErrEquipmentIOCardFePresence:CheckLicense

Fault Code:F77845

Message

[FSM:STAGE:REMOTE-ERROR]: Checking license for chassis [chassisId] (iom
[id])(FSM-STAGE:sam:dme:EquipmentIOCardFePresence:CheckLicense)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: check-license-failed
mibFaultCode: 77845
mibFaultName: fsmRmtErrEquipmentIOCardFePresenceCheckLicense
moClass: equipment:IOCard
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrEquipmentIOCardFePresence:Identify

Fault Code:F77845

Message

[FSM:STAGE:REMOTE-ERROR]: identifying IOM
[chassisId]/[id](FSM-STAGE:sam:dme:EquipmentIOCardFePresence:Identify)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: identify-failed
mibFaultCode: 77845
mibFaultName: fsmRmtErrEquipmentIOCardFePresenceIdentify
moClass: equipment:IOCard
Type: fsm

fsmRmtErrEquipmentIOCardMuxOffline:CleanupEntries

Fault Code:F78385

Message

[FSM:STAGE:REMOTE-ERROR]: cleaning host
entries(FSM-STAGE:sam:dme:EquipmentIOCardMuxOffline:CleanupEntries)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: cleanup-entries-failed
mibFaultCode: 78385
mibFaultName: fsmRmtErrEquipmentIOCardMuxOfflineCleanupEntries
moClass: equipment:IOCard
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrEquipmentIOCardResetCmc:Execute

Fault Code:F78243

Message

[FSM:STAGE:REMOTE-ERROR]: Resetting Chassis Management Controller on IOM
[chassisId]/[id](FSM-STAGE:sam:dme:EquipmentIOCardResetCmc:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78243
mibFaultName: fsmRmtErrEquipmentIOCardResetCmcExecute
moClass: equipment:IOCard
Type: fsm

fsmRmtErrEquipmentIOCardResetIom:Execute

Fault Code:F78428

Message

[FSM:STAGE:REMOTE-ERROR]: Reset IOM [id] on Fex
[chassisId](FSM-STAGE:sam:dme:EquipmentIOCardResetIom:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78428
mibFaultName: fsmRmtErrEquipmentIOCardResetIomExecute
moClass: equipment:IOCard
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrEquipmentLocatorLedSetFeLocatorLed:Execute

Fault Code:F78383

Message

[FSM:STAGE:REMOTE-ERROR]: setting locator led to
[adminState](FSM-STAGE:sam:dme:EquipmentLocatorLedSetFeLocatorLed:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78383
mibFaultName: fsmRmtErrEquipmentLocatorLedSetFeLocatorLedExecute
moClass: equipment:LocatorLed
Type: fsm

fsmRmtErrEquipmentLocatorLedSetLocatorLed:Execute

Fault Code:F77848

Message

[FSM:STAGE:REMOTE-ERROR]: setting locator led to
[adminState](FSM-STAGE:sam:dme:EquipmentLocatorLedSetLocatorLed:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 77848
mibFaultName: fsmRmtErrEquipmentLocatorLedSetLocatorLedExecute
moClass: equipment:LocatorLed
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrExtvmmKeyStoreCertInstall:SetLocal

Fault Code:F78320

Message

[FSM:STAGE:REMOTE-ERROR]: external VM manager cetificate configuration on local fabric(FSM-STAGE:sam:dme:ExtvmmKeyStoreCertInstall:SetLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-local-failed
mibFaultCode: 78320
mibFaultName: fsmRmtErrExtvmmKeyStoreCertInstallSetLocal
moClass: extvmm:KeyStore
Type: fsm

fsmRmtErrExtvmmKeyStoreCertInstall:SetPeer

Fault Code:F78320

Message

[FSM:STAGE:REMOTE-ERROR]: external VM manager certificate configuration on peer fabric(FSM-STAGE:sam:dme:ExtvmmKeyStoreCertInstall:SetPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-peer-failed
mibFaultCode: 78320
mibFaultName: fsmRmtErrExtvmmKeyStoreCertInstallSetPeer
moClass: extvmm:KeyStore
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrExtvmmMasterExtKeyConfig:SetLocal

Fault Code:F78319

Message

[FSM:STAGE:REMOTE-ERROR]: external VM manager extension-key configuration on peer fabric(FSM-STAGE:sam:dme:ExtvmmMasterExtKeyConfig:SetLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-local-failed
mibFaultCode: 78319
mibFaultName: fsmRmtErrExtvmmMasterExtKeyConfigSetLocal
moClass: extvmm:MasterExtKey
Type: fsm

fsmRmtErrExtvmmMasterExtKeyConfig:SetPeer

Fault Code:F78319

Message

[FSM:STAGE:REMOTE-ERROR]: external VM manager extension-key configuration on local fabric(FSM-STAGE:sam:dme:ExtvmmMasterExtKeyConfig:SetPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-peer-failed
mibFaultCode: 78319
mibFaultName: fsmRmtErrExtvmmMasterExtKeyConfigSetPeer
moClass: extvmm:MasterExtKey
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrExtvmmProviderConfig:GetVersion

Fault Code:F78319

Message

[FSM:STAGE:REMOTE-ERROR]: external VM manager version
fetch(FSM-STAGE:sam:dme:ExtvmmProviderConfig:GetVersion)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: get-version-failed
mibFaultCode: 78319
mibFaultName: fsmRmtErrExtvmmProviderConfigGetVersion
moClass: extvmm:Provider
Type: fsm

fsmRmtErrExtvmmProviderConfig:SetLocal

Fault Code:F78319

Message

[FSM:STAGE:REMOTE-ERROR]: external VM manager configuration on local
fabric(FSM-STAGE:sam:dme:ExtvmmProviderConfig:SetLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-local-failed
mibFaultCode: 78319
mibFaultName: fsmRmtErrExtvmmProviderConfigSetLocal
moClass: extvmm:Provider
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrExtvmmProviderConfig:SetPeer

Fault Code:F78319

Message

[FSM:STAGE:REMOTE-ERROR]: external VM manager configuration on peer fabric(FSM-STAGE:sam:dme:ExtvmmProviderConfig:SetPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-peer-failed
mibFaultCode: 78319
mibFaultName: fsmRmtErrExtvmmProviderConfigSetPeer
moClass: extvmm:Provider
Type: fsm

fsmRmtErrExtvmmSwitchDelTaskRemoveProvider:RemoveLocal

Fault Code:F78321

Message

[FSM:STAGE:REMOTE-ERROR]: external VM manager deletion from local fabric(FSM-STAGE:sam:dme:ExtvmmSwitchDelTaskRemoveProvider:RemoveLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support command** and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: remove-local-failed
mibFaultCode: 78321
mibFaultName: fsmRmtErrExtvmmSwitchDelTaskRemoveProviderRemoveLocal
moClass: extvmm:SwitchDelTask
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrFabricComputeSlotEpIdentify:ExecuteLocal

Fault Code:F77959

Message

[FSM:STAGE:REMOTE-ERROR]: identifying a server in [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:FabricComputeSlotEpIdentify:ExecuteLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-local-failed
mibFaultCode: 77959
mibFaultName: fsmRmtErrFabricComputeSlotEpIdentifyExecuteLocal
moClass: fabric:ComputeSlotEp
Type: fsm

fsmRmtErrFabricComputeSlotEpIdentify:ExecutePeer

Fault Code:F77959

Message

[FSM:STAGE:REMOTE-ERROR]: identifying a server in [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:FabricComputeSlotEpIdentify:ExecutePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-peer-failed
mibFaultCode: 77959
mibFaultName: fsmRmtErrFabricComputeSlotEpIdentifyExecutePeer
moClass: fabric:ComputeSlotEp
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrFabricLanCloudSwitchMode:SwConfigLocal

Fault Code:F77979

Message

[FSM:STAGE:REMOTE-ERROR]:
(FSM-STAGE:sam:dme:FabricLanCloudSwitchMode:SwConfigLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-local-failed
mibFaultCode: 77979
mibFaultName: fsmRmtErrFabricLanCloudSwitchModeSwConfigLocal
moClass: fabric:LanCloud
Type: fsm

fsmRmtErrFabricLanCloudSwitchMode:SwConfigPeer

Fault Code:F77979

Message

[FSM:STAGE:REMOTE-ERROR]: Fabric interconnect mode configuration to primary(FSM-STAGE:sam:dme:FabricLanCloudSwitchMode:SwConfigPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-peer-failed
mibFaultCode: 77979
mibFaultName: fsmRmtErrFabricLanCloudSwitchModeSwConfigPeer
moClass: fabric:LanCloud
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrFabricSanCloudSwitchMode:SwConfigLocal

Fault Code:F77979

Message

[FSM:STAGE:REMOTE-ERROR]:
(FSM-STAGE:sam:dme:FabricSanCloudSwitchMode:SwConfigLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-local-failed
mibFaultCode: 77979
mibFaultName: fsmRmtErrFabricSanCloudSwitchModeSwConfigLocal
moClass: fabric:SanCloud
Type: fsm

fsmRmtErrFabricSanCloudSwitchMode:SwConfigPeer

Fault Code:F77979

Message

[FSM:STAGE:REMOTE-ERROR]: Fabric interconnect FC mode configuration to primary(FSM-STAGE:sam:dme:FabricSanCloudSwitchMode:SwConfigPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-peer-failed
mibFaultCode: 77979
mibFaultName: fsmRmtErrFabricSanCloudSwitchModeSwConfigPeer
moClass: fabric:SanCloud
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrFirmwareDistributableDelete:Local

Fault Code:F78091

Message

[FSM:STAGE:REMOTE-ERROR]: deleting package [name] from primary(FSM-STAGE:sam:dme:FirmwareDistributableDelete:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78091
mibFaultName: fsmRmtErrFirmwareDistributableDeleteLocal
moClass: firmware:Distributable
Type: fsm

fsmRmtErrFirmwareDistributableDelete:Remote

Fault Code:F78091

Message

[FSM:STAGE:REMOTE-ERROR]: deleting package [name] from secondary(FSM-STAGE:sam:dme:FirmwareDistributableDelete:Remote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: remote-failed
mibFaultCode: 78091
mibFaultName: fsmRmtErrFirmwareDistributableDeleteRemote
moClass: firmware:Distributable
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrFirmwareDownloaderDownload:CopyRemote

Fault Code:F78090

Message

[FSM:STAGE:REMOTE-ERROR]: sync images to subordinate(FSM-STAGE:sam:dme:FirmwareDownloaderDownload:CopyRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: copy-remote-failed
mibFaultCode: 78090
mibFaultName: fsmRmtErrFirmwareDownloaderDownloadCopyRemote
moClass: firmware:Downloader
Type: fsm

fsmRmtErrFirmwareDownloaderDownload>DeleteLocal

Fault Code:F78090

Message

[FSM:STAGE:REMOTE-ERROR]: deleting downloadable [fileName] on local(FSM-STAGE:sam:dme:FirmwareDownloaderDownload>DeleteLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: delete-local-failed
mibFaultCode: 78090
mibFaultName: fsmRmtErrFirmwareDownloaderDownloadDeleteLocal
moClass: firmware:Downloader
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrFirmwareDownloaderDownload:Local

Fault Code:F78090

Message

[FSM:STAGE:REMOTE-ERROR]: downloading image [fileName] from [server](FSM-STAGE:sam:dme:FirmwareDownloaderDownload:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78090
mibFaultName: fsmRmtErrFirmwareDownloaderDownloadLocal
moClass: firmware:Downloader
Type: fsm

fsmRmtErrFirmwareDownloaderDownload:UnpackLocal

Fault Code:F78090

Message

[FSM:STAGE:REMOTE-ERROR]: unpacking image [fileName] on primary(FSM-STAGE:sam:dme:FirmwareDownloaderDownload:UnpackLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: unpack-local-failed
mibFaultCode: 78090
mibFaultName: fsmRmtErrFirmwareDownloaderDownloadUnpackLocal
moClass: firmware:Downloader
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrFirmwareImageDelete:Local

Fault Code:F78091

Message

[FSM:STAGE:REMOTE-ERROR]: deleting image file [name] ([invTag]) from primary(FSM-STAGE:sam:dme:FirmwareImageDelete:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78091
mibFaultName: fsmRmtErrFirmwareImageDeleteLocal
moClass: firmware:Image
Type: fsm

fsmRmtErrFirmwareImageDelete:Remote

Fault Code:F78091

Message

[FSM:STAGE:REMOTE-ERROR]: deleting image file [name] ([invTag]) from secondary(FSM-STAGE:sam:dme:FirmwareImageDelete:Remote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: remote-failed
mibFaultCode: 78091
mibFaultName: fsmRmtErrFirmwareImageDeleteRemote
moClass: firmware:Image
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrLicenseDownloaderDownload:CopyRemote

Fault Code:F78090

Message

[FSM:STAGE:REMOTE-ERROR]: Copy the license file to subordinate for inventory(FSM-STAGE:sam:dme:LicenseDownloaderDownload:CopyRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: copy-remote-failed
mibFaultCode: 78090
mibFaultName: fsmRmtErrLicenseDownloaderDownloadCopyRemote
moClass: license:Downloader
Type: fsm

fsmRmtErrLicenseDownloaderDownload>DeleteLocal

Fault Code:F78090

Message

[FSM:STAGE:REMOTE-ERROR]: deleting temporary files for [fileName] on local(FSM-STAGE:sam:dme:LicenseDownloaderDownload>DeleteLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: delete-local-failed
mibFaultCode: 78090
mibFaultName: fsmRmtErrLicenseDownloaderDownloadDeleteLocal
moClass: license:Downloader
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrLicenseDownloaderDownload:DeleteRemote

Fault Code:F78090

Message

[FSM:STAGE:REMOTE-ERROR]: deleting temporary files for [fileName] on subordinate(FSM-STAGE:sam:dme:LicenseDownloaderDownload:DeleteRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: delete-remote-failed
mibFaultCode: 78090
mibFaultName: fsmRmtErrLicenseDownloaderDownloadDeleteRemote
moClass: license:Downloader
Type: fsm

fsmRmtErrLicenseDownloaderDownload:Local

Fault Code:F78090

Message

[FSM:STAGE:REMOTE-ERROR]: downloading license file [fileName] from [server](FSM-STAGE:sam:dme:LicenseDownloaderDownload:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78090
mibFaultName: fsmRmtErrLicenseDownloaderDownloadLocal
moClass: license:Downloader
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrLicenseDownloaderDownload:ValidateLocal

Fault Code:F78090

Message

[FSM:STAGE:REMOTE-ERROR]: validation for license file [fileName] on primary(FSM-STAGE:sam:dme:LicenseDownloaderDownload:ValidateLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: validate-local-failed
mibFaultCode: 78090
mibFaultName: fsmRmtErrLicenseDownloaderDownloadValidateLocal
moClass: license:Downloader
Type: fsm

fsmRmtErrLicenseDownloaderDownload:ValidateRemote

Fault Code:F78090

Message

[FSM:STAGE:REMOTE-ERROR]: validation for license file [fileName] on subordinate(FSM-STAGE:sam:dme:LicenseDownloaderDownload:ValidateRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: validate-remote-failed
mibFaultCode: 78090
mibFaultName: fsmRmtErrLicenseDownloaderDownloadValidateRemote
moClass: license:Downloader
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrLicenseFileClear:Local

Fault Code:F78492

Message

[FSM:STAGE:REMOTE-ERROR]: Clearing license on primary(FSM-STAGE:sam:dme:LicenseFileClear:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78492
mibFaultName: fsmRmtErrLicenseFileClearLocal
moClass: license:File
Type: fsm

fsmRmtErrLicenseFileClear:Remote

Fault Code:F78492

Message

[FSM:STAGE:REMOTE-ERROR]: Clearing license on subordinate(FSM-STAGE:sam:dme:LicenseFileClear:Remote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: remote-failed
mibFaultCode: 78492
mibFaultName: fsmRmtErrLicenseFileClearRemote
moClass: license:File
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrLicenseFileInstall:Local

Fault Code:F78491

Message

[FSM:STAGE:REMOTE-ERROR]: Installing license on primary(FSM-STAGE:sam:dme:LicenseFileInstall:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78491
mibFaultName: fsmRmtErrLicenseFileInstallLocal
moClass: license:File
Type: fsm

fsmRmtErrLicenseFileInstall:Remote

Fault Code:F78491

Message

[FSM:STAGE:REMOTE-ERROR]: Installing license on subordinate(FSM-STAGE:sam:dme:LicenseFileInstall:Remote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: remote-failed
mibFaultCode: 78491
mibFaultName: fsmRmtErrLicenseFileInstallRemote
moClass: license:File
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrLicenseInstanceUpdateFlexIm:Local

Fault Code:F78493

Message

[FSM:STAGE:REMOTE-ERROR]: Updating on primary(FSM-STAGE:sam:dme:LicenseInstanceUpdateFlexIm:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78493
mibFaultName: fsmRmtErrLicenseInstanceUpdateFlexImLocal
moClass: license:Instance
Type: fsm

fsmRmtErrLicenseInstanceUpdateFlexIm:Remote

Fault Code:F78493

Message

[FSM:STAGE:REMOTE-ERROR]: Updating on subordinate(FSM-STAGE:sam:dme:LicenseInstanceUpdateFlexIm:Remote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: remote-failed
mibFaultCode: 78493
mibFaultName: fsmRmtErrLicenseInstanceUpdateFlexImRemote
moClass: license:Instance
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrLsServerConfigure:AnalyzeImpact

Fault Code:F78435

Message

[FSM:STAGE:REMOTE-ERROR]: Analyzing changes
impact(FSM-STAGE:sam:dme:LsServerConfigure:AnalyzeImpact)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: analyze-impact-failed
mibFaultCode: 78435
mibFaultName: fsmRmtErrLsServerConfigureAnalyzeImpact
moClass: ls:Server
Type: fsm

fsmRmtErrLsServerConfigure:ApplyConfig

Fault Code:F78435

Message

[FSM:STAGE:REMOTE-ERROR]: Applying config to server
[pnDn](FSM-STAGE:sam:dme:LsServerConfigure:ApplyConfig)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: apply-config-failed
mibFaultCode: 78435
mibFaultName: fsmRmtErrLsServerConfigureApplyConfig
moClass: ls:Server
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrLsServerConfigure:ApplyIdentifiers

Fault Code:F78435

Message

[FSM:STAGE:REMOTE-ERROR]: Resolving and applying identifiers(FSM-STAGE:sam:dme:LsServerConfigure:ApplyIdentifiers)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: apply-identifiers-failed
mibFaultCode: 78435
mibFaultName: fsmRmtErrLsServerConfigureApplyIdentifiers
moClass: ls:Server
Type: fsm

fsmRmtErrLsServerConfigure:ApplyPolicies

Fault Code:F78435

Message

[FSM:STAGE:REMOTE-ERROR]: Resolving and applying policies(FSM-STAGE:sam:dme:LsServerConfigure:ApplyPolicies)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: apply-policies-failed
mibFaultCode: 78435
mibFaultName: fsmRmtErrLsServerConfigureApplyPolicies
moClass: ls:Server
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrLsServerConfigure:ApplyTemplate

Fault Code:F78435

Message

[FSM:STAGE:REMOTE-ERROR]: Applying configuration template
[srcTemplName](FSM-STAGE:sam:dme:LsServerConfigure:ApplyTemplate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: apply-template-failed
mibFaultCode: 78435
mibFaultName: fsmRmtErrLsServerConfigureApplyTemplate
moClass: ls:Server
Type: fsm

fsmRmtErrLsServerConfigure:EvaluateAssociation

Fault Code:F78435

Message

[FSM:STAGE:REMOTE-ERROR]: Evaluate association with server
[pnDn](FSM-STAGE:sam:dme:LsServerConfigure:EvaluateAssociation)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: evaluate-association-failed
mibFaultCode: 78435
mibFaultName: fsmRmtErrLsServerConfigureEvaluateAssociation
moClass: ls:Server
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrLsServerConfigure:ResolveBootConfig

Fault Code:F78435

Message

[FSM:STAGE:REMOTE-ERROR]: Computing binding changes(FSM-STAGE:sam:dme:LsServerConfigure:ResolveBootConfig)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: resolve-boot-config-failed
mibFaultCode: 78435
mibFaultName: fsmRmtErrLsServerConfigureResolveBootConfig
moClass: ls:Server
Type: fsm

fsmRmtErrLsServerConfigure:WaitForMaintPermission

Fault Code:F78435

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for ack or maint window(FSM-STAGE:sam:dme:LsServerConfigure:WaitForMaintPermission)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: wait-for-maint-permission-failed
mibFaultCode: 78435
mibFaultName: fsmRmtErrLsServerConfigureWaitForMaintPermission
moClass: ls:Server
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrLsServerConfigure:WaitForMaintWindow

Fault Code:F78435

Message

[FSM:STAGE:REMOTE-ERROR]: Waiting for maintenance window(FSM-STAGE:sam:dme:LsServerConfigure:WaitForMaintWindow)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: wait-for-maint-window-failed
mibFaultCode: 78435
mibFaultName: fsmRmtErrLsServerConfigureWaitForMaintWindow
moClass: ls:Server
Type: fsm

fsmRmtErrMgmtBackupBackup:backupLocal

Fault Code:F78123

Message

[FSM:STAGE:REMOTE-ERROR]: internal database backup(FSM-STAGE:sam:dme:MgmtBackupBackup:backupLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: backup-local-failed
mibFaultCode: 78123
mibFaultName: fsmRmtErrMgmtBackupBackupBackupLocal
moClass: mgmt:Backup
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrMgmtBackupBackup:upload

Fault Code:F78123

Message

[FSM:STAGE:REMOTE-ERROR]: internal system
backup(FSM-STAGE:sam:dme:MgmtBackupBackup:upload)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: upload-failed
mibFaultCode: 78123
mibFaultName: fsmRmtErrMgmtBackupBackupUpload
moClass: mgmt:Backup
Type: fsm

fsmRmtErrMgmtControllerActivateBMC:Activate

Fault Code:F78097

Message

[FSM:STAGE:REMOTE-ERROR]: activating backup image of
CIMC(FSM-STAGE:sam:dme:MgmtControllerActivateBMC:Activate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: 78097
mibFaultName: fsmRmtErrMgmtControllerActivateBMCActivate
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrMgmtControllerActivateBMC:Reset

Fault Code:F78097

Message

[FSM:STAGE:REMOTE-ERROR]: Resetting CIMC to boot the activated version(FSM-STAGE:sam:dme:MgmtControllerActivateBMC:Reset)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: reset-failed
mibFaultCode: 78097
mibFaultName: fsmRmtErrMgmtControllerActivateBMCReset
moClass: mgmt:Controller
Type: fsm

fsmRmtErrMgmtControllerActivateIOM:Activate

Fault Code:F78095

Message

[FSM:STAGE:REMOTE-ERROR]: activating backup image of IOM(FSM-STAGE:sam:dme:MgmtControllerActivateIOM:Activate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: 78095
mibFaultName: fsmRmtErrMgmtControllerActivateIOMActivate
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrMgmtControllerActivateIOM:Reset

Fault Code:F78095

Message

[FSM:STAGE:REMOTE-ERROR]: Resetting IOM to boot the activated version(FSM-STAGE:sam:dme:MgmtControllerActivateIOM:Reset)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: reset-failed
mibFaultCode: 78095
mibFaultName: fsmRmtErrMgmtControllerActivateIOMReset
moClass: mgmt:Controller
Type: fsm

fsmRmtErrMgmtControllerExtMgmtIfConfig:Primary

Fault Code:F77958

Message

[FSM:STAGE:REMOTE-ERROR]: external mgmt interface configuration on primary(FSM-STAGE:sam:dme:MgmtControllerExtMgmtIfConfig:Primary)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: primary-failed
mibFaultCode: 77958
mibFaultName: fsmRmtErrMgmtControllerExtMgmtIfConfigPrimary
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrMgmtControllerExtMgmtIfConfig:Secondary

Fault Code:F77958

Message

[FSM:STAGE:REMOTE-ERROR]: external mgmt interface configuration on secondary(FSM-STAGE:sam:dme:MgmtControllerExtMgmtIfConfig:Secondary)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: secondary-failed
mibFaultCode: 77958
mibFaultName: fsmRmtErrMgmtControllerExtMgmtIfConfigSecondary
mcClass: mgmt:Controller
Type: fsm

fsmRmtErrMgmtControllerOnline:BmcConfigureConnLocal

Fault Code:F78609

Message

[FSM:STAGE:REMOTE-ERROR]: Configuring connectivity on CIMC(FSM-STAGE:sam:dme:MgmtControllerOnline:BmcConfigureConnLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-configure-conn-local-failed
mibFaultCode: 78609
mibFaultName: fsmRmtErrMgmtControllerOnlineBmcConfigureConnLocal
mcClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrMgmtControllerOnline:BmcConfigureConnPeer

Fault Code:F78609

Message

[FSM:STAGE:REMOTE-ERROR]: Configuring connectivity on CIMC(FSM-STAGE:sam:dme:MgmtControllerOnline:BmcConfigureConnPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-configure-conn-peer-failed
mibFaultCode: 78609
mibFaultName: fsmRmtErrMgmtControllerOnlineBmcConfigureConnPeer
moClass: mgmt:Controller
Type: fsm

fsmRmtErrMgmtControllerOnline:SwConfigureConnLocal

Fault Code:F78609

Message

[FSM:STAGE:REMOTE-ERROR]: Configuring fabric-interconnect connectivity to CIMC(FSM-STAGE:sam:dme:MgmtControllerOnline:SwConfigureConnLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-configure-conn-local-failed
mibFaultCode: 78609
mibFaultName: fsmRmtErrMgmtControllerOnlineSwConfigureConnLocal
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrMgmtControllerOnline:SwConfigureConnPeer

Fault Code:F78609

Message

[FSM:STAGE:REMOTE-ERROR]: Configuring fabric-interconnect connectivity to CIMC(FSM-STAGE:sam:dme:MgmtControllerOnline:SwConfigureConnPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-configure-conn-peer-failed
mibFaultCode: 78609
mibFaultName: fsmRmtErrMgmtControllerOnlineSwConfigureConnPeer
moClass: mgmt:Controller
Type: fsm

fsmRmtErrMgmtControllerSysConfig:Primary

Fault Code:F78263

Message

[FSM:STAGE:REMOTE-ERROR]: system configuration on primary(FSM-STAGE:sam:dme:MgmtControllerSysConfig:Primary)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: primary-failed
mibFaultCode: 78263
mibFaultName: fsmRmtErrMgmtControllerSysConfigPrimary
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrMgmtControllerSysConfig:Secondary

Fault Code:F78263

Message

[FSM:STAGE:REMOTE-ERROR]: system configuration on secondary(FSM-STAGE:sam:dme:MgmtControllerSysConfig:Secondary)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: secondary-failed
mibFaultCode: 78263
mibFaultName: fsmRmtErrMgmtControllerSysConfigSecondary
moClass: mgmt:Controller
Type: fsm
```

fsmRmtErrMgmtControllerUpdateBMC:PollUpdateStatus

Fault Code:F78096

Message

[FSM:STAGE:REMOTE-ERROR]: waiting for update to complete(FSM-STAGE:sam:dme:MgmtControllerUpdateBMC:PollUpdateStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: poll-update-status-failed
mibFaultCode: 78096
mibFaultName: fsmRmtErrMgmtControllerUpdateBMCPollUpdateStatus
moClass: mgmt:Controller
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrMgmtControllerUpdateBMC:UpdateRequest

Fault Code:F78096

Message

[FSM:STAGE:REMOTE-ERROR]: sending update request to CIMC(FSM-STAGE:sam:dme:MgmtControllerUpdateBMC:UpdateRequest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: 78096
mibFaultName: fsmRmtErrMgmtControllerUpdateBMCUpdateRequest
moClass: mgmt:Controller
Type: fsm

fsmRmtErrMgmtControllerUpdateIOM:PollUpdateStatus

Fault Code:F78094

Message

[FSM:STAGE:REMOTE-ERROR]: waiting for IOM update(FSM-STAGE:sam:dme:MgmtControllerUpdateIOM:PollUpdateStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: 78094
mibFaultName: fsmRmtErrMgmtControllerUpdateIOMPollUpdateStatus
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrMgmtControllerUpdateIOM:UpdateRequest

Fault Code:F78094

Message

[FSM:STAGE:REMOTE-ERROR]: sending update request to IOM(FSM-STAGE:sam:dme:MgmtControllerUpdateIOM:UpdateRequest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: 78094
mibFaultName: fsmRmtErrMgmtControllerUpdateIOMUpdateRequest
moClass: mgmt:Controller
Type: fsm

fsmRmtErrMgmtControllerUpdateSwitch:resetLocal

Fault Code:F78093

Message

[FSM:STAGE:REMOTE-ERROR]: rebooting local fabric interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:resetLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: reset-local-failed
mibFaultCode: 78093
mibFaultName: fsmRmtErrMgmtControllerUpdateSwitchResetLocal
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrMgmtControllerUpdateSwitch:resetRemote

Fault Code:F78093

Message

[FSM:STAGE:REMOTE-ERROR]: rebooting remote fabric
interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:resetRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: reset-remote-failed
mibFaultCode: 78093
mibFaultName: fsmRmtErrMgmtControllerUpdateSwitchResetRemote
moClass: mgmt:Controller
Type: fsm

fsmRmtErrMgmtControllerUpdateSwitch:updateLocal

Fault Code:F78093

Message

[FSM:STAGE:REMOTE-ERROR]: updating local fabric
interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:updateLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-local-failed
mibFaultCode: 78093
mibFaultName: fsmRmtErrMgmtControllerUpdateSwitchUpdateLocal
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrMgmtControllerUpdateSwitch:updateRemote

Fault Code:F78093

Message

[FSM:STAGE:REMOTE-ERROR]: updating peer fabric
interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:updateRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-remote-failed
mibFaultCode: 78093
mibFaultName: fsmRmtErrMgmtControllerUpdateSwitchUpdateRemote
moClass: mgmt:Controller
Type: fsm

fsmRmtErrMgmtControllerUpdateSwitch:verifyLocal

Fault Code:F78093

Message

[FSM:STAGE:REMOTE-ERROR]: verifying boot variables for local fabric
interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:verifyLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: verify-local-failed
mibFaultCode: 78093
mibFaultName: fsmRmtErrMgmtControllerUpdateSwitchVerifyLocal
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrMgmtControllerUpdateSwitch:verifyRemote

Fault Code:F78093

Message

[FSM:STAGE:REMOTE-ERROR]: verifying boot variables for remote fabric interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:verifyRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: verify-remote-failed
mibFaultCode: 78093
mibFaultName: fsmRmtErrMgmtControllerUpdateSwitchVerifyRemote
moClass: mgmt:Controller
Type: fsm

fsmRmtErrMgmtControllerUpdateUCSManager:execute

Fault Code:F78255

Message

[FSM:STAGE:REMOTE-ERROR]: Updating UCS Manager firmware(FSM-STAGE:sam:dme:MgmtControllerUpdateUCSManager:execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78255
mibFaultName: fsmRmtErrMgmtControllerUpdateUCSManagerExecute
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrMgmtControllerUpdateUCSManager:start

Fault Code:F78255

Message

[FSM:STAGE:REMOTE-ERROR]: Scheduling UCS manager update(FSM-STAGE:sam:dme:MgmtControllerUpdateUCSManager:start)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: start-failed
mibFaultCode: 78255
mibFaultName: fsmRmtErrMgmtControllerUpdateUCSManagerStart
moClass: mgmt:Controller
Type: fsm

fsmRmtErrMgmtIfDisableVip:Peer

Fault Code:F78121

Message

[FSM:STAGE:REMOTE-ERROR]: Disable virtual interface on peer fabric interconnect(FSM-STAGE:sam:dme:MgmtIfDisableVip:Peer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: peer-failed
mibFaultCode: 78121
mibFaultName: fsmRmtErrMgmtIfDisableVipPeer
moClass: mgmt:If
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrMgmtIfEnableHA:Local

Fault Code:F78122

Message

[FSM:STAGE:REMOTE-ERROR]: Transition from single to cluster mode(FSM-STAGE:sam:dme:MgmtIfEnableHA:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78122
mibFaultName: fsmRmtErrMgmtIfEnableHALocal
moClass: mgmt:If
Type: fsm

fsmRmtErrMgmtIfEnableVip:Local

Fault Code:F78120

Message

[FSM:STAGE:REMOTE-ERROR]: Enable virtual interface on local fabric interconnect(FSM-STAGE:sam:dme:MgmtIfEnableVip:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78120
mibFaultName: fsmRmtErrMgmtIfEnableVipLocal
moClass: mgmt:If
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrMgmtIfSwMgmtInbandIfConfig:Switch

Fault Code:F78114

Message

[FSM:STAGE:REMOTE-ERROR]: configuring the inband interface(FSM-STAGE:sam:dme:MgmtIfSwMgmtInbandIfConfig:Switch)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: switch-failed
mibFaultCode: 78114
mibFaultName: fsmRmtErrMgmtIfSwMgmtInbandIfConfigSwitch
moClass: mgmt:If
Type: fsm

fsmRmtErrMgmtIfSwMgmtOobIfConfig:Switch

Fault Code:F78113

Message

[FSM:STAGE:REMOTE-ERROR]: configuring the out-of-band interface(FSM-STAGE:sam:dme:MgmtIfSwMgmtOobIfConfig:Switch)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: switch-failed
mibFaultCode: 78113
mibFaultName: fsmRmtErrMgmtIfSwMgmtOobIfConfigSwitch
moClass: mgmt:If
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrMgmtIfVirtualIfConfig:Local

Fault Code:F78119

Message

[FSM:STAGE:REMOTE-ERROR]: Updating virtual interface on local fabric interconnect(FSM-STAGE:sam:dme:MgmtIfVirtualIfConfig:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78119
mibFaultName: fsmRmtErrMgmtIfVirtualIfConfigLocal
moClass: mgmt:If
Type: fsm

fsmRmtErrMgmtIfVirtualIfConfig:Remote

Fault Code:F78119

Message

[FSM:STAGE:REMOTE-ERROR]: Updating virtual interface on peer fabric interconnect(FSM-STAGE:sam:dme:MgmtIfVirtualIfConfig:Remote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: remote-failed
mibFaultCode: 78119
mibFaultName: fsmRmtErrMgmtIfVirtualIfConfigRemote
moClass: mgmt:If
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrMgmtImporterImport:config

Fault Code:F78124

Message

[FSM:STAGE:REMOTE-ERROR]: importing the configuration file(FSM-STAGE:sam:dme:MgmtImporterImport:config)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-failed
mibFaultCode: 78124
mibFaultName: fsmRmtErrMgmtImporterImportConfig
moClass: mgmt:Importer
Type: fsm

fsmRmtErrMgmtImporterImport:downloadLocal

Fault Code:F78124

Message

[FSM:STAGE:REMOTE-ERROR]: downloading the configuration file from the remote location(FSM-STAGE:sam:dme:MgmtImporterImport:downloadLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: download-local-failed
mibFaultCode: 78124
mibFaultName: fsmRmtErrMgmtImporterImportDownloadLocal
moClass: mgmt:Importer
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrMgmtImporterImport:reportResults

Fault Code:F78124

Message

[FSM:STAGE:REMOTE-ERROR]: Report results of configuration application(FSM-STAGE:sam:dme:MgmtImporterImport:reportResults)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: report-results-failed
mibFaultCode: 78124
mibFaultName: fsmRmtErrMgmtImporterImportReportResults
moClass: mgmt:Importer
Type: fsm

fsmRmtErrPkiEpUpdateEp:SetKeyRingLocal

Fault Code:F78019

Message

[FSM:STAGE:REMOTE-ERROR]: keyring configuration on primary(FSM-STAGE:sam:dme:PkiEpUpdateEp:SetKeyRingLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-key-ring-local-failed
mibFaultCode: 78019
mibFaultName: fsmRmtErrPkiEpUpdateEpSetKeyRingLocal
moClass: pki:Ep
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrPkiEpUpdateEp:SetKeyRingPeer

Fault Code:F78019

Message

[FSM:STAGE:REMOTE-ERROR]: keyring configuration on secondary(FSM-STAGE:sam:dme:PkiEpUpdateEp:SetKeyRingPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-key-ring-peer-failed
mibFaultCode: 78019
mibFaultName: fsmRmtErrPkiEpUpdateEpSetKeyRingPeer
moClass: pki:Ep
Type: fsm

fsmRmtErrPortPioInCompatSfpPresence:Shutdown

Fault Code:F78529

Message

[FSM:STAGE:REMOTE-ERROR]: Shutting down port(FSM-STAGE:sam:dme:PortPioInCompatSfpPresence:Shutdown)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: shutdown-failed
mibFaultCode: 78529
mibFaultName: fsmRmtErrPortPioInCompatSfpPresenceShutdown
moClass: port:Pio
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrQosclassDefinitionConfigGlobalQoS:SetLocal

Fault Code:F78185

Message

[FSM:STAGE:REMOTE-ERROR]: QoS Classification Definition [name] configuration on primary(FSM-STAGE:sam:dme:QosclassDefinitionConfigGlobalQoS:SetLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-local-failed
mibFaultCode: 78185
mibFaultName: fsmRmtErrQosclassDefinitionConfigGlobalQoSSetLocal
moClass: qosclass:Definition
Type: fsm

fsmRmtErrQosclassDefinitionConfigGlobalQoS:SetPeer

Fault Code:F78185

Message

[FSM:STAGE:REMOTE-ERROR]: QoS Classification Definition [name] configuration on secondary(FSM-STAGE:sam:dme:QosclassDefinitionConfigGlobalQoS:SetPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-peer-failed
mibFaultCode: 78185
mibFaultName: fsmRmtErrQosclassDefinitionConfigGlobalQoSSetPeer
moClass: qosclass:Definition
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrStatsCollectionPolicyUpdateEp:SetEpA

Fault Code:F78019

Message

[FSM:STAGE:REMOTE-ERROR]: Update endpoint on fabric interconnect A(FSM-STAGE:sam:dme:StatsCollectionPolicyUpdateEp:SetEpA)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-ep-afailed
mibFaultCode: 78019
mibFaultName: fsmRmtErrStatsCollectionPolicyUpdateEpSetEpA
moClass: stats:CollectionPolicy
Type: fsm

fsmRmtErrStatsCollectionPolicyUpdateEp:SetEpB

Fault Code:F78019

Message

[FSM:STAGE:REMOTE-ERROR]: Update endpoint on fabric interconnect B(FSM-STAGE:sam:dme:StatsCollectionPolicyUpdateEp:SetEpB)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-ep-bfailed
mibFaultCode: 78019
mibFaultName: fsmRmtErrStatsCollectionPolicyUpdateEpSetEpB
moClass: stats:CollectionPolicy
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrSwAccessDomainDeploy:UpdateConnectivity

Fault Code:F78189

Message

[FSM:STAGE:REMOTE-ERROR]: internal network configuration on
[switchId](FSM-STAGE:sam:dme:SwAccessDomainDeploy:UpdateConnectivity)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-connectivity-failed
mibFaultCode: 78189
mibFaultName: fsmRmtErrSwAccessDomainDeployUpdateConnectivity
moClass: sw:AccessDomain
Type: fsm

fsmRmtErrSwEthLanBorderDeploy:UpdateConnectivity

Fault Code:F78189

Message

[FSM:STAGE:REMOTE-ERROR]: Uplink eth port configuration on
[switchId](FSM-STAGE:sam:dme:SwEthLanBorderDeploy:UpdateConnectivity)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-connectivity-failed
mibFaultCode: 78189
mibFaultName: fsmRmtErrSwEthLanBorderDeployUpdateConnectivity
moClass: sw:EthLanBorder
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrSwEthMonDeploy:UpdateEthMon

Fault Code:F78189

Message

[FSM:STAGE:REMOTE-ERROR]: Ethernet traffic monitor (SPAN)configuration on [switchId](FSM-STAGE:sam:dme:SwEthMonDeploy:UpdateEthMon)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-eth-mon-failed
mibFaultCode: 78189
mibFaultName: fsmRmtErrSwEthMonDeployUpdateEthMon
moClass: sw:EthMon
Type: fsm

fsmRmtErrSwFcMonDeploy:UpdateFcMon

Fault Code:F78189

Message

[FSM:STAGE:REMOTE-ERROR]: FC traffic monitor (SPAN)configuration on [switchId](FSM-STAGE:sam:dme:SwFcMonDeploy:UpdateFcMon)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-fc-mon-failed
mibFaultCode: 78189
mibFaultName: fsmRmtErrSwFcMonDeployUpdateFcMon
moClass: sw:FcMon
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrSwFcSanBorderDeploy:UpdateConnectivity

Fault Code:F78189

Message

[FSM:STAGE:REMOTE-ERROR]: Uplink fc port configuration on [switchId](FSM-STAGE:sam:dme:SwFcSanBorderDeploy:UpdateConnectivity)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-connectivity-failed
mibFaultCode: 78189
mibFaultName: fsmRmtErrSwFcSanBorderDeployUpdateConnectivity
moClass: sw:FcSanBorder
Type: fsm

fsmRmtErrSwUtilityDomainDeploy:UpdateConnectivity

Fault Code:F78189

Message

[FSM:STAGE:REMOTE-ERROR]: Utility network configuration on [switchId](FSM-STAGE:sam:dme:SwUtilityDomainDeploy:UpdateConnectivity)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-connectivity-failed
mibFaultCode: 78189
mibFaultName: fsmRmtErrSwUtilityDomainDeployUpdateConnectivity
moClass: sw:UtilityDomain
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrSyntheticFsObjCreate:createLocal

Fault Code:F78081

Message

[FSM:STAGE:REMOTE-ERROR]: create on primary(FSM-STAGE:sam:dme:SyntheticFsObjCreate:createLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: create-local-failed
mibFaultCode: 78081
mibFaultName: fsmRmtErrSyntheticFsObjCreateCreateLocal
moClass: synthetic:FsoObj
Type: fsm

fsmRmtErrSyntheticFsObjCreate:createRemote

Fault Code:F78081

Message

[FSM:STAGE:REMOTE-ERROR]: create on secondary(FSM-STAGE:sam:dme:SyntheticFsObjCreate:createRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: create-remote-failed
mibFaultCode: 78081
mibFaultName: fsmRmtErrSyntheticFsObjCreateCreateRemote
moClass: synthetic:FsoObj
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrSysdebugAutoCoreFileExportTargetConfigure:Local

Fault Code:F78435

Message

[FSM:STAGE:REMOTE-ERROR]: configuring automatic core file export service on local(FSM-STAGE:sam:dme:SysdebugAutoCoreFileExportTargetConfigure:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78435
mibFaultName: fsmRmtErrSysdebugAutoCoreFileExportTargetConfigureLocal
moClass: sysdebug:AutoCoreFileExportTarget
Type: fsm

fsmRmtErrSysdebugAutoCoreFileExportTargetConfigure:Peer

Fault Code:F78435

Message

[FSM:STAGE:REMOTE-ERROR]: configuring automatic core file export service on peer(FSM-STAGE:sam:dme:SysdebugAutoCoreFileExportTargetConfigure:Peer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: peer-failed
mibFaultCode: 78435
mibFaultName: fsmRmtErrSysdebugAutoCoreFileExportTargetConfigurePeer
moClass: sysdebug:AutoCoreFileExportTarget
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrSysdebugCoreDownload:CopyPrimary

Fault Code:F78090

Message

[FSM:STAGE:REMOTE-ERROR]: Copy the Core file to primary for download(FSM-STAGE:sam:dme:SysdebugCoreDownload:CopyPrimary)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: copy-primary-failed
mibFaultCode: 78090
mibFaultName: fsmRmtErrSysdebugCoreDownloadCopyPrimary
moClass: sysdebug:Core
Type: fsm

fsmRmtErrSysdebugCoreDownload:CopySub

Fault Code:F78090

Message

[FSM:STAGE:REMOTE-ERROR]: copy Core file on subordinate switch to tmp directory(FSM-STAGE:sam:dme:SysdebugCoreDownload:CopySub)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: copy-sub-failed
mibFaultCode: 78090
mibFaultName: fsmRmtErrSysdebugCoreDownloadCopySub
moClass: sysdebug:Core
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrSysdebugCoreDownload>DeletePrimary

Fault Code:F78090

Message

[FSM:STAGE:REMOTE-ERROR]: Delete the Core file from primary switch under tmp directory(FSM-STAGE:sam:dme:SysdebugCoreDownload>DeletePrimary)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: delete-primary-failed
mibFaultCode: 78090
mibFaultName: fsmRmtErrSysdebugCoreDownload>DeletePrimary
moClass: sysdebug:Core
Type: fsm

fsmRmtErrSysdebugCoreDownload>DeleteSub

Fault Code:F78090

Message

[FSM:STAGE:REMOTE-ERROR]: Delete the Core file from subordinate under tmp directory(FSM-STAGE:sam:dme:SysdebugCoreDownload>DeleteSub)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: delete-sub-failed
mibFaultCode: 78090
mibFaultName: fsmRmtErrSysdebugCoreDownload>DeleteSub
moClass: sysdebug:Core
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrSysdebugLogControlEpLogControlPersist:Local

Fault Code:F78046

Message

[FSM:STAGE:REMOTE-ERROR]: persisting LogControl on local(FSM-STAGE:sam:dme:SysdebugLogControlEpLogControlPersist:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78046
mibFaultName: fsmRmtErrSysdebugLogControlEpLogControlPersistLocal
moClass: sysdebug:LogControlEp
Type: fsm

fsmRmtErrSysdebugLogControlEpLogControlPersist:Peer

Fault Code:F78046

Message

[FSM:STAGE:REMOTE-ERROR]: persisting LogControl on peer(FSM-STAGE:sam:dme:SysdebugLogControlEpLogControlPersist:Peer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: peer-failed
mibFaultCode: 78046
mibFaultName: fsmRmtErrSysdebugLogControlEpLogControlPersistPeer
moClass: sysdebug:LogControlEp
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrSysdebugManualCoreFileExportTargetExport:Execute

Fault Code:F78044

Message

[FSM:STAGE:REMOTE-ERROR]: export core file [name] to [hostname](FSM-STAGE:sam:dme:SysdebugManualCoreFileExportTargetExport:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78044
mibFaultName: fsmRmtErrSysdebugManualCoreFileExportTargetExportExecute
moClass: sysdebug:ManualCoreFileExportTarget
Type: fsm

fsmRmtErrSysdebugTechSupportDeleteTechSupFile:Local

Fault Code:F78453

Message

[FSM:STAGE:REMOTE-ERROR]: delete tech-support file from GUI on local(FSM-STAGE:sam:dme:SysdebugTechSupportDeleteTechSupFile:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78453
mibFaultName: fsmRmtErrSysdebugTechSupportDeleteTechSupFileLocal
moClass: sysdebug:TechSupport
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrSysdebugTechSupportDeleteTechSupFile:peer

Fault Code:F78453

Message

[FSM:STAGE:REMOTE-ERROR]: delete tech-support file from GUI on peer(FSM-STAGE:sam:dme:SysdebugTechSupportDeleteTechSupFile:peer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: peer-failed
mibFaultCode: 78453
mibFaultName: fsmRmtErrSysdebugTechSupportDeleteTechSupFilePeer
moClass: sysdebug:TechSupport
Type: fsm

fsmRmtErrSysdebugTechSupportDownload:CopyPrimary

Fault Code:F78090

Message

[FSM:STAGE:REMOTE-ERROR]: Copy the tech-support file to primary for download(FSM-STAGE:sam:dme:SysdebugTechSupportDownload:CopyPrimary)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: copy-primary-failed
mibFaultCode: 78090
mibFaultName: fsmRmtErrSysdebugTechSupportDownloadCopyPrimary
moClass: sysdebug:TechSupport
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrSysdebugTechSupportDownload:CopySub

Fault Code:F78090

Message

[FSM:STAGE:REMOTE-ERROR]: copy tech-support file on subordinate switch to tmp directory(FSM-STAGE:sam:dme:SysdebugTechSupportDownload:CopySub)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: copy-sub-failed
mibFaultCode: 78090
mibFaultName: fsmRmtErrSysdebugTechSupportDownloadCopySub
moClass: sysdebug:TechSupport
Type: fsm

fsmRmtErrSysdebugTechSupportDownload>DeletePrimary

Fault Code:F78090

Message

[FSM:STAGE:REMOTE-ERROR]: Delete the tech-support file from primary switch under tmp directory(FSM-STAGE:sam:dme:SysdebugTechSupportDownload>DeletePrimary)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: delete-primary-failed
mibFaultCode: 78090
mibFaultName: fsmRmtErrSysdebugTechSupportDownloadDeletePrimary
moClass: sysdebug:TechSupport
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrSysdebugTechSupportDownload:DeleteSub

Fault Code:F78090

Message

[FSM:STAGE:REMOTE-ERROR]: Delete the tech-support file from subordinate under tmp directory(FSM-STAGE:sam:dme:SysdebugTechSupportDownload:DeleteSub)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: delete-sub-failed
mibFaultCode: 78090
mibFaultName: fsmRmtErrSysdebugTechSupportDownloadDeleteSub
moClass: sysdebug:TechSupport
Type: fsm

fsmRmtErrSysdebugTechSupportInitiate:Local

Fault Code:F78452

Message

[FSM:STAGE:REMOTE-ERROR]: create tech-support file from GUI on local(FSM-STAGE:sam:dme:SysdebugTechSupportInitiate:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78452
mibFaultName: fsmRmtErrSysdebugTechSupportInitiateLocal
moClass: sysdebug:TechSupport
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrSysfileMutationGlobal:Local

Fault Code:F78041

Message

[FSM:STAGE:REMOTE-ERROR]: remove files from
local(FSM-STAGE:sam:dme:SysfileMutationGlobal:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78041
mibFaultName: fsmRmtErrSysfileMutationGlobalLocal
moClass: sysfile:Mutation
Type: fsm

fsmRmtErrSysfileMutationGlobal:Peer

Fault Code:F78041

Message

[FSM:STAGE:REMOTE-ERROR]: remove files from
peer(FSM-STAGE:sam:dme:SysfileMutationGlobal:Peer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: peer-failed
mibFaultCode: 78041
mibFaultName: fsmRmtErrSysfileMutationGlobalPeer
moClass: sysfile:Mutation
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrSysfileMutationSingle:Execute

Fault Code:F78040

Message

[FSM:STAGE:REMOTE-ERROR]: [action] file
[name](FSM-STAGE:sam:dme:SysfileMutationSingle:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 78040
mibFaultName: fsmRmtErrSysfileMutationSingleExecute
moClass: sysfile:Mutation
Type: fsm

fsmRmtErrVnicProfileSetDeploy:Local

Fault Code:F78189

Message

[FSM:STAGE:REMOTE-ERROR]: VNIC profile configuration on local
fabric(FSM-STAGE:sam:dme:VnicProfileSetDeploy:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 78189
mibFaultName: fsmRmtErrVnicProfileSetDeployLocal
moClass: vnic:ProfileSet
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmRmtErrVnicProfileSetDeploy:Peer

Fault Code:F78189

Message

[FSM:STAGE:REMOTE-ERROR]: VNIC profile configuration on peer fabric(FSM-STAGE:sam:dme:VnicProfileSetDeploy:Peer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: peer-failed
mibFaultCode: 78189
mibFaultName: fsmRmtErrVnicProfileSetDeployPeer
moClass: vnic:ProfileSet
Type: fsm

fsmStFailAaaEpUpdateEp:SetEpLocal

Fault Code:F16579

Message

[FSM:STAGE:FAILEDIRETRY]: external aaa server configuration to primary(FSM-STAGE:sam:dme:AaaEpUpdateEp:SetEpLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-ep-local-failed
mibFaultCode: 16579
mibFaultName: fsmStFailAaaEpUpdateEpSetEpLocal
moClass: aaa:Ep
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailAaaEpUpdateEp:SetEpPeer

Fault Code:F16579

Message

[FSM:STAGE:FAILED|RETRY]: external aaa server configuration to secondary(FSM-STAGE:sam:dme:AaaEpUpdateEp:SetEpPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-ep-peer-failed
mibFaultCode: 16579
mibFaultName: fsmStFailAaaEpUpdateEpSetEpPeer
moClass: aaa:Ep
Type: fsm

fsmStFailAaaRealmUpdateRealm:SetRealmLocal

Fault Code:F16580

Message

[FSM:STAGE:FAILED|RETRY]: realm configuration to primary(FSM-STAGE:sam:dme:AaaRealmUpdateRealm:SetRealmLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-realm-local-failed
mibFaultCode: 16580
mibFaultName: fsmStFailAaaRealmUpdateRealmSetRealmLocal
moClass: aaa:Realm
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailAaaRealmUpdateRealm:SetRealmPeer

Fault Code:F16580

Message

[FSM:STAGE:FAILEDIRETRY]: realm configuration to secondary(FSM-STAGE:sam:dme:AaaRealmUpdateRealm:SetRealmPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-realm-peer-failed
mibFaultCode: 16580
mibFaultName: fsmStFailAaaRealmUpdateRealmSetRealmPeer
moClass: aaa:Realm
Type: fsm

fsmStFailAaaUserEpUpdateUserEp:SetUserLocal

Fault Code:F16581

Message

[FSM:STAGE:FAILEDIRETRY]: user configuration to primary(FSM-STAGE:sam:dme:AaaUserEpUpdateUserEp:SetUserLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-user-local-failed
mibFaultCode: 16581
mibFaultName: fsmStFailAaaUserEpUpdateUserEpSetUserLocal
moClass: aaa:UserEp
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailAaaUserEpUpdateUserEp:SetUserPeer

Fault Code:F16581

Message

[FSM:STAGE:FAILED|RETRY]: user configuration to secondary(FSM-STAGE:sam:dme:AaaUserEpUpdateUserEp:SetUserPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-user-peer-failed
mibFaultCode: 16581
mibFaultName: fsmStFailAaaUserEpUpdateUserEpSetUserPeer
moClass: aaa:UserEp
Type: fsm

fsmStFailAdaptorExtEthIfPathReset:Disable

Fault Code:F16852

Message

[FSM:STAGE:FAILED|RETRY]: Disable path [side]([switchId]) on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorExtEthIfPathReset:Disable)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: disable-failed
mibFaultCode: 16852
mibFaultName: fsmStFailAdaptorExtEthIfPathResetDisable
moClass: adaptor:ExtEthIf
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailAdaptorExtEthIfPathReset:Enable

Fault Code:F16852

Message

[FSM:STAGE:FAILEDIRETRY]: Enabe path [side]([switchId]) on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorExtEthIfPathReset:Enable)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: enable-failed
mibFaultCode: 16852
mibFaultName: fsmStFailAdaptorExtEthIfPathResetEnable
moClass: adaptor:ExtEthIf
Type: fsm

fsmStFailAdaptorHostEthIfCircuitReset:DisableA

Fault Code:F16857

Message

[FSM:STAGE:FAILEDIRETRY]: Disable circuit A for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostEthIfCircuitReset:DisableA)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: disable-afailed
mibFaultCode: 16857
mibFaultName: fsmStFailAdaptorHostEthIfCircuitResetDisableA
moClass: adaptor:HostEthIf
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailAdaptorHostEthIfCircuitReset:DisableB

Fault Code:F16857

Message

[FSM:STAGE:FAILED|RETRY]: Disable circuit B for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostEthIfCircuitReset:DisableB)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: disable-bfailed
mibFaultCode: 16857
mibFaultName: fsmStFailAdaptorHostEthIfCircuitResetDisableB
moClass: adaptor:HostEthIf
Type: fsm

fsmStFailAdaptorHostEthIfCircuitReset:EnableA

Fault Code:F16857

Message

[FSM:STAGE:FAILED|RETRY]: Enable circuit A for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostEthIfCircuitReset:EnableA)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: enable-afailed
mibFaultCode: 16857
mibFaultName: fsmStFailAdaptorHostEthIfCircuitResetEnableA
moClass: adaptor:HostEthIf
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailAdaptorHostEthIfCircuitReset:EnableB

Fault Code:F16857

Message

[FSM:STAGE:FAILEDIRETRY]: Enable circuit B for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostEthIfCircuitReset:EnableB)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: enable-bfailed
mibFaultCode: 16857
mibFaultName: fsmStFailAdaptorHostEthIfCircuitResetEnableB
moClass: adaptor:HostEthIf
Type: fsm

fsmStFailAdaptorHostFcIfCircuitReset:DisableA

Fault Code:F16857

Message

[FSM:STAGE:FAILEDIRETRY]: Disable circuit A for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostFcIfCircuitReset:DisableA)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: disable-afailed
mibFaultCode: 16857
mibFaultName: fsmStFailAdaptorHostFcIfCircuitResetDisableA
moClass: adaptor:HostFcIf
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailAdaptorHostFcIfCircuitReset:DisableB

Fault Code:F16857

Message

[FSM:STAGE:FAILED|RETRY]: Disable circuit B for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostFcIfCircuitReset:DisableB)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: disable-bfailed
mibFaultCode: 16857
mibFaultName: fsmStFailAdaptorHostFcIfCircuitResetDisableB
moClass: adaptor:HostFcIf
Type: fsm

fsmStFailAdaptorHostFcIfCircuitReset:EnableA

Fault Code:F16857

Message

[FSM:STAGE:FAILED|RETRY]: Enable circuit A for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostFcIfCircuitReset:EnableA)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: enable-afailed
mibFaultCode: 16857
mibFaultName: fsmStFailAdaptorHostFcIfCircuitResetEnableA
moClass: adaptor:HostFcIf
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailAdaptorHostFcIfCircuitReset:EnableB

Fault Code:F16857

Message

[FSM:STAGE:FAILEDIRETRY]: Enable circuit B for host adaptor [id] on server [chassisId]/[slotId](FSM-STAGE:sam:dme:AdaptorHostFcIfCircuitReset:EnableB)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: enable-bfailed
mibFaultCode: 16857
mibFaultName: fsmStFailAdaptorHostFcIfCircuitResetEnableB
moClass: adaptor:HostFcIf
Type: fsm

fsmStFailAdaptorHostFcIfResetFcPersBinding:ExecuteLocal

Fault Code:F16534

Message

[FSM:STAGE:FAILEDIRETRY]: Resetting FC persistent bindings on host interface [dn](FSM-STAGE:sam:dme:AdaptorHostFcIfResetFcPersBinding:ExecuteLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-local-failed
mibFaultCode: 16534
mibFaultName: fsmStFailAdaptorHostFcIfResetFcPersBindingExecuteLocal
moClass: adaptor:HostFcIf
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailAdaptorHostFcIfResetFcPersBinding:ExecutePeer

Fault Code:F16534

Message

[FSM:STAGE:FAILED|RETRY]: Resetting FC persistent bindings on host interface [dn](FSM-STAGE:sam:dme:AdaptorHostFcIfResetFcPersBinding:ExecutePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-peer-failed
mibFaultCode: 16534
mibFaultName: fsmStFailAdaptorHostFcIfResetFcPersBindingExecutePeer
moClass: adaptor:HostFcIf
Type: fsm

fsmStFailCallhomeEpConfigCallhome:SetLocal

Fault Code:F16670

Message

[FSM:STAGE:FAILED|RETRY]: call-home configuration on primary(FSM-STAGE:sam:dme:CallhomeEpConfigCallhome:SetLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-local-failed
mibFaultCode: 16670
mibFaultName: fsmStFailCallhomeEpConfigCallhomeSetLocal
moClass: callhome:Ep
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCallhomeEpConfigCallhome:SetPeer

Fault Code:F16670

Message

[FSM:STAGE:FAILEDIRETRY]: call-home configuration on secondary(FSM-STAGE:sam:dme:CallhomeEpConfigCallhome:SetPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-peer-failed
mibFaultCode: 16670
mibFaultName: fsmStFailCallhomeEpConfigCallhomeSetPeer
moClass: callhome:Ep
Type: fsm

fsmStFailCapabilityCatalogueActivateCatalog:ApplyCatalog

Fault Code:F17045

Message

[FSM:STAGE:FAILEDIRETRY]: applying changes to catalog(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:ApplyCatalog)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: apply-catalog-failed
mibFaultCode: 17045
mibFaultName: fsmStFailCapabilityCatalogueActivateCatalogApplyCatalog
moClass: capability:Catalogue
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCapabilityCatalogueActivateCatalog:CopyRemote

Fault Code:F17045

Message

[FSM:STAGE:FAILED|RETRY]: syncing catalog changes to subordinate(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:CopyRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: copy-remote-failed
mibFaultCode: 17045
mibFaultName: fsmStFailCapabilityCatalogueActivateCatalogCopyRemote
moClass: capability:Catalogue
Type: fsm

fsmStFailCapabilityCatalogueActivateCatalog:EvaluateStatus

Fault Code:F17045

Message

[FSM:STAGE:FAILED|RETRY]: evaluating status of activation(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:EvaluateStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: evaluate-status-failed
mibFaultCode: 17045
mibFaultName: fsmStFailCapabilityCatalogueActivateCatalogEvaluateStatus
moClass: capability:Catalogue
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCapabilityCatalogueActivateCatalog:RescanImages

Fault Code:F17045

Message

[FSM:STAGE:FAILEDIRETRY]: rescanning image files(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:RescanImages)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: rescan-images-failed
mibFaultCode: 17045
mibFaultName: fsmStFailCapabilityCatalogueActivateCatalogRescanImages
moClass: capability:Catalogue
Type: fsm

fsmStFailCapabilityCatalogueActivateCatalog:UnpackLocal

Fault Code:F17045

Message

[FSM:STAGE:FAILEDIRETRY]: activating catalog changes(FSM-STAGE:sam:dme:CapabilityCatalogueActivateCatalog:UnpackLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: unpack-local-failed
mibFaultCode: 17045
mibFaultName: fsmStFailCapabilityCatalogueActivateCatalogUnpackLocal
moClass: capability:Catalogue
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCapabilityCatalogueDeployCatalogue:SyncBladeAGLocal

Fault Code:F16931

Message

[FSM:STAGE:FAILED|RETRY]: Sending capability catalogue [version] to local bladeAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncBladeAGLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sync-bladeaglocal-failed
mibFaultCode: 16931
mibFaultName: fsmStFailCapabilityCatalogueDeployCatalogueSyncBladeAGLocal
moClass: capability:Catalogue
Type: fsm

fsmStFailCapabilityCatalogueDeployCatalogue:SyncBladeAGRemote

Fault Code:F16931

Message

[FSM:STAGE:FAILED|RETRY]: Sending capability catalogue [version] to remote bladeAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncBladeAGRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sync-bladeagremote-failed
mibFaultCode: 16931
mibFaultName: fsmStFailCapabilityCatalogueDeployCatalogueSyncBladeAGRemote
moClass: capability:Catalogue
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCapabilityCatalogueDeployCatalogue:SyncHostagentAGLocal

Fault Code:F16931

Message

[FSM:STAGE:FAILEDIRETRY]: Sending capability catalogue [version] to local hostagentAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncHostagentAGLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sync-hostagentaglocal-failed
mibFaultCode: 16931
mibFaultName: fsmStFailCapabilityCatalogueDeployCatalogueSyncHostagentAGLocal
moClass: capability:Catalogue
Type: fsm

fsmStFailCapabilityCatalogueDeployCatalogue:SyncHostagentAGRemote

Fault Code:F16931

Message

[FSM:STAGE:FAILEDIRETRY]: Sending capability catalogue [version] to remote hostagentAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncHostagentAGRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sync-hostagentagremote-failed
mibFaultCode: 16931
mibFaultName: fsmStFailCapabilityCatalogueDeployCatalogueSyncHostagentAGRemote
moClass: capability:Catalogue
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCapabilityCatalogueDeployCatalogue:SyncNicAGLocal

Fault Code:F16931

Message

[FSM:STAGE:FAILED|RETRY]: Sending capability catalogue [version] to local nicAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncNicAGLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sync-nicaglocal-failed
mibFaultCode: 16931
mibFaultName: fsmStFailCapabilityCatalogueDeployCatalogueSyncNicAGLocal
moClass: capability:Catalogue
Type: fsm

fsmStFailCapabilityCatalogueDeployCatalogue:SyncNicAGRemote

Fault Code:F16931

Message

[FSM:STAGE:FAILED|RETRY]: Sending capability catalogue [version] to remote nicAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncNicAGRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sync-nicagremote-failed
mibFaultCode: 16931
mibFaultName: fsmStFailCapabilityCatalogueDeployCatalogueSyncNicAGRemote
moClass: capability:Catalogue
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCapabilityCatalogueDeployCatalogue:SyncPortAGLocal

Fault Code:F16931

Message

[FSM:STAGE:FAILEDIRETRY]: Sending capability catalogue [version] to local portAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncPortAGLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sync-portaglocal-failed
mibFaultCode: 16931
mibFaultName: fsmStFailCapabilityCatalogueDeployCatalogueSyncPortAGLocal
moClass: capability:Catalogue
Type: fsm

fsmStFailCapabilityCatalogueDeployCatalogue:SyncPortAGRemote

Fault Code:F16931

Message

[FSM:STAGE:FAILEDIRETRY]: Sending capability catalogue [version] to remote portAG(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:SyncPortAGRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sync-portagremote-failed
mibFaultCode: 16931
mibFaultName: fsmStFailCapabilityCatalogueDeployCatalogueSyncPortAGRemote
moClass: capability:Catalogue
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCapabilityCatalogueDeployCatalogue:finalize

Fault Code:F16931

Message

[FSM:STAGE:FAILED|RETRY]: Finalizing capability catalogue [version]
deployment(FSM-STAGE:sam:dme:CapabilityCatalogueDeployCatalogue:finalize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: finalize-failed
mibFaultCode: 16931
mibFaultName: fsmStFailCapabilityCatalogueDeployCatalogueFinalize
moClass: capability:Catalogue
Type: fsm

fsmStFailCapabilityMgmtExtensionActivateMgmtExt:ApplyCatalog

Fault Code:F17046

Message

[FSM:STAGE:FAILED|RETRY]: applying changes to
catalog(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:ApplyCatalog)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: apply-catalog-failed
mibFaultCode: 17046
mibFaultName: fsmStFailCapabilityMgmtExtensionActivateMgmtExtApplyCatalog
moClass: capability:MgmtExtension
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCapabilityMgmtExtensionActivateMgmtExt:CopyRemote

Fault Code:F17046

Message

[FSM:STAGE:FAILEDIRETRY]: syncing management extension changes to subordinate(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:CopyRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning

Cause: copy-remote-failed

mibFaultCode: 17046

mibFaultName: fsmStFailCapabilityMgmtExtensionActivateMgmtExtCopyRemote

moClass: capability:MgmtExtension

Type: fsm

fsmStFailCapabilityMgmtExtensionActivateMgmtExt:EvaluateStatus

Fault Code:F17046

Message

[FSM:STAGE:FAILEDIRETRY]: evaluating status of activation(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:EvaluateStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning

Cause: evaluate-status-failed

mibFaultCode: 17046

mibFaultName: fsmStFailCapabilityMgmtExtensionActivateMgmtExtEvaluateStatus

moClass: capability:MgmtExtension

Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCapabilityMgmtExtensionActivateMgmtExt:RescanImages

Fault Code:F17046

Message

[FSM:STAGE:FAILED|RETRY]: rescanning image
files(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:RescanImages)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: rescan-images-failed
mibFaultCode: 17046
mibFaultName: fsmStFailCapabilityMgmtExtensionActivateMgmtExtRescanImages
moClass: capability:MgmtExtension
Type: fsm

fsmStFailCapabilityMgmtExtensionActivateMgmtExt:UnpackLocal

Fault Code:F17046

Message

[FSM:STAGE:FAILED|RETRY]: activating management extension
changes(FSM-STAGE:sam:dme:CapabilityMgmtExtensionActivateMgmtExt:UnpackLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: unpack-local-failed
mibFaultCode: 17046
mibFaultName: fsmStFailCapabilityMgmtExtensionActivateMgmtExtUnpackLocal
moClass: capability:MgmtExtension
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCapabilityUpdaterUpdater:Apply

Fault Code:F16904

Message

[FSM:STAGE:FAILEDIRETRY]: applying changes to catalog(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:Apply)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: apply-failed
mibFaultCode: 16904
mibFaultName: fsmStFailCapabilityUpdaterUpdaterApply
moClass: capability:Updater
Type: fsm

fsmStFailCapabilityUpdaterUpdater:CopyRemote

Fault Code:F16904

Message

[FSM:STAGE:FAILEDIRETRY]: syncing catalog files to subordinate(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:CopyRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: copy-remote-failed
mibFaultCode: 16904
mibFaultName: fsmStFailCapabilityUpdaterUpdaterCopyRemote
moClass: capability:Updater
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCapabilityUpdaterUpdater>DeleteLocal

Fault Code:F16904

Message

[FSM:STAGE:FAILED|RETRY]: deleting temp image [fileName] on local(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater>DeleteLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: delete-local-failed
mibFaultCode: 16904
mibFaultName: fsmStFailCapabilityUpdaterUpdater>DeleteLocal
moClass: capability:Updater
Type: fsm

fsmStFailCapabilityUpdaterUpdater>EvaluateStatus

Fault Code:F16904

Message

[FSM:STAGE:FAILED|RETRY]: evaluating status of update(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater>EvaluateStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: evaluate-status-failed
mibFaultCode: 16904
mibFaultName: fsmStFailCapabilityUpdaterUpdater>EvaluateStatus
moClass: capability:Updater
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCapabilityUpdaterUpdater:Local

Fault Code:F16904

Message

[FSM:STAGE:FAILEDIRETRY]: downloading catalog file [fileName] from [server](FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 16904
mibFaultName: fsmStFailCapabilityUpdaterUpdaterLocal
moClass: capability:Updater
Type: fsm

fsmStFailCapabilityUpdaterUpdater:RescanImages

Fault Code:F16904

Message

[FSM:STAGE:FAILEDIRETRY]: rescanning image files(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:RescanImages)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: rescan-images-failed
mibFaultCode: 16904
mibFaultName: fsmStFailCapabilityUpdaterUpdaterRescanImages
moClass: capability:Updater
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCapabilityUpdaterUpdater:UnpackLocal

Fault Code:F16904

Message

[FSM:STAGE:FAILED|RETRY]: unpacking catalog file [fileName] on primary(FSM-STAGE:sam:dme:CapabilityUpdaterUpdater:UnpackLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: unpack-local-failed
mibFaultCode: 16904
mibFaultName: fsmStFailCapabilityUpdaterUpdaterUnpackLocal
moClass: capability:Updater
Type: fsm

fsmStFailCommSvcEpRestartWebSvc:restart

Fault Code:F16577

Message

[FSM:STAGE:FAILED|RETRY]: restart web services(FSM-STAGE:sam:dme:CommSvcEpRestartWebSvc:restart)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: restart-failed
mibFaultCode: 16577
mibFaultName: fsmStFailCommSvcEpRestartWebSvcRestart
moClass: comm:SvcEp
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCommSvcEpUpdateSvcEp:PropogateEpSettings

Fault Code:F16576

Message

[FSM:STAGE:FAILEDIRETRY]: propogate updated settings (eg. timezone)(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpSettings)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: propogate-ep-settings-failed
mibFaultCode: 16576
mibFaultName: fsmStFailCommSvcEpUpdateSvcEpPropogateEpSettings
moClass: comm:SvcEp
Type: fsm

fsmStFailCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsLocal

Fault Code:F16576

Message

[FSM:STAGE:FAILEDIRETRY]: propogate updated timezone settings to management controllers.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: propogate-ep-time-zone-settings-local-failed
mibFaultCode: 16576
mibFaultName: fsmStFailCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsLocal
moClass: comm:SvcEp
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsPeer

Fault Code:F16576

Message

[FSM:STAGE:FAILED|RETRY]: propogate updated timezone settings to management controllers.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: propogate-ep-time-zone-settings-peer-failed
mibFaultCode: 16576
mibFaultName: fsmStFailCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsPeer
moClass: comm:SvcEp
Type: fsm

fsmStFailCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToAdaptorsLocal

Fault Code:F16576

Message

[FSM:STAGE:FAILED|RETRY]: propogate updated timezone settings to NICs.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToAdaptorsLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: propogate-ep-time-zone-settings-to-adaptors-local-failed
mibFaultCode: 16576
mibFaultName: fsmStFailCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsToAdaptorsLocal
moClass: comm:SvcEp
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToAdaptorsPeer

Fault Code:F16576

Message

[FSM:STAGE:FAILEDIRETRY]: propogate updated timezone settings to NICs.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToAdaptorsPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning

Cause: propogate-ep-time-zone-settings-to-adaptors-peer-failed

mibFaultCode: 16576

mibFaultName: fsmStFailCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsToAdaptorsPeer

moClass: comm:SvcEp

Type: fsm

fsmStFailCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToFexIomLocal

Fault Code:F16576

Message

[FSM:STAGE:FAILEDIRETRY]: propogate updated timezone settings to FEXs and IOMs.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToFexIomLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning

Cause: propogate-ep-time-zone-settings-to-fex-iom-local-failed

mibFaultCode: 16576

mibFaultName: fsmStFailCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsToFexIomLocal

moClass: comm:SvcEp

Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToFexIomPeer

Fault Code:F16576

Message

[FSM:STAGE:FAILED|RETRY]: propogate updated timezone settings to FEXs and IOMs.(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:PropogateEpTimeZoneSettingsToFexIomPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: propogate-ep-time-zone-settings-to-fex-iom-peer-failed
mibFaultCode: 16576
mibFaultName: fsmStFailCommSvcEpUpdateSvcEpPropogateEpTimeZoneSettingsToFexIomPeer
moClass: comm:SvcEp
Type: fsm

fsmStFailCommSvcEpUpdateSvcEp:SetEpLocal

Fault Code:F16576

Message

[FSM:STAGE:FAILED|RETRY]: communication service [name] configuration to primary(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:SetEpLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-ep-local-failed
mibFaultCode: 16576
mibFaultName: fsmStFailCommSvcEpUpdateSvcEpSetEpLocal
moClass: comm:SvcEp
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailCommSvcEpUpdateSvcEp:SetEpPeer

Fault Code:F16576

Message

[FSM:STAGE:FAILEDIRETRY]: communication service [name] configuration to secondary(FSM-STAGE:sam:dme:CommSvcEpUpdateSvcEp:SetEpPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-ep-peer-failed
mibFaultCode: 16576
mibFaultName: fsmStFailCommSvcEpUpdateSvcEpSetEpPeer
moClass: comm:SvcEp
Type: fsm

fsmStFailComputeBladeDiag:BiosPostCompletion

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Waiting for BIOS POST completion from CIMC on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:BiosPostCompletion)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagBiosPostCompletion
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:BladeBoot

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Power-on server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:BladeBoot)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-boot-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagBladeBoot
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:BladeBootWait

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Waiting for system reset on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:BladeBootWait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-boot-wait-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagBladeBootWait
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:BladePowerOn

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Power on server [chassisId]/[slotId] for diagnostics(FSM-STAGE:sam:dme:ComputeBladeDiag:BladePowerOn)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-power-on-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagBladePowerOn
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:BladeReadSmbios

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Read SMBIOS tables on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:BladeReadSmbios)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-read-smbios-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagBladeReadSmbios
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:BmcConfigPnuOS

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: provisioning a bootable device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputeBladeDiag:BmcConfigPnuOS)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagBmcConfigPnuOS
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:BmcInventory

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Getting inventory of server [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:ComputeBladeDiag:BmcInventory)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-inventory-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagBmcInventory
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:BmcPresence

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Checking CIMC of server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:BmcPresence)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-presence-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagBmcPresence
mcClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:BmcShutdownDiagCompleted

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Shutdown server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:BmcShutdownDiagCompleted)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-shutdown-diag-completed-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagBmcShutdownDiagCompleted
mcClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:CleanupServerConnSwA

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Cleaning up server [chassisId]/[slotId] interface on fabric A(FSM-STAGE:sam:dme:ComputeBladeDiag:CleanupServerConnSwA)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: cleanup-server-conn-sw-afailed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagCleanupServerConnSwA
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:CleanupServerConnSwB

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Cleaning up server [chassisId]/[slotId] interface on fabric B(FSM-STAGE:sam:dme:ComputeBladeDiag:CleanupServerConnSwB)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: cleanup-server-conn-sw-bfailed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagCleanupServerConnSwB
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:ConfigFeLocal

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Configuring primary fabric interconnect access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:ConfigFeLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-fe-local-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagConfigFeLocal
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:ConfigFePeer

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Configuring secondary fabric interconnect access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:ConfigFePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-fe-peer-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagConfigFePeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:ConfigSol

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Configuring SoL access to server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:ConfigSol)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-sol-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagConfigSol
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:ConfigUserAccess

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Configuring external user access to server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:ConfigUserAccess)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-user-access-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagConfigUserAccess
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:DebugWait

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Waiting for debugging for server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:DebugWait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: debug-wait-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagDebugWait
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:DeriveConfig

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Derive diag config for server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:DeriveConfig)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: derive-config-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagDeriveConfig
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:DisableServerConnSwA

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Disable server [chassisId]/[slotId] interface on fabric A after completion of network traffic tests on fabric A(FSM-STAGE:sam:dme:ComputeBladeDiag:DisableServerConnSwA)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: disable-server-conn-sw-afailed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagDisableServerConnSwA
moClass: compute:Blade
Type: fsm
```

fsmStFailComputeBladeDiag:DisableServerConnSwB

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Disable server [chassisId]/[slotId] connectivity on fabric B in preparation for network traffic tests on fabric A(FSM-STAGE:sam:dme:ComputeBladeDiag:DisableServerConnSwB)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: disable-server-conn-sw-bfailed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagDisableServerConnSwB
moClass: compute:Blade
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:EnableServerConnSwA

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Enable server [chassisId]/[slotId] connectivity on fabric A in preparation for network traffic tests on fabric A(FSM-STAGE:sam:dme:ComputeBladeDiag:EnableServerConnSwA)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: enable-server-conn-sw-afailed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagEnableServerConnSwA
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:EnableServerConnSwB

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Enable server [chassisId]/[slotId] connectivity on fabric B in preparation for network traffic tests on fabric B(FSM-STAGE:sam:dme:ComputeBladeDiag:EnableServerConnSwB)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: enable-server-conn-sw-bfailed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagEnableServerConnSwB
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:EvaluateStatus

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Evaluating status; diagnostics completed(FSM-STAGE:sam:dme:ComputeBladeDiag:EvaluateStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: evaluate-status-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagEvaluateStatus
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:FabricATrafficTestStatus

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Gather status of network traffic tests on fabric A for server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:FabricATrafficTestStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: fabricatraffic-test-status-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagFabricATrafficTestStatus
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:FabricBTrafficTestStatus

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Gather status of network tests on fabric B for server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:FabricBTrafficTestStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: fabricbtraffic-test-status-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagFabricBTrafficTestStatus
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:GenerateLogWait

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Waiting for collection of diagnostic logs from server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:GenerateLogWait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: generate-log-wait-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagGenerateLogWait
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:GenerateReport

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Generating report for server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:GenerateReport)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: generate-report-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagGenerateReport
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:HostConnect

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Connect to diagnostics environment agent on server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:HostConnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: host-connect-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagHostConnect
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:HostDisconnect

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Disconnect diagnostics environment agent for server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:HostDisconnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: host-disconnect-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagHostDisconnect
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:HostIdent

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Identify diagnostics environment agent on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:HostIdent)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: host-ident-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagHostIdent
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:HostInventory

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Perform inventory of server [chassisId]/[slotId] in diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:HostInventory)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: host-inventory-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagHostInventory
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:HostPolicy

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Populate diagnostics environment behavior policy to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:HostPolicy)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: host-policy-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagHostPolicy
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:HostServerDiag

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Trigger diagnostics on server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:HostServerDiag)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: host-server-diag-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagHostServerDiag
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:HostServerDiagStatus

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Diagnostics status on server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:HostServerDiagStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: host-server-diag-status-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagHostServerDiagStatus
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:NicConfigLocal

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Configure adapter in server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:NicConfigLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-local-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagNicConfigLocal
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:NicConfigPeer

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Configure adapter in server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:NicConfigPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-peer-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagNicConfigPeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:NicInventoryLocal

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Retrieve adapter inventory in server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:NicInventoryLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-inventory-local-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagNicInventoryLocal
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:NicInventoryPeer

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Retrieve adapter inventory in server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:NicInventoryPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-inventory-peer-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagNicInventoryPeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:NicPresenceLocal

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Detect adapter in server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:NicPresenceLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-presence-local-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagNicPresenceLocal
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:NicPresencePeer

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Detect adapter in server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:NicPresencePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-presence-peer-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagNicPresencePeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:NicUnconfigLocal

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Unconfigure adapter of server [chassisId]/[slotId] diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:NicUnconfigLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-local-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagNicUnconfigLocal
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:NicUnconfigPeer

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Unconfigure adapter of server [chassisId]/[slotId] diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:NicUnconfigPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-peer-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagNicUnconfigPeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:PollMemoryTestStatus

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Check diagnostics environment boot status on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:PollMemoryTestStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: poll-memory-test-status-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagPollMemoryTestStatus
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:RemoveConfig

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Derive diag config for server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:RemoveConfig)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: remove-config-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagRemoveConfig
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:RemoveVMediaLocal

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Remove VMedia for server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:RemoveVMediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: removevmedia-local-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagRemoveVMediaLocal
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:RemoveVMediaPeer

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Remove VMedia for server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:RemoveVMediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: removevmedia-peer-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagRemoveVMediaPeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:RestoreConfigFeLocal

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Reconfiguring primary fabric interconnect access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:RestoreConfigFeLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: restore-config-fe-local-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagRestoreConfigFeLocal
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:RestoreConfigFePeer

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Reconfiguring secondary fabric interconnect access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:RestoreConfigFePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: restore-config-fe-peer-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagRestoreConfigFePeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:SetDiagUser

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Populate diagnostics environment with a user account to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:SetDiagUser)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-diag-user-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagSetDiagUser
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:SetupVMediaLocal

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Setup VMedia for server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:SetupVMediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setupvmedia-local-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagSetupVMediaLocal
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:SetupVMediaPeer

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Setup VMedia for server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:SetupVMediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setupvmedia-peer-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagSetupVMediaPeer
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:StartFabricATrafficTest

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Trigger network traffic tests on fabric A on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:StartFabricATrafficTest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: start-fabricatraffic-test-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagStartFabricATrafficTest
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:StartFabricBTrafficTest

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Trigger network tests on fabric B for server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:StartFabricBTrafficTest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: start-fabricbtraffic-test-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagStartFabricBTrafficTest
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:StartMemoryTestStatus

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Check diagnostics environment boot status on server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:StartMemoryTestStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: start-memory-test-status-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagStartMemoryTestStatus
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:StopVMediaLocal

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Stop VMedia for server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:StopVMediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: stopvmedia-local-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagStopVMediaLocal
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:StopVMediaPeer

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Stop VMedia for server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:StopVMediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: stopvmedia-peer-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagStopVMediaPeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:SwConfigLocal

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Configure primary fabric interconnect in server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:SwConfigLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-local-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagSwConfigLocal
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:SwConfigPeer

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Configure secondary fabric interconnect in server [chassisId]/[slotId] for diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:SwConfigPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-peer-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagSwConfigPeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:SwUnconfigLocal

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Unconfigure primary fabric interconnect for server [chassisId]/[slotId] in diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:SwUnconfigLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-local-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagSwUnconfigLocal
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:SwUnconfigPeer

Fault Code:F16535

Message

[FSM:STAGE:FAILED|RETRY]: Unconfigure secondary fabric interconnect for server [chassisId]/[slotId] in diagnostics environment(FSM-STAGE:sam:dme:ComputeBladeDiag:SwUnconfigPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-peer-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagSwUnconfigPeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiag:UnconfigSol

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Unconfigure SoL access to server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:UnconfigSol)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: unconfig-sol-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagUnconfigSol
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiag:UnconfigUserAccess

Fault Code:F16535

Message

[FSM:STAGE:FAILEDIRETRY]: Unconfigure external user access to server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiag:UnconfigUserAccess)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: unconfig-user-access-failed
mibFaultCode: 16535
mibFaultName: fsmStFailComputeBladeDiagUnconfigUserAccess
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:BiosPostCompletion

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Waiting for BIOS POST completion from CIMC on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:BiosPostCompletion)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverBiosPostCompletion
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiscover:BladeBootPnuos

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: power server [chassisId]/[slotId] on with pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:BladeBootPnuos)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-boot-pnuos-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverBladeBootPnuos
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:BladeBootWait

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: Waiting for system reset on server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:BladeBootWait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-boot-wait-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverBladeBootWait
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiscover:BladePowerOn

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: power on server [chassisId]/[slotId] for
discovery(FSM-STAGE:sam:dme:ComputeBladeDiscover:BladePowerOn)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-power-on-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverBladePowerOn
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:BladeReadSmbios

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Waiting for SMBIOS table from CIMC on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:BladeReadSmbios)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-read-smbios-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverBladeReadSmbios
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiscover:BmcConfigPnuOS

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: provisioning a bootable device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcConfigPnuOS)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverBmcConfigPnuOS
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:BmcInventory

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: getting inventory of server [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcInventory)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-inventory-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverBmcInventory
mcClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiscover:BmcPreConfigPnuOSLocal

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcPreConfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-pre-config-pnuoslocal-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverBmcPreConfigPnuOSLocal
mcClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:BmcPreConfigPnuOSPeer

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcPreConfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-pre-config-pnuospeer-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverBmcPreConfigPnuOSPeer
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiscover:BmcPresence

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: checking CIMC of server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcPresence)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-presence-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverBmcPresence
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:BmcShutdownDiscovered

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: Shutdown the server [chassisId]/[slotId]; deep discovery completed(FSM-STAGE:sam:dme:ComputeBladeDiscover:BmcShutdownDiscovered)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-shutdown-discovered-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverBmcShutdownDiscovered
mcClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiscover:ConfigFeLocal

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: configuring primary fabric interconnect access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:ConfigFeLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-fe-local-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverConfigFeLocal
mcClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:ConfigFePeer

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: configuring secondary fabric interconnect access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:ConfigFePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-fe-peer-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverConfigFePeer
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiscover:ConfigUserAccess

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: configuring external user access to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:ConfigUserAccess)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-user-access-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverConfigUserAccess
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:HandlePooling

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: Invoke post-discovery policies on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:HandlePooling)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: handle-pooling-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverHandlePooling
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiscover:NicConfigPnuOSLocal

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: configure primary adapter in [chassisId]/[slotId] for pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:NicConfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-pnuoslocal-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverNicConfigPnuOSLocal
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:NicConfigPnuOSPeer

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: configure secondary adapter in [chassisId]/[slotId] for pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:NicConfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-pnuospeer-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverNicConfigPnuOSPeer
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiscover:NicPresenceLocal

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: detect mezz cards in [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:NicPresenceLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-presence-local-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverNicPresenceLocal
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:NicPresencePeer

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: detect mezz cards in [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:NicPresencePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-presence-peer-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverNicPresencePeer
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiscover:NicUnconfigPnuOSLocal

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: Unconfigure adapter of server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:NicUnconfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-pnuoslocal-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverNicUnconfigPnuOSLocal
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:NicUnconfigPnuOSPeer

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Unconfigure adapter of server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:NicUnconfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-pnuospeer-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverNicUnconfigPnuOSPeer
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiscover:PnuOSIdent

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Identify pre-boot environment agent on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSIdent)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosident-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverPnuOSIdent
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:PnuOSInventory

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: Perform inventory of server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSInventory)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosinventory-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverPnuOSInventory
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiscover:PnuOSPolicy

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: Populate pre-boot environment behavior policy to server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSPolicy)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuospolicy-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverPnuOSPolicy
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:PnuOSScrub

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Scrub server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSScrub)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosscrub-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverPnuOSScrub
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiscover:PnuOSSelfTest

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Trigger self-test of server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:PnuOSSelfTest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosself-test-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverPnuOSSelfTest
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:PreSanitize

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: Preparing to check hardware configuration server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:PreSanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverPreSanitize
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiscover:Sanitize

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: Checking hardware configuration server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:Sanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sanitize-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverSanitize
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:SetupVmediaLocal

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: provisioning a Virtual Media device with a bootable pre-boot image for blade [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:SetupVmediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setup-vmedia-local-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverSetupVmediaLocal
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiscover:SetupVmediaPeer

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: provisioning a Virtual Media device with a bootable pre-boot image for blade [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:SetupVmediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setup-vmedia-peer-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverSetupVmediaPeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:SwConfigPnuOSLocal

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: configure primary fabric interconnect in [chassisId]/[slotId] for pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:SwConfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-pnuoslocal-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverSwConfigPnuOSLocal
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiscover:SwConfigPnuOSPeer

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: configure secondary fabric interconnect in [chassisId]/[slotId] for pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:SwConfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-pnuospeer-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverSwConfigPnuOSPeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:SwUnconfigPnuOSLocal

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Unconfigure primary fabric interconnect for server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:SwUnconfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-pnuoslocal-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverSwUnconfigPnuOSLocal
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiscover:SwUnconfigPnuOSPeer

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Unconfigure secondary fabric interconnect for server [chassisId]/[slotId] pre-boot environment(FSM-STAGE:sam:dme:ComputeBladeDiscover:SwUnconfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-pnuospeer-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverSwUnconfigPnuOSPeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:TeardownVmediaLocal

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: unprovisioning the Virtual Media bootable device for blade [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:TeardownVmediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: teardown-vmedia-local-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverTeardownVmediaLocal
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeDiscover:TeardownVmediaPeer

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: unprovisioning the Virtual media bootable device for blade [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:TeardownVmediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: teardown-vmedia-peer-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverTeardownVmediaPeer
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeDiscover:hagConnect

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Connect to pre-boot environment agent on server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:hagConnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: hag-connect-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverHagConnect
moClass: compute:Blade
Type: fsm
```

fsmStFailComputeBladeDiscover:hagDisconnect

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Disconnect pre-boot environment agent for server [chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeDiscover:hagDisconnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: hag-disconnect-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeBladeDiscoverHagDisconnect
moClass: compute:Blade
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeUpdateBoardController:BladePowerOff

Fault Code:F16930

Message

[FSM:STAGE:FAILEDIRETRY]: Power off server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeUpdateBoardController:BladePowerOff)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-power-off-failed
mibFaultCode: 16930
mibFaultName: fsmStFailComputeBladeUpdateBoardControllerBladePowerOff
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeUpdateBoardController:BladePowerOn

Fault Code:F16930

Message

[FSM:STAGE:FAILEDIRETRY]: Power on server
[chassisId]/[slotId](FSM-STAGE:sam:dme:ComputeBladeUpdateBoardController:BladePowerOn)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-power-on-failed
mibFaultCode: 16930
mibFaultName: fsmStFailComputeBladeUpdateBoardControllerBladePowerOn
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeUpdateBoardController:PollUpdateStatus

Fault Code:F16930

Message

[FSM:STAGE:FAILED|RETRY]: Waiting for Board Controller update to complete(FSM-STAGE:sam:dme:ComputeBladeUpdateBoardController:PollUpdateStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: 16930
mibFaultName: fsmStFailComputeBladeUpdateBoardControllerPollUpdateStatus
moClass: compute:Blade
Type: fsm

fsmStFailComputeBladeUpdateBoardController:PrepareForUpdate

Fault Code:F16930

Message

[FSM:STAGE:FAILED|RETRY]: Prepare for BoardController update(FSM-STAGE:sam:dme:ComputeBladeUpdateBoardController:PrepareForUpdate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: prepare-for-update-failed
mibFaultCode: 16930
mibFaultName: fsmStFailComputeBladeUpdateBoardControllerPrepareForUpdate
moClass: compute:Blade
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeBladeUpdateBoardController:UpdateRequest

Fault Code:F16930

Message

[FSM:STAGE:FAILEDIRETRY]: Sending Board Controller update request to CIMC(FSM-STAGE:sam:dme:ComputeBladeUpdateBoardController:UpdateRequest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: 16930
mibFaultName: fsmStFailComputeBladeUpdateBoardControllerUpdateRequest
moClass: compute:Blade
Type: fsm

fsmStFailComputePhysicalActivateAdaptor:ActivateLocal

Fault Code:F17044

Message

[FSM:STAGE:FAILEDIRETRY]: activating backup image of Adaptor(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:ActivateLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: activate-local-failed
mibFaultCode: 17044
mibFaultName: fsmStFailComputePhysicalActivateAdaptorActivateLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalActivateAdaptor:ActivatePeer

Fault Code:F17044

Message

[FSM:STAGE:FAILED|RETRY]: activating backup image of Adaptor(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:ActivatePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: activate-peer-failed
mibFaultCode: 17044
mibFaultName: fsmStFailComputePhysicalActivateAdaptorActivatePeer
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalActivateAdaptor:PowerOn

Fault Code:F17044

Message

[FSM:STAGE:FAILED|RETRY]: power on the blade(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:PowerOn)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: power-on-failed
mibFaultCode: 17044
mibFaultName: fsmStFailComputePhysicalActivateAdaptorPowerOn
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalActivateAdaptor:Reset

Fault Code:F17044

Message

[FSM:STAGE:FAILEDIRETRY]: resetting the blade(FSM-STAGE:sam:dme:ComputePhysicalActivateAdaptor:Reset)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: reset-failed
mibFaultCode: 17044
mibFaultName: fsmStFailComputePhysicalActivateAdaptorReset
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:BioImgUpdate

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Update blade BIOS image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BioImgUpdate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bios-img-update-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateBioImgUpdate
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:BiosPostCompletion

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Waiting for BIOS POST completion from CIMC on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:BiosPostCompletion)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateBiosPostCompletion
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:BladePowerOff

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Power off server for configuration of service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:BladePowerOff)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-power-off-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateBladePowerOff
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:BmcConfigPnuOS

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: provisioning a bootable device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BmcConfigPnuOS)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateBmcConfigPnuOS
mcClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:BmcPreconfigPnuOSLocal

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BmcPreconfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-preconfig-pnuoslocal-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateBmcPreconfigPnuOSLocal
mcClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:BmcPreconfigPnuOSPeer

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BmcPreconfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-preconfig-pnuospeer-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateBmcPreconfigPnuOSPeer
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:BmcUnconfigPnuOS

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: unprovisioning the bootable device for server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BmcUnconfigPnuOS)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-unconfig-pnuos-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateBmcUnconfigPnuOS
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:BootHost

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Boot host OS for server (service profile:
[assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BootHost)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: boot-host-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateBootHost
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:BootPnuos

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Bring-up pre-boot environment for association with
[assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BootPnuos)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: boot-pnuos-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateBootPnuos
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:BootWait

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Waiting for system
reset(FSM-STAGE:sam:dme:ComputePhysicalAssociate:BootWait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: boot-wait-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateBootWait
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:ConfigSoL

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Configuring SoL interface on
server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigSoL)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-so-lfailed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateConfigSoL
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:ConfigUserAccess

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Configuring external user access(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigUserAccess)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-user-access-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateConfigUserAccess
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:ConfigUuid

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Configure logical UUID for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:ConfigUuid)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-uuid-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateConfigUuid
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:HbaImgUpdate

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Update Host Bus Adapter image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HbaImgUpdate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hba-img-update-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateHbaImgUpdate
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:HostOSConfig

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Configure host OS components on server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HostOSConfig)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hostosconfig-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateHostOSConfig
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:HostOSIdent

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Identify host agent on server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HostOSIdent)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hostosident-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateHostOSIdent
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:HostOSPolicy

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Upload host agent policy to host agent on server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HostOSPolicy)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hostospolicy-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateHostOSPolicy
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:HostOSValidate

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Validate host OS on server (service profile:
[assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:HostOSValidate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hostosvalidate-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateHostOSValidate
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:LocalDiskFwUpdate

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Update LocalDisk firmware
image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:LocalDiskFwUpdate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-disk-fw-update-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateLocalDiskFwUpdate
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:NicConfigHostOSLocal

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Configure adapter in server for host OS (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigHostOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-hostoslocal-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateNicConfigHostOSLocal
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:NicConfigHostOSPeer

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Configure adapter in server for host OS (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigHostOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-hostospeer-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateNicConfigHostOSPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:NicConfigPnuOSLocal

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Configure adapter for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-pnuoslocal-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateNicConfigPnuOSLocal
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:NicConfigPnuOSPeer

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Configure adapter for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicConfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-pnuospeer-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateNicConfigPnuOSPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:NicImgUpdate

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Update adapter image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicImgUpdate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-img-update-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateNicImgUpdate
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:NicUnconfigPnuOSLocal

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicUnconfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-pnuoslocal-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateNicUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:NicUnconfigPnuOSPeer

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:NicUnconfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-pnuospeer-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateNicUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:PnuOSConfig

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Configure server with service profile [assignedToDn] pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSConfig)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosconfig-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociatePnuOSConfig
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:PnuOSIdent

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Identify pre-boot environment agent(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSIdent)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosident-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociatePnuOSIdent
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:PnuOSInventory

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Perform inventory of server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSInventory)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosinventory-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociatePnuOSInventory
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:PnuOSLocalDiskConfig

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Configure local disk on server with service profile [assignedToDn] pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSLocalDiskConfig)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuoslocal-disk-config-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociatePnuOSLocalDiskConfig
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:PnuOSPolicy

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Populate pre-boot environment behavior policy(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSPolicy)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuospolicy-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociatePnuOSPolicy
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:PnuOSSelfTest

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Trigger self-test on pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSSelfTest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosself-test-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociatePnuOSSelfTest
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:PnuOSUnloadDrivers

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Unload drivers on server with service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSUnloadDrivers)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support command** and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosunload-drivers-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociatePnuOSUnloadDrivers
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:PnuOSValidate

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Pre-boot environment validation for association with [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:PnuOSValidate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosvalidate-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociatePnuOSValidate
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:PollBoardCtrlUpdateStatus

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Waiting for Board Controller update to complete(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PollBoardCtrlUpdateStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: poll-board-ctrl-update-status-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociatePollBoardCtrlUpdateStatus
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:PowerOn

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Power on server for configuration of service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:PowerOn)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: power-on-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociatePowerOn
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:PreSanitize

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Preparing to check hardware configuration(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PreSanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support command** and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociatePreSanitize
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:PrepareForBoot

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Prepare server for booting host
OS(FSM-STAGE:sam:dme:ComputePhysicalAssociate:PrepareForBoot)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: prepare-for-boot-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociatePrepareForBoot
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:Sanitize

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Checking hardware
configuration(FSM-STAGE:sam:dme:ComputePhysicalAssociate:Sanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sanitize-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateSanitize
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:SetupVmediaLocal

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: provisioning a Virtual Media device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SetupVmediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setup-vmedia-local-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateSetupVmediaLocal
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:SetupVmediaPeer

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: provisioning a Virtual Media device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SetupVmediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setup-vmedia-peer-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateSetupVmediaPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:StorageCtrlImgUpdate

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Update storage controller image(FSM-STAGE:sam:dme:ComputePhysicalAssociate:StorageCtrlImgUpdate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: storage-ctrl-img-update-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateStorageCtrlImgUpdate
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:SwConfigHostOSLocal

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Configure primary fabric interconnect for server host os (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigHostOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-hostoslocal-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateSwConfigHostOSLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:SwConfigHostOSPeer

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Configure secondary fabric interconnect for server host OS (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigHostOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-hostospeer-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateSwConfigHostOSPeer
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:SwConfigPnuOSLocal

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Configure primary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-pnuoslocal-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateSwConfigPnuOSLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:SwConfigPnuOSPeer

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Configure secondary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-pnuospeer-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateSwConfigPnuOSPeer
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:SwConfigPortNivLocal

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: configuring primary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigPortNivLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-port-niv-local-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateSwConfigPortNivLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:SwConfigPortNivPeer

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: configuring secondary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwConfigPortNivPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-port-niv-peer-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateSwConfigPortNivPeer
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:SwUnconfigPnuOSLocal

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Unconfigure primary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwUnconfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-pnuoslocal-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateSwUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:SwUnconfigPnuOSPeer

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Unconfigure secondary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalAssociate:SwUnconfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-pnuospeer-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateSwUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:TeardownVmediaLocal

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: unprovisioning the Virtual Media bootable device for server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:TeardownVmediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: teardown-vmedia-local-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateTeardownVmediaLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:TeardownVmediaPeer

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: unprovisioning the Virtual media bootable device for server(FSM-STAGE:sam:dme:ComputePhysicalAssociate:TeardownVmediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: teardown-vmedia-peer-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateTeardownVmediaPeer
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:UpdateBoardCtrlRequest

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Sending Board Controller update request to CIMC(FSM-STAGE:sam:dme:ComputePhysicalAssociate:UpdateBoardCtrlRequest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-board-ctrl-request-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateUpdateBoardCtrlRequest
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:activateAdaptorNwFwLocal

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Activate adapter network firmware on(FSM-STAGE:sam:dme:ComputePhysicalAssociate:activateAdaptorNwFwLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: activate-adaptor-nw-fw-local-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateActivateAdaptorNwFwLocal
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:activateAdaptorNwFwPeer

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Activate adapter network firmware on(FSM-STAGE:sam:dme:ComputePhysicalAssociate:activateAdaptorNwFwPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: activate-adaptor-nw-fw-peer-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateActivateAdaptorNwFwPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:activateIBMCfw

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Activate CIMC firmware of server
[serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:activateIBMCfw)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: activateibmcfw-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateActivateIBMCfw
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:hagHostOSConnect

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Connect to host agent on server (service profile:
[assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalAssociate:hagHostOSConnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hag-hostosconnect-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateHagHostOSConnect
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:hagPnuOSConnect

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Connect to pre-boot environment agent for association with [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalAssociate:hagPnuOSConnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hag-pnuosconnect-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateHagPnuOSConnect
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:hagPnuOSDisconnect

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Disconnect pre-boot environment agent(FSM-STAGE:sam:dme:ComputePhysicalAssociate:hagPnuOSDisconnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hag-pnuosdisconnect-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateHagPnuOSDisconnect
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:resetIBMC

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Reset CIMC of server
[serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:resetIBMC)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: resetibmc-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateResetIBMC
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:updateAdaptorNwFwLocal

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Update adapter network
firmware(FSM-STAGE:sam:dme:ComputePhysicalAssociate:updateAdaptorNwFwLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-adaptor-nw-fw-local-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateUpdateAdaptorNwFwLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:updateAdaptorNwFwPeer

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Update adapter network firmware(FSM-STAGE:sam:dme:ComputePhysicalAssociate:updateAdaptorNwFwPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-adaptor-nw-fw-peer-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateUpdateAdaptorNwFwPeer
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:updateIBMCFw

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Update CIMC firmware of server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:updateIBMCFw)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: updateibmcfw-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateUpdateIBMCFw
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:waitForAdaptorNwFwUpdateLocal

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Wait for adapter network firmware update completion(FSM-STAGE:sam:dme:ComputePhysicalAssociate:waitForAdaptorNwFwUpdateLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: wait-for-adaptor-nw-fw-update-local-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateWaitForAdaptorNwFwUpdateLocal
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalAssociate:waitForAdaptorNwFwUpdatePeer

Fault Code:F16973

Message

[FSM:STAGE:FAILEDIRETRY]: Wait for adapter network firmware update completion(FSM-STAGE:sam:dme:ComputePhysicalAssociate:waitForAdaptorNwFwUpdatePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: wait-for-adaptor-nw-fw-update-peer-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateWaitForAdaptorNwFwUpdatePeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalAssociate:waitForIBMCFwUpdate

Fault Code:F16973

Message

[FSM:STAGE:FAILED|RETRY]: Wait for CIMC firmware completion on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalAssociate:waitForIBMCFwUpdate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: wait-foribmcfw-update-failed
mibFaultCode: 16973
mibFaultName: fsmStFailComputePhysicalAssociateWaitForIBMCFwUpdate
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalBiosRecovery:BiosPostCompletion

Fault Code:F16984

Message

[FSM:STAGE:FAILED|RETRY]: Waiting for BIOS POST completion from CIMC on server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:BiosPostCompletion)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: 16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryBiosPostCompletion
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalBiosRecovery:Cleanup

Fault Code:F16984

Message

[FSM:STAGE:FAILEDIRETRY]: Completing BIOS recovery mode for server [dn], and shutting it down(FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Cleanup)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: cleanup-failed
mibFaultCode: 16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryCleanup
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalBiosRecovery:PreSanitize

Fault Code:F16984

Message

[FSM:STAGE:FAILEDIRETRY]: Preparing to check hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:PreSanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: 16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryPreSanitize
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalBiosRecovery:Reset

Fault Code:F16984

Message

[FSM:STAGE:FAILED|RETRY]: Resetting server [dn] power state after BIOS recovery(FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Reset)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: reset-failed
mibFaultCode: 16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryReset
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalBiosRecovery:Sanitize

Fault Code:F16984

Message

[FSM:STAGE:FAILED|RETRY]: Checking hardware configuration server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Sanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sanitize-failed
mibFaultCode: 16984
mibFaultName: fsmStFailComputePhysicalBiosRecoverySanitize
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalBiosRecovery:SetupVmediaLocal

Fault Code:F16984

Message

[FSM:STAGE:FAILEDIRETRY]: Provisioning a V-Media device with a bootable BIOS image for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:SetupVmediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setup-vmedia-local-failed
mibFaultCode: 16984
mibFaultName: fsmStFailComputePhysicalBiosRecoverySetupVmediaLocal
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalBiosRecovery:SetupVmediaPeer

Fault Code:F16984

Message

[FSM:STAGE:FAILEDIRETRY]: Provisioning a V-Media device with a bootable BIOS image for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:SetupVmediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setup-vmedia-peer-failed
mibFaultCode: 16984
mibFaultName: fsmStFailComputePhysicalBiosRecoverySetupVmediaPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalBiosRecovery:Shutdown

Fault Code:F16984

Message

[FSM:STAGE:FAILED|RETRY]: Shutting down server [dn] to prepare for BIOS recovery(FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Shutdown)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: shutdown-failed
mibFaultCode: 16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryShutdown
moClass: compute:Physical
Type: fsm
```

fsmStFailComputePhysicalBiosRecovery:Start

Fault Code:F16984

Message

[FSM:STAGE:FAILED|RETRY]: Running BIOS recovery on server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Start)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: start-failed
mibFaultCode: 16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryStart
moClass: compute:Physical
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalBiosRecovery:StopVMediaLocal

Fault Code:F16984

Message

[FSM:STAGE:FAILEDIRETRY]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:StopVMediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: stopvmedia-local-failed
mibFaultCode: 16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryStopVMediaLocal
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalBiosRecovery:StopVMediaPeer

Fault Code:F16984

Message

[FSM:STAGE:FAILEDIRETRY]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:StopVMediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: stopvmedia-peer-failed
mibFaultCode: 16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryStopVMediaPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalBiosRecovery:TeardownVmediaLocal

Fault Code:F16984

Message

[FSM:STAGE:FAILED|RETRY]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:TeardownVmediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: teardown-vmedia-local-failed
mibFaultCode: 16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryTeardownVmediaLocal
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalBiosRecovery:TeardownVmediaPeer

Fault Code:F16984

Message

[FSM:STAGE:FAILED|RETRY]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:TeardownVmediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: teardown-vmedia-peer-failed
mibFaultCode: 16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryTeardownVmediaPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalBiosRecovery:Wait

Fault Code:F16984

Message

[FSM:STAGE:FAILEDIRETRY]: Waiting for completion of BIOS recovery for server [dn] (up to 10 min)(FSM-STAGE:sam:dme:ComputePhysicalBiosRecovery:Wait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: wait-failed
mibFaultCode: 16984
mibFaultName: fsmStFailComputePhysicalBiosRecoveryWait
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalCmosReset:BladePowerOn

Fault Code:F16986

Message

[FSM:STAGE:FAILEDIRETRY]: Power on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:BladePowerOn)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: blade-power-on-failed
mibFaultCode: 16986
mibFaultName: fsmStFailComputePhysicalCmosResetBladePowerOn
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalCmosReset:Execute

Fault Code:F16986

Message

[FSM:STAGE:FAILED|RETRY]: Resetting CMOS for server
[serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 16986
mibFaultName: fsmStFailComputePhysicalCmosResetExecute
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalCmosReset:PreSanitize

Fault Code:F16986

Message

[FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration server
[serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:PreSanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: 16986
mibFaultName: fsmStFailComputePhysicalCmosResetPreSanitize
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalCmosReset:ReconfigBios

Fault Code:F16986

Message

[FSM:STAGE:FAILEDIRETRY]: Reconfiguring BIOS Settings and Boot Order of server [serverId] for service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:ReconfigBios)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: reconfig-bios-failed
mibFaultCode: 16986
mibFaultName: fsmStFailComputePhysicalCmosResetReconfigBios
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalCmosReset:ReconfigUuid

Fault Code:F16986

Message

[FSM:STAGE:FAILEDIRETRY]: Reconfiguring logical UUID of server [serverId] for service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:ReconfigUuid)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: reconfig-uuid-failed
mibFaultCode: 16986
mibFaultName: fsmStFailComputePhysicalCmosResetReconfigUuid
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalCmosReset:Sanitize

Fault Code:F16986

Message

[FSM:STAGE:FAILED|RETRY]: Checking hardware configuration server
[serverId](FSM-STAGE:sam:dme:ComputePhysicalCmosReset:Sanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sanitize-failed
mibFaultCode: 16986
mibFaultName: fsmStFailComputePhysicalCmosResetSanitize
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalConfigSoL:Execute

Fault Code:F17083

Message

[FSM:STAGE:FAILED|RETRY]: configuring SoL interface on server
[dn](FSM-STAGE:sam:dme:ComputePhysicalConfigSoL:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 17083
mibFaultName: fsmStFailComputePhysicalConfigSoLExecute
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDecommission:Execute

Fault Code:F16976

Message

[FSM:STAGE:FAILEDIRETRY]: Decommissioning server
[dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 16976
mibFaultName: fsmStFailComputePhysicalDecommissionExecute
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDecommission:StopVMediaLocal

Fault Code:F16976

Message

[FSM:STAGE:FAILEDIRETRY]: Unprovisioning the V-Media bootable device for server
[dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:StopVMediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: stopvmedia-local-failed
mibFaultCode: 16976
mibFaultName: fsmStFailComputePhysicalDecommissionStopVMediaLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDecommission:StopVMediaPeer

Fault Code:F16976

Message

[FSM:STAGE:FAILED|RETRY]: Unprovisioning the V-Media bootable device for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDecommission:StopVMediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: stopvmedia-peer-failed
mibFaultCode: 16976
mibFaultName: fsmStFailComputePhysicalDecommissionStopVMediaPeer
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDiagnosticInterrupt:Execute

Fault Code:F17116

Message

[FSM:STAGE:FAILED|RETRY]: Execute Diagnostic Interrupt(NMI) for server [dn](FSM-STAGE:sam:dme:ComputePhysicalDiagnosticInterrupt:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 17116
mibFaultName: fsmStFailComputePhysicalDiagnosticInterruptExecute
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:BiosPostCompletion

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: Waiting for BIOS POST completion from CIMC on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BiosPostCompletion)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateBiosPostCompletion
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:BmcConfigPnuOS

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: provisioning a bootable device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BmcConfigPnuOS)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateBmcConfigPnuOS
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:BmcPreconfigPnuOSLocal

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BmcPreconfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-preconfig-pnuoslocal-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateBmcPreconfigPnuOSLocal
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:BmcPreconfigPnuOSPeer

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BmcPreconfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-preconfig-pnuospeer-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateBmcPreconfigPnuOSPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:BmcUnconfigPnuOS

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: unprovisioning the bootable device for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BmcUnconfigPnuOS)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-unconfig-pnuos-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateBmcUnconfigPnuOS
mcClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:BootPnuos

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: Bring-up pre-boot environment on server for disassociation with service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BootPnuos)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: boot-pnuos-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateBootPnuos
mcClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:BootWait

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: Waiting for system reset on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:BootWait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: boot-wait-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateBootWait
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:ConfigBios

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: Configuring BIOS Defaults on server [serverId](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:ConfigBios)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-bios-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateConfigBios
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:ConfigUserAccess

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: Configuring external user access(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:ConfigUserAccess)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-user-access-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateConfigUserAccess
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:HandlePooling

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: Apply post-disassociation policies to server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:HandlePooling)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: handle-pooling-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateHandlePooling
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:NicConfigPnuOSLocal

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: Configure adapter for pre-boot environment on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicConfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-pnuoslocal-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateNicConfigPnuOSLocal
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:NicConfigPnuOSPeer

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: Configure adapter for pre-boot environment on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicConfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-config-pnuospeer-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateNicConfigPnuOSPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:NicUnconfigHostOSLocal

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: Unconfigure host OS connectivity from server adapter(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigHostOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-hostoslocal-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateNicUnconfigHostOSLocal
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:NicUnconfigHostOSPeer

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: Unconfigure host OS connectivity from server adapter(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigHostOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-hostospeer-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateNicUnconfigHostOSPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:NicUnconfigPnuOSLocal

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-pnuoslocal-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateNicUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:NicUnconfigPnuOSPeer

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: Unconfigure adapter of server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:NicUnconfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-unconfig-pnuospeer-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateNicUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:PnuOSIdent

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: Identify pre-boot environment agent on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSIdent)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosident-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociatePnuOSIdent
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:PnuOSPolicy

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: Populate pre-boot environment behavior policy to server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSPolicy)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuospolicy-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociatePnuOSPolicy
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:PnuOSScrub

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: Scrub
server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSScrub)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosscrub-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociatePnuOSScrub
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:PnuOSSelfTest

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: Trigger self-test of server pre-boot
environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSSelfTest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosself-test-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociatePnuOSSelfTest
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:PnuOSUnconfig

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: Unconfigure server from service profile [assignedToDn] pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSUnconfig)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosunconfig-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociatePnuOSUnconfig
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:PnuOSValidate

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: Pre-boot environment validate server for disassociation with service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PnuOSValidate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosvalidate-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociatePnuOSValidate
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:PowerOn

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: Power on server for unconfiguration of service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PowerOn)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: power-on-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociatePowerOn
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:PreSanitize

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:PreSanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociatePreSanitize
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:Sanitize

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: Checking hardware configuration server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:Sanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sanitize-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateSanitize
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:SetupVmediaLocal

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: provisioning a Virtual Media device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SetupVmediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setup-vmedia-local-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateSetupVmediaLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:SetupVmediaPeer

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: provisioning a Virtual Media device with a bootable pre-boot image for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SetupVmediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: setup-vmedia-peer-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateSetupVmediaPeer
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:Shutdown

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: Shutdown server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:Shutdown)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: shutdown-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateShutdown
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:SwConfigPnuOSLocal

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: Configure primary fabric interconnect for pre-boot environment on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwConfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-pnuoslocal-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateSwConfigPnuOSLocal
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:SwConfigPnuOSPeer

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: Configure secondary fabric interconnect for pre-boot environment on server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwConfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-pnuospeer-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateSwConfigPnuOSPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:SwConfigPortNivLocal

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: configuring primary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwConfigPortNivLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-port-niv-local-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateSwConfigPortNivLocal
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:SwConfigPortNivPeer

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: configuring secondary fabric interconnect access to server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwConfigPortNivPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-port-niv-peer-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateSwConfigPortNivPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:SwUnconfigHostOSLocal

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: Unconfigure host OS connectivity from server to primary fabric interconnect(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwUnconfigHostOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-hostoslocal-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateSwUnconfigHostOSLocal
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:SwUnconfigHostOSPeer

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: Unconfigure host OS connectivity from server to secondary fabric interconnect(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwUnconfigHostOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-hostospeer-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateSwUnconfigHostOSPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:SwUnconfigPnuOSLocal

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: Unconfigure primary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwUnconfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-pnuoslocal-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateSwUnconfigPnuOSLocal
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:SwUnconfigPnuOSPeer

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: Unconfigure secondary fabric interconnect for server pre-boot environment(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:SwUnconfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-pnuospeer-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateSwUnconfigPnuOSPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:TeardownVmediaLocal

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: unprovisioning the Virtual Media bootable device for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:TeardownVmediaLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: teardown-vmedia-local-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateTeardownVmediaLocal
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:TeardownVmediaPeer

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: unprovisioning the Virtual media bootable device for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:TeardownVmediaPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: teardown-vmedia-peer-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateTeardownVmediaPeer
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:UnconfigBios

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: Unconfiguring BIOS Settings and Boot Order of server [serverId] (service profile [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigBios)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: unconfig-bios-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateUnconfigBios
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:UnconfigSoL

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: Removing SoL configuration from server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigSoL)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: unconfig-so-lfailed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateUnconfigSoL
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:UnconfigUuid

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: Restore original UUID for server (service profile: [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:UnconfigUuid)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: unconfig-uuid-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateUnconfigUuid
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalDisassociate:hagPnuOSConnect

Fault Code:F16974

Message

[FSM:STAGE:FAILEDIRETRY]: Connect to pre-boot environment agent on server for disassociation with service profile [assignedToDn](FSM-STAGE:sam:dme:ComputePhysicalDisassociate:hagPnuOSConnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hag-pnuosconnect-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateHagPnuOSConnect
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalDisassociate:hagPnuOSDisconnect

Fault Code:F16974

Message

[FSM:STAGE:FAILED|RETRY]: Disconnect pre-boot environment agent for server(FSM-STAGE:sam:dme:ComputePhysicalDisassociate:hagPnuOSDisconnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hag-pnuosdisconnect-failed
mibFaultCode: 16974
mibFaultName: fsmStFailComputePhysicalDisassociateHagPnuOSDisconnect
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalHardShutdown:Execute

Fault Code:F16978

Message

[FSM:STAGE:FAILED|RETRY]: Hard shutdown of server [dn](FSM-STAGE:sam:dme:ComputePhysicalHardShutdown:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 16978
mibFaultName: fsmStFailComputePhysicalHardShutdownExecute
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalHardreset:Execute

Fault Code:F16981

Message

[FSM:STAGE:FAILEDIRETRY]: Hard-reset server
[dn](FSM-STAGE:sam:dme:ComputePhysicalHardreset:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 16981
mibFaultName: fsmStFailComputePhysicalHardresetExecute
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalHardreset:PreSanitize

Fault Code:F16981

Message

[FSM:STAGE:FAILEDIRETRY]: Preparing to check hardware configuration server
[dn](FSM-STAGE:sam:dme:ComputePhysicalHardreset:PreSanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: 16981
mibFaultName: fsmStFailComputePhysicalHardresetPreSanitize
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalHardreset:Sanitize

Fault Code:F16981

Message

[FSM:STAGE:FAILED|RETRY]: Checking hardware configuration server
[dn](FSM-STAGE:sam:dme:ComputePhysicalHardreset:Sanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sanitize-failed
mibFaultCode: 16981
mibFaultName: fsmStFailComputePhysicalHardresetSanitize
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalPowerCap:Config

Fault Code:F16975

Message

[FSM:STAGE:FAILED|RETRY]: Configuring power cap of server
[dn](FSM-STAGE:sam:dme:ComputePhysicalPowerCap:Config)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-failed
mibFaultCode: 16975
mibFaultName: fsmStFailComputePhysicalPowerCapConfig
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalPowercycle:Execute

Fault Code:F16980

Message

[FSM:STAGE:FAILEDIRETRY]: Power-cycle server
[dn](FSM-STAGE:sam:dme:ComputePhysicalPowercycle:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 16980
mibFaultName: fsmStFailComputePhysicalPowercycleExecute
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalPowercycle:PreSanitize

Fault Code:F16980

Message

[FSM:STAGE:FAILEDIRETRY]: Preparing to check hardware configuration server
[dn](FSM-STAGE:sam:dme:ComputePhysicalPowercycle:PreSanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: 16980
mibFaultName: fsmStFailComputePhysicalPowercyclePreSanitize
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalPowercycle:Sanitize

Fault Code:F16980

Message

[FSM:STAGE:FAILED|RETRY]: Checking hardware configuration server
[dn](FSM-STAGE:sam:dme:ComputePhysicalPowercycle:Sanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sanitize-failed
mibFaultCode: 16980
mibFaultName: fsmStFailComputePhysicalPowercycleSanitize
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalResetBmc:Execute

Fault Code:F16987

Message

[FSM:STAGE:FAILED|RETRY]: Resetting Management Controller on server
[dn](FSM-STAGE:sam:dme:ComputePhysicalResetBmc:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 16987
mibFaultName: fsmStFailComputePhysicalResetBmcExecute
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalResetKvm:Execute

Fault Code:F17163

Message

[FSM:STAGE:FAILEDIRETRY]: Execute KVM Reset for server
[dn](FSM-STAGE:sam:dme:ComputePhysicalResetKvm:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 17163
mibFaultName: fsmStFailComputePhysicalResetKvmExecute
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalSoftShutdown:Execute

Fault Code:F16977

Message

[FSM:STAGE:FAILEDIRETRY]: Soft shutdown of server
[dn](FSM-STAGE:sam:dme:ComputePhysicalSoftShutdown:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 16977
mibFaultName: fsmStFailComputePhysicalSoftShutdownExecute
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalSoftreset:Execute

Fault Code:F16982

Message

[FSM:STAGE:FAILED|RETRY]: Soft-reset server
[dn](FSM-STAGE:sam:dme:ComputePhysicalSoftreset:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 16982
mibFaultName: fsmStFailComputePhysicalSoftresetExecute
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalSoftreset:PreSanitize

Fault Code:F16982

Message

[FSM:STAGE:FAILED|RETRY]: Preparing to check hardware configuration server
[dn](FSM-STAGE:sam:dme:ComputePhysicalSoftreset:PreSanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: 16982
mibFaultName: fsmStFailComputePhysicalSoftresetPreSanitize
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalSoftreset:Sanitize

Fault Code:F16982

Message

[FSM:STAGE:FAILEDIRETRY]: Checking hardware configuration server
[dn](FSM-STAGE:sam:dme:ComputePhysicalSoftreset:Sanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sanitize-failed
mibFaultCode: 16982
mibFaultName: fsmStFailComputePhysicalSoftresetSanitize
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalSwConnUpd:A

Fault Code:F16983

Message

[FSM:STAGE:FAILEDIRETRY]: Updating fabric A for server
[dn](FSM-STAGE:sam:dme:ComputePhysicalSwConnUpd:A)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: a-failed
mibFaultCode: 16983
mibFaultName: fsmStFailComputePhysicalSwConnUpdA
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalSwConnUpd:B

Fault Code:F16983

Message

[FSM:STAGE:FAILED|RETRY]: Updating fabric B for server
[dn](FSM-STAGE:sam:dme:ComputePhysicalSwConnUpd:B)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: b-failed
mibFaultCode: 16983
mibFaultName: fsmStFailComputePhysicalSwConnUpdB
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalTurnup:Execute

Fault Code:F16979

Message

[FSM:STAGE:FAILED|RETRY]: Power-on server
[dn](FSM-STAGE:sam:dme:ComputePhysicalTurnup:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 16979
mibFaultName: fsmStFailComputePhysicalTurnupExecute
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalUnconfigSoL:Execute

Fault Code:F17084

Message

[FSM:STAGE:FAILEDIRETRY]: removing SoL interface configuration from server
[dn](FSM-STAGE:sam:dme:ComputePhysicalUnconfigSoL:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 17084
mibFaultName: fsmStFailComputePhysicalUnconfigSoLExecute
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalUpdateAdaptor:PollUpdateStatusLocal

Fault Code:F17043

Message

[FSM:STAGE:FAILEDIRETRY]: waiting for update to
complete(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:PollUpdateStatusLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: poll-update-status-local-failed
mibFaultCode: 17043
mibFaultName: fsmStFailComputePhysicalUpdateAdaptorPollUpdateStatusLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalUpdateAdaptor:PollUpdateStatusPeer

Fault Code:F17043

Message

[FSM:STAGE:FAILED|RETRY]: waiting for update to complete(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:PollUpdateStatusPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: poll-update-status-peer-failed
mibFaultCode: 17043
mibFaultName: fsmStFailComputePhysicalUpdateAdaptorPollUpdateStatusPeer
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalUpdateAdaptor:PowerOff

Fault Code:F17043

Message

[FSM:STAGE:FAILED|RETRY]: Power off the server(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:PowerOff)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: power-off-failed
mibFaultCode: 17043
mibFaultName: fsmStFailComputePhysicalUpdateAdaptorPowerOff
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalUpdateAdaptor:PowerOn

Fault Code:F17043

Message

[FSM:STAGE:FAILEDIRETRY]: power on the blade(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:PowerOn)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: power-on-failed
mibFaultCode: 17043
mibFaultName: fsmStFailComputePhysicalUpdateAdaptorPowerOn
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalUpdateAdaptor:UpdateRequestLocal

Fault Code:F17043

Message

[FSM:STAGE:FAILEDIRETRY]: sending update request to Adaptor(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:UpdateRequestLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-request-local-failed
mibFaultCode: 17043
mibFaultName: fsmStFailComputePhysicalUpdateAdaptorUpdateRequestLocal
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputePhysicalUpdateAdaptor:UpdateRequestPeer

Fault Code:F17043

Message

[FSM:STAGE:FAILED|RETRY]: sending update request to Adaptor(FSM-STAGE:sam:dme:ComputePhysicalUpdateAdaptor:UpdateRequestPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-request-peer-failed
mibFaultCode: 17043
mibFaultName: fsmStFailComputePhysicalUpdateAdaptorUpdateRequestPeer
moClass: compute:Physical
Type: fsm

fsmStFailComputePhysicalUpdateExtUsers:Deploy

Fault Code:F17008

Message

[FSM:STAGE:FAILED|RETRY]: external mgmt user deployment on server [dn] (profile [assignedToDn])(FSM-STAGE:sam:dme:ComputePhysicalUpdateExtUsers:Deploy)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: deploy-failed
mibFaultCode: 17008
mibFaultName: fsmStFailComputePhysicalUpdateExtUsersDeploy
moClass: compute:Physical
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:BiosPostCompletion

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: Waiting for BIOS POST completion from CIMC on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BiosPostCompletion)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bios-post-completion-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverBiosPostCompletion
mcClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:BmcConfigPnuOS

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: provisioning a bootable device with a bootable pre-boot image for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcConfigPnuOS)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-config-pnuos-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcConfigPnuOS
mcClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:BmcConfigureConnLocal

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Configuring connectivity on CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcConfigureConnLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-configure-conn-local-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcConfigureConnLocal
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:BmcConfigureConnPeer

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Configuring connectivity on CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcConfigureConnPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-configure-conn-peer-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcConfigureConnPeer
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:BmcInventory

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: getting inventory of server [id] via CIMC(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcInventory)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-inventory-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcInventory
mcClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:BmcPreconfigPnuOSLocal

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcPreconfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-preconfig-pnuoslocal-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcPreconfigPnuOSLocal
mcClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:BmcPreconfigPnuOSPeer

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: prepare configuration for preboot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcPreconfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-preconfig-pnuospeer-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcPreconfigPnuOSPeer
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:BmcPresence

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: checking CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcPresence)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-presence-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcPresence
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:BmcShutdownDiscovered

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: Shutdown the server [id]; deep discovery completed(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcShutdownDiscovered)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-shutdown-discovered-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcShutdownDiscovered
mcClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:BmcUnconfigPnuOS

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: unprovisioning the bootable device for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BmcUnconfigPnuOS)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-unconfig-pnuos-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverBmcUnconfigPnuOS
mcClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:BootPnuos

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: power server [id] on with pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BootPnuos)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: boot-pnuos-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverBootPnuos
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:BootWait

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Waiting for system reset on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:BootWait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: boot-wait-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverBootWait
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:ConfigDiscoveryMode

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: setting adapter mode to discovery for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:ConfigDiscoveryMode)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-discovery-mode-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverConfigDiscoveryMode
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:ConfigNivMode

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: setting adapter mode to NIV for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:ConfigNivMode)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-niv-mode-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverConfigNivMode
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:ConfigUserAccess

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: configuring external user access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:ConfigUserAccess)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-user-access-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverConfigUserAccess
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:HandlePooling

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Invoke post-discovery policies on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:HandlePooling)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: handle-pooling-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverHandlePooling
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:NicInventoryLocal

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: detect and get mezz cards information from [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:NicInventoryLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-inventory-local-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverNicInventoryLocal
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:NicInventoryPeer

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: detect and get mezz cards information from [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:NicInventoryPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: nic-inventory-peer-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverNicInventoryPeer
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:PnuOSConnStatus

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Explore connectivity of server [id] in pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSConnStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosconn-status-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverPnuOSConnStatus
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:PnuOSConnectivity

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Explore connectivity of server [id] in pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSConnectivity)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosconnectivity-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverPnuOSConnectivity
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:PnuOSIdent

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: Identify pre-boot environment agent on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSIdent)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosident-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverPnuOSIdent
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:PnuOSInventory

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: Perform inventory of server [id] pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSInventory)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosinventory-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverPnuOSInventory
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:PnuOSPolicy

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Populate pre-boot environment behavior policy to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSPolicy)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuospolicy-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverPnuOSPolicy
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:PnuOSScrub

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Scrub server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSScrub)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosscrub-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverPnuOSScrub
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:PnuOSSelfTest

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: Trigger self-test of server [id] pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PnuOSSelfTest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pnuosself-test-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverPnuOSSelfTest
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:PreSanitize

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: Preparing to check hardware configuration server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:PreSanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: pre-sanitize-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverPreSanitize
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:ReadSmbios

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Waiting for SMBIOS table from CIMC on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:ReadSmbios)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: read-smbios-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverReadSmbios
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:Sanitize

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Checking hardware configuration server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:Sanitize)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sanitize-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverSanitize
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:SwConfigPnuOSLocal

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: configure primary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigPnuOSLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-pnuoslocal-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverSwConfigPnuOSLocal
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:SwConfigPnuOSPeer

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: configure secondary fabric interconnect for pre-boot environment(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigPnuOSPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-pnuospeer-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverSwConfigPnuOSPeer
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:SwConfigPortNivLocal

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: configuring primary fabric interconnect access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigPortNivLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-port-niv-local-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverSwConfigPortNivLocal
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:SwConfigPortNivPeer

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: configuring secondary fabric interconnect access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigPortNivPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-port-niv-peer-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverSwConfigPortNivPeer
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:SwConfigureConnLocal

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: Configuring fabric-interconnect connectivity to CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigureConnLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-configure-conn-local-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverSwConfigureConnLocal
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:SwConfigureConnPeer

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: Configuring fabric-interconnect connectivity to CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwConfigureConnPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-configure-conn-peer-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverSwConfigureConnPeer
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:SwPnuOSConnectivityLocal

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: determine connectivity of server [id] to fabric(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwPnuOSConnectivityLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-pnuosconnectivity-local-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverSwPnuOSConnectivityLocal
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:SwPnuOSConnectivityPeer

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: determine connectivity of server [id] to fabric(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwPnuOSConnectivityPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-pnuosconnectivity-peer-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverSwPnuOSConnectivityPeer
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:SwUnconfigPortNivLocal

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: Unconfiguring primary fabric interconnect access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwUnconfigPortNivLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-port-niv-local-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverSwUnconfigPortNivLocal
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:SwUnconfigPortNivPeer

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: Unconfiguring secondary fabric interconnect access to server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:SwUnconfigPortNivPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfig-port-niv-peer-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverSwUnconfigPortNivPeer
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:hagConnect

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Connect to pre-boot environment agent on server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:hagConnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hag-connect-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverHagConnect
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitDiscover:hagDisconnect

Fault Code:F16520

Message

[FSM:STAGE:FAILED|RETRY]: Disconnect pre-boot environment agent for server [id](FSM-STAGE:sam:dme:ComputeRackUnitDiscover:hagDisconnect)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: hag-disconnect-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverHagDisconnect
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitDiscover:waitForConnReady

Fault Code:F16520

Message

[FSM:STAGE:FAILEDIRETRY]: wait for connection to be established(FSM-STAGE:sam:dme:ComputeRackUnitDiscover:waitForConnReady)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: wait-for-conn-ready-failed
mibFaultCode: 16520
mibFaultName: fsmStFailComputeRackUnitDiscoverWaitForConnReady
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitOffline:CleanupLocal

Fault Code:F17170

Message

[FSM:STAGE:FAILEDIRETRY]: cleaning host entries on local fabric-interconnect(FSM-STAGE:sam:dme:ComputeRackUnitOffline:CleanupLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: cleanup-local-failed
mibFaultCode: 17170
mibFaultName: fsmStFailComputeRackUnitOfflineCleanupLocal
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitOffline:CleanupPeer

Fault Code:F17170

Message

[FSM:STAGE:FAILED|RETRY]: cleaning host entries on peer
fabric-interconnect(FSM-STAGE:sam:dme:ComputeRackUnitOffline:CleanupPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: cleanup-peer-failed
mibFaultCode: 17170
mibFaultName: fsmStFailComputeRackUnitOfflineCleanupPeer
moClass: compute:RackUnit
Type: fsm

fsmStFailComputeRackUnitOffline:SwUnconfigureLocal

Fault Code:F17170

Message

[FSM:STAGE:FAILED|RETRY]: Unconfiguring fabric-interconnect connectivity to CIMC of server
[id](FSM-STAGE:sam:dme:ComputeRackUnitOffline:SwUnconfigureLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfigure-local-failed
mibFaultCode: 17170
mibFaultName: fsmStFailComputeRackUnitOfflineSwUnconfigureLocal
moClass: compute:RackUnit
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailComputeRackUnitOffline:SwUnconfigurePeer

Fault Code:F17170

Message

[FSM:STAGE:FAILEDIRETRY]: Unconfiguring fabric-interconnect connectivity to CIMC of server [id](FSM-STAGE:sam:dme:ComputeRackUnitOffline:SwUnconfigurePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-unconfigure-peer-failed
mibFaultCode: 17170
mibFaultName: fsmStFailComputeRackUnitOfflineSwUnconfigurePeer
moClass: compute:RackUnit
Type: fsm

fsmStFailEpqosDefinitionDelTaskRemove:Local

Fault Code:F16750

Message

[FSM:STAGE:FAILEDIRETRY]: vnic qos policy [name] removal from primary(FSM-STAGE:sam:dme:EpqosDefinitionDelTaskRemove:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 16750
mibFaultName: fsmStFailEpqosDefinitionDelTaskRemoveLocal
moClass: epqos:DefinitionDelTask
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailEpqosDefinitionDelTaskRemove:Peer

Fault Code:F16750

Message

[FSM:STAGE:FAILED|RETRY]: vnic qos policy [name] removal from secondary(FSM-STAGE:sam:dme:EpqosDefinitionDelTaskRemove:Peer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: peer-failed
mibFaultCode: 16750
mibFaultName: fsmStFailEpqosDefinitionDelTaskRemovePeer
moClass: epqos:DefinitionDelTask
Type: fsm

fsmStFailEpqosDefinitionDeploy:Local

Fault Code:F16749

Message

[FSM:STAGE:FAILED|RETRY]: vnic qos policy [name] configuration to primary(FSM-STAGE:sam:dme:EpqosDefinitionDeploy:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 16749
mibFaultName: fsmStFailEpqosDefinitionDeployLocal
moClass: epqos:Definition
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailEpqosDefinitionDeploy:Peer

Fault Code:F16749

Message

[FSM:STAGE:FAILEDIRETRY]: vnic qos policy [name] configuration to secondary(FSM-STAGE:sam:dme:EpqosDefinitionDeploy:Peer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: peer-failed
mibFaultCode: 16749
mibFaultName: fsmStFailEpqosDefinitionDeployPeer
moClass: epqos:Definition
Type: fsm

fsmStFailEquipmentChassisDynamicReallocation:Config

Fault Code:F17134

Message

[FSM:STAGE:FAILEDIRETRY]:
(FSM-STAGE:sam:dme:EquipmentChassisDynamicReallocation:Config)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-failed
mibFaultCode: 17134
mibFaultName: fsmStFailEquipmentChassisDynamicReallocationConfig
moClass: equipment:Chassis
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailEquipmentChassisPowerCap:Config

Fault Code:F16975

Message

[FSM:STAGE:FAILED|RETRY]: (FSM-STAGE:sam:dme:EquipmentChassisPowerCap:Config)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-failed
mibFaultCode: 16975
mibFaultName: fsmStFailEquipmentChassisPowerCapConfig
moClass: equipment:Chassis
Type: fsm

fsmStFailEquipmentChassisPsuPolicyConfig:Execute

Fault Code:F16533

Message

[FSM:STAGE:FAILED|RETRY]: Deploying Power Management policy changes on chassis [id](FSM-STAGE:sam:dme:EquipmentChassisPsuPolicyConfig:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 16533
mibFaultName: fsmStFailEquipmentChassisPsuPolicyConfigExecute
moClass: equipment:Chassis
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailEquipmentChassisRemoveChassis:DisableEndPoint

Fault Code:F16407

Message

[FSM:STAGE:FAILEDIRETRY]: unconfiguring access to chassis
[id](FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:DisableEndPoint)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: disable-end-point-failed
mibFaultCode: 16407
mibFaultName: fsmStFailEquipmentChassisRemoveChassisDisableEndPoint
moClass: equipment:Chassis
Type: fsm

fsmStFailEquipmentChassisRemoveChassis:UnIdentifyLocal

Fault Code:F16407

Message

[FSM:STAGE:FAILEDIRETRY]: erasing chassis identity [id] from
primary(FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:UnIdentifyLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: un-identify-local-failed
mibFaultCode: 16407
mibFaultName: fsmStFailEquipmentChassisRemoveChassisUnIdentifyLocal
moClass: equipment:Chassis
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailEquipmentChassisRemoveChassis:UnIdentifyPeer

Fault Code:F16407

Message

[FSM:STAGE:FAILED|RETRY]: erasing chassis identity [id] from secondary(FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:UnIdentifyPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: un-identify-peer-failed
mibFaultCode: 16407
mibFaultName: fsmStFailEquipmentChassisRemoveChassisUnIdentifyPeer
moClass: equipment:Chassis
Type: fsm

fsmStFailEquipmentChassisRemoveChassis:Wait

Fault Code:F16407

Message

[FSM:STAGE:FAILED|RETRY]: waiting for clean up of resources for chassis [id] (approx. 2 min)(FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:Wait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: wait-failed
mibFaultCode: 16407
mibFaultName: fsmStFailEquipmentChassisRemoveChassisWait
moClass: equipment:Chassis
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailEquipmentChassisRemoveChassis:decomission

Fault Code:F16407

Message

[FSM:STAGE:FAILEDIRETRY]: decomissioning chassis
[id](FSM-STAGE:sam:dme:EquipmentChassisRemoveChassis:decomission)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: decomission-failed
mibFaultCode: 16407
mibFaultName: fsmStFailEquipmentChassisRemoveChassisDecomission
moClass: equipment:Chassis
Type: fsm

fsmStFailEquipmentFexRemoveFex:CleanupEntries

Fault Code:F16942

Message

[FSM:STAGE:FAILEDIRETRY]: cleaning host
entries(FSM-STAGE:sam:dme:EquipmentFexRemoveFex:CleanupEntries)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: cleanup-entries-failed
mibFaultCode: 16942
mibFaultName: fsmStFailEquipmentFexRemoveFexCleanupEntries
moClass: equipment:Fex
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailEquipmentFexRemoveFex:UnIdentifyLocal

Fault Code:F16942

Message

[FSM:STAGE:FAILED|RETRY]: erasing fex identity [id] from primary(FSM-STAGE:sam:dme:EquipmentFexRemoveFex:UnIdentifyLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: un-identify-local-failed
mibFaultCode: 16942
mibFaultName: fsmStFailEquipmentFexRemoveFexUnIdentifyLocal
moClass: equipment:Fex
Type: fsm

fsmStFailEquipmentFexRemoveFex:Wait

Fault Code:F16942

Message

[FSM:STAGE:FAILED|RETRY]: waiting for clean up of resources for chassis [id] (approx. 2 min)(FSM-STAGE:sam:dme:EquipmentFexRemoveFex:Wait)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: wait-failed
mibFaultCode: 16942
mibFaultName: fsmStFailEquipmentFexRemoveFexWait
moClass: equipment:Fex
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailEquipmentFexRemoveFex:decomission

Fault Code:F16942

Message

[FSM:STAGE:FAILEDIRETRY]: decomissioning fex
[id](FSM-STAGE:sam:dme:EquipmentFexRemoveFex:decomission)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: decomission-failed
mibFaultCode: 16942
mibFaultName: fsmStFailEquipmentFexRemoveFexDecomission
moClass: equipment:Fex
Type: fsm

fsmStFailEquipmentIOCardFeConn:ConfigureEndPoint

Fault Code:F16406

Message

[FSM:STAGE:FAILEDIRETRY]: configuring management identity to IOM
[chassisId]/[id]([side])(FSM-STAGE:sam:dme:EquipmentIOCardFeConn:ConfigureEndPoint)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: configure-end-point-failed
mibFaultCode: 16406
mibFaultName: fsmStFailEquipmentIOCardFeConnConfigureEndPoint
moClass: equipment:IOCard
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailEquipmentIOCardFeConn:ConfigureSwMgmtEndPoint

Fault Code:F16406

Message

[FSM:STAGE:FAILED|RETRY]: configuring fabric interconnect [switchId] mgmt connectivity to IOM [chassisId]/[id]([side])(FSM-STAGE:sam:dme:EquipmentIOCardFeConn:ConfigureSwMgmtEndPoint)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: configure-sw-mgmt-end-point-failed
mibFaultCode: 16406
mibFaultName: fsmStFailEquipmentIOCardFeConnConfigureSwMgmtEndPoint
moClass: equipment:IOCard
Type: fsm

fsmStFailEquipmentIOCardFeConn:ConfigureVifNs

Fault Code:F16406

Message

[FSM:STAGE:FAILED|RETRY]: configuring IOM [chassisId]/[id]([side]) virtual name space(FSM-STAGE:sam:dme:EquipmentIOCardFeConn:ConfigureVifNs)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: configure-vif-ns-failed
mibFaultCode: 16406
mibFaultName: fsmStFailEquipmentIOCardFeConnConfigureVifNs
moClass: equipment:IOCard
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailEquipmentIOCardFeConn:DiscoverChassis

Fault Code:F16406

Message

[FSM:STAGE:FAILEDIRETRY]: triggering chassis discovery via IOM
[chassisId]/[id]([side])(FSM-STAGE:sam:dme:EquipmentIOCardFeConn:DiscoverChassis)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: discover-chassis-failed
mibFaultCode: 16406
mibFaultName: fsmStFailEquipmentIOCardFeConnDiscoverChassis
moClass: equipment:IOCard
Type: fsm

fsmStFailEquipmentIOCardFeConn:EnableChassis

Fault Code:F16406

Message

[FSM:STAGE:FAILEDIRETRY]: enabling chassis [chassisId] on [side]
side(FSM-STAGE:sam:dme:EquipmentIOCardFeConn:EnableChassis)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: enable-chassis-failed
mibFaultCode: 16406
mibFaultName: fsmStFailEquipmentIOCardFeConnEnableChassis
moClass: equipment:IOCard
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailEquipmentIOCardFePresence:CheckLicense

Fault Code:F16405

Message

[FSM:STAGE:FAILED|RETRY]: Checking license for chassis [chassisId] (iom [id])(FSM-STAGE:sam:dme:EquipmentIOCardFePresence:CheckLicense)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: check-license-failed
mibFaultCode: 16405
mibFaultName: fsmStFailEquipmentIOCardFePresenceCheckLicense
moClass: equipment:IOCard
Type: fsm

fsmStFailEquipmentIOCardFePresence:Identify

Fault Code:F16405

Message

[FSM:STAGE:FAILED|RETRY]: identifying IOM [chassisId]/[id](FSM-STAGE:sam:dme:EquipmentIOCardFePresence:Identify)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: identify-failed
mibFaultCode: 16405
mibFaultName: fsmStFailEquipmentIOCardFePresenceIdentify
moClass: equipment:IOCard
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailEquipmentIOCardMuxOffline:CleanupEntries

Fault Code:F16945

Message

[FSM:STAGE:FAILEDIRETRY]: cleaning host entries(FSM-STAGE:sam:dme:EquipmentIOCardMuxOffline:CleanupEntries)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: cleanup-entries-failed
mibFaultCode: 16945
mibFaultName: fsmStFailEquipmentIOCardMuxOfflineCleanupEntries
moClass: equipment:IOCard
Type: fsm

fsmStFailEquipmentIOCardResetCmc:Execute

Fault Code:F16803

Message

[FSM:STAGE:FAILEDIRETRY]: Resetting Chassis Management Controller on IOM [chassisId]/[id](FSM-STAGE:sam:dme:EquipmentIOCardResetCmc:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 16803
mibFaultName: fsmStFailEquipmentIOCardResetCmcExecute
moClass: equipment:IOCard
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailEquipmentIOCardResetIom:Execute

Fault Code:F16988

Message

[FSM:STAGE:FAILED|RETRY]: Reset IOM [id] on Fex
[chassisId](FSM-STAGE:sam:dme:EquipmentIOCardResetIom:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 16988
mibFaultName: fsmStFailEquipmentIOCardResetIomExecute
moClass: equipment:IOCard
Type: fsm

fsmStFailEquipmentLocatorLedSetFeLocatorLed:Execute

Fault Code:F16943

Message

[FSM:STAGE:FAILED|RETRY]: setting locator led to
[adminState](FSM-STAGE:sam:dme:EquipmentLocatorLedSetFeLocatorLed:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 16943
mibFaultName: fsmStFailEquipmentLocatorLedSetFeLocatorLedExecute
moClass: equipment:LocatorLed
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailEquipmentLocatorLedSetLocatorLed:Execute

Fault Code:F16408

Message

[FSM:STAGE:FAILEDIRETRY]: setting locator led to
[adminState](FSM-STAGE:sam:dme:EquipmentLocatorLedSetLocatorLed:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 16408
mibFaultName: fsmStFailEquipmentLocatorLedSetLocatorLedExecute
moClass: equipment:LocatorLed
Type: fsm

fsmStFailExtvmmKeyStoreCertInstall:SetLocal

Fault Code:F16880

Message

[FSM:STAGE:FAILEDIRETRY]: external VM manager certificate configuration on local
fabric(FSM-STAGE:sam:dme:ExtvmmKeyStoreCertInstall:SetLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-local-failed
mibFaultCode: 16880
mibFaultName: fsmStFailExtvmmKeyStoreCertInstallSetLocal
moClass: extvmm:KeyStore
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailExtvmmKeyStoreCertInstall:SetPeer

Fault Code:F16880

Message

[FSM:STAGE:FAILED|RETRY]: external VM manager certificate configuration on peer fabric(FSM-STAGE:sam:dme:ExtvmmKeyStoreCertInstall:SetPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: set-peer-failed
mibFaultCode: 16880
mibFaultName: fsmStFailExtvmmKeyStoreCertInstallSetPeer
moClass: extvmm:KeyStore
Type: fsm
```

fsmStFailExtvmmMasterExtKeyConfig:SetLocal

Fault Code:F16879

Message

[FSM:STAGE:FAILED|RETRY]: external VM manager extension-key configuration on peer fabric(FSM-STAGE:sam:dme:ExtvmmMasterExtKeyConfig:SetLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

```
Severity: warning
Cause: set-local-failed
mibFaultCode: 16879
mibFaultName: fsmStFailExtvmmMasterExtKeyConfigSetLocal
moClass: extvmm:MasterExtKey
Type: fsm
```

Send document comments to ucs-docfeedback@cisco.com

fsmStFailExtvmmMasterExtKeyConfig:SetPeer

Fault Code:F16879

Message

[FSM:STAGE:FAILEDIRETRY]: external VM manager extension-key configuration on local fabric(FSM-STAGE:sam:dme:ExtvmmMasterExtKeyConfig:SetPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-peer-failed
mibFaultCode: 16879
mibFaultName: fsmStFailExtvmmMasterExtKeyConfigSetPeer
moClass: extvmm:MasterExtKey
Type: fsm

fsmStFailExtvmmProviderConfig:GetVersion

Fault Code:F16879

Message

[FSM:STAGE:FAILEDIRETRY]: external VM manager version fetch(FSM-STAGE:sam:dme:ExtvmmProviderConfig:GetVersion)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: get-version-failed
mibFaultCode: 16879
mibFaultName: fsmStFailExtvmmProviderConfigGetVersion
moClass: extvmm:Provider
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailExtvmmProviderConfig:SetLocal

Fault Code:F16879

Message

[FSM:STAGE:FAILED|RETRY]: external VM manager configuration on local fabric(FSM-STAGE:sam:dme:ExtvmmProviderConfig:SetLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-local-failed
mibFaultCode: 16879
mibFaultName: fsmStFailExtvmmProviderConfigSetLocal
moClass: extvmm:Provider
Type: fsm

fsmStFailExtvmmProviderConfig:SetPeer

Fault Code:F16879

Message

[FSM:STAGE:FAILED|RETRY]: external VM manager configuration on peer fabric(FSM-STAGE:sam:dme:ExtvmmProviderConfig:SetPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-peer-failed
mibFaultCode: 16879
mibFaultName: fsmStFailExtvmmProviderConfigSetPeer
moClass: extvmm:Provider
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailExtvmmSwitchDelTaskRemoveProvider:RemoveLocal

Fault Code:F16881

Message

[FSM:STAGE:FAILEDIRETRY]: external VM manager deletion from local fabric(FSM-STAGE:sam:dme:ExtvmmSwitchDelTaskRemoveProvider:RemoveLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: remove-local-failed
mibFaultCode: 16881
mibFaultName: fsmStFailExtvmmSwitchDelTaskRemoveProviderRemoveLocal
moClass: extvmm:SwitchDelTask
Type: fsm

fsmStFailFabricComputeSlotEpIdentify:ExecuteLocal

Fault Code:F16519

Message

[FSM:STAGE:FAILEDIRETRY]: identifying a server in [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:FabricComputeSlotEpIdentify:ExecuteLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-local-failed
mibFaultCode: 16519
mibFaultName: fsmStFailFabricComputeSlotEpIdentifyExecuteLocal
moClass: fabric:ComputeSlotEp
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailFabricComputeSlotEpIdentify:ExecutePeer

Fault Code:F16519

Message

[FSM:STAGE:FAILED|RETRY]: identifying a server in [chassisId]/[slotId] via CIMC(FSM-STAGE:sam:dme:FabricComputeSlotEpIdentify:ExecutePeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-peer-failed
mibFaultCode: 16519
mibFaultName: fsmStFailFabricComputeSlotEpIdentifyExecutePeer
moClass: fabric:ComputeSlotEp
Type: fsm

fsmStFailFabricLanCloudSwitchMode:SwConfigLocal

Fault Code:F16539

Message

[FSM:STAGE:FAILED|RETRY]:
(FSM-STAGE:sam:dme:FabricLanCloudSwitchMode:SwConfigLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-local-failed
mibFaultCode: 16539
mibFaultName: fsmStFailFabricLanCloudSwitchModeSwConfigLocal
moClass: fabric:LanCloud
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailFabricLanCloudSwitchMode:SwConfigPeer

Fault Code:F16539

Message

[FSM:STAGE:FAILEDIRETRY]: Fabric interconnect mode configuration to primary(FSM-STAGE:sam:dme:FabricLanCloudSwitchMode:SwConfigPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-peer-failed
mibFaultCode: 16539
mibFaultName: fsmStFailFabricLanCloudSwitchModeSwConfigPeer
moClass: fabric:LanCloud
Type: fsm

fsmStFailFabricSanCloudSwitchMode:SwConfigLocal

Fault Code:F16539

Message

[FSM:STAGE:FAILEDIRETRY]:
(FSM-STAGE:sam:dme:FabricSanCloudSwitchMode:SwConfigLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-local-failed
mibFaultCode: 16539
mibFaultName: fsmStFailFabricSanCloudSwitchModeSwConfigLocal
moClass: fabric:SanCloud
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailFabricSanCloudSwitchMode:SwConfigPeer

Fault Code:F16539

Message

[FSM:STAGE:FAILED|RETRY]: Fabric interconnect FC mode configuration to primary(FSM-STAGE:sam:dme:FabricSanCloudSwitchMode:SwConfigPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-config-peer-failed
mibFaultCode: 16539
mibFaultName: fsmStFailFabricSanCloudSwitchModeSwConfigPeer
moClass: fabric:SanCloud
Type: fsm

fsmStFailFirmwareDistributableDelete:Local

Fault Code:F16651

Message

[FSM:STAGE:FAILED|RETRY]: deleting package [name] from primary(FSM-STAGE:sam:dme:FirmwareDistributableDelete:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 16651
mibFaultName: fsmStFailFirmwareDistributableDeleteLocal
moClass: firmware:Distributable
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailFirmwareDistributableDelete:Remote

Fault Code:F16651

Message

[FSM:STAGE:FAILEDIRETRY]: deleting package [name] from secondary(FSM-STAGE:sam:dme:FirmwareDistributableDelete:Remote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: remote-failed
mibFaultCode: 16651
mibFaultName: fsmStFailFirmwareDistributableDeleteRemote
moClass: firmware:Distributable
Type: fsm

fsmStFailFirmwareDownloaderDownload:CopyRemote

Fault Code:F16650

Message

[FSM:STAGE:FAILEDIRETRY]: sync images to subordinate(FSM-STAGE:sam:dme:FirmwareDownloaderDownload:CopyRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: copy-remote-failed
mibFaultCode: 16650
mibFaultName: fsmStFailFirmwareDownloaderDownloadCopyRemote
moClass: firmware:Downloader
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailFirmwareDownloaderDownload:DeleteLocal

Fault Code:F16650

Message

[FSM:STAGE:FAILED|RETRY]: deleting downloadable [fileName] on local(FSM-STAGE:sam:dme:FirmwareDownloaderDownload:DeleteLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: delete-local-failed
mibFaultCode: 16650
mibFaultName: fsmStFailFirmwareDownloaderDownloadDeleteLocal
moClass: firmware:Downloader
Type: fsm

fsmStFailFirmwareDownloaderDownload:Local

Fault Code:F16650

Message

[FSM:STAGE:FAILED|RETRY]: downloading image [fileName] from [server](FSM-STAGE:sam:dme:FirmwareDownloaderDownload:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 16650
mibFaultName: fsmStFailFirmwareDownloaderDownloadLocal
moClass: firmware:Downloader
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailFirmwareDownloaderDownload:UnpackLocal

Fault Code:F16650

Message

[FSM:STAGE:FAILEDIRETRY]: unpacking image [fileName] on primary(FSM-STAGE:sam:dme:FirmwareDownloaderDownload:UnpackLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: unpack-local-failed
mibFaultCode: 16650
mibFaultName: fsmStFailFirmwareDownloaderDownloadUnpackLocal
moClass: firmware:Downloader
Type: fsm

fsmStFailFirmwareImageDelete:Local

Fault Code:F16651

Message

[FSM:STAGE:FAILEDIRETRY]: deleting image file [name] ([invTag]) from primary(FSM-STAGE:sam:dme:FirmwareImageDelete:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 16651
mibFaultName: fsmStFailFirmwareImageDeleteLocal
moClass: firmware:Image
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailFirmwareImageDelete:Remote

Fault Code:F16651

Message

[FSM:STAGE:FAILED|RETRY]: deleting image file [name] ([invTag]) from secondary(FSM-STAGE:sam:dme:FirmwareImageDelete:Remote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: remote-failed
mibFaultCode: 16651
mibFaultName: fsmStFailFirmwareImageDeleteRemote
moClass: firmware:Image
Type: fsm

fsmStFailLicenseDownloaderDownload:CopyRemote

Fault Code:F16650

Message

[FSM:STAGE:FAILED|RETRY]: Copy the license file to subordinate for inventory(FSM-STAGE:sam:dme:LicenseDownloaderDownload:CopyRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: copy-remote-failed
mibFaultCode: 16650
mibFaultName: fsmStFailLicenseDownloaderDownloadCopyRemote
moClass: license:Downloader
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailLicenseDownloaderDownload>DeleteLocal

Fault Code:F16650

Message

[FSM:STAGE:FAILEDIRETRY]: deleting temporary files for [fileName] on local(FSM-STAGE:sam:dme:LicenseDownloaderDownload>DeleteLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: delete-local-failed
mibFaultCode: 16650
mibFaultName: fsmStFailLicenseDownloaderDownload>DeleteLocal
moClass: license:Downloader
Type: fsm

fsmStFailLicenseDownloaderDownload>DeleteRemote

Fault Code:F16650

Message

[FSM:STAGE:FAILEDIRETRY]: deleting temporary files for [fileName] on subordinate(FSM-STAGE:sam:dme:LicenseDownloaderDownload>DeleteRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: delete-remote-failed
mibFaultCode: 16650
mibFaultName: fsmStFailLicenseDownloaderDownload>DeleteRemote
moClass: license:Downloader
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailLicenseDownloaderDownload:Local

Fault Code:F16650

Message

[FSM:STAGE:FAILED|RETRY]: downloading license file [fileName] from [server](FSM-STAGE:sam:dme:LicenseDownloaderDownload:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 16650
mibFaultName: fsmStFailLicenseDownloaderDownloadLocal
moClass: license:Downloader
Type: fsm

fsmStFailLicenseDownloaderDownload:ValidateLocal

Fault Code:F16650

Message

[FSM:STAGE:FAILED|RETRY]: validation for license file [fileName] on primary(FSM-STAGE:sam:dme:LicenseDownloaderDownload:ValidateLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: validate-local-failed
mibFaultCode: 16650
mibFaultName: fsmStFailLicenseDownloaderDownloadValidateLocal
moClass: license:Downloader
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailLicenseDownloaderDownload:ValidateRemote

Fault Code:F16650

Message

[FSM:STAGE:FAILEDIRETRY]: validation for license file [fileName] on subordinate(FSM-STAGE:sam:dme:LicenseDownloaderDownload:ValidateRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: validate-remote-failed
mibFaultCode: 16650
mibFaultName: fsmStFailLicenseDownloaderDownloadValidateRemote
moClass: license:Downloader
Type: fsm

fsmStFailLicenseFileClear:Local

Fault Code:F17052

Message

[FSM:STAGE:FAILEDIRETRY]: Clearing license on primary(FSM-STAGE:sam:dme:LicenseFileClear:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 17052
mibFaultName: fsmStFailLicenseFileClearLocal
moClass: license:File
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailLicenseFileClear:Remote

Fault Code:F17052

Message

[FSM:STAGE:FAILED|RETRY]: Clearing license on subordinate(FSM-STAGE:sam:dme:LicenseFileClear:Remote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: remote-failed
mibFaultCode: 17052
mibFaultName: fsmStFailLicenseFileClearRemote
moClass: license:File
Type: fsm

fsmStFailLicenseFileInstall:Local

Fault Code:F17051

Message

[FSM:STAGE:FAILED|RETRY]: Installing license on primary(FSM-STAGE:sam:dme:LicenseFileInstall:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 17051
mibFaultName: fsmStFailLicenseFileInstallLocal
moClass: license:File
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailLicenseFileInstall:Remote

Fault Code:F17051

Message

[FSM:STAGE:FAILEDIRETRY]: Installing license on subordinate(FSM-STAGE:sam:dme:LicenseFileInstall:Remote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: remote-failed
mibFaultCode: 17051
mibFaultName: fsmStFailLicenseFileInstallRemote
moClass: license:File
Type: fsm

fsmStFailLicenseInstanceUpdateFlexlm:Local

Fault Code:F17053

Message

[FSM:STAGE:FAILEDIRETRY]: Updating on primary(FSM-STAGE:sam:dme:LicenseInstanceUpdateFlexlm:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 17053
mibFaultName: fsmStFailLicenseInstanceUpdateFlexlmLocal
moClass: license:Instance
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailLicenseInstanceUpdateFlexIm:Remote

Fault Code:F17053

Message

[FSM:STAGE:FAILED|RETRY]: Updating on subordinate(FSM-STAGE:sam:dme:LicenseInstanceUpdateFlexIm:Remote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: remote-failed
mibFaultCode: 17053
mibFaultName: fsmStFailLicenseInstanceUpdateFlexImRemote
moClass: license:Instance
Type: fsm

fsmStFailLsServerConfigure:AnalyzeImpact

Fault Code:F16995

Message

[FSM:STAGE:FAILED|RETRY]: Analyzing changes impact(FSM-STAGE:sam:dme:LsServerConfigure:AnalyzeImpact)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: analyze-impact-failed
mibFaultCode: 16995
mibFaultName: fsmStFailLsServerConfigureAnalyzeImpact
moClass: ls:Server
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailLsServerConfigure:ApplyConfig

Fault Code:F16995

Message

[FSM:STAGE:FAILEDIRETRY]: Applying config to server
[pnDn](FSM-STAGE:sam:dme:LsServerConfigure:ApplyConfig)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: apply-config-failed
mibFaultCode: 16995
mibFaultName: fsmStFailLsServerConfigureApplyConfig
moClass: ls:Server
Type: fsm

fsmStFailLsServerConfigure:ApplyIdentifiers

Fault Code:F16995

Message

[FSM:STAGE:FAILEDIRETRY]: Resolving and applying
identifiers(FSM-STAGE:sam:dme:LsServerConfigure:ApplyIdentifiers)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: apply-identifiers-failed
mibFaultCode: 16995
mibFaultName: fsmStFailLsServerConfigureApplyIdentifiers
moClass: ls:Server
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailLsServerConfigure:ApplyPolicies

Fault Code:F16995

Message

[FSM:STAGE:FAILED|RETRY]: Resolving and applying policies(FSM-STAGE:sam:dme:LsServerConfigure:ApplyPolicies)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: apply-policies-failed
mibFaultCode: 16995
mibFaultName: fsmStFailLsServerConfigureApplyPolicies
moClass: ls:Server
Type: fsm

fsmStFailLsServerConfigure:ApplyTemplate

Fault Code:F16995

Message

[FSM:STAGE:FAILED|RETRY]: Applying configuration template [srcTemplName](FSM-STAGE:sam:dme:LsServerConfigure:ApplyTemplate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: apply-template-failed
mibFaultCode: 16995
mibFaultName: fsmStFailLsServerConfigureApplyTemplate
moClass: ls:Server
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailLsServerConfigure:EvaluateAssociation

Fault Code:F16995

Message

[FSM:STAGE:FAILEDIRETRY]: Evaluate association with server
[pnDn](FSM-STAGE:sam:dme:LsServerConfigure:EvaluateAssociation)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: evaluate-association-failed
mibFaultCode: 16995
mibFaultName: fsmStFailLsServerConfigureEvaluateAssociation
moClass: ls:Server
Type: fsm

fsmStFailLsServerConfigure:ResolveBootConfig

Fault Code:F16995

Message

[FSM:STAGE:FAILEDIRETRY]: Computing binding
changes(FSM-STAGE:sam:dme:LsServerConfigure:ResolveBootConfig)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: resolve-boot-config-failed
mibFaultCode: 16995
mibFaultName: fsmStFailLsServerConfigureResolveBootConfig
moClass: ls:Server
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailLsServerConfigure:WaitForMaintPermission

Fault Code:F16995

Message

[FSM:STAGE:FAILED|RETRY]: Waiting for ack or maint window(FSM-STAGE:sam:dme:LsServerConfigure:WaitForMaintPermission)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: wait-for-maint-permission-failed
mibFaultCode: 16995
mibFaultName: fsmStFailLsServerConfigureWaitForMaintPermission
moClass: ls:Server
Type: fsm

fsmStFailLsServerConfigure:WaitForMaintWindow

Fault Code:F16995

Message

[FSM:STAGE:FAILED|RETRY]: Waiting for maintenance window(FSM-STAGE:sam:dme:LsServerConfigure:WaitForMaintWindow)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: wait-for-maint-window-failed
mibFaultCode: 16995
mibFaultName: fsmStFailLsServerConfigureWaitForMaintWindow
moClass: ls:Server
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailMgmtBackupBackup:backupLocal

Fault Code:F16683

Message

[FSM:STAGE:FAILEDIRETRY]: internal database
backup(FSM-STAGE:sam:dme:MgmtBackupBackup:backupLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: backup-local-failed
mibFaultCode: 16683
mibFaultName: fsmStFailMgmtBackupBackupBackupLocal
moClass: mgmt:Backup
Type: fsm

fsmStFailMgmtBackupBackup:upload

Fault Code:F16683

Message

[FSM:STAGE:FAILEDIRETRY]: internal system
backup(FSM-STAGE:sam:dme:MgmtBackupBackup:upload)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: upload-failed
mibFaultCode: 16683
mibFaultName: fsmStFailMgmtBackupBackupUpload
moClass: mgmt:Backup
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailMgmtControllerActivateBMC:Activate

Fault Code:F16657

Message

[FSM:STAGE:FAILED|RETRY]: activating backup image of CIMC(FSM-STAGE:sam:dme:MgmtControllerActivateBMC:Activate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: 16657
mibFaultName: fsmStFailMgmtControllerActivateBMCActivate
moClass: mgmt:Controller
Type: fsm

fsmStFailMgmtControllerActivateBMC:Reset

Fault Code:F16657

Message

[FSM:STAGE:FAILED|RETRY]: Resetting CIMC to boot the activated version(FSM-STAGE:sam:dme:MgmtControllerActivateBMC:Reset)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: reset-failed
mibFaultCode: 16657
mibFaultName: fsmStFailMgmtControllerActivateBMCReset
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailMgmtControllerActivateIOM:Activate

Fault Code:F16655

Message

[FSM:STAGE:FAILEDIRETRY]: activating backup image of IOM(FSM-STAGE:sam:dme:MgmtControllerActivateIOM:Activate)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: activate-failed
mibFaultCode: 16655
mibFaultName: fsmStFailMgmtControllerActivateIOMActivate
moClass: mgmt:Controller
Type: fsm

fsmStFailMgmtControllerActivateIOM:Reset

Fault Code:F16655

Message

[FSM:STAGE:FAILEDIRETRY]: Resetting IOM to boot the activated version(FSM-STAGE:sam:dme:MgmtControllerActivateIOM:Reset)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: reset-failed
mibFaultCode: 16655
mibFaultName: fsmStFailMgmtControllerActivateIOMReset
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailMgmtControllerExtMgmtIfConfig:Primary

Fault Code:F16518

Message

[FSM:STAGE:FAILED|RETRY]: external mgmt interface configuration on primary(FSM-STAGE:sam:dme:MgmtControllerExtMgmtIfConfig:Primary)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: primary-failed
mibFaultCode: 16518
mibFaultName: fsmStFailMgmtControllerExtMgmtIfConfigPrimary
moClass: mgmt:Controller
Type: fsm

fsmStFailMgmtControllerExtMgmtIfConfig:Secondary

Fault Code:F16518

Message

[FSM:STAGE:FAILED|RETRY]: external mgmt interface configuration on secondary(FSM-STAGE:sam:dme:MgmtControllerExtMgmtIfConfig:Secondary)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: secondary-failed
mibFaultCode: 16518
mibFaultName: fsmStFailMgmtControllerExtMgmtIfConfigSecondary
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailMgmtControllerOnline:BmcConfigureConnLocal

Fault Code:F17169

Message

[FSM:STAGE:FAILEDIRETRY]: Configuring connectivity on CIMC(FSM-STAGE:sam:dme:MgmtControllerOnline:BmcConfigureConnLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-configure-conn-local-failed
mibFaultCode: 17169
mibFaultName: fsmStFailMgmtControllerOnlineBmcConfigureConnLocal
mcClass: mgmt:Controller
Type: fsm

fsmStFailMgmtControllerOnline:BmcConfigureConnPeer

Fault Code:F17169

Message

[FSM:STAGE:FAILEDIRETRY]: Configuring connectivity on CIMC(FSM-STAGE:sam:dme:MgmtControllerOnline:BmcConfigureConnPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: bmc-configure-conn-peer-failed
mibFaultCode: 17169
mibFaultName: fsmStFailMgmtControllerOnlineBmcConfigureConnPeer
mcClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailMgmtControllerOnline:SwConfigureConnLocal

Fault Code:F17169

Message

[FSM:STAGE:FAILED|RETRY]: Configuring fabric-interconnect connectivity to CIMC(FSM-STAGE:sam:dme:MgmtControllerOnline:SwConfigureConnLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-configure-conn-local-failed
mibFaultCode: 17169
mibFaultName: fsmStFailMgmtControllerOnlineSwConfigureConnLocal
moClass: mgmt:Controller
Type: fsm

fsmStFailMgmtControllerOnline:SwConfigureConnPeer

Fault Code:F17169

Message

[FSM:STAGE:FAILED|RETRY]: Configuring fabric-interconnect connectivity to CIMC(FSM-STAGE:sam:dme:MgmtControllerOnline:SwConfigureConnPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: sw-configure-conn-peer-failed
mibFaultCode: 17169
mibFaultName: fsmStFailMgmtControllerOnlineSwConfigureConnPeer
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailMgmtControllerSysConfig:Primary

Fault Code:F16823

Message

[FSM:STAGE:FAILEDIRETRY]: system configuration on primary(FSM-STAGE:sam:dme:MgmtControllerSysConfig:Primary)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: primary-failed
mibFaultCode: 16823
mibFaultName: fsmStFailMgmtControllerSysConfigPrimary
moClass: mgmt:Controller
Type: fsm

fsmStFailMgmtControllerSysConfig:Secondary

Fault Code:F16823

Message

[FSM:STAGE:FAILEDIRETRY]: system configuration on secondary(FSM-STAGE:sam:dme:MgmtControllerSysConfig:Secondary)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: secondary-failed
mibFaultCode: 16823
mibFaultName: fsmStFailMgmtControllerSysConfigSecondary
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailMgmtControllerUpdateBMC:PollUpdateStatus

Fault Code:F16656

Message

[FSM:STAGE:FAILED|RETRY]: waiting for update to complete(FSM-STAGE:sam:dme:MgmtControllerUpdateBMC:PollUpdateStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: 16656
mibFaultName: fsmStFailMgmtControllerUpdateBMC:PollUpdateStatus
moClass: mgmt:Controller
Type: fsm

fsmStFailMgmtControllerUpdateBMC:UpdateRequest

Fault Code:F16656

Message

[FSM:STAGE:FAILED|RETRY]: sending update request to CIMC(FSM-STAGE:sam:dme:MgmtControllerUpdateBMC:UpdateRequest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: 16656
mibFaultName: fsmStFailMgmtControllerUpdateBMC:UpdateRequest
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailMgmtControllerUpdateIOM:PollUpdateStatus

Fault Code:F16654

Message

[FSM:STAGE:FAILEDIRETRY]: waiting for IOM update(FSM-STAGE:sam:dme:MgmtControllerUpdateIOM:PollUpdateStatus)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: poll-update-status-failed
mibFaultCode: 16654
mibFaultName: fsmStFailMgmtControllerUpdateIOMPollUpdateStatus
moClass: mgmt:Controller
Type: fsm

fsmStFailMgmtControllerUpdateIOM:UpdateRequest

Fault Code:F16654

Message

[FSM:STAGE:FAILEDIRETRY]: sending update request to IOM(FSM-STAGE:sam:dme:MgmtControllerUpdateIOM:UpdateRequest)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-request-failed
mibFaultCode: 16654
mibFaultName: fsmStFailMgmtControllerUpdateIOMUpdateRequest
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailMgmtControllerUpdateSwitch:resetLocal

Fault Code:F16653

Message

[FSM:STAGE:FAILED|RETRY]: rebooting local fabric
interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:resetLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: reset-local-failed
mibFaultCode: 16653
mibFaultName: fsmStFailMgmtControllerUpdateSwitchResetLocal
moClass: mgmt:Controller
Type: fsm

fsmStFailMgmtControllerUpdateSwitch:resetRemote

Fault Code:F16653

Message

[FSM:STAGE:FAILED|RETRY]: rebooting remote fabric
interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:resetRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: reset-remote-failed
mibFaultCode: 16653
mibFaultName: fsmStFailMgmtControllerUpdateSwitchResetRemote
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailMgmtControllerUpdateSwitch:updateLocal

Fault Code:F16653

Message

[FSM:STAGE:FAILEDIRETRY]: updating local fabric
interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:updateLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-local-failed
mibFaultCode: 16653
mibFaultName: fsmStFailMgmtControllerUpdateSwitchUpdateLocal
moClass: mgmt:Controller
Type: fsm

fsmStFailMgmtControllerUpdateSwitch:updateRemote

Fault Code:F16653

Message

[FSM:STAGE:FAILEDIRETRY]: updating peer fabric
interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:updateRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-remote-failed
mibFaultCode: 16653
mibFaultName: fsmStFailMgmtControllerUpdateSwitchUpdateRemote
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailMgmtControllerUpdateSwitch:verifyLocal

Fault Code:F16653

Message

[FSM:STAGE:FAILED|RETRY]: verifying boot variables for local fabric interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:verifyLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: verify-local-failed
mibFaultCode: 16653
mibFaultName: fsmStFailMgmtControllerUpdateSwitchVerifyLocal
moClass: mgmt:Controller
Type: fsm

fsmStFailMgmtControllerUpdateSwitch:verifyRemote

Fault Code:F16653

Message

[FSM:STAGE:FAILED|RETRY]: verifying boot variables for remote fabric interconnect(FSM-STAGE:sam:dme:MgmtControllerUpdateSwitch:verifyRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: verify-remote-failed
mibFaultCode: 16653
mibFaultName: fsmStFailMgmtControllerUpdateSwitchVerifyRemote
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailMgmtControllerUpdateUCSManager:execute

Fault Code:F16815

Message

[FSM:STAGE:FAILEDIRETRY]: Updating UCS Manager
firmware(FSM-STAGE:sam:dme:MgmtControllerUpdateUCSManager:execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 16815
mibFaultName: fsmStFailMgmtControllerUpdateUCSManagerExecute
moClass: mgmt:Controller
Type: fsm

fsmStFailMgmtControllerUpdateUCSManager:start

Fault Code:F16815

Message

[FSM:STAGE:FAILEDIRETRY]: Scheduling UCS manager
update(FSM-STAGE:sam:dme:MgmtControllerUpdateUCSManager:start)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: start-failed
mibFaultCode: 16815
mibFaultName: fsmStFailMgmtControllerUpdateUCSManagerStart
moClass: mgmt:Controller
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailMgmtIfDisableVip:Peer

Fault Code:F16681

Message

[FSM:STAGE:FAILED|RETRY]: Disable virtual interface on peer fabric interconnect(FSM-STAGE:sam:dme:MgmtIfDisableVip:Peer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: peer-failed
mibFaultCode: 16681
mibFaultName: fsmStFailMgmtIfDisableVipPeer
moClass: mgmt:If
Type: fsm

fsmStFailMgmtIfEnableHA:Local

Fault Code:F16682

Message

[FSM:STAGE:FAILED|RETRY]: Transition from single to cluster mode(FSM-STAGE:sam:dme:MgmtIfEnableHA:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 16682
mibFaultName: fsmStFailMgmtIfEnableHALocal
moClass: mgmt:If
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailMgmtIfEnableVip:Local

Fault Code:F16680

Message

[FSM:STAGE:FAILEDIRETRY]: Enable virtual interface on local fabric interconnect(FSM-STAGE:sam:dme:MgmtIfEnableVip:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 16680
mibFaultName: fsmStFailMgmtIfEnableVipLocal
moClass: mgmt:If
Type: fsm

fsmStFailMgmtIfSwMgmtInbandIfConfig:Switch

Fault Code:F16674

Message

[FSM:STAGE:FAILEDIRETRY]: configuring the inband interface(FSM-STAGE:sam:dme:MgmtIfSwMgmtInbandIfConfig:Switch)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: switch-failed
mibFaultCode: 16674
mibFaultName: fsmStFailMgmtIfSwMgmtInbandIfConfigSwitch
moClass: mgmt:If
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailMgmtIfSwMgmtOobIfConfig:Switch

Fault Code:F16673

Message

[FSM:STAGE:FAILED|RETRY]: configuring the out-of-band interface(FSM-STAGE:sam:dme:MgmtIfSwMgmtOobIfConfig:Switch)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: switch-failed
mibFaultCode: 16673
mibFaultName: fsmStFailMgmtIfSwMgmtOobIfConfigSwitch
moClass: mgmt:If
Type: fsm

fsmStFailMgmtIfVirtualIfConfig:Local

Fault Code:F16679

Message

[FSM:STAGE:FAILED|RETRY]: Updating virtual interface on local fabric interconnect(FSM-STAGE:sam:dme:MgmtIfVirtualIfConfig:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 16679
mibFaultName: fsmStFailMgmtIfVirtualIfConfigLocal
moClass: mgmt:If
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailMgmtIfVirtualIfConfig:Remote

Fault Code:F16679

Message

[FSM:STAGE:FAILEDIRETRY]: Updating virtual interface on peer fabric interconnect(FSM-STAGE:sam:dme:MgmtIfVirtualIfConfig:Remote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: remote-failed
mibFaultCode: 16679
mibFaultName: fsmStFailMgmtIfVirtualIfConfigRemote
moClass: mgmt:If
Type: fsm

fsmStFailMgmtImporterImport:config

Fault Code:F16684

Message

[FSM:STAGE:FAILEDIRETRY]: importing the configuration file(FSM-STAGE:sam:dme:MgmtImporterImport:config)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: config-failed
mibFaultCode: 16684
mibFaultName: fsmStFailMgmtImporterImportConfig
moClass: mgmt:Importer
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailMgmtImporterImport:downloadLocal

Fault Code:F16684

Message

[FSM:STAGE:FAILED|RETRY]: downloading the configuration file from the remote location(FSM-STAGE:sam:dme:MgmtImporterImport:downloadLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: download-local-failed
mibFaultCode: 16684
mibFaultName: fsmStFailMgmtImporterImportDownloadLocal
moClass: mgmt:Importer
Type: fsm

fsmStFailMgmtImporterImport:reportResults

Fault Code:F16684

Message

[FSM:STAGE:FAILED|RETRY]: Report results of configuration application(FSM-STAGE:sam:dme:MgmtImporterImport:reportResults)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: report-results-failed
mibFaultCode: 16684
mibFaultName: fsmStFailMgmtImporterImportReportResults
moClass: mgmt:Importer
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailPkiEpUpdateEp:SetKeyRingLocal

Fault Code:F16579

Message

[FSM:STAGE:FAILEDIRETRY]: keyring configuration on primary(FSM-STAGE:sam:dme:PkiEpUpdateEp:SetKeyRingLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-key-ring-local-failed
mibFaultCode: 16579
mibFaultName: fsmStFailPkiEpUpdateEpSetKeyRingLocal
moClass: pki:Ep
Type: fsm

fsmStFailPkiEpUpdateEp:SetKeyRingPeer

Fault Code:F16579

Message

[FSM:STAGE:FAILEDIRETRY]: keyring configuration on secondary(FSM-STAGE:sam:dme:PkiEpUpdateEp:SetKeyRingPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-key-ring-peer-failed
mibFaultCode: 16579
mibFaultName: fsmStFailPkiEpUpdateEpSetKeyRingPeer
moClass: pki:Ep
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailPortPloInCompatSfpPresence:Shutdown

Fault Code:F17089

Message

[FSM:STAGE:FAILED|RETRY]: Shutting down
port(FSM-STAGE:sam:dme:PortPloInCompatSfpPresence:Shutdown)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: shutdown-failed
mibFaultCode: 17089
mibFaultName: fsmStFailPortPloInCompatSfpPresenceShutdown
moClass: port:PIO
Type: fsm

fsmStFailQosclassDefinitionConfigGlobalQoS:SetLocal

Fault Code:F16745

Message

[FSM:STAGE:FAILED|RETRY]: QoS Classification Definition [name] configuration on
primary(FSM-STAGE:sam:dme:QosclassDefinitionConfigGlobalQoS:SetLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-local-failed
mibFaultCode: 16745
mibFaultName: fsmStFailQosclassDefinitionConfigGlobalQoSSetLocal
moClass: qosclass:Definition
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailQosclassDefinitionConfigGlobalQoS:SetPeer

Fault Code:F16745

Message

[FSM:STAGE:FAILEDIRETRY]: QoS Classification Definition [name] configuration on secondary(FSM-STAGE:sam:dme:QosclassDefinitionConfigGlobalQoS:SetPeer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-peer-failed
mibFaultCode: 16745
mibFaultName: fsmStFailQosclassDefinitionConfigGlobalQoSSetPeer
moClass: qosclass:Definition
Type: fsm

fsmStFailStatsCollectionPolicyUpdateEp:SetEpA

Fault Code:F16579

Message

[FSM:STAGE:FAILEDIRETRY]: Update endpoint on fabric interconnect A(FSM-STAGE:sam:dme:StatsCollectionPolicyUpdateEp:SetEpA)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-ep-afailed
mibFaultCode: 16579
mibFaultName: fsmStFailStatsCollectionPolicyUpdateEpSetEpA
moClass: stats:CollectionPolicy
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailStatsCollectionPolicyUpdateEp:SetEpB

Fault Code:F16579

Message

[FSM:STAGE:FAILED|RETRY]: Update endpoint on fabric interconnect B(FSM-STAGE:sam:dme:StatsCollectionPolicyUpdateEp:SetEpB)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: set-ep-bfailed
mibFaultCode: 16579
mibFaultName: fsmStFailStatsCollectionPolicyUpdateEpSetEpB
moClass: stats:CollectionPolicy
Type: fsm

fsmStFailSwAccessDomainDeploy:UpdateConnectivity

Fault Code:F16749

Message

[FSM:STAGE:FAILED|RETRY]: internal network configuration on [switchId](FSM-STAGE:sam:dme:SwAccessDomainDeploy:UpdateConnectivity)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-connectivity-failed
mibFaultCode: 16749
mibFaultName: fsmStFailSwAccessDomainDeployUpdateConnectivity
moClass: sw:AccessDomain
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailSwEthLanBorderDeploy:UpdateConnectivity

Fault Code:F16749

Message

[FSM:STAGE:FAILEDIRETRY]: Uplink eth port configuration on [switchId](FSM-STAGE:sam:dme:SwEthLanBorderDeploy:UpdateConnectivity)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-connectivity-failed
mibFaultCode: 16749
mibFaultName: fsmStFailSwEthLanBorderDeployUpdateConnectivity
moClass: sw:EthLanBorder
Type: fsm

fsmStFailSwEthMonDeploy:UpdateEthMon

Fault Code:F16749

Message

[FSM:STAGE:FAILEDIRETRY]: Ethernet traffic monitor (SPAN)configuration on [switchId](FSM-STAGE:sam:dme:SwEthMonDeploy:UpdateEthMon)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-eth-mon-failed
mibFaultCode: 16749
mibFaultName: fsmStFailSwEthMonDeployUpdateEthMon
moClass: sw:EthMon
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailSwFcMonDeploy:UpdateFcMon

Fault Code:F16749

Message

[FSM:STAGE:FAILED|RETRY]: FC traffic monitor (SPAN)configuration on [switchId](FSM-STAGE:sam:dme:SwFcMonDeploy:UpdateFcMon)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-fc-mon-failed
mibFaultCode: 16749
mibFaultName: fsmStFailSwFcMonDeployUpdateFcMon
moClass: sw:FcMon
Type: fsm

fsmStFailSwFcSanBorderDeploy:UpdateConnectivity

Fault Code:F16749

Message

[FSM:STAGE:FAILED|RETRY]: Uplink fc port configuration on [switchId](FSM-STAGE:sam:dme:SwFcSanBorderDeploy:UpdateConnectivity)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-connectivity-failed
mibFaultCode: 16749
mibFaultName: fsmStFailSwFcSanBorderDeployUpdateConnectivity
moClass: sw:FcSanBorder
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailSwUtilityDomainDeploy:UpdateConnectivity

Fault Code:F16749

Message

[FSM:STAGE:FAILEDIRETRY]: Utility network configuration on
[switchId](FSM-STAGE:sam:dme:SwUtilityDomainDeploy:UpdateConnectivity)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: update-connectivity-failed
mibFaultCode: 16749
mibFaultName: fsmStFailSwUtilityDomainDeployUpdateConnectivity
moClass: sw:UtilityDomain
Type: fsm

fsmStFailSyntheticFsObjCreate:createLocal

Fault Code:F16641

Message

[FSM:STAGE:FAILEDIRETRY]: create on
primary(FSM-STAGE:sam:dme:SyntheticFsObjCreate:createLocal)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: create-local-failed
mibFaultCode: 16641
mibFaultName: fsmStFailSyntheticFsObjCreateCreateLocal
moClass: synthetic:Fsobj
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailSyntheticFsObjCreate:createRemote

Fault Code:F16641

Message

[FSM:STAGE:FAILED|RETRY]: create on secondary(FSM-STAGE:sam:dme:SyntheticFsObjCreate:createRemote)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: create-remote-failed
mibFaultCode: 16641
mibFaultName: fsmStFailSyntheticFsObjCreateCreateRemote
moClass: synthetic:Fsobj
Type: fsm

fsmStFailSysdebugAutoCoreFileExportTargetConfigure:Local

Fault Code:F16995

Message

[FSM:STAGE:FAILED|RETRY]: configuring automatic core file export service on local(FSM-STAGE:sam:dme:SysdebugAutoCoreFileExportTargetConfigure:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 16995
mibFaultName: fsmStFailSysdebugAutoCoreFileExportTargetConfigureLocal
moClass: sysdebug:AutoCoreFileExportTarget
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailSysdebugAutoCoreFileExportTargetConfigure:Peer

Fault Code:F16995

Message

[FSM:STAGE:FAILEDIRETRY]: configuring automatic core file export service on peer(FSM-STAGE:sam:dme:SysdebugAutoCoreFileExportTargetConfigure:Peer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: peer-failed
mibFaultCode: 16995
mibFaultName: fsmStFailSysdebugAutoCoreFileExportTargetConfigurePeer
moClass: sysdebug:AutoCoreFileExportTarget
Type: fsm

fsmStFailSysdebugCoreDownload:CopyPrimary

Fault Code:F16650

Message

[FSM:STAGE:FAILEDIRETRY]: Copy the Core file to primary for download(FSM-STAGE:sam:dme:SysdebugCoreDownload:CopyPrimary)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: copy-primary-failed
mibFaultCode: 16650
mibFaultName: fsmStFailSysdebugCoreDownloadCopyPrimary
moClass: sysdebug:Core
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailSysdebugCoreDownload:CopySub

Fault Code:F16650

Message

[FSM:STAGE:FAILED|RETRY]: copy Core file on subordinate switch to tmp directory(FSM-STAGE:sam:dme:SysdebugCoreDownload:CopySub)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: copy-sub-failed
mibFaultCode: 16650
mibFaultName: fsmStFailSysdebugCoreDownloadCopySub
moClass: sysdebug:Core
Type: fsm

fsmStFailSysdebugCoreDownload>DeletePrimary

Fault Code:F16650

Message

[FSM:STAGE:FAILED|RETRY]: Delete the Core file from primary switch under tmp directory(FSM-STAGE:sam:dme:SysdebugCoreDownload>DeletePrimary)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: delete-primary-failed
mibFaultCode: 16650
mibFaultName: fsmStFailSysdebugCoreDownloadDeletePrimary
moClass: sysdebug:Core
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailSysdebugCoreDownload>DeleteSub

Fault Code:F16650

Message

[FSM:STAGE:FAILEDIRETRY]: Delete the Core file from subordinate under tmp directory(FSM-STAGE:sam:dme:SysdebugCoreDownload>DeleteSub)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: delete-sub-failed
mibFaultCode: 16650
mibFaultName: fsmStFailSysdebugCoreDownload>DeleteSub
moClass: sysdebug:Core
Type: fsm

fsmStFailSysdebugLogControlEpLogControlPersist:Local

Fault Code:F16606

Message

[FSM:STAGE:FAILEDIRETRY]: persisting LogControl on local(FSM-STAGE:sam:dme:SysdebugLogControlEpLogControlPersist:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 16606
mibFaultName: fsmStFailSysdebugLogControlEpLogControlPersistLocal
moClass: sysdebug:LogControlEp
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailSysdebugLogControlEpLogControlPersist:Peer

Fault Code:F16606

Message

[FSM:STAGE:FAILED|RETRY]: persisting LogControl on peer(FSM-STAGE:sam:dme:SysdebugLogControlEpLogControlPersist:Peer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: peer-failed
mibFaultCode: 16606
mibFaultName: fsmStFailSysdebugLogControlEpLogControlPersistPeer
moClass: sysdebug:LogControlEp
Type: fsm

fsmStFailSysdebugManualCoreFileExportTargetExport:Execute

Fault Code:F16604

Message

[FSM:STAGE:FAILED|RETRY]: export core file [name] to [hostname](FSM-STAGE:sam:dme:SysdebugManualCoreFileExportTargetExport:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 16604
mibFaultName: fsmStFailSysdebugManualCoreFileExportTargetExportExecute
moClass: sysdebug:ManualCoreFileExportTarget
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailSysdebugTechSupportDeleteTechSupFile:Local

Fault Code:F17013

Message

[FSM:STAGE:FAILEDIRETRY]: delete tech-support file from GUI on local(FSM-STAGE:sam:dme:SysdebugTechSupportDeleteTechSupFile:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 17013
mibFaultName: fsmStFailSysdebugTechSupportDeleteTechSupFileLocal
moClass: sysdebug:TechSupport
Type: fsm

fsmStFailSysdebugTechSupportDeleteTechSupFile:peer

Fault Code:F17013

Message

[FSM:STAGE:FAILEDIRETRY]: delete tech-support file from GUI on peer(FSM-STAGE:sam:dme:SysdebugTechSupportDeleteTechSupFile:peer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: peer-failed
mibFaultCode: 17013
mibFaultName: fsmStFailSysdebugTechSupportDeleteTechSupFilePeer
moClass: sysdebug:TechSupport
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailSysdebugTechSupportDownload:CopyPrimary

Fault Code:F16650

Message

[FSM:STAGE:FAILED|RETRY]: Copy the tech-support file to primary for download(FSM-STAGE:sam:dme:SysdebugTechSupportDownload:CopyPrimary)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: copy-primary-failed
mibFaultCode: 16650
mibFaultName: fsmStFailSysdebugTechSupportDownloadCopyPrimary
moClass: sysdebug:TechSupport
Type: fsm

fsmStFailSysdebugTechSupportDownload:CopySub

Fault Code:F16650

Message

[FSM:STAGE:FAILED|RETRY]: copy tech-support file on subordinate switch to tmp directory(FSM-STAGE:sam:dme:SysdebugTechSupportDownload:CopySub)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: copy-sub-failed
mibFaultCode: 16650
mibFaultName: fsmStFailSysdebugTechSupportDownloadCopySub
moClass: sysdebug:TechSupport
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailSysdebugTechSupportDownload>DeletePrimary

Fault Code:F16650

Message

[FSM:STAGE:FAILEDIRETRY]: Delete the tech-support file from primary switch under tmp directory(FSM-STAGE:sam:dme:SysdebugTechSupportDownload>DeletePrimary)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: delete-primary-failed
mibFaultCode: 16650
mibFaultName: fsmStFailSysdebugTechSupportDownload>DeletePrimary
moClass: sysdebug:TechSupport
Type: fsm

fsmStFailSysdebugTechSupportDownload>DeleteSub

Fault Code:F16650

Message

[FSM:STAGE:FAILEDIRETRY]: Delete the tech-support file from subordinate under tmp directory(FSM-STAGE:sam:dme:SysdebugTechSupportDownload>DeleteSub)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: delete-sub-failed
mibFaultCode: 16650
mibFaultName: fsmStFailSysdebugTechSupportDownload>DeleteSub
moClass: sysdebug:TechSupport
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailSysdebugTechSupportInitiate:Local

Fault Code:F17012

Message

[FSM:STAGE:FAILED|RETRY]: create tech-support file from GUI on local(FSM-STAGE:sam:dme:SysdebugTechSupportInitiate:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 17012
mibFaultName: fsmStFailSysdebugTechSupportInitiateLocal
moClass: sysdebug:TechSupport
Type: fsm

fsmStFailSysfileMutationGlobal:Local

Fault Code:F16601

Message

[FSM:STAGE:FAILED|RETRY]: remove files from local(FSM-STAGE:sam:dme:SysfileMutationGlobal:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 16601
mibFaultName: fsmStFailSysfileMutationGlobalLocal
moClass: sysfile:Mutation
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailSysfileMutationGlobal:Peer

Fault Code:F16601

Message

[FSM:STAGE:FAILEDIRETRY]: remove files from
peer(FSM-STAGE:sam:dme:SysfileMutationGlobal:Peer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: peer-failed
mibFaultCode: 16601
mibFaultName: fsmStFailSysfileMutationGlobalPeer
moClass: sysfile:Mutation
Type: fsm

fsmStFailSysfileMutationSingle:Execute

Fault Code:F16600

Message

[FSM:STAGE:FAILEDIRETRY]: [action] file
[name](FSM-STAGE:sam:dme:SysfileMutationSingle:Execute)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: execute-failed
mibFaultCode: 16600
mibFaultName: fsmStFailSysfileMutationSingleExecute
moClass: sysfile:Mutation
Type: fsm

Send document comments to ucs-docfeedback@cisco.com

fsmStFailVnicProfileSetDeploy:Local

Fault Code:F16749

Message

[FSM:STAGE:FAILED|RETRY]: VNIC profile configuration on local fabric(FSM-STAGE:sam:dme:VnicProfileSetDeploy:Local)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: local-failed
mibFaultCode: 16749
mibFaultName: fsmStFailVnicProfileSetDeployLocal
moClass: vnic:ProfileSet
Type: fsm

fsmStFailVnicProfileSetDeploy:Peer

Fault Code:F16749

Message

[FSM:STAGE:FAILED|RETRY]: VNIC profile configuration on peer fabric(FSM-STAGE:sam:dme:VnicProfileSetDeploy:Peer)

Explanation

None set.

Recommended Action

Copy the message exactly as it appears on the console or in the system log. Research and attempt to resolve the issue using the tools and utilities provided at <http://www.cisco.com/tac>. Also refer to the *Release Notes for Cisco UCS Manager* and the *Cisco UCS Troubleshooting Guide*. If you cannot resolve the issue, execute the **show tech-support** command and contact Cisco Technical Support.

Fault Details

Severity: warning
Cause: peer-failed
mibFaultCode: 16749
mibFaultName: fsmStFailVnicProfileSetDeployPeer
moClass: vnic:ProfileSet
Type: fsm

Send document comments to ucs-docfeedback@cisco.com