

Cisco C880 M4 Tasks

This chapter contains the following sections:

- Change Boot Order, on page 2
- Get IOU MAC Address, on page 3
- Location LED Off, on page 4
- Location LED On, on page 5
- Power Off Device, on page 6
- Power On Device, on page 7
- Power Reset Device, on page 8

Change Boot Order

Summary

Change Boot Order of Cisco C880 M4 Device

Description

This task is used to change the boot order of selected Cisco C880 M4 device.

Inputs

| Input | Description | Mappable To Type | Mandatory |
|--------------------------|----------------------------------|---------------------------|-----------|
| Cisco C880 M4 Account | Choose the Cisco C880 M4 account | CiscoC880M4SystemIdentity | Y |
| Boot Order | Choose a boot order | CiscoC880M4BootOrder | Y |

| Output | Description | Туре |
|-----------------------------------|-------------------------|---------------------------|
| OUTPUT_C880M4_SYSTEM_ IDENTITY | C880 M4 System Identity | CiscoC880M4SystemIdentity |

Get IOU MAC Address

Summary

Get MAC address of IOU

Description

This task is used to fetch the MAC address of selected IOU for a selected Cisco C880 M4 device.

Inputs

| Input | Description | Mappable To Type | Mandatory |
|--------------------------|----------------------------------|---------------------------|-----------|
| Cisco C880 M4 Account | Choose the Cisco C880 M4 account | CiscoC880M4SystemIdentity | Y |
| IOU | Choose an IOU | CiscoC880M4IOUIdentity | Y |

| Output | Description | Туре |
|--------------------------------|------------------------------|-----------------------------------|
| OUTPUT_C880M4_MAC_ IDENTITY | C880 M4 MAC Address Identity | CiscoC880M4MACAddress Identity |

Location LED Off

Summary

Location LED Off Cisco C880 M4 Device

Description

This task is used to Location LED Off the selected Cisco C880 M4 device.

Inputs

| Input | Description | Mappable To Type | Mandatory |
|----------------------------------|---|-------------------------------|-----------|
| Cisco C880 M4 Account | Choose the Cisco C880 M4 account | CiscoC880M4System Identity | Y |
| Location LED | Choose the location LED | CiscoC880M4LEDIdentity | Y |
| Do you want to turn the LED OFF? | Do you want to turn the location LED off? | | Y |

| Output | Description | Туре |
|-----------------------------------|-------------------------|---------------------------|
| OUTPUT_C880M4_SYSTEM_ IDENTITY | C880 M4 System Identity | CiscoC880M4SystemIdentity |
| OUTPUT_C880M4_LED_IDENTITY | C880 M4 LED Identity | CiscoC880M4LEDIdentity |

Location LED On

Summary

Location LED On Cisco C880 M4 Device

Description

This task is used to Location LED On the selected Cisco C880 M4 device.

Inputs

| Input | Description | Mappable To Type | Mandatory |
|--|--|-------------------------------|-----------|
| Cisco C880 M4 Account | Choose the Cisco C880 M4 account | CiscoC880M4System Identity | Y |
| Location LED | Choose the location LED | Cisco C880M4LEDIdentity | Y |
| Do you want to turn the Location LED ON? | Do you want to turn the location LED on? | | Y |

| Output | Description | Туре |
|-----------------------------------|-------------------------|---------------------------|
| OUTPUT_C880M4_SYSTEM_ IDENTITY | C880 M4 System Identity | CiscoC880M4SystemIdentity |
| OUTPUT_C880M4_LED_IDENTITY | C880 M4 LED Identity | CiscoC880M4LEDIdentity |

Power Off Device

Summary

Power Off Cisco C880 M4 Device

Description

This task is used to Power OFF the selected Cisco C880 M4 device.

Inputs

| Input | Description | Mappable To Type | Mandatory |
|------------------------------------|------------------------------------|----------------------------|-----------|
| Cisco C880 M4 Account | Choose the Cisco C880 M4 account | CiscoC880M4System Identity | Y |
| Do you want to turn the Power OFF? | Do you want to turn the power off? | | Y |

| Output | Description | Туре |
|-----------------------------------|-------------------------|---------------------------|
| OUTPUT_C880M4_SYSTEM_ IDENTITY | C880 M4 System Identity | CiscoC880M4SystemIdentity |
| OUTPUT_C880M4_POWER_ STATUS | C880 M4 Power Identity | CiscoC880M4PowerIdentity |

Power On Device

Summary

Power On Cisco C880 M4 Device

Description

This task is used to Power ON the selected Cisco C880 M4 device.

Inputs

| Input | Description | Mappable To Type | Mandatory |
|--|-----------------------------------|----------------------------|-----------|
| Cisco C880 M4 Account | Choose the Cisco C880 M4 account | CiscoC880M4System Identity | Y |
| Do you want to turn the device Power ON? | Do you want to turn the power on? | | Y |

| Output | Description | Туре |
|-----------------------------------|-------------------------|---------------------------|
| OUTPUT_C880M4_SYSTEM_ IDENTITY | C880 M4 System Identity | CiscoC880M4SystemIdentity |
| OUTPUT_C880M4_POWER_ STATUS | C880 M4 Power Identity | CiscoC880M4PowerIdentity |

Power Reset Device

Summary

Power Reset Cisco C880 M4 Device

Description

This task is used to Power Reset the selected Cisco C880 M4 device.

Inputs

| Input | Description | Mappable To Type | Mandatory |
|--|--|----------------------------|-----------|
| CiscoC880M4 Account | Choose the Cisco C880 M4 account | CiscoC880M4System Identity | Y |
| Do you want to reset the device Power? | Do you want to reset the device Power? | | Y |

| Output | Description | Туре |
|-----------------------------------|-------------------------|---------------------------|
| OUTPUT_C880M4_SYSTEM_ IDENTITY | C880 M4 System Identity | CiscoC880M4SystemIdentity |
| OUTPUT_C880M4_POWER_ STATUS | C880 M4 Power Identity | CiscoC880M4PowerIdentity |