



Cover, DIMM, and CPU Installation Instructions

This chapter contains the following topic:

- [Cover, DIMM, and CPU Installation Instructions, on page 1](#)

Cover, DIMM, and CPU Installation Instructions

The following illustrations show the compute node's FRU service labels.

Figure 1: Cover Removal and Component Identification

Cisco UCS X410c M7 Compute Node Field Replaceable Unit Instructions

Front Panel Icons
📍 Locate
↔️ Activity
✅ System Status
🔌 Power

Removing a Blade Cover

- 1 Press and hold button down.
- 2 Holding the back end of the cover, pull back and then up.

Installing a Blade Cover

- 1 Insert cover angled in until it hits stops on base.
- 2 Lower front of cover down until it bottoms out.
- 3 Slide cover forward to close.

1 Locate LED/Button	6 Blade Ejector Button	11 Asset QR Code	16 Rear CPU Heatsink
2 Activity LED	7 Ejector Handle	12 Front Mezzanine Connectors	17 USB Connector
3 Status LED	8 Drive Slots 1 - 6	13 DIMM Slots	18 mLOM Connector
4 Power LED/Button	9 Populated Drive Slot	14 Mini Storage Connector	19 Rear Mezzanine Connector
5 Console Connector	10 Blank Drive Slot	15 Front CPU Heatsink	20 TPM Connector

473984

