



Troubleshooting

- [Troubleshooting](#), on page 1

Troubleshooting

Table 1: Troubleshooting Table

Problem	Solution
LCS can not connect	Check the USB icon. If it is red, touch it to reconnect. If the USB icon does not turn green in a reasonable time, restart the iNode App.
Auto Setup fails	Verify the RF configuration settings.
Software can not update	See Download Does Not Start .
Alarms	The information regarding alarms can be found in: <ul style="list-style-type: none">• Alarms• Alarms and Status• Analog Property Table, Current Alarm Table Sample and SCTE-HMS-ALARMS-MIB

