



Preface

This preface describes the objectives and organization of this guide and contains the following sections:

- [Document Revision History, page v](#)
- [Document Organization, page v](#)
- [Audience, page vi](#)
- [Conventions, page vi](#)
- [Related Documentation, page vi](#)
- [Obtaining Documentation and Submitting a Service Request, page vii](#)

Document Revision History

[Table 1](#) records the technical changes to the Document Revision History.

Table 1 *Document Revision History*

Date	Change Summary
Aug 8, 2014	3.9 release.
Feb 10, 2014	3.8 release.
May 25, 2013	This is the first release of this document.

Document Organization

[Table 2](#) describes the organization of the document.

Table 2 *Document Organization*

Chapter	Description
Chapter 1, “Command-Line Interface Command Summary”	This chapter describes how to use the VQE-C ¹ CLI ² to configure software features.
Chapter 2, “Cisco VQE-C Software Commands”	This chapter provides a complete list of Cisco VQE-C commands, listed alphabetically.

1. Visual Quality Experience - Client

2. CLI = command-line interface

Audience

This document is intended as a reference for the VQE-C CLI commands. It assumes the reader is familiar with terms and concepts such as dropping packets, tuners, and error repair as they relate to VQE-C. More information on these topics can be found in the high-level VQE reference documents and the VQE-C System Integration Guide.

Conventions

This publication uses various conventions to convey instructions and information.

Command descriptions use these conventions:

- Commands and keywords are in **boldface** text.
- Arguments for which you supply values are in *italic*.
- Square brackets ([]) means optional elements.
- Braces ({ }) group required choices, and vertical bars (|) separate the alternative elements.
- Braces and vertical bars within square brackets ([{ | }]) mean a required choice within an optional element.

Interactive examples use these conventions:

- Terminal sessions and system displays are in `screen` font.
- Information you enter is in **boldface screen** font.
- Nonprinting characters, such as passwords or tabs, are in angle brackets (<>).

Notes, cautions, and warnings use these conventions and symbols:



Note

Means *reader take note*. Notes contain helpful suggestions or references to materials not contained in this manual.



Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Related Documentation

These documents provide complete information about the CDS and are available from Cisco.com:

- [Cisco CDA Visual Quality Experience Client System Configuration Guide](#)
- [Release Notes for Cisco CDA Visual Quality Experience Application, Release 3.9](#)
- [Regulatory Compliance and Safety Information for the Cisco Content Delivery Engines](#)
- [Cisco CDA Visual Quality Experience Application User Guide, Release 3.8](#)

- *Cisco Content Delivery Engine 205/220/250/420/470 Hardware Installation Guide*
- *Regulatory Compliance and Safety Information for the Cisco Content Delivery Engines*
- *Regulatory Compliance and Safety Information for the Cisco Content Delivery Engine 110*
- *Open Source Used in Visual Quality Experience 3.9*
- *Cisco CDA Visual Quality Experience Virtualization Guide*
- *Cisco Content Delivery Engine 110 Hardware Installation Guide*

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS Version 2.0.

