



## INDEX

---

### Numerics

19-inch rack **2-13**  
mount chassis **2-14**  
9-pin serial port **2-12**

---

### A

ACT LED See LED indicators  
Administrator interface **1-1, 2-28**  
Advanced Configuration menu **2-20, 2-26**  
ALRM LED See LED indicators  
architecture **1-7**  
audio  
  codecs **1-3**  
auto-boot **2-18**

---

### B

boot configuration menu **2-18**

---

### C

cables  
  RJ-45 8-pin IP network port **4-2**  
  RS-232 9-pin serial port **4-1**  
cascaded conferences **1-8**  
Certifications  
  EMC **7-1**  
  Telecom **7-2**  
chassis dimensions **5-1**  
chipset **5-2**  
codecs

audio transcoding **1-3**  
communication interfaces **5-2**  
communication settings **2-19**  
Conference Control interface **1-2**  
Configuration menu **2-18**  
Continuous Presence **1-3**

---

### D

DB-9 **2-12**  
DTMF **1-4**  
duplex parameters **2-20, 2-27**

---

### E

element board dimensions **5-1**  
EMC **7-1**  
encryption **1-4**  
Ethernet  
  cable **2-14**  
  connector **2-12**  
  port **2-12**  
  speed **2-20, 2-27**  
Ethernet LEDs See LED indicators

---

### F

failsafe **5-2**  
front panel  
  components **2-12**  
  MCU module **2-12**  
  video processing module **2-12**

**G**

GK LED See LED indicators  
global user name **2-22**

**H**

H.235 **1-3**  
H.239 **1-3**  
H.243 **1-4**  
High Definition **1-4**

**I**

initial configuration  
MCU module **2-18**  
video processing module **2-23**

initialization **2-18**

installation procedures

access administrator interface **2-28**  
change advanced configuration settings **2-26**  
change configuration software password **2-24, 2-25**  
change global user name **2-22**  
change LAN port settings **2-26**  
change MCU IP address **2-24**  
change MCU unit IP address **2-26**  
change password **2-19, 2-22**  
change security level **2-25**  
configure default network port values **2-19, 2-24**  
configure IP address for MCU unit **2-19**  
configure IP address for video processing module **2-24**  
configure network security level **2-19, 2-24**  
configure TFTP server **2-19**  
configure web server **2-26**  
configure web server port **2-26**  
connect to the serial port **2-18**  
connect unit to the LAN **2-22, 2-27**  
disable DSP reset **2-26**

display Advanced Configuration menu **2-24**  
display advanced configuration menu **2-19**  
insert module into chassis **2-15**  
mount chassis in a 19-inch rack **2-14**  
restore factory configuration **2-26**  
restore factory settings **2-26**  
save network configuration settings **2-27**  
set default network properties **2-24**  
set duplex parameters **2-20**  
set Ethernet speed **2-20**  
using the setup wizard **2-29**

interoperability **1-2**

IP address

change for MCU unit **2-26**  
configure for MCU unit **2-19**  
configure for video processing module **2-24**

IVR **1-4**

**L**

LAN cable **2-14**  
layouts  
Continuous Presence **1-3**  
LED indicators **2-12**  
board **5-1**  
system monitoring **5-1**

**M**

Main menu **2-24, 2-25, 2-26, 2-27**  
MC LED See LED indicators  
memory **5-2**

**N**

Network Configuration menu **2-19, 2-20, 2-21, 2-22, 2-24**

---

**O**

online help **2-30**  
 operating system **5-2**  
 optional no self see **1-4**

---

**P**

package contents **2-13**  
 password **2-22**  
   change configuration software password **2-25**  
 pin-out configuration  
   ISDN port RJ-45 connector **4-3**  
   RJ-45 IP network port **4-2**  
   RS-232 9-pin D-type serial port **4-1**  
 pin-to-pin configuration  
   RS-232 terminal cable **4-2**  
 port  
   capacities **1-5**  
 ports  
   RJ-45 IP **4-2**  
   RS-232 9-pin serial **4-1**  
 power supply **5-3**  
 privacy **1-4**  
 protocols **1-3**  
 push buttons **5-2**

---

**R**

remote control **1-4**  
 remote web-based monitoring and management **2-28**  
 reset button **2-12**  
 RJ-45 **2-12**  
 RS-232 terminal cable **2-18, 2-19**  
 RST **2-12**  
 RST button **5-2**  
 RTM board dimensions **5-1**

---



---

**S**

Safety  
   compliance **7-1**  
   electrical **6-1**  
   ESD procedures **6-2**  
   security **1-4**  
   change security level **2-25**  
   self-view **1-4**  
   serial connector **2-12**  
   setup wizard **2-29**  
   Software Upgrade Utility **2-23**  
   software upgrade utility procedures  
     install and launch **3-1**  
     use utility **3-2**  
   summary of features **1-2**  
   SWAP RDY LED See LED indicators

---

**T**

Telecom **7-2**  
 terminal cable **2-18, 2-19**  
 topologies **1-7**  
 top slot **2-15**  
 transcoding **1-3**

---

**U**

upgrade software **3-1**  
 user types **1-1**  
   administrators **1-1**  
   conference participants **1-2**  
   Moderators **1-2**  
   operators **1-2**

---

**V**

video

formats **1-3**  
video processing blade **1-5**  
video quality **1-2, 1-3**

---

## W

web-based management and control **1-2**  
web interface **2-28**