



# CHAPTER 1

## Accessing the MCU Interface

---

### Procedure

---

- Step 1** Launch your browser and enter the IP address or the name of the MCU followed.
- Step 2** Enter the Administrator user name and password in the appropriate fields and select **Go**.  
The default global user name is *admin*. The default password is *password*.



**Note** If you try to sign in as an Administrator and another Administrator is currently signed in, the MCU signs you in as a Read only user. The words “Read Only” appear at the top of the window and a pop-up displays the IP address of the Administrator already signed in. Read only users cannot edit MCU settings.

---

