



Preface

Revised: March 12, 2007, OL-12782-01

Purpose

This guide describes how to configure the Cisco Unified Videoconferencing 3527 PRI Gateway and the Cisco Unified Videoconferencing 3522 BRI Gateway.

Audience

This guide is intended for network administrators who need instructions about how to configure the Cisco Unified Videoconferencing 3500 Gateway as well as create conferences using the Gateway interface.

Organization

This manual is organized as follows:

| Chapter | Description |
|--|--|
| Chapter 1, “Introducing the Gateway Administrator Interface” | Provides a general overview of the Cisco Unified Videoconferencing 3500 Gateway web user interface. |
| Chapter 2, “Basic Configuration for the Gateway” | Describes the basic configuration options in the Cisco Unified Videoconferencing 3500 Gateway Administrator interface. |
| Chapter 1, “Introducing the Gateway Administrator Interface” | Describes the more advanced configuration options in the Cisco Unified Videoconferencing 3500 Gateway Administrator interface. |
| Chapter 1, “Introducing the Gateway Administrator Interface” | Describes how to select the appropriate IP connectivity mode for the Cisco Unified Videoconferencing 3500 Gateway. |
| Chapter 1, “Introducing the Gateway Administrator Interface” | Describes how to use services on the Cisco Unified Videoconferencing 3500 Gateway. |

| Chapter | Description |
|--|---|
| Chapter 1, “Introducing the Gateway Administrator Interface” | Describes how to configure the ports on the Cisco Unified Videoconferencing 3500 Gateway. |
| Chapter 1, “Introducing the Gateway Administrator Interface” | Describes how to use the Cisco Audio Message Utility. |

Document Conventions

This document uses the following conventions:

| Convention | Description |
|-----------------------------|--|
| boldface font | Commands and keywords are in boldface . |
| <i>italic font</i> | Arguments for which you supply values are in <i>italics</i> . |
| [] | Elements in square brackets are optional. |
| { x y z } | Alternative keywords are grouped in braces and separated by vertical bars. |
| [x y z] | Optional alternative keywords are grouped in brackets and separated by vertical bars. |
| string | A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks. |
| screen font | Terminal sessions and information the system displays are in <code>screen font</code> . |
| boldface screen font | Information you must enter is in boldface screen font . |
| <i>italic screen font</i> | Arguments for which you supply values are in <i>italic screen font</i> . |
| ^ | The symbol ^ represents the key labeled Control—for example, the key combination ^D in a screen display means hold down the Control key while you press the D key. |
| < > | Nonprinting characters, such as passwords are in angle brackets. |

Obtaining Documentation, Obtaining Support, and Security Guidelines

For information on obtaining documentation, obtaining support, providing documentation feedback, security guidelines, and also recommended aliases and general Cisco documents, see the monthly *What's New* in Cisco Product Documentation, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>