



A

access levels See user types
actions [2-3](#)
ad hoc conference call [1-1](#)
Advanced Features dialog box [2-5](#)
Advanced Invitation tab [2-10, 3-13, 3-14, 3-16](#)
auto switch [3-18](#)

B

bandwidth
 configuring outgoing rate [3-12](#)
block admission [3-7](#)
block video stream [3-9](#)

C

cascaded conferences [3-15](#)
 create [3-15](#)
 invite participants [3-16](#)
 view participants [3-16](#)
chair control
 releasing [3-3](#)
 taking [3-3](#)
Change Name dialog box [3-10](#)
Change Participants View dialog box [3-8](#)
Conference Control interface [2-1, 2-6](#)
 accessing [3-2](#)
 Advanced Invitation tab [3-14](#)
 chair control-level options [3-3](#)
 creating conferences [3-4](#)
 online help [3-3](#)

 refresh [3-2](#)
 screen elements [2-7](#)
 terminate conference [3-18](#)
 working with [3-1](#)
conference description [2-3](#)
conference ID number [1-2, 2-3](#)
conference layouts See layouts
Conference List window [2-3](#)
conference procedures
 access Conference Control interface [2-1, 3-2](#)
 block admission [3-7](#)
 block video stream [3-9](#)
 change conference layouts [3-17](#)
 change participant name [3-10](#)
 change participant view [3-8](#)
 change volume [3-8](#)
 configure outgoing bandwidth rate [3-12](#)
 create a sub-conference [3-9](#)
 create cascaded conference [3-15](#)
 create conferences from Conference Control interface [3-4](#)
 create conferences from Create Conference window [2-4](#)
 dial from [1-4](#)
 disable auto-switch [3-18](#)
 disable dynamic layouts [3-17](#)
 disconnect inactive conference [2-6](#)
 display name in video layout frame [3-18](#)
 enable auto-switch [3-18](#)
 enable dynamic layouts [3-17](#)
 exit Create Conference window [2-6](#)
 invite from SIP endpoint [1-3](#)
 invite multiple H.323 endpoints [1-2](#)
 invite operator to join [3-4](#)

invite participants to a cascaded conference [3-16](#)
 invite using advanced settings [3-14](#)
 invite using quick invite [3-13](#)
 join ad hoc conference with H.323 endpoint [1-2](#)
 join ad hoc conference with SIP [1-3](#)
 join conference with any IP endpoint [1-5](#)
 join T.120 data conference [3-5](#)
 mute audio connection [3-6](#)
 reconnect participant [3-7](#)
 release chair control [3-3](#)
 remove participant from conference [3-7](#)
 sign out from a conference [3-19](#)
 start ad hoc conference with H.323 endpoint [1-2](#)
 start ad hoc conference with SIP [1-3](#)
 start conference with any IP endpoint [1-5](#)
 take chair control [3-3](#)
 terminate conference [3-18](#)
 unmute [3-6](#)
 view a cascaded conference [3-16](#)
 view participant information [3-13](#)
 view statistics [3-13](#)
 conference statistics [3-13](#)
 Conference View section [3-16](#)
 Create Conference window [2-6](#)
 create conference [2-3](#)
 screen elements [2-3](#)
 terminate conference [2-6](#)
 creating conferences
 from the Conference Control interface [3-4](#)
 from the Create Conference window [2-3](#)

D

data collaboration
 set up a T.120 conference [3-5](#)
 deleting participants [3-7](#)
 dialing conventions
 H.323 endpoints [1-2](#)
 IP-based endpoints [1-5](#)

 SIP endpoints [1-3](#)
 dial-in See ad hoc conference call
 disconnect inactive conference [2-6](#)
 DTMF
 conference control [1-5](#)
 control signals [1-5](#)
 dynamic layouts [3-17](#)

E

Edit View dialog box [3-15](#)
 encryption [2-3, 2-9](#)

H

H.323 endpoints
 dialing conventions [1-2](#)
 inviting [1-2](#)
 joining ad hoc [1-2](#)
 starting ad hoc [1-2](#)

I

invite
 cascaded conferences [3-16](#)
 from SIP endpoint [1-3](#)
 multiple participants with single dial string [1-2, 1-3](#)
 operator to join a conference [3-4](#)
 using advanced settings [3-14](#)
 using quick invite [3-13](#)
 invite sign [1-2](#)
 IP-based endpoints
 dialing conventions [1-5](#)

L

layouts
 changing [3-17](#)

display name in video layout frame [3-18](#)

M

media types [2-3](#)

mute [3-6](#)

O

online help

Conference Control interface [3-3](#)

Create Conference window [2-2](#)

P

participant

audio in [3-5](#)

audio out [3-6](#)

change participant view [3-5](#)

current number of [2-3](#)

data sharing [3-6](#)

name [3-5, 3-10](#)

number [3-5](#)

status [3-5](#)

video display [3-6](#)

video image [3-6](#)

view [3-8](#)

participant call information [3-11](#)

Participant List tab [2-9, 3-5, 3-6, 3-15](#)

Q

QualiVision [2-10](#)

quick invite [3-13](#)

R

reconnect participants [3-7](#)

remove participants [3-7](#)

S

Select sub-conference dialog box [2-10, 3-9](#)

service prefix number [1-2](#)

sign out [2-6, 3-19](#)

SIP endpoints

dialing conventions [1-3](#)

dialing from [1-4](#)

inviting [1-3](#)

joining ad hoc [1-3](#)

starting ad hoc [1-3](#)

Statistics tab [2-10](#)

sub-conference [3-9](#)

create [3-9](#)

T

T.120

set up a data collaboration conference [3-5](#)

terminate

conference [3-18](#)

inactive conference [2-6](#)

U

unattended multi-point conferences [1-1](#)

unmute [3-6](#)

user types

administrators [2-2](#)

chair controllers [2-3](#)

conference participants [2-3](#)

operators [2-2](#)

V

Video Quality Classification dialog box [3-10](#)

viewing

conference statistics [3-13](#)

online help [2-2, 3-3](#)

participant names [3-18](#)

participants in cascaded conference [3-16](#)

volume [3-8](#)