



## CHAPTER 24

# Configuring a User Profile in Network Manager

---

- [Creating or Modifying a User Profile, page 24-1](#)
- [Removing a User Profile, page 24-2](#)
- [How to Define Network Subsets, page 24-2](#)

## Creating or Modifying a User Profile

Network Manager supports three types of network users:

- Administrator—Full read/write access to all managed elements and zones on the network.
- Read only—Read Only access to all elements and zones on the network.
- Local user—Restricted access to managed elements and zones on the network. This user profile is defined with specific read/write and read only access according to zones, elements and criteria for network subsets configured at Settings > Network Subsets.

### Procedure

---

- Step 1** Click **Settings** in the sidebar menu.
- Step 2** Click **Users**.
- Step 3** Do one of the following to modify an existing user profile:
  - Double-click the link in the User Name column for the user you require.
  - Select the user you require and click **Edit**.
  - Right-click the link in the User Name column for the user you require and select **Edit**.
- Step 4** Do one of the following to create a new user profile:
  - Click **Add**.
  - Right-click any link in the User Name column and select **Add**.
- Step 5** Enter a name and password for the user in the relevant fields, and select the appropriate user access level.
- Step 6** (For local users only) Select read/write access and read only access permissions according to zones and criteria for network subsets defined at Settings > Network Subsets.
- Step 7** (For local users only) Select **Can add elements** to enable a local user to add new elements to the Network Manager database throughout all network zones and subsets.

**Step 8** Click **OK** to save your changes.

---

#### Related Topics

- [How to Define Network Subsets, page 24-2](#)

## Removing a User Profile

### Procedure

---

**Step 1** Click **Settings** in the sidebar menu.

**Step 2** Click **Users**.

**Step 3** Do one of the following:

- Select the user you require and click **Delete**.
- Right-click the link in the User Name column for the user you require and select **Delete**.

**Step 4** Click **OK** to save your changes.

The user profile is removed from the database.

---

## How to Define Network Subsets

Network subsets enable you to define areas of the network according to zones and element types using include and exclude criteria for use with Local user access level profiles.

- [Creating or Modifying a Network Subset, page 24-2](#)
- [Removing a Network Subset, page 24-3](#)
- [Removing an Include or Exclude Criterion, page 24-3](#)

## Creating or Modifying a Network Subset

### Procedure

---

**Step 1** Click **Settings** in the sidebar menu.

**Step 2** Click **Network Subsets**.

**Step 3** Do one of the following to modify an existing network subset:

- Double-click the network subset you require.
- Select the network subset you require and click **Edit**.
- Right-click the network subset you require and select **Edit**.

**Step 4** Do one of the following to create a new network subset:

- Click **Add**.
  - Right-click any network subset and select **Add**.
- Step 5** Enter a name for the network subset.
- A subset contains all elements which match at least one include criterion but do not match any exclude criterion.
- Step 6** Do one of the following to modify an existing include or exclude criterion:
- Double-click the criterion you require.
  - Select the criterion you require and click **Edit**.
  - Right-click the criterion you require and select **Edit**.
- Step 7** Do one of the following to create a new include or exclude criterion:
- Click **Add**.
  - Right-click any criterion and select **Add**.
- Step 8** Select a zone and element type in the relevant fields, and indicate whether or not child zones of the specified zone are contained in the criterion.
- Step 9** Click **OK** to add the criterion to the relevant list in the Add Network Subset window.
- Step 10** Click **OK** to save your changes.
- 

#### Related Topics

- [Creating or Modifying a User Profile, page 24-1](#)

## Removing a Network Subset

#### Procedure

---

- Step 1** Click **Settings** in the sidebar menu.
- Step 2** Click **Network Subsets**.
- Step 3** Do one of the following:
- Select the network subset you require and click **Delete**.
  - Right-click the network subset you require and select **Delete**.
- Step 4** Click **OK** to save your changes.
- 

## Removing an Include or Exclude Criterion

#### Procedure

---

- Step 1** Click **Settings** in the sidebar menu.
- Step 2** Click **Network Subsets**.

**Step 3** Do one of the following:

- Double-click the network subset you require.
- Select the network subset you require and click **Edit**.
- Right-click the network subset you require and select **Edit**.

**Step 4** Do one of the following:

- Select the criterion you require and click **Delete**.
- Right-click the criterion you require and select **Delete**.

**Step 5** Click **OK** to save your changes.

---