



# DMS-Admin Dashboard

---

Revised: March 2015

[Procedures, page 2-1](#)



**Note**

---

Although visible in the Cisco DMM user interface, Release 5.5 and 5.6 software does not support Cisco Digital Signs, Cisco Digital Media Players (DMPs), Cisco Cast, Cisco Digital Media Designer, or the Cisco Digital Media Player Device Manager.

---

## Procedures

[View the Dashboard, page 2-1](#)

### View the Dashboard

---

**Step 1** Click the **Dashboard** tab.

The Dashboard for DMS-Admin centralizes many features for system monitoring and log collection. When problems of any kind interfere with the data-collection processes, question marks display in the DMM Dashboard gauges in addition to the best available data. In this case, check that your systems and network are configured and working correctly.

Until you install at least one license key, the DMS-Admin Dashboard cannot retrieve data to populate the gauges.

These are the Dashboard gauges.

The screenshot shows the Cisco Digital Media Manager Dashboard. At the top, there is a navigation bar with tabs for Dashboard, Failover, Settings, Security, Users, Alerts, Services, and Licensing. The main content area is divided into several sections:

- Alerts:** Shows 0 Email Notifications, 0 SNMP Notifications, and 0 Syslog Notifications. A "View Alerts" link is present.
- Status:** Contains three sub-sections:
  - Digital Media Players:** Shows 2 DMPs, with 2 Up and 0 Down.
  - Show and Share:** Shows 1 Show and Share Appliance, with 1 Up and 0 Down. Includes a "Go to Show and Share" link.
  - Failover Cluster:** Shows DMM Cluster (Primary: Up/Active, Secondary: Up/Standby) and Show and Share Cluster (Primary: Up/Active, Secondary: Up/Standby). Includes a "View Failover Status" link.
- Internal Operations:** Shows Scheduled to Publish (0) and Publishing Complete (4). Includes a "Manage Show and Share" link.
- Users Logged In:** Shows 1 User Logged In (Past One Hour). Includes a "View All Users" link.
- System Information:** Shows Digital Media Manager Version 5.2.3, Appliance Serial Number, and Disk Space usage for DMM and Show and Share.
- Licensed Features:** A table listing various modules and their license constraints.

At the bottom, there is a copyright notice: © 2002-2011, Cisco Systems, Inc. All rights reserved. Warranty and End-User License Agreement.

### Step 2 Understand the Alerts gauge.

This gauge shows the total count of notification messages delivered in the past 1 hour.

The close-up screenshot shows the Alerts gauge with the following data:

0	Email Notifications	0	SNMP Notifications	0	Syslog Notifications
---	---------------------	---	--------------------	---	----------------------

A "View Alerts" link is located below the gauge.

### Step 3 Understand the System Information gauge.

The close-up screenshot shows the System Information gauge with the following data:

Digital Media Manager		Version 5.2.3
Appliance Serial Number		XXXXXXXXXX
Disk Space	DMM	Show and Share
	Used 1.07 GB	Used 0.31 GB
	Free 1876.28 GB	Free 1877.04 GB

- Displays the installed release version of your DMM server software.
- Displays the serial number of your DMM appliance.
- Measures free space and used space for:
  - The content partition on your DMM appliance hard drive.
  - The content partition on your *Show and Share* appliance hard drive.

**Step 4** Understand the Status gauge.

Refresh your browser to update the data displayed in the Status gauge.

If you have set up the hardware and activated the separately licensed software features for server failover, and Show and Share, this gauge summarizes the current state in three summaries.

**Step 5** Understand the Licensed Features gauge.

This gauge lists software feature module licenses that are installed on your DMM appliance and describes constraints that your licenses impose.

Module	License Constraints
Digital Media Manager Base License	No constraints on license
SNMP Notifications Module	No constraints on license
Proof of Play Module	No constraints on license
Show and Share Live Event Module	No constraints on license
Digital Signs Module	No constraints on license
Show and Share Module	No constraints on license
Cast Module	No constraints on license
Digital Media Player Pack	Limit: 110 elements
Show and Share Content Author Pack	Limit: 105 elements
Clustering Module	No constraints on license

**Step 6** Understand the Users Logged In gauge.

Counts the total number of users who logged in to your Cisco DMS appliances over the past 1 hour.



