



Configure Failover

Revised: March 2015

To configure failover for Cisco Show and Share, refer to the *Failover Configuration Guide for Cisco Digital Media Suite 5.5 and 5.6* on Cisco.com:

<http://www.cisco.com/c/en/us/support/conferencing/show-share/products-installation-and-configuration-guides-list.html>



Note

Configuring Digital Signs Failover on a DMM running Release 5.5 and 5.6 is not supported.

The screenshot shows the Cisco Digital Media Manager web interface. The top navigation bar includes 'Dashboard', 'Failover', 'Settings', 'Security', 'Users', 'Alerts', 'Services', and 'Licensing'. The main content area is titled 'Failover Configuration' and contains three sections:

- Digital Media Suite Cluster Settings:** Includes a 'Name' field and radio buttons for 'Set As Master' and 'Master FQDN'.
- Digital Media Manager Failover Settings:** Contains 'Management Interface' (Primary FQDN, Secondary FQDN, Virtual FQDN) and 'Replication Interface' (Primary IP, Secondary IP, Subnet Mask, and a radio button for Crossover/Switched).
- Show and Share Failover Settings:** Contains identical 'Management Interface' and 'Replication Interface' fields.

At the bottom of the configuration area are 'Save' and 'Reset' buttons. A copyright notice at the very bottom reads: '© 2003-2011, Cisco Systems, Inc. All rights reserved. Warnings and End-User License Agreement'.

