



# Configure Failover

---

**September 2014**

The Failover feature allows you to configure Cisco Show and Share and Cisco Digital Media Manager (DMM) appliances so that one will take over operation if the other one fails.

A Cisco Show and Share failover configuration requires the following devices:

- A primary and a secondary Cisco Show and Share appliance.
- A primary and a secondary Cisco DMM appliance.



**Note**

---

You cannot configure failover for only the Cisco Show and Share appliance; you must configure it for both the Cisco Show and Share and the Cisco DMM appliances.

---

To configure failover for Cisco Show and Share, refer to the *Failover Configuration Guide for Cisco Digital Media Suite Release 5.5* on Cisco.com:

<http://www.cisco.com/c/en/us/support/conferencing/show-share/products-installation-and-configuration-guides-list.html>



**Note**

---

Configuring Digital Signs Failover on a DMM running Release 5.5 is not supported.

---

