



CHAPTER 10

Set Up and Configure a Cisco Show and Share Appliance

Revised: May 31, 2011

This chapter includes the following sections:

- [Set Up a Show and Share Appliance, page 10-1](#)
- [Configure a Show and Share Appliance, page 10-2](#)

Set Up a Show and Share Appliance

Before You Begin

- Ensure that a DNS entry has been created and published for the Show and Share appliance.
- Enable popup windows in your browser.
- Determine if your network uses dynamic (DHCP) or static IP addresses. If your network uses static IP addresses, obtain the following information:
 - Learn what IP address and subnet mask to assign to the Show and Share appliance.
 - Learn what IP addresses are assigned to the default network gateway, the primary DNS server, and the secondary DNS server.
- Configure your Cisco DMM Server.

Procedure

Step 1 Unpack the equipment from its container and verify that all components are present.

Step 2 Plug in the redundant power cables on the back of the appliance.

Step 3 Connect a live Ethernet cable to Port 1 on the back of the appliance.

Step 4 Connect a monitor to the VGA output on the back of the appliance.

Step 5 Connect a standard PS2 keyboard to the purple PS2 port in the back of the appliance.

Step 6 Power on the appliance.

The “Start of First Boot” message displays.

Configure a Show and Share Appliance

Use the following checklist to set up a Show and Share appliance and configure its software:

Your Show and Share installation will be complete after you complete the required steps to obtain a license and activate the Show and Share features.

✓	Task
<input type="checkbox"/>	<p>1. Set up the appliance hardware:</p> <ul style="list-style-type: none"> a. Unpack the equipment from its container and verify that all components are present. b. Plug in the redundant power cables on the back of the appliance. c. Connect a live Ethernet cable to Port 1 on the back of the appliance. d. Connect a monitor to the VGA output on the back of the appliance. e. Connect a standard PS2 keyboard to the purple PS2 port in the back of the appliance. f. Power on the appliance. <p>The “Start of First Boot” message displays.</p>
<input type="checkbox"/>	2. At the “Start of First Boot” message, press Enter .
<input type="checkbox"/>	3. Specify the fully qualified, DNS-resolvable hostname for the Cisco Show and Share appliance, for example: <code>server.example.com</code> . Do not enter an IP address . Choose OK .
<input type="checkbox"/>	<p>4. Enter the following network information and choose OK:</p> <ul style="list-style-type: none"> • The server IP address • The subnet mask • The default gateway IP address or DNS-resolvable hostname • The primary DNS server IP address or DNS-resolvable hostname • The secondary DNS server IP address or DNS-resolvable hostname
<input type="checkbox"/>	5. Confirm that you entered the correct network settings. If the settings are correct, choose Yes . If they are wrong, choose No to go back and correct them.
<input type="checkbox"/>	<p>6. Configure settings for the appliance network interface card (NIC) by completing one of the following steps:</p> <ul style="list-style-type: none"> • If the NIC for your appliance should auto-negotiate the fastest possible transmission mode when it is connected to another device, choose Yes. • If the NIC should not auto-negotiate, choose No, select the NIC speed, choose OK, select the duplex method, choose OK, and then choose Yes.
<input type="checkbox"/>	<p>7. Set the time zone settings, as follows:</p> <ul style="list-style-type: none"> a. Use the Up/Down arrow keys to navigate through the Time Zone list. b. Stop when the correct time zone is displayed, and then choose OK. <p>If the settings are correct, choose Yes. If they are wrong, choose No to go back and correct them.</p>

✓	Task
<input type="checkbox"/>	<p>8. Set the current month, year, and day, as follows:</p> <ol style="list-style-type: none">a. Use the Tab key and the Up/Down arrow keys to navigate and change the selected values.b. When you are done, choose OK. <p>If the settings are correct, choose Yes. If they are wrong, choose No to go back and correct them.</p>
<input type="checkbox"/>	<p>9. Set the current hour, minute, and second. Use 24-hour time format (24 hours that increment from 0100 to 2400).</p> <ol style="list-style-type: none">a. Use the Tab key and the Up/Down arrow keys to navigate and change the selected values.b. When you are done, choose OK. <p>If the settings are correct, choose Yes. If they are wrong, choose No to go back and correct them.</p>
<input type="checkbox"/>	<p>10. Enter a password for the <i>admin</i> account, and choose OK. Re-enter the password and choose OK twice.</p> <p>11. This is the default account to use when you administer the appliance. The password that you enter must contain at <i>least</i> six characters.</p> <p>Tip We recommend that you use a strong password. A strong password has at least eight characters and contains numbers, uppercase and lowercase letters, and symbols.</p>
<input type="checkbox"/>	<p>12. Enter a password for the <i>pwadmin</i> account, and choose OK. Re-enter the password and choose OK twice.</p> <p>13. This is the account to use if you forget your password for the <i>admin</i> account.</p> <p>After a moment, the appliance reboots, and a login prompt appears.</p>

Configure a Show and Share Appliance