



## CHAPTER 5

# Configure System Time

---

**Revised: September 17, 2012**

This chapter explains how to use AAI to configure the system time on a DMM appliance. This chapter includes these sections.

- [View Date and Time Settings, page 5-2](#)
- [Change the Time Zone, page 5-2](#)
- [Change the Date, page 5-3](#)
- [Set the System Time Manually, page 5-3](#)
- [Use NTP to Correct the System Clock, page 5-4](#)
- [Use NTP to Provide System Time, page 5-4](#)
- [Display the Current Time, page 5-7](#)

# View Date and Time Settings

## Procedure

**Step 1** Choose **DATE\_TIME\_SETTINGS** and press **Enter**.

The Date and Time Settings screen appears. The screen shows the currently configured time zone, whether the hardware clock is set to UTC or not, and the date and time the screen was accessed.

```

Date and Time Settings
From this menu you can configure the time settings

TIME_ZONE: "America/Los_Angeles"
HARDWARE CLOCK AT UTC: true
DATE: Thu 20 Oct 2011 09:56:12 PM PDT

TIME_ZONE To change the Time Zone
DATE To Change the Date
TIME To change the Time
NTP To synchronize time with NTP server
SHOW_TIME To show the current time

< OK > <Cancel>

```



**Note** The time does not update on this screen. To see the actual time, see [Display the Current Time, page 5-7](#).

**Step 2** Choose **Cancel** to return to the Main menu.

**Step 3** Stop. You have completed this procedure.

# Change the Time Zone

## Procedure

**Step 1** Choose **DATE\_TIME\_SETTINGS** and press **Enter**.

**Step 2** Choose **TIME\_ZONE** and press **Enter**.

**Step 3** Use the **Up/Down** arrows to select the time zone. Press **Tab**.

**Step 4** Press **Space** to select or deselect **System clock uses UTC**.

**Step 5** Press **Tab** to highlight the OK button and press **Enter**.

It may take a minute for the changes to take effect. When the changes are complete, the Date and Time Settings screen appears.

**Step 6** Stop. You have completed this procedure.

---

## Change the Date

### Procedure

---

- Step 1** Choose **DATE\_TIME\_SETTINGS** and press **Enter**.
  - Step 2** Choose **DATE** and press **Enter**.
  - Step 3** Press **Tab** until the month is highlighted. Use the **Up/Down** arrows to change the month.
  - Step 4** Press **Tab** to highlight the year. Use the **Up/Down** arrows to change the year.
  - Step 5** Press **Tab** to highlight the day. Use the **Up/Down** and **Left/Right** arrows to change the day.
  - Step 6** Press **Tab** to highlight the OK button. Press **Enter**.  
The Date and Time Settings confirmation screen appears.
  - Step 7** Press **Enter** to confirm the date and return to the Date and Time Settings screen.
  - Step 8** Stop. You have completed this procedure.
- 

## Set the System Time Manually

You can manually enter the system time.



### Note

See [Use NTP to Correct the System Clock, page 5-4](#) for information about performing a one-time correction of the manually-entered system time against an NTP server.

---

### Procedure

---

- Step 1** Choose **DATE\_TIME\_SETTINGS** and press **Enter**.
- Step 2** Choose **TIME** and press **Enter**.
- Step 3** Press **Tab** until the hour is highlighted. Use the **Up/Down** arrows to change the hour.
- Step 4** Press **Tab** to highlight the minutes. Use the **Up/Down** arrows to change the minutes.
- Step 5** Press **Tab** to highlight the seconds. Use the **Up/Down** arrows to change the seconds.
- Step 6** Press **Tab** to highlight the OK button. Press **Enter**.  
The Time Configuration confirmation screen appears.

- Step 7** Press **Enter** to confirm the settings and return to the Date and Time Settings screen.
- Step 8** Stop. You have completed this procedure.
- 

## Use NTP to Correct the System Clock

You can use NTP to perform a one-time correction of the system clock.

This procedure provides a one-time correction only; it does not enable NTP to keep the system clock synchronized with the NTP server. To enable NTP on the appliance, see [Use NTP to Provide System Time, page 5-4](#).

### Procedure

---

- Step 1** Choose **DATE\_TIME\_SETTINGS** and press **Enter**.
- Step 2** Choose **NTP** and press **Enter**.
- Step 3** Choose **CLOCK\_CORRECTION** and press **Enter**.
- Step 4** Enter the IP address or name of the NTP server you want to use to correct the system clock.
- Step 5** Press **Enter**.
- A message displaying the status of the time correction appears.
- Step 6** Press **Enter**.
- You are returned to the Network Time Protocol Configuration screen.
- Step 7** Stop. You have completed this procedure.
- 

## Use NTP to Provide System Time

You must use NTP on the appliances if you are going to configure failover. This section contains these topics.

- [View NTP Settings, page 5-5](#)
- [Specify NTP Servers, page 5-5](#)
- [Start the NTP Service, page 5-6](#)
- [Stop the NTP Service, page 5-6](#)
- [Restart the NTP Service, page 5-7](#)
- [Check the NTP Service Status, page 5-7](#)

## View NTP Settings

### Procedure

---

**Step 1** Choose **DATE\_TIME\_SETTINGS** and press **Enter**.

**Step 2** Choose **NTP** and press **Enter**.

The Network Time Protocol Configuration screen appears. The configured NTP servers, the date and time that the screen was accessed, and the status of the NTP service is displayed at the top of the screen.



**Note** The date and time do not update on this screen; it only displays the date and time you accessed the screen. To view a live display of the system time, see [Display the Current Time, page 5-7](#).

---

If the STATUS field contains “Unable to talk to NTP daemon,” the NTP service is not started. See [Start the NTP Service, page 5-6](#) for information about starting the service. If you have not yet specified any NTP servers, see [Specify NTP Servers, page 5-5](#).

**Step 3** Choose **Cancel** and press enter to return to the Main Menu.

**Step 4** Stop. You have completed this procedure.

---

## Specify NTP Servers

You can add up to three NTP servers for the appliance to use to synchronize its clock.

### Procedure

---

**Step 1** Choose **DATE\_TIME\_SETTINGS** and press **Enter**.

**Step 2** Choose **NTP** and press **Enter**.

**Step 3** Choose **ADD/CHANGE** and press **Enter**.

**Step 4** Enter up to three servers, starting with the NTP SERVER 1: field.

- a. Use the **Up/Down** arrows to highlight the server field.
- b. Enter the server IP address or fully qualified domain name.

**Step 5** Press **Tab** to highlight the OK button, and then press **Enter**.

The Network Time Protocol Client Configuration confirmation screen appears. You can review the servers that you specified.

**Step 6** Press **Enter** to confirm your settings and return to the Network Time Protocol Configuration screen.

**Step 7** Stop. You have completed this procedure.

---

## Start the NTP Service

The NTP service polls the server every 64 seconds.

### Procedure

---

**Step 1** Choose **DATE\_TIME\_SETTINGS** and press **Enter**.

**Step 2** Choose **NTP** and press **Enter**.

**Step 3** Choose **NTP\_SERVICE** and press **Enter**.

**Step 4** Choose **START/STOP** and press **Enter**.

The Start NTP confirmation screen appears.

**Step 5** Press **Enter** to start the service.

The Network Time Protocol Configuration screen appears. When the appliance is synchronized with the NTP server, the status on this screen is “synchronized to NTP server (*server\_ip\_address*)....” If the appliance has not yet synchronized with the NTP server, the status shows “unsynchronized”.

**Step 6** Stop. You have completed this procedure.

---

## Stop the NTP Service

### Procedure

---

**Step 1** Choose **DATE\_TIME\_SETTINGS** and press **Enter**.

**Step 2** Choose **NTP** and press **Enter**.

**Step 3** Choose **NTP\_SERVICE** and press **Enter**.

**Step 4** Choose **START/STOP** and press **Enter**.

The Stop NTP confirmation screen appears.

**Step 5** Press **Enter** to stop the service.

The Network Time Protocol Configuration screen appears. When the NTP service is stopped, the Status on this screen is “Unable to talk to NTP daemon”.

**Step 6** Stop. You have completed this procedure.

---

## Restart the NTP Service

Restarting the NTP service stops and restarts the service if it is already running; it does not start the service if it is stopped.

### Procedure

---

**Step 1** Choose **DATE\_TIME\_SETTINGS** and press **Enter**.

**Step 2** Choose **NTP** and press **Enter**.

**Step 3** Choose **NTP\_SERVICE** and press **Enter**.

**Step 4** Choose **RESTART** and press **Enter**.

The Restart NTP confirmation screen appears.

**Step 5** Press **Enter** to restart the service.

The Network Time Protocol Configuration screen appears.

**Step 6** Stop. You have completed this procedure.

---

## Check the NTP Service Status

### Procedure

---

**Step 1** Choose **DATE\_TIME\_SETTINGS** and press **Enter**.

**Step 2** Choose **NTP** and press **Enter**.

**Step 3** Choose **STATUS** and press **Enter**.

The Network Time Protocol Client Status screen appears.

**Step 4** Press **Enter** to close the Network Time Protocol Client Status screen and return to the Network Time Protocol Configuration screen.

**Step 5** Stop. You have completed this procedure.

---

## Display the Current Time

### Procedure

---

**Step 1** Choose **DATE\_TIME\_SETTINGS** and press **Enter**.

**Step 2** Choose **SHOW\_TIME** and press **Enter**.

The Display Time screen displays the current time on the appliance.

## ■ Display the Current Time

```
DISPLAY TIME
Thu Oct 20 22:06:10 PDT 2011
█
<CTRL-C to EXIT>
```

**Step 3** To return to the Date and Time Settings menu, press **Enter**.

**Step 4** Stop. You have completed this procedure.

---