



## INDEX

---

### C

- checking Cisco IOS release [4](#)
- Cisco IOS command
  - CLI commands [23](#)
  - service-module integrated-service-engine [27](#)
  - show controller integrated-service-engine [29](#)
  - show interfaces integrated-service-engine [34](#)
- Cisco IOS software [2](#)
- Cisco ISR [2](#)
- CLI environment
  - entering [5](#)
  - exiting [6](#)
- closing a module session [10](#)
- command
  - export mount-point [24](#)
  - format storages [25](#)
  - service-module [6](#)
  - session [6](#)
  - telnet [6](#)
- configuration mode, definition [5](#)
- configuring router/module interfaces [7](#)

---

### D

- disk partition SNMP threshold [20](#)

---

### E

- entering CLI environment [5](#)
- exiting CLI environment [6](#)
- export mount-point command [24](#)

---

### F

- format storages command [25](#)
- free swap space SNMP threshold [20](#)

---

### G

- graceful shutdown [4](#)

---

### I

- idle CPU SNMP threshold [20](#)
- IOS command. See Cisco IOS command.

---

### L

- Linux-based application [2](#)
- location of module in router [4](#)

---

### M

- modes, user EXEC, privileged EXEC, and configuration [5](#)
- module location in router [4](#)

---

### N

- nongraceful shutdown [4](#)

---

### O

- opening a module session [10](#)

---

## P

privileged EXEC mode, definition [5](#)

---

## S

service-module command [6](#)

service-module integrated-service-engine Cisco IOS  
command [27](#)

session command [6](#)

show controller integrated-service-engine Cisco IOS  
command [29](#)

show interfaces integrated-service-engine Cisco IOS  
command [34](#)

shutting down the network module [14](#)

SNMP

    disk partition threshold [20](#)

    free swap space threshold [20](#)

    idle CPU threshold [20](#)

starting up the network module [14](#)

syslog [17](#)

---

## T

telnet command [6](#)

Telnet session [5](#)

trace logs [17](#)

---

## U

user EXEC mode, definition [5](#)

---

## V

verifying system status [15](#)