



---

## A

- Add component form [3-7](#)
- adding
  - components to a configuration [4-8](#)
  - domains [3-11](#)
  - groups [3-12](#)
  - multiple components [4-13](#)
  - services [6-4](#)
  - subscriber features [6-4](#)
  - subscribers [6-2](#)
  - users [3-13](#)
- adding a Cisco BTS EMS server [3-9](#)
- adding subscribers [6-2](#)
- application directory [2-1](#)
- Application Window [3-2](#)
  - elements [3-2](#)
- assigning
  - group to a domain [3-12](#)
  - users to a group [3-13](#)
- audit.log [5-2](#)

---

## B

- Billing reports [7-1](#)

- BTS EMS server
  - configuring [4-1](#)
- bulk command provisioning [4-13](#)

---

## C

- changing
  - password [3-15](#)
  - user information [3-15](#)
- checking
  - status [4-16](#)
- Cisco.com [iii](#)
- Cisco BTS/Cisco EPOM
  - compatibility [1-3](#)
- Cisco BTS EMS server
  - adding [3-9](#)
  - configuration tree [4-2](#)
  - configuring [4-1](#)
  - initial access [4-2](#)
  - requirements [1-3](#)
  - site ID [3-9](#)
- Cisco BTS Softswitch configuration
  - adding a component [4-8](#)
- Cisco BTS Softswitch operations [3-6](#)
- Cisco EPOM

- access from a PC [2-5](#)
  - Application Window [3-2](#)
  - audit.log [5-2](#)
  - client requirements [1-2](#)
  - database [1-2](#)
  - database reinitializing [2-5](#)
  - insecure connection [2-6](#)
  - inventory [4-8](#)
  - logging in [2-6](#)
  - navigating the interface [3-1](#)
  - secure connection [2-5](#)
  - security features [5-1](#)
  - security setup [5-2](#)
  - server requirements [1-2](#)
  - starting [2-4](#)
  - stopping [2-4](#)
  - template [4-3](#)
  - trace.log [5-2](#)
  - uninstallation [2-2](#)
  - upgrade [2-3](#)
  - using forms [3-7](#)
  - views, exploring [3-6](#)
  - Cisco EPOM database [1-2](#)
  - Cisco EPOM installation [2-2](#)
    - directories [2-1](#)
    - prerequisites [2-2](#)
  - Cisco TAC [v](#)
    - escalation center [v](#)
    - website [v](#)
  - client requirements [1-2](#)
  - Component Add view [4-9, 4-10](#)
  - components
    - adding to inventory [4-8](#)
    - checking status [4-16](#)
    - controlling [4-16](#)
    - provisioning [6-4](#)
  - Component Status view [4-2, 4-3, 4-4, 4-5, 4-6, 4-7, 4-8, 4-9, 4-11, 4-12, 6-3](#)
  - configuring
    - BTS EMS server [4-1](#)
  - controlling
    - components [4-16](#)
  - CORBA interface [3-9](#)
  - creating custom navigation tree [5-3](#)
  - csv file [7-2](#)
  - customizing provisioning flow [6-5, 6-7](#)
- 
- D**
- database
    - Cisco EPOM [1-2](#)
  - data directory [2-1](#)
  - default port assignments [1-2](#)
  - defaulttree.xml [5-3, 5-6](#)
  - deleting
    - groups [3-12](#)
    - multiple components [4-15](#)
    - services [6-4](#)
    - subscriber features [6-4](#)

subscribers [6-2](#)

users [3-14](#)

documentation

additional information [v](#)

CD-ROM [iii](#)

feedback [iv](#)

obtaining [iii](#)

ordering [iii](#)

Domain view [4-3, 4-4, 4-5, 4-6, 4-7, 4-8, 4-9, 4-11, 4-12, 6-2, 6-3](#)

---

## E

editing

multiple components [4-14](#)

Expand range expression checkbox [4-14](#)

exploring Cisco EPOM views [3-6](#)

exporting reports [7-2](#)

---

## F

features

adding or deleting [6-4](#)

field-level help [3-8](#)

fields [3-8](#)

form

actions [3-7](#)

field types [3-8](#)

---

## G

groups

deleting [3-12](#)

---

## H

help

field-level [3-8](#)

---

## I

inventory

adding components [4-8](#)

---

## M

managed components

adding [4-8](#)

modifying

users [3-14](#)

moving between windows [3-9](#)

multiple components

editing [4-14](#)

multiple components

deleting [4-15](#)

provisioning [4-13](#)

MySQL database

reinitializing [2-5](#)

---

**N**

## navigating

- Cisco EPOM interface [3-1](#)

navigating windows [3-9](#)

## navigation tree

- activating [5-5](#)

- creating [5-3](#)

- example [5-3](#)

---

**O**

## operations

- Cisco BTS Softswitch [3-6](#)

---

**P**

## password

- changing [3-15](#)

Performance reports [7-1](#)

## port assignments

- default [1-2](#)

Preface [iii](#)

## provisioning

- bulk command [4-13](#)

- multiple components [4-13](#)

- wizards [6-4](#)

provisioning components [6-4](#)

## provisioning flow

- customizing [6-5, 6-7](#)

- provisioning flow wizard [6-2, 6-4](#)

- tasks [6-4](#)

- using [6-1](#)

## provisioning flow

- xml file [6-5](#)

---

**R**

## reports

- Billing [7-1](#)

- exporting [3-15, 7-2](#)

- Performance [7-1](#)

- viewing [3-15, 7-1](#)

---

**S**

## security

- setup [5-2](#)

server requirements [1-2](#)

## site ID

- for a Cisco BTS EMS server [3-9](#)

## status

- checking [4-16](#)

## subscriber

- adding [6-2](#)

- deleting [6-3](#)

## subscriber features

- adding or deleting [6-4](#)

---

## subscriber services

- adding 6-4
- deleting 6-4
- modifying 6-4

---

**T**

## technical assistance

- obtaining iv

## Technical Assistance Center v

## template

- applying 4-9
  - Cisco EPOM 4-3
  - creating from existing template 4-4
  - creating new 4-3
  - deleting 4-7
  - designating default 4-6
  - editing 4-5
- trace.log 5-2
- types of fields 3-8

---

**U**

## user information

- changing 3-15

## users

- adding 3-13
- deleting 3-14
- modifying 3-14

- using Cisco EPOM forms 3-7

---

**V**

- viewing reports 7-1

---

**W**

## windows

- moving between 3-9
- navigating 3-9

## wizard

- provisioning flow 6-2, 6-4
- using 6-4

---

**X**

## xml file

- provisioning flow 6-5