



Preface

Revised: October 30, 2012, OL-25004-04

This document describes the Cisco BTS 10200 Softswitch features applicable to Session Initiation Protocol (SIP) subscribers and trunks. It also provides the procedures necessary to provision these features.

Organization

This SIP Guide contains the following chapters:

- [Chapter 1, “SIP Network Overview”](#)—Provides an overview of the BTS 10200 functions in the SIP network.
- [Chapter 2, “SIP Subscribers”](#)—Explains how to provision and use the features applicable to SIP subscribers.
- [Chapter 3, “SIP Trunks”](#)—Explains how to provision and use the features applicable to SIP trunks.
- [Chapter 4, “SIP System Features”](#)—Explains how to provision and use features applicable to all SIP system operations.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.

Document Change History

The following table lists the revision history for the *Cisco BTS 10200 Softswitch SIP Guide, Release 6.0.4*.

Version Number	Issue Date	Status	Reason for Change
OL-25004-04	October 30, 2012	Initial	Updated the “Provisioning Session Timers for SIP Subscribers” section on page 11.
OL-25004-03	May 14, 2012	Initial	Initial document for Release 6.0.4