



Application Note for the Nortel SL-100 Serial SMDI TIMG Integration

This is an application note for programming the Nortel SL-100 phone system for a serial SMDI integration with Cisco Unity Connection using TIMG units. For instructions on setting up analog PIMG units and creating the serial PIMG integration in Unity Connection, see the [Setting Up a Serial \(SMDI, MCI, or MD-110\) PIMG Integration with Cisco Unity Connection](#) chapter.

- [Application Note for the Nortel SL-100 Serial SMDI TIMG Integration, page 1](#)

Application Note for the Nortel SL-100 Serial SMDI TIMG Integration

Introduction


This is an application note for programming the Nortel SL-100 phone system for a serial SMDI integration with Cisco Unity Connection using TIMG units. For instructions on setting up analog PIMG units and creating the serial PIMG integration in Unity Connection, see the "[Setting Up a Serial \(SMDI, MCI, or MD-110\) PIMG Integration](#)" chapter.

Network Topology

Figure C-1 shows the required connections for a serial SMDI integration using TIMG units.

For more information about this integration, see the chapter [Introduction](#).

Figure 1: Figure C-1 Connections for a Serial SMDI Integration Using TIMG Units

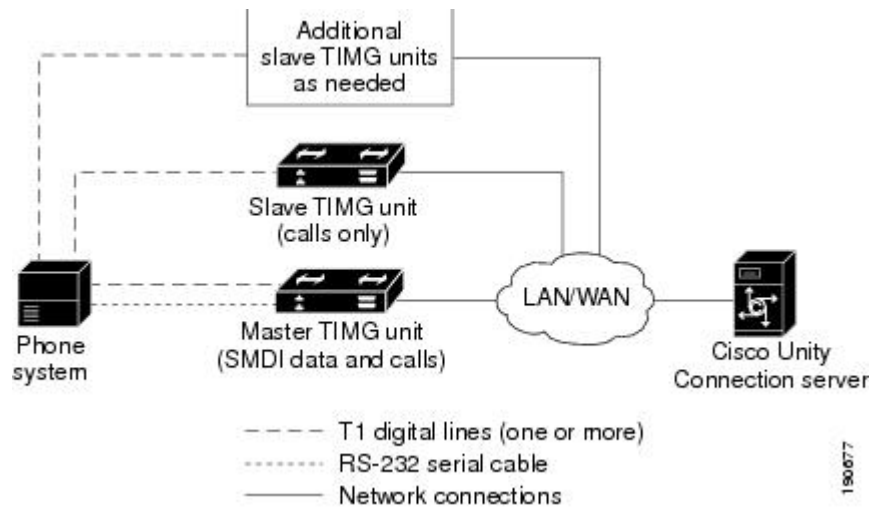

Requirements

The phone system was as follows:

- Nortel SL-100.
- Software version SE-06 or later.
- Line Side T1 Card (NT5D11 or equivalent) to terminate the T1 line.

Programming Nortel SL-100 Phone System for Serial Integration

The following programming instructions are provided as an example of a functioning integration. The specific programming for your phone system may vary depending on its configuration.



Caution

In programming the phone system, do not send calls to voice messaging ports in Unity Connection that cannot answer calls (voice messaging ports that are not set to Answer Calls). For example, if a voice messaging port is set only to Perform Message Notification, do not send calls to it.

- 1 On the MAP terminal, enter **table mpc** and press **Enter**.
- 2 Enter **add** and press **Enter**.
- 3 On Table MPC, enter the following settings.

Table 1: Settings for Table MPC

Field	Setting
MPCNO	Enter the MPC number used for SMDI.
MPCIOC	Enter the number associated with the MPC (SMDI) card.
IOCCCT	Enter the slot position on the IOC shelf multiplied by 4, from 0 to 32.
EQ	Enter the NT product engineering code for the MPC card in the format 1X89zz or FX30zz, where zz are the two letters at the end of the product code.
DLDFILE	In the format MPCAxxyy, enter the name of the 8-character download file for SMDI and MPCA.

- 1 Enter **table mpclink** and press **Enter**.
- 2 Enter **add** and press **Enter**.
- 3 On Table MPCLINK, enter the following settings.

Table 2: Settings for Table MPCLINK

Field	Subfield	Setting
LINKKEY	MPCNO	Enter the MPC number used for SMDI (the same number entered in Table MPC).
	LINKNO	Enter the MPC link number for SMDI application with ASYNC protocol.
LINKALM		Enter Y to activate the MPCLINK alarm for system busy (SYSB) MPC links. Enter N if you do not want to activate the MPCLINK alarm for system busy (SYSB) MPC links. Note If you enter N , the system does not generate MPC908 (MPC link state transition) logs.
PROTOCOL		Enter ASYNC .
LINKNABL		Enter 765 .
PARAM		Enter APLDEFN .
ADEFN		Enter SMDI .
PARAM		Enter BAUDRATE .
RATE		Enter B9600 .
PARAM		Enter PARITY .

Field	Subfield	Setting
PRTY		Enter EVEN .
PARM		<p>The following are among the optional parameters: L1IDLY, L2IDLY, LNKDOWN. If you enter a parameter, you are then prompted to enter a value for it.</p> <p>L1IDLY and L2IDLY timers can be used in offices with heavy SMDI/VMS traffic to shorten the amount of time the MPC can delay sending an MWI to the switch. (The default is 3 seconds.)</p> <p>The LNKDOWN timer adjusts the length of time the switch takes to recognize LINK failure and sets the LINK to SYSB. (The default is 2 seconds.)</p>
CHARBITS		Enter BIT7 .

- 1 Enter **table sllnkdev** and press **Enter**.
- 2 Enter **add** and press **Enter**.
- 3 On Table SLLNKDEV, enter the following settings.

Table 3: Settings for Table SLLNKDEV

Field	Setting
DEVNAME	Enter a unique device name.
DEVICE	Enter 1X89 .
MPCNO	Enter the value MPC number that was specified in Table MPC.
LINKNO	Enter the value for the MPC link number that was specified in Table MPCLINK.
XLATION	Enter NONE .
PROTOCOL	Enter NONE .
DIRECTION	Enter INOUTLK .
XFER	Enter SMDIDATA .
OPTION	Enter NUMOFDIGS .
NUMDIGS	<p>Enter the number of digits sent by the phone system to the voice messaging system through the SMDI link.</p> <p>Note The entry value selected should match the dialing plan configured on the phone system.</p>

Field	Setting
OPTION	Enter CGNADDRDN .
OPTION	Enter \$.

- 1 Enter **table ofrt** and press **Enter**.

You use Table OFRT to set up a treatment for unanswered calls. The following example shows settings for routing unanswered calls back to the voice messaging system.

- 1 Enter **add** and press **Enter**.
- 2 On Table OFRT, enter the following settings.

Table 4: Settings for Table OFRT

Field	Setting
RTE	If the record is the first in the route list, enter the route reference number assigned to the route list. Otherwise, leave this field blank.
RTESEL	Enter the route selector.
SNPA	Enter the serving NPA (area code) of the DN.
TYPCALL	Enter the type of call: <ul style="list-style-type: none"> • DD • NP • OA
ORIGSCRE	Enter LCL (for local) or NLCL (for non-local).
REPLDIGS	Enter up to 11 replace digits.
CANCNORC	Enter Y or N to indicate whether to cancel normal change.
BILLCODE	Enter the billing code. If there is no billing number, enter N .

- 1 Enter table **digcol** and press **Enter**.

You use Table DIGCOL to set up the action that the line module must take with the first digit that is dialed.

- 1 Enter **add** and press **Enter**.
- 2 On Table DIGCOL, enter the following settings.

Table 5: Settings for Table DIGCOL

Field	Subfield	Setting
DGKEY	DATNAME	Enter the character assigned to the block of data in Table DIGCOL.
	DIGIT	Enter a numeric value from 0–9, STAR (*), or OCT (#) to specify the digit that is applicable to the record.
DGDATA	DGCOLSEL	Enter COL for the collection of more digits.
COLDATA	TMODE	Enter S for short timing mode.
	NUMDIGS	Number of digits. If the TMODE value is S , specify the number of digits for which short timing is required after the receipt of each digit. The number of digits specified, which does not include the initial digit, must be no greater than three for short timing.

1 Enter **table ucdgroup** and press **Enter**.

You use Table UCDGRP to set up the UCD group.

**Note**

The UCD group must have a unique primary DN.

1 Enter **add** and press **Enter**.

2 On Table UCDGRP, enter the following settings.

Table 6: Settings for Table UCDGRP

Field	Setting
UCDNAME	This is the name of the UCD group. It can be up to 16 characters in length. The first eight characters must be unique.
ACD	Enter N .
CUSTGRP	Name of the customer group to which the UCD group belongs.
UCDRNGTH	Ringing threshold, in one-second intervals, after which an unanswered call to a UCD agent is forwarded to the route specified in the THROUT field. The range is 0–63.
TABNAME	Enter OFRT .
INDEX	Enter the number assigned to the route list in Table OFRT (1–1023).
TABNAME	Enter OFRT for the table to which translations are routed.

Field	Setting
INDEX	Enter the number assigned to the route list in Table OFRT (1–1023).
PRIOPRO	Enter Maximum time, in seconds, a call can wait in a UCD group (0–255).
MAXPOS	Enter the maximum number of UCD agent positions that can be active at one time. This number should be the number of ports on the all TIMG units that are connected to the phone system.
DBG	Delayed billing. Enter Y if billing starts when the call is answered by a UCD agent. Enter N if billing starts when the caller receives a recorded announcement.
DEFPRIO	Enter 0 .
RLSCNT	Enter 0 .
MAXWAIT	Enter the maximum time, in seconds, that a call waits in the incoming call queue before being answered (0–1800).
MAXQSIZ	Enter the maximum number of calls that can be in the incoming queue waiting for an idle channel (0–511).
OPTION	Enter UCD_SMDI .
SMDI_LINK	Enter the terminal designation defined in Table SLLNKDEV.
SMDI_DESK_NO	Enter the message desk number (1–63). If you have more than one UCD group, one of them must be set to 63. We recommend that the first UCD group on a data link be set to 63. The second is set to 62, and so on. Note If CRR (Call Request Retrieval) is used, all requests are made to the UCD group with SMDI_DSK_NO = 63.

- 1 Enter **table dnroute** and press **Enter**.

You use Table DNROUTE to set up the UCD group.



Note The UCD group must have a unique primary DN.

- 1 Enter **add** and press **Enter**.
- 2 On Table DNROUTE, enter the following settings.

Table 7: Settings for Table DNROUTE

Field	Subfield	Setting
DNNM	AREACODE	Enter the DN for the UCD group specified as the UCDGRP. Note The UCD DN must be a dialable number from an agent on the phone system so that dialing plans and translation tables do not conflict.
	OFCCODE	
	STNCODE	
DN_SEL		Enter FEAT.
FEATURE		Enter UCD.
UCDGRP		Enter the value for the UCDNAME field that is defined in Table UCDGROUP.
DNTYPE		Enter PRIM.
TOLLPRIO		Enter 0.

1 Enter **table lninv** and press **Enter**.

You use Table LNINV to assign card slots on the line or remote line module.

1 Enter **add** and press **Enter**.

2 On Table LNINV, enter the following settings.

Table 8: Settings for Table LNINV

Field	Setting
LEN	Enter the line equipment number of the card slot.
CARDCODE	Enter 5d11ae .
PADGRP	Enter the name of the appropriate pad group that appears in the PADDATA table.
STATUS	Enter WORKING .
GND	Enter Y .
BNV	Enter NL .
MNO	Enter Y .
CARDTYPE	Enter NIL .

1 Enter **servord** and press **Enter**.

You can add agents to the UCD group by entering the following inputs at the prompts.

Table 9: Inputs for Adding Agents to the UCD Group

Prompt	Input	Description
SO:	NEW	
SONUMBER:	Press Enter .	When to invoke this service. Pressing Enter starts the service at the current date and time.
DN:		The Directory Number of the line. Use ten-digit DNs.
LCC_ACC:	IBN	The line class code of service.
GROUP:		The name of the IBN customer group to which the line belongs. For example, covm.
SUBGRP:		The subgroup number. For example, 0.
NCOS:		The network class of service. For example, 1.
SNPA:		The serving NPA (area code) of the DN.
LEN_OR_LT D:		The line equipment number of the line. For example, 4 0 1 0 (separated by spaces).
OPTION:	COD	The cut-off on disconnect.
OPTION:	UCD	Uniform call distribution.
OPTION:	DGT	Digitone.
OPTION:	3WC	Three-way calling.
OPTION:	CXR	Call Transfer.
CXFERTYP:	CTALL	Call Transfer Type. CTALL = transfer all calls.
CXRRCL:	N	Call Transfer Recall.
METHOD:	STD	Method of Call Transfer: Std = Std Call Transfer method.
OPTION:	SMDI	Simplified message desk interface.
LINENO:		The UCD terminal number. This is the line number associated with the SMDI channel. This parameter must be unique for each agent in the associated UCDGRP.

Prompt	Input	Description
UCDGRP:		The UCDNAME from the UCDGRP table. This is the UCD group to which you are adding the agent.
AUTO_LOG:	Y	Autologon capability required.
OPTION:	\$	The data you have entered appears.
	Y	Enter Y .

1 Enter **servord** and press **Enter**.

You can add a pilot number (UCD group DN) for the ports on the TIMG units by entering the following inputs at the prompts.

Table 10: Inputs for Adding Agents to the UCD Group

Prompt	Input	Description
SO:	NEW	
SONUMBER:	Press Enter.	When to invoke this service. Pressing Enter starts the service at the current date and time.
DN:		The directory number of the line. This is the DN that you enter in the SDN table.
LCC:	IBN	The line class code of service.
GROUP:		The name of the IBN customer group to which the line belongs.
SUBGRP:		The subgroup number.
NCOS:		The network class of service.
SNPA:		Serving NPA (area code) of the DN.
LEN:		Line equipment number of the line. For example, 4 0 1 0.
OPTION:	cfb	Call Forward Busy. Note This input is optional.
CFBCNTL:	N	Normal assignment for CFB. Note This input is optional.

Prompt	Input	Description
CFBDN:		The primary UCD DN. Note This input is optional.
OPTION:	CFF	Call Forward Fixed.
CFFDN:		The primary UCD DN.
OPTION:	CFU	Call Forward Universal.
OVRDACR:	N	Override Automatic Callback.
OPTION:	\$	The data you entered appears.
	Y	Enter Y to confirm the data.

- 1 Connect a phone to the line.
- 2 Pick up the handset.
- 3 Dial the call forward activation code followed by the pilot number (UCD DN). For example, dial *80 5551234.

**Note**

If you do not know this code, look it up in Table IBNXLA. The code is in the CFWP field.

- 4 Confirm that you hear the confirmation tone, which indicates that the line has been forwarded.

**Note**

If the phone system is restarted, you must repeat Step 27. through Step 30. for each line DN that CFUs to the UCD group.

- 5 Enter **table ibnxla** and press **Enter**.

You use Table IBNXLA to set up and message waiting indicators (MWIs).

- 1 Enter **add** and press **Enter**.
- 2 On Table IBNXLA, enter the following settings.

Table 11: Settings for Table DNROUTE

Field	Subfield	Setting
KEY	XLANAME	Enter the name of the translator, 1–8 characters, for the MWI feature.
	DGLIDX	Enter the access code for the MWI feature.

Field	Subfield	Setting
RESULT	TRSEL	Enter FEAT.
	ACR	Enter N.
	SMDR	Enter N.
	FEATURE	Enter the following features: CRA CRR CRDS CRDA UCDD UCDA CFWP CFWC