



Preface

This Preface contains the following sections:

- [Audience and Use, page vii](#)
- [Documentation Conventions, page vii](#)
- [Cisco Unity Connection Documentation, page viii](#)
- [Obtaining Documentation and Submitting a Service Request, page viii](#)
- [Cisco Product Security Overview, page viii](#)

Audience and Use

This document provides instructions for setting up an integration between Cisco Unity Connection and supported phone systems, by using TIMG units. For a list of phone systems that are qualified to integrate with Cisco Unity Connection through TIMG units, see [Chapter 1, “Introduction.”](#)

Documentation Conventions

The *TIMG Integration Guide for Cisco Unity Connection Release 8.x* uses the following conventions.

Table 1 *TIMG Integration Guide for Cisco Unity Connection Release 8.x Conventions*

Convention	Description
boldfaced text	Boldfaced text is used for: <ul style="list-style-type: none">• Key and button names. (Example: Select OK.)• Information that you enter. (Example: Enter Administrator in the User Name box.)
< > (angle brackets)	Angle brackets are used around parameters for which you supply a value. (Example: In the Command Prompt window, enter ping <IP address> .)

Table 1 *TIMG Integration Guide for Cisco Unity Connection Release 8.x Conventions*

Convention	Description
- (hyphen)	Hyphens separate keys that must be pressed simultaneously. (Example: Press Ctrl-Alt-Delete .)
> (right angle bracket)	A right angle bracket is used to separate selections that you make on menus. (Example: On the Windows Start menu, select Programs > Cisco Unified Serviceability > Real-Time Monitoring Tool .) In the navigation bar of the Cisco Unity Connection Administration. (Example: In the Cisco Unity Connection Administration, expand System Settings > Advanced .)

The *TIMG Integration Guide for Cisco Unity Connection Release 8.x* also uses the following conventions:

**Note**

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the document.

**Caution**

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Cisco Unity Connection Documentation

For descriptions and URLs of Cisco Unity Connection documentation on Cisco.com, see the *Cisco Unity Documentation Guide*. The document is shipped with Cisco Unity Connection and is available at http://www.cisco.com/en/US/products/ps6509/products_documentation_roadmaps_list.html.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS Version 2.0.

Cisco Product Security Overview

This product contains cryptographic features and is subject to United States and local country laws governing import, export, transfer and use. Delivery of Cisco cryptographic products does not imply third-party authority to import, export, distribute or use encryption. Importers, exporters, distributors

and users are responsible for compliance with U.S. and local country laws. By using this product you agree to comply with applicable laws and regulations. If you are unable to comply with U.S. and local laws, return this product immediately.

Further information regarding U.S. export regulations can be found at http://www.access.gpo.gov/bis/ear/ear_data.html.

