



## INDEX

---

### A

- adding server to create a cluster [11-1](#)
- associated components on which IP address of server must be changed [12-2](#)

---

### C

- changing
  - DNS settings by using CLI commands [15-1](#)
  - IP address for publisher defined by hostname [12-8](#)
  - IP address for publisher defined by IP address [12-11](#)
  - IP address for single server defined by hostname (no cluster) [12-3](#)
  - IP address for single server defined by IP address (no cluster) [12-5](#)
  - IP address for subscriber defined by hostname [12-14](#)
  - IP address for subscriber defined by IP address [12-17](#)
  - language settings [9-7](#)
- Cisco voicemail organization, reverting gateway server to version on inactive partition [4-6](#)
- Cisco voicemail organization, reverting member server to version on inactive partition [4-5](#)
- CLI commands, using to change DNS settings [15-1](#)
- cluster
  - adding server to create [11-1](#)
  - changing the SMTP domain [14-4](#)
  - replacing publisher and subscriber servers, or hard disks [10-8](#)
  - replacing publisher server or hard disks [10-2](#)
  - replacing subscriber server or hard disks [10-6](#)
  - reverting servers to version on inactive partition [4-4](#)
- COBRAS
  - for migrating data from Cisco Unity 4.0(5) or later to Connection 8.x by using a flash cutover [6-2](#)

- conventions, documentation [-ix](#)
- converting publisher to single server without a cluster [11-3](#)

---

### D

- DNS settings, using CLI commands to change [15-1](#)
- documentation conventions [-ix](#)

---

### E

- effects of reverting to version on inactive partition [4-1](#)

---

### G

- gateway server, reverting to version on inactive partition [4-6](#)

---

### H

- hard disks
  - replacing in publisher and subscriber servers [10-8](#)
  - replacing in publisher server [10-2](#)
  - replacing in single server without Connection cluster [10-1](#)
  - replacing in subscriber server [10-6](#)
- hostname, determining whether servers are defined by [12-1](#)

---

### I

- IP addresses
  - changing for publisher defined by hostname [12-8](#)
  - changing for publisher defined by IP address [12-11](#)

- changing for single server defined by hostname (no cluster) [12-3](#)
- changing for single server defined by IP address (no cluster) [12-5](#)
- changing for subscriber defined by hostname [12-14](#)
- changing for subscriber defined by IP address [12-17](#)
- changing on associated components [12-2](#)
- determining whether servers are defined by [12-1](#)

---

## L

### languages

- adding to a Connection cluster (task list) [9-2](#)
- adding to a Connection server (no cluster) (task list) [9-1](#)
- changing settings [9-7](#)
- removing files [9-7](#)

---

## M

member server, reverting to version on inactive partition [4-5](#)

### migrating

- from a Connection physical server to a Connection 8.x virtual machine (task list) [8-1](#)
- from Cisco Unity 4.0(5) or later to Connection 8.x by using a flash cutover (task list) [6-5](#)
- from Cisco Unity to Connection 8.x by gradually moving data (task list) [7-6](#)
- from Connection 1.x to 8.x (task list) [5-1](#)

### Migration Export tool

- for migrating data from Cisco Unity 4.x or later to Connection 8.x by using a flash cutover [6-2](#)

---

## P

### publisher server

- converting to single server without a cluster [11-3](#)
- renaming (task list) [14-4](#)
- replacing [10-2](#)

- replacing along with subscriber server, or hard disks [10-8](#)
- reverting to version on inactive partition [4-3](#)

---

## R

removing language files [9-7](#)

### renaming

- publisher server (task list) [14-4](#)
- single server without a cluster (task list) [14-1](#)
- subscriber server (task list) [14-8](#)

### replacing

- publisher and subscriber servers, or hard disks [10-8](#)
- publisher server or hard disks [10-2](#)
- single server or hard disks without Connection cluster [10-1](#)
- subscriber server or hard disks [10-6](#)

### reverting

- Connection software to version on inactive partition, about [4-1](#)
- effects of [4-1](#)
- gateway server in a Cisco voicemail organization to version on inactive partition [4-6](#)
- member server in a Cisco voicemail organization to version on inactive partition [4-5](#)
- server, or publisher server in a cluster to version on inactive partition [4-3](#)
- servers in a cluster to version on inactive partition [4-4](#)

---

## S

### servers

- adding to create a cluster [11-1](#)
- associated components on which IP address must be changed [12-2](#)
- changing IP address for publisher defined by hostname [12-8](#)
- changing IP address for publisher defined by IP address [12-11](#)
- changing IP address for single defined by hostname (no cluster) [12-3](#)

- changing IP address for single server defined by IP address (no cluster) [12-5](#)
- changing IP address for subscriber defined by hostname [12-14](#)
- changing IP address for subscriber defined by IP address [12-17](#)
- converting publisher to single server without a cluster [11-3](#)
- determining whether server is defined by hostname or IP address [12-1](#)
- renaming publisher (task list) [14-4](#)
- renaming single without a cluster (task list) [14-1](#)
- renaming subscriber (task list) [14-8](#)
- replacing publisher and subscriber, or hard disks [10-8](#)
- replacing publisher or hard disks [10-2](#)
- replacing single without Connection cluster [10-1](#)
- replacing subscriber or hard disks [10-6](#)
- reverting to version on inactive partition in a cluster [4-3](#)

## SMTP domain

- changing for a cluster [14-4](#)
- changing for a single server without a cluster [14-1](#)

software, about reverting to version on inactive partition [4-1](#)

## subscriber server

- renaming (task list) [14-8](#)
- replacing [10-6](#)
- replacing along with publisher server, or hard disks [10-8](#)

---

## T

### task lists

- for adding languages to a Connection cluster [9-2](#)
- for adding languages to a Connection server (no cluster) [9-1](#)
- for migrating from a Connection physical server to a Connection 8.x virtual machine [8-1](#)
- for migrating from Cisco Unity 4.0(5) or later to Connection 8.x by using a flash cutover [6-5](#)
- for migrating from Cisco Unity to Connection 8.x by gradually moving data [7-6](#)

- for migrating from Connection 1.x to 8.x [5-1](#)
- for renaming publisher server [14-4](#)
- for renaming single server without a cluster [14-1](#)
- for renaming subscriber server [14-8](#)
- for replacing single server or hard disks without Connection cluster [10-1](#)
- for reverting servers in a cluster to version on inactive partition [4-4](#)
- for upgrading Connection 7.x software to shipping 8.x version [1-4, 2-5, 2-10, 3-2, 3-7](#)
- for upgrading Connection 7.x software to shipping 8.x version (no cluster) [1-3, 2-5, 3-2](#)
- for upgrading Connection 7.x software to shipping 8.x version in a Connection cluster [2-10, 3-6](#)

### tools for migrating

- from Cisco Unity 4.0(5) or later to Connection 8.x by using a flash cutover, about [6-2](#)

---

## U

### upgrading

- about the process [1-1, 2-1, 3-1](#)
- Connection 7.x software to shipping 8.x version (task list) [1-4, 2-5, 2-10, 3-2, 3-7](#)
- Connection 7.x software to shipping 8.x version, no cluster (task list) [1-3, 2-5, 3-2](#)
- Connection 7.x software to shipping 8.x version in a Connection cluster (task list) [2-10, 3-6](#)

