



Initial Configuration Overview

- [About Initial Configuration, on page 1](#)
- [Initial Configuration Task Flow, on page 1](#)

About Initial Configuration

The chapters in this section describe the initial setup tasks that you must complete before you begin to configure the call control system.

Initial Configuration Task Flow

Procedure

	Command or Action	Purpose
Step 1	System Licensing Configuration Task Flow	Manage the license requirements for your system.
Step 2	Server Configuration Task Flow	Configure basic server information, such as the server name and port settings.
Step 3	Initial System and Enterprise Configuration Task Flow	Configure the system-wide parameters that are required when you set up a node for the first time.
Step 4	Service Parameters Configuration Task Flow	Configure the service parameters that are required when you set up a node for the first time.
Step 5	Core Settings for Device Pools Configuration Task Flow	Configure core system settings, such as a server group, time zone information, and a region (codec selection). These settings are fundamental and become the foundation for basic device pools.

