



Device defaults setup

This chapter provides information to use device defaults to set the default characteristics of each type of device that registers with a Cisco Unified Communications Manager.

- [About device defaults setup, page 1](#)
- [Device defaults settings, page 2](#)
- [Update device defaults, page 2](#)

About device defaults setup

Use device defaults to set the default characteristics of each type of device that registers with a Cisco Unified Communications Manager. The device defaults for a device type apply to all auto-registered devices of that type within a Cisco Unified Communications Manager cluster. You can set the following device defaults for each device type to which they apply:

- Device load
- Device pool
- Phone button template

When a device auto-registers with a Cisco Unified Communications Manager, it acquires the device default settings for its device type. After a device registers, you can update its configuration individually to change the device settings.

Installing Cisco Unified Communications Manager automatically sets device defaults. You cannot create new device defaults or delete existing ones, but you can change the default settings.

Related Topics

- [About device pool setup](#)
- [Device defaults settings, on page 2](#)
- [Update device defaults, on page 2](#)
- [About phone button template setup](#)

Device defaults settings

The following table describes the settings for device defaults.

Table 1: Device defaults settings

Field Name	Description
Device Type	This field displays the type of device for which device defaults can be set.
Protocol	This field displays the protocol that the corresponding device in the Device Type column uses.
Load Information	Enter the ID number of the firmware load that is used with a particular type of hardware device. If you install an upgrade or patch load, you must update the load information for each type of device that uses the new load.
Device Pool	Choose the device pool that is associated with each type of device. The device pool defines common characteristics for all devices in the pool.
Phone Template	Choose the phone button template that each type of Cisco Unified IP Phone uses. The template defines what keys on the phone perform that function.

Related Topics

[Update device defaults, on page 2](#)

Update device defaults

This section describes how to modify the device defaults in the Cisco Unified Communications Manager configuration database.

Before You Begin

Before updating the device defaults, perform any of the following tasks that apply to your system:

- Add new firmware files for the devices to the TFTP server.
- If you use device defaults to assign a firmware load that does not exist in the directory, those devices will fail to load the assigned firmware.
- Configure new device pools.
- If the device is a phone, configure new phone templates.

Procedure

- Step 1** Choose **Device > Device Settings > Device Defaults**.
 - Step 2** Update the appropriate settings for the device that you want to change as described in [Table 1: Device defaults settings, on page 2](#).
 - Step 3** To save the changes in the Cisco Unified Communications Manager configuration database, click Save.
 - Step 4** To reset all the devices of that type, click the Reset icon to the left of the device name and load the new defaults on all Cisco Unified Communications Managers in the cluster.
If you choose not to reset all devices of that type, only new devices that are added after you change the device defaults receive the latest defaults.
-

Related Topics

[About device pool setup](#)

[About phone button template setup](#)

