



## Remote Destination

---

You can use BAT to insert, delete, and export remote destination details. The following topics provide information about working with remote destination in BAT:

- [Inserting Remote Destination, page 58-1](#)
- [Deleting Remote Destination, page 58-2](#)
- [Exporting Remote Destination, page 58-3](#)

## Inserting Remote Destination

To insert remote destination details by using BAT, use the following procedure:

### Before you begin

- You must have a data file in comma separated value (CSV) format that contains the unique details for the remote destination.



**Note** You must enter the time zone details without parenthesis or asterisk. For example, if you are entering Greenwich Mean Time as the time zone, enter it as “Etc/GMT” and not “(GMT) Etc/GMT\*”.

- Upload the data files by choosing the relevant target and function for the transaction using the procedure that is mentioned in [“Uploading a File” section on page 2-3](#).

### Procedure

- Step 1** Choose **Bulk Administration>Remote Destination>Remote Destination Insert**. The Insert Remote Destination Configuration window displays.
- Step 2** From the File Name drop-down list box, choose the file that you uploaded.
- Step 3** To override the existing configuration, check the Override the existing configuration check box.
- Step 4** In the Job Information section, enter a description for the job. Insert Remote Destination specifies the default description.
- Step 5** You can choose to run the job immediately or later by selecting the corresponding radio button.
- Step 6** To create a job for inserting the remote destination, click **Submit**.

A message in the Status section lets you know that the job was submitted successfully.

**Step 7** Use the Job Scheduler option in the Bulk Administration main menu to schedule and/or activate this job.

---

#### Additional Topics

See the [“Related Topics” section on page 58-4](#)

## Deleting Remote Destination

#### Before You Begin

- You must have a data file in comma separated value (CSV) format that contains the unique details for the remote destination.
- Upload the data files by choosing the relevant target and function for the transaction by using the procedure that is mentioned in [“Uploading a File” section on page 2-3](#).



**Note** Do not use the insert or export transaction files that are created with bat.xlt for the delete transaction. Instead, you must create a custom file with details of the remote destination records that need to be deleted. Use only this file for the delete transaction. In this custom delete file, you do not need a header, and you can enter values for name, or description.

---

#### Procedure

---

**Step 1** Choose **Bulk Administration > Remote Destination>Remote Destination Delete**. The Delete Remote Destination Configuration window displays.

**Step 2** From the Delete Remote Destination where drop-down list box, choose one of the following options:

- Name
- Destination
- Remote Destination Profile
- Dual Mode Phone

**Step 3** From the custom file drop-down list box, choose the file that you uploaded for deleting remote destination.

**Step 4** Click **Find**.

**Step 5** The Job Information section displays along with the selected remote destination.

**Step 6** You can choose to run the job immediately or later by selecting the corresponding radio button.

**Step 7** To create a job for deleting the remote destination, click **Submit**.

A message in the Status section lets you know that the job was submitted successfully.

**Step 8** Use the Job Scheduler option in the Bulk Administration main menu to schedule and/or activate this job.



**Note** Be aware that when you delete a remote destination, the time-of-day access, time period, and time schedule records associated with the remote destination also get deleted.

---

**Additional Topics**

See the “[Related Topics](#)” section on page 58-4

# Exporting Remote Destination

To export remote destination by using BAT, use the following procedure:

**Procedure****Note**

If you are accessing help from the second Export Remote Destination Configuration window after selecting the remote destination for export, skip to [Step 8](#).

- Step 1** Choose **Bulk Administration > Remote Destination>Remote Destination Export**. The Export Remote Destination Configuration window displays.
- Step 2** From the first Find Remote Destination where drop-down list box, choose one of the following options:
- Name
  - Destination
  - Remote Destination Profile
  - Dual Mode Phone
- Step 3** From the second Find Remote Destination where drop-down list box, choose one of the following options:
- begins with
  - contains
  - ends with
  - is exactly
  - is empty
  - is not empty
- Step 4** Specify the appropriate search text, if applicable.

**Tip**

To find all files that are registered in the database, click **Find** without entering any search text.

- Step 5** To further define your query, you can
- a. Choose AND or OR from the drop-down box, and repeat Steps 2 through 4.
  - b. Add multiple filters by clicking the + button, and remove them by clicking the — button.
  - c. Remove all the filters at once by clicking the **Clear Filter** button.
- Step 6** Click **Find**.
- A list of discovered files displays by
- Name
  - Destination
  - Remote Destination Profile

- Dual Mode Phone

- Step 7** Click **Next**. The next Export Remote Destination Configuration window displays.
- Step 8** In the Export Remote Destination section, enter a file name in the File Name field.
- Step 9** From the File Format drop-down list box, choose Remote Destination Format.
- Step 10** You can choose to run the job immediately or later by selecting the corresponding radio button in the Job Information section.
- Step 11** To create a job for exporting the remote destination, click **Submit**.  
A message in the Status section lets you know that the job was submitted successfully.
- Step 12** Use the Job Scheduler option in the Bulk Administration main menu to schedule and/or activate this job.
- 

#### Additional Topics

See the [“Related Topics”](#) section on page 58-4

## Related Topics

- [Inserting Remote Destination, page 58-1](#)
- [Deleting Remote Destination, page 58-2](#)
- [Exporting Remote Destination, page 58-3](#)
- [Remote Destination Profile Templates, page 59-1](#)
- *Cisco Unified Mobility Administration Guide*