



# CHAPTER 3

## Types of Call Information Records

This chapter describes the two types of call information records that Cisco Unified Communications Manager generates.

Cisco Unified Communications Manager generates two different types of call information records: Call Detail Records (CDRs) and Call Management Records (CMRs), also called call diagnostic records. CDRs store information about the endpoints of the call and other call control/routing aspects. CMRs contain diagnostic information about the quality of the streamed audio of the call. More than one CMR can exist per CDR.

CMRs are supported by Cisco Unified IP Phones, Cisco 7960 series phones, and Media Gateway Control Protocol (MGCP) gateways. If one of these endpoints is involved in a call, it will generate a CMR record after the call terminates. Each endpoint in the call generates a separate CMR record. If the call involves endpoints that do not support call diagnostics, no record gets generated for that endpoint. A call from a Cisco 7960 phone to an H.323 gateway will generate one CMR record (from the Cisco 7960 phone).

CDRs relate to the CMRs via two globalCallID columns:

- `globalCallID_callManagerId`
- `globalCallId_callId`

When the Call Diagnostics service parameter is set to True, the system generates up to two CMRs for each call. Each type of call, such as conference calls, call transfers, forwarded calls, and calls through gateways, produce a set of records that get written to ASCII files at the end of the call. Only completed calls and failed calls generate CDRs and CMRs. Cisco Unified Communications Manager does not perform any post processing on CDRs or CMRs.

This chapter contains the following topics:

- [Global Call Identifier, page 3-2](#)
- [Number Translations, page 3-3](#)
- [Partitions and Numbers, page 3-3](#)
- [Timestamps, page 3-5](#)
- [Call Clearing Causes, page 3-5](#)
- [IP Addresses, page 3-5](#)
- [Related Topics, page 3-6](#)
- [Related Documentation, page 3-6](#)

# Global Call Identifier

The Cisco Unified Communications Manager allocates a global call identifier (GlobalCallID\_callId) each time that a Cisco Unified IP Phone is taken off hook or a call is received from a gateway. The GlobalCallID\_callId is allocated sequentially on a Cisco Unified Communications Manager server, independent of calls running on other call servers in the cluster. Cisco Unified Communications Manager writes the GlobalCallID\_callId value to a disk file for every 1,000th call. When Cisco Unified Communications Manager restarts for any reason, it assigns the next 1000th number to the next GlobalCallID\_callId.

For example, when a successful call gets made, the GlobalCallID\_callId value in the CDR specifies 1001. For the next call, the GlobalCallID\_callId value specifies 1002, and so on. When Cisco Unified Communications Manager restarts, the value for the next call in the CDR gets assigned 2001. The numbers continue sequentially from there until Cisco Unified Communications Manager restarts again. For the next restart, the GlobalCallID\_callId value specifies 3001.



**Note** The maximum value that gets assigned to the GlobalCallID\_callId is limited to 24 bits. When this limitation occurs, the GlobalCallID\_callId value gets reset to 1.

The GlobalCallID\_callIds in the CDR file may not be in sequential order in the CDR flat file. If a call with GlobalCallID\_callId = 1 lasts longer than the call with GlobalCallID\_callId = 2, then the CDR records for GlobalCallId\_callId = 2 are written before GlobalCallId\_callId = 1. GlobalCallID\_callIds may be completely missing from the CDR flat file. If the first CDR record has GlobalCallID\_callId = 1, and the second CDR has GlobalCallID\_callId = 3, that does not mean that the CDR for GlobalCallID\_callId = 2 is missing. GlobalCallID\_callId = 2 did not meet the criteria to generate a CDR. The failure to generate a CDR can occur because while the first and third call were successful, the second call was never completed; or, GlobalCallID\_callId = 2 could be part of a conference call. Each call leg in a conference call is assigned a GlobalCallID\_callId that is overwritten in the conference GlobalCallID\_callId. The original GlobalCallID\_callId may not appear in the CDR flat file.

If the GlobalCallID\_callId field is missing from the CDR record, CAR generates an error for that particular record. Additional information on CDR errors is available in the “Configuring CDR Error Reports” chapter of the *CDR Analysis and Reporting Administration Guide*.



**Note** For Cisco Unified Communications Manager Release 5.x and later releases, the value in the GlobalCallId CDR field survives over Cisco Unified Communications Manager restarts. In Release 4.x and earlier releases, even though the GlobalCallId field is time-based, the field gets reused under conditions of heavy traffic. Because of this behavior, problems can occur with customer billing applications and the ability of CAR to correlate CMRs with CDRs and to correlate conference call CDRs. For Release 5.x and later releases, GlobalCallId redesign ensures the field retains a unique value, at least for a certain number of days. Now, the last used globalCallId\_callId value gets written to disk periodically (for every x number of calls). The value gets retrieved after a Cisco Unified Communications Manager restart, and the new globalCallId\_callId value begins with this number plus x.

# Number Translations

The Cisco Unified Communications Manager can perform translations on the digits that a user dials. The translated number, not the actual dialed digits, appears in the CDR.

For example, many companies translate “911” calls to “9-911,” so the caller does not need to dial an outside line in an emergency. In these cases, the CDR contains “9911” even though the user dials “911.”


**Note**


---

Gateways can perform further modifications to the number before the digits are actually output through the gateway. The CDR does not reflect these modifications.

---

# Partitions and Numbers

Within a CDR, a combination of extension number and partitions identifies each phone that is referenced, if partitions are defined. When partitions exist, fully identifying a phone requires both values because extension numbers may not be unique.

The Partition field stays empty when a call ingresses through a gateway. When a call egresses through a gateway, the Partition field shows the partition to which the gateway belongs.

If the dial plan allows callers to use the # key for speed dialing, the # key goes into the database when it is used. For example, the Called Party Number field may contain a value such as “902087569174#.”

The Party Number fields may include SIP URIs instead of the traditional calling/called party number.

CDRs use the Partition/Extension Numbers that are shown in [Table 3-1](#):

**Table 3-1      Partition/Extension Numbers in CDRs**

Phone Number	Description
callingPartyNumber	This party placed the call. For transferred calls, the transferred party becomes the calling party.
originalCalledPartyNumber	This number designates the originally called party, after any digit translations have occurred.
finalCalledPartyNumber	For forwarded calls, this number designates the last party to receive the call. For non-forwarded calls, this field shows the original called party.
lastRedirectDn	For forwarded calls, this field designates the last party to redirect the call. For non-forwarded calls, this field shows the last party to redirect (such as transfer and conference) the call.
callingPartyNumberPartition	This number identifies the partition name that is associated with the CallingPartyNumber field. This field uniquely identifies this number because the Cisco Unified Communications Manager supports multiple Cisco Unified IP Phones with the same extension number in different partitions. For calls that ingress through a gateway, this field remains blank.

**Table 3-1 Partition/Extension Numbers in CDRs (continued)**

Phone Number	Description
originalCalledPartyNumberPartition	<p>This number identifies the partition name that is associated with the OriginalCalledPartyNumber field. This field uniquely identifies this number because the Cisco Unified Communications Manager supports multiple Cisco Unified IP Phones with the same extension number in different partitions.</p> <p>For calls that egress through a gateway, this field specifies the partition name that is associated with the route pattern that pointed to the gateway.</p>
finalCalledPartyNumberPartition	<p>This number identifies the partition name that is associated with the FinalCalledPartyNumber field. This field uniquely identifies this number because the Cisco Unified Communications Manager supports multiple Cisco Unified IP Phones with the same extension number in different partitions.</p> <p>For calls that egress through a gateway, this field specifies the partition name that is associated with the route pattern that pointed to the gateway.</p>
lastRedirectDnPartition	<p>This number identifies the partition name that is associated with the LastRedirectDn field. This field uniquely identifies this number because the Cisco Unified Communications Manager supports multiple Cisco Unified IP Phones with the same extension number in different partitions.</p> <p>For calls that egress through a gateway, this field specifies the partition name that is associated with the route pattern that pointed to the gateway.</p>
outpulsedCallingPartyNumber	The calling party number outpulsed from the device.
outpulsedCalledPartyNumber	The called party number outpulsed from the device.

## Timestamps

Timestamps within a CDR appear in Universal Coordinated Time (UTC). This value remains independent of daylight saving time changes.

Unsigned 32-bit integers represent all time values. This unsigned integer value displays from the database as a single integer. The field specifies a time\_t value that is obtained from the operating system.

[Table 3-2](#) displays the UTC timestamps that get included in the CDR.

**Table 3-2 UTC Timestamps in CDRs**

Field	Format	Description
dateTimeOrigination	UTC	<p>For outgoing calls, this field designates the time that the device goes off hook.</p> <p>For incoming calls, this field designates the time that the SETUP message is received.</p> <p>This field always gets populated.</p>
dateTimeConnect	UTC	<p>This field designates the time that the devices connect.</p> <p>This field shows a zero if the call never connects.</p>
dateTimeDisconnect	UTC	<p>This field designates the time that the call disconnects. This field gets set even if the call never connects. The time gets stored as UTC.</p> <p>This field always gets populated.</p>

## Call Clearing Causes

The CDR includes two call clearing cause codes: OrigCause and DestCause. When the originating party releases the call, the OrigCause gets populated. When the terminating party releases the call, or the call is rejected, the DestCause gets populated. When unpopulated, the cause code value shows zero.

[Table 6-2 on page 6-3](#) lists the call clearing cause code values per ITU specification Q.850. For On Net call legs, the Cisco Unified Communications Manager determines the cause code value. For Off Net call legs, the far-end switch determines the cause code value.

## IP Addresses

The system stores IP addresses as unsigned integers. The CDR file displays IP addresses as signed integers. To convert the signed decimal value to an IP address, first convert the value to a hex number, taking into consideration that it is really an unsigned number. The 32-bit hex value represents four bytes in reverse order (Intel standard). To determine the IP address, reverse the order of the bytes and convert each byte to a decimal number. The resulting four bytes represent the four-byte fields of the IP address in dotted decimal notation.



**Note**

The file displays a negative number when the low byte of the IP address has the most significant bit set.

For example, the IP address 192.168.18.188 displays as -1139627840. To convert this IP address, perform the following procedure:

- 
- Step 1** Convert the database display (-1139627840) to a hex value.  
The hex value equals 0xBC12A8C0.
- Step 2** Reverse the order of the hex bytes, as shown below:  
CO A8 12 BC
- Step 3** Convert the four bytes from hex to decimal, as shown below:  
192 168 18 188
- Step 4** The IP address displays in the dotted decimal format:  
192.168.18.188
- 

When working with CDRs, you may want to read other tables in the CAR database to obtain information about the type of device in each CDR because the correlation between devices in the device table and the IP address that is listed in the CDR is not straightforward.

## Related Topics

- [Chapter 1, “Understanding Cisco Call Detail Records”](#)
- [Chapter 2, “How CDRs Are Processed”](#)
- [Chapter 7, “Understanding Call Management Records”](#)

## Related Documentation

The following documents contain additional information related to CDRs:

- *CDR Analysis and Reporting Administration Guide*
- *Cisco Unified Serviceability Administration Guide*