



INDEX

A

- absolute range [11-20](#)
- alert central, accessing [10-1](#)
- alert notification
 - configuring parameters for counter (table) [6-6](#)
 - e-mail for counter [6-5](#)
 - message [6-5](#)
 - schedule [6-5](#)
 - thresholds [6-5](#)
- alert notification, configuring [10-6](#)
- alerts
 - accessing alert central [10-1](#)
 - action configuration (table) [9-8](#)
 - configuring actions [10-6](#)
 - configuring e-mail for [10-6](#)
 - configuring with Default alert action [10-7](#)
 - customization (table) [9-6](#)
 - emailing notification [3-5](#)
 - logs, described [9-9](#)
 - notification for a counter [3-5](#)
 - preconfigured [9-2](#)
 - scheduling notification [3-5](#)
 - setting properties [10-3](#)
 - suspending [10-5](#)
 - thresholds [3-5](#)
- audit logs [11-19](#)
 - browse [11-19](#)
 - download [11-19](#)
 - schedule download [11-19](#)

B

- browse audit logs [11-19](#)

C

- call control discovery
 - reports
 - learned patterns [5-25](#)
- category
 - adding [6-2](#)
 - deleting [6-3](#)
 - renaming [6-2](#)
- category tabs
 - described [3-3](#)
 - sample rates [3-3](#)
- Cisco Analog Access
 - perfmon object and counters [B-2](#)
- Cisco Annunciator Device
 - perfmon object and counters [B-3](#)
- Cisco CallManager
 - perfmon object and counters [B-4](#)
- Cisco CallManager System Performance
 - perfmon object and counters [B-12](#)
- Cisco CTIManager
 - perfmon object and counters [B-14](#)
- Cisco Dual-Mode Mobility perfmon object and counters [B-15](#)
- Cisco Extension Mobility
 - perfmon object and counters [B-16](#)
- Cisco Gatekeeper
 - perfmon object and counters [B-17](#)
- Cisco H.323

- perfmon object and counters [B-17](#)
- Cisco Hunt Lists
 - perfmon object and counters [B-18](#)
- Cisco HW Conference Bridge Device
 - perfmon object and counters [B-19](#)
- Cisco IP Manager Assistant
 - perfmon object and counters [B-20](#)
- Cisco Lines
 - perfmon object and counters [B-20](#)
- Cisco Locations
 - perfmon object and counters [B-21](#)
- Cisco Media Streaming Application
 - perfmon object and counters [B-22](#)
- Cisco Messaging Interface
 - perfmon object and counters [B-25](#)
- Cisco MGCP BRI Device
 - perfmon object and counters [B-25](#)
- Cisco MGCP FXO Device
 - perfmon object and counters [B-26](#)
- Cisco MGCP FXS Device
 - perfmon object and counters [B-26](#)
- Cisco MGCP Gateways
 - perfmon object and counters [B-27](#)
 - Cisco MGCP Gateways [B-28](#)
- Cisco MGCP PRI Device
 - perfmon object and counters [B-28](#)
- Cisco MGCP T1CAS Device
 - perfmon object and counters [B-28](#)
- Cisco MOH Device
 - perfmon object and counters [B-29, B-30](#)
- Cisco MTP Device
 - perfmon object and counters [B-31](#)
- Cisco Phones
 - perfmon object and counters [B-31](#)
- Cisco Presence Feature
 - perfmon object and counters [B-32](#)
- Cisco QSIG Feature
 - perfmon object and counters [B-32](#)
- Cisco Signaling Performance
 - perfmon object and counters [B-33](#)
- Cisco SIP
 - perfmon object and counters [B-32, B-33](#)
- Cisco SIP Normalization
 - perfmon object and counters [B-34](#)
- Cisco SIP Stack
 - perfmon object and counters [B-41](#)
- Cisco SW Conf Bridge Device
 - perfmon object and counters [B-51](#)
- Cisco TFTP Server
 - perfmon object and counters [B-51](#)
- Cisco Tomcat Connector
 - perfmon object and counters [A-2](#)
- Cisco Transcode Device
 - perfmon object and counters [B-55](#)
- Cisco Unity Connection
 - using Port Monitor [8-1](#)
- Cisco Video Conference Bridge
 - perfmon object and counters [B-55](#)
- Cisco WebDialer
 - perfmon object and counters [B-56](#)
- Cisco WSM Connector
 - perfmon object and counters [B-57](#)
- configuration profile
 - adding [2-7](#)
 - deleting [2-8](#)
 - restoring [2-7](#)
 - using default [2-7](#)
- conventions [1-xix](#)
- counters
 - adding [6-3](#)
 - alert notification [3-5](#)
 - alert notification parameters (table) [6-6](#)
 - configuring alert notification for [6-5](#)
 - data sample, configuring [6-9](#)
 - data sample parameters (table) [6-9](#)
 - properties [3-4](#)
 - viewing data [6-10](#)
 - zooming [3-3, 3-4](#)

CTI

- Cisco CTIManager
 - perfmon object and counters [B-14](#)
- finding CTI devices [5-17](#)
- monitoring CTI applications [5-21](#)
- monitoring CTI devices [5-22](#)
- monitoring CTI lines [5-23](#)
- viewing CTIManager information [5-21](#)
- CUC Data Store, perfmon object and counters [C-2](#)
- CUC Data Store: Databases, perfmon object and counters [C-2](#)
- CUC Digital Notifications, perfmon object and counters [C-3](#)
- CUC Directory Services, perfmon object and counters [C-3](#)
- CUC Message Store, perfmon object and counters [C-3](#)
- CUC Message Store: Databases, perfmon object and counters [C-5](#)
- CUC Personal Call Transfer Rules, perfmon object and counters [C-5](#)
- CUC Phone System, perfmon object and counters [C-5](#)
- CUC Phone System: Ports, perfmon object and counters [C-8](#)
- CUC Replication, perfmon object and counters [C-8](#)
- CUC Replicator: Remote Connection Locations, perfmon object and counters [C-8](#)
- CUC Sessions: Calendar Access, perfmon object and counters [C-9](#)
- CUC Sessions: E-mail Access, perfmon object and counters [C-9](#)
- CUC Sessions: IMAP Server, perfmon object and counters [C-10](#)
- CUC Sessions: RSS, perfmon object and counters [C-11](#)
- CUC Sessions: SMTP Server, perfmon object and counters [C-11](#)
- CUC Sessions: SpeechView Processor, perfmon object and counters [C-12](#)
- CUC Sessions: TRaP, perfmon object and counters [C-12](#)
- CUC Sessions: TTS, perfmon object and counters [C-13](#)
- CUC Sessions: Unified Client, perfmon object and counters [C-13](#)
- CUC Sessions: Voice, perfmon object and counters [C-13](#)
- CUC Sessions: VUI, perfmon object and counters [C-15](#)

- CUC Sessions: Web, perfmon object and counters [C-15](#)
- CUC Sessions: Web E-mail Access, perfmon object and counters [C-16](#)

D

- Database Change Notification Client
 - perfmon object and counters [A-5](#)
- Database Change Notification Server
 - perfmon object and counters [A-6](#)
- Database Change Notification Subscription
 - perfmon object and counters [A-7](#)
- Database Local DSN
 - perfmon object and counters [A-7](#)
- data sample
 - configuring parameters (table) [6-9](#)
- DB User Host Information Counters
 - perfmon object and counters [A-7](#)
- document
 - audience [1-xvi](#)
 - conventions [1-xix](#)
 - organization [1-xvi](#)
 - purpose [1-xv](#)
- documentation
 - related [1-xviii](#)
- download audit logs [11-19](#)

E

- e-mail configuration
 - alerts [10-6](#)
- Enterprise Replication DBSpace Monitors
 - perfmon object and counters [A-7](#)
- Enterprise Replication Perfmon Counters
 - perfmon object and counters [A-8](#)

I

- IME Configuration Manager

- perfmon object and counters [D-1](#)
- IME Server
 - perfmon object and counters [D-2](#)
- IME Server System Performance
 - perfmon object and counters [D-3](#)
- installation logs
 - collecting [11-7](#)
- IP
 - perfmon object and counters [A-8](#)
- IP6
 - perfmon object and counters [A-9](#)

L

- learned pattern reports [5-25](#)
- Log Partition Monitoring
 - configuring [13-1](#)
- logs
 - alerts [9-9](#)

M

- Memory
 - perfmon object and counters [A-10](#)
- monitoring
 - CTI applications [5-21](#)
 - CTI devices [5-17, 5-22](#)
 - CTI lines [5-23](#)
 - gateways [5-17](#)
 - H.323 devices [5-17](#)
 - hunt list [5-17](#)
 - media resources [5-17](#)
 - phones [5-17](#)
 - SIP trunk [5-17](#)
 - voice-mail devices [5-17](#)

N

- Network Interface
 - perfmon object and counters [A-12](#)
- Number of Replicates
 - perfmon object and counters [A-14](#)

O

- object and counters
 - Database Change Notification Client [A-5](#)
- organization [1-xvi](#)

P

- Partition
 - perfmon object and counters [A-14](#)
- perfmon
 - counters
 - adding [6-3](#)
 - category tabs, described [3-3](#)
 - properties [3-4](#)
 - sample rates [3-3](#)
 - object and counters
 - Cisco Analog Access [B-2](#)
 - Cisco Annunciator Device [B-3](#)
 - Cisco CallManager [B-4](#)
 - Cisco CallManager System Performance [B-12](#)
 - Cisco Call Restriction [B-3](#)
 - Cisco CTIManager [B-14](#)
 - Cisco Dual-Mode Mobility [B-15](#)
 - Cisco Extension Mobility [B-16](#)
 - Cisco Gatekeeper [B-17](#)
 - Cisco H.323 [B-17](#)
 - Cisco Hunt Lists [B-18](#)
 - Cisco HW Conference Bridge Device [B-19](#)
 - Cisco IP Manager Assistant [B-20](#)
 - Cisco Lines [B-20](#)
 - Cisco Locations [B-21](#)

- Cisco Media Streaming Application [B-22](#)
- Cisco Messaging Interface [B-25](#)
- Cisco MGCP FXO Device [B-26](#)
- Cisco MGCP FXS Device [B-26](#)
- Cisco MGCP Gateways [B-27](#)
- Cisco MGCP PRI Device [B-28](#)
- Cisco MGCP T1CAS Device [B-28](#)
- Cisco MobilityManager [B-29](#)
- Cisco MOH Device [B-30](#)
- Cisco MTP Device [B-31](#)
- Cisco Phones [B-31](#)
- Cisco Presence Feature [B-32](#)
- Cisco QSIG Feature [B-32](#)
- Cisco Signaling Performance [B-33](#)
- Cisco SIP [B-32](#), [B-33](#)
- Cisco SIP Stack [B-41](#)
- Cisco SIP Station [B-49](#)
- Cisco SW Conf Bridge Device [B-51](#)
- Cisco TFTP Server [B-51](#)
- Cisco Tomcat Connector [A-2](#)
- Cisco Transcode Device [B-55](#)
- Cisco Video Conference Bridge [B-55](#)
- Cisco WebDialer [B-56](#)
- Cisco WSM Connector [B-57](#)
- CUC Data Store [C-2](#)
- CUC Data Store: Databases [C-2](#)
- CUC Digital Notifications [C-3](#)
- CUC Directory Services [C-3](#)
- CUC Message Store [C-3](#)
- CUC Message Store: Databases [C-5](#)
- CUC Personal Call Transfer Rules [C-5](#)
- CUC Phone System [C-5](#)
- CUC Phone System: Ports [C-8](#)
- CUC Replication [C-8](#)
- CUC Replicator: Remote Connection Locations [C-8](#)
- CUC Sessions: E-mail Access [C-9](#)
- CUC Sessions: IMAP Server [C-10](#)
- CUC Sessions: RSS [C-11](#)
- CUC Sessions: SMTP Server [C-11](#)
- CUC Sessions: TRaP [C-12](#)
- CUC Sessions: TTS [C-13](#)
- CUC Sessions: Unified Client [C-13](#)
- CUC Sessions: Voice [C-13](#)
- CUC Sessions: VUI [C-15](#)
- CUC Sessions: Web [C-15](#)
- CUC Sessions: Web E-mail Access [C-16](#)
- Database Change Notification Server [A-6](#)
- Database Change Notification Subscription [A-7](#)
- Database Local DSN [A-7](#)
- DB User Host Information [A-7](#)
- Enterprise Replication [A-8](#)
- Enterprise Replication DBSpace Monitors [A-7](#)
- IME Configuration Manager [D-1](#)
- IME Server [D-2](#)
- IME Server System Performance [D-3](#)
- IP [A-8](#)
- IP6 [A-9](#)
- Memory [A-10](#)
- Network Interface [A-12](#)
- Partition [A-14](#)
- Process [A-15](#)
- Processor [A-17](#)
- System [A-17](#)
- TCP [A-18](#)
- Thread [A-20](#)
- Tomcat JVM [A-3](#)
- Tomcat Web Application [A-4](#)
- Perfmon data logging [7-4](#)
- perfmon data logging
 - troubleshooting [3-5](#)
 - understanding [3-5](#)
- perfmon logs
 - understanding [3-5](#)
- performance counter
 - adding a counter instance [6-5](#)
 - removing [6-4](#)
- performance counters

- displaying in chart format [6-3](#)
- displaying in table format [6-3](#)
- performance monitoring
 - category tabs,described [3-3](#)
 - configuring alert notification for counters [6-5](#)
 - counters
 - adding [6-3](#)
 - properties [3-4](#)
 - Number of Replicates [A-14](#)
 - object and counters
 - Cisco Analog Access [B-2](#)
 - Cisco Annunciator Device [B-3](#)
 - Cisco CallManager [B-4](#)
 - Cisco CallManager System Performance [B-12](#)
 - Cisco CTIManager [B-14](#)
 - Cisco Dual-Mode Mobility [B-15](#)
 - Cisco Extension Mobility [B-16](#)
 - Cisco Gatekeeper [B-17](#)
 - Cisco H.323 [B-17](#)
 - Cisco Hunt Lists [B-18](#)
 - Cisco HW Conference Bridge Device [B-19](#)
 - Cisco IP Manager Assistant [B-20](#)
 - Cisco Lines [B-20](#)
 - Cisco Locations [B-21](#)
 - Cisco Media Streaming Application [B-22](#)
 - Cisco Messaging Interface [B-25](#)
 - Cisco MGCP BRI Device [B-25](#)
 - Cisco MGCP FXO Device [B-26](#)
 - Cisco MGCP FXS Device [B-26](#)
 - Cisco MGCP Gateways [B-27](#)
 - Cisco MGCP PRI Device [B-28](#)
 - Cisco MGCP T1CAS Device [B-28](#)
 - Cisco Mobility Manager [B-29](#)
 - Cisco MOH Device [B-30](#)
 - Cisco MTP Device [B-31](#)
 - Cisco Phones [B-31](#)
 - Cisco Presence Feature [B-32](#)
 - Cisco QSIG Feature [B-32](#)
 - Cisco Signaling Performance [B-33](#)
 - Cisco SIP [B-32](#), [B-33](#)
 - Cisco SIP Normalization [B-34](#)
 - Cisco SIP Stack [B-41](#)
 - Cisco SIP Station [B-49](#)
 - Cisco SW Conf Bridge Device [B-51](#)
 - Cisco TFTP Server [B-51](#)
 - Cisco Tomcat Connector [A-2](#)
 - Cisco Transcode Device [B-55](#)
 - Cisco Video Conference Bridge [B-55](#)
 - Cisco WebDialer [B-56](#)
 - Cisco WSM Connector [B-57](#)
- CUC Data Store [C-2](#)
- CUC Data Store: Databases [C-2](#)
- CUC Digital Notifications [C-3](#)
- CUC Directory Services [C-3](#)
- CUC Message Store [C-3](#)
- CUC Message Store: Databases [C-5](#)
- CUC Personal Call Transfer Rules [C-5](#)
- CUC Phone System [C-5](#)
- CUC Phone System: Ports [C-8](#)
- CUC Replication [C-8](#)
- CUC Replicator: Remote Connection Locations [C-8](#)
- CUC Sessions: Calendar Access [C-9](#)
- CUC Sessions: E-mail Access [C-9](#)
- CUC Sessions: IMAP Server [C-10](#)
- CUC Sessions: RSS [C-11](#)
- CUC Sessions: SMTP Server [C-11](#)
- CUC Sessions: SpeechView Processor [C-12](#)
- CUC Sessions: TRaP [C-12](#)
- CUC Sessions: TTS [C-13](#)
- CUC Sessions: Unified Client [C-13](#)
- CUC Sessions: Voice [C-13](#)
- CUC Sessions: VUI [C-15](#)
- CUC Sessions: Web [C-15](#)
- CUC Sessions: Web E-mail Access [C-16](#)
- Database Change Notification Server [A-6](#)
- Database Change Notification Subscription [A-7](#)
- Database Local DSN [A-7](#)

- DB User Host Information [A-7](#)
- Enterprise Replication [A-8](#)
- Enterprise Replication DBSpace Monitors [A-7](#)
- IME Configuration Manager [D-1](#)
- IME Server [D-2](#)
- IME Server System Performance [D-3](#)
- IP [A-8](#)
- IP6 [A-9](#)
- Memory [A-10](#)
- Network Interface [A-12](#)
- Number of Replicates [A-14](#)
- Partition [A-14](#)
- Process [A-15](#)
- Processor [A-17](#)
- System [A-17](#)
- Thread [A-20](#)
- Tomcat JVM [A-3](#)
- Tomcat Web Application [A-4](#)
- sample rates [3-3](#)
- viewing counter data [6-10](#)
- performance queries [6-3](#)
- plug-ins
 - accessing [13-1](#)
 - downloading [13-1](#)
- polling intervals
 - sample rate [3-3](#)
- polling rate [5-20](#)
- Port Monitor
 - using [8-1](#)
- Process
 - perfmon object and counters [A-15](#)
- Processor
 - perfmon object and counters [A-17](#)
- alerts
 - accessing alert central [10-1](#)
 - action configuration (table) [9-8](#)
 - configuring alert actions [10-6](#)
 - configuring e-mail for [10-6](#)
 - configuring with Default alert action [10-7](#)
 - customization (table) [9-6](#)
 - logs, described [9-9](#)
 - notification for a counter [3-5](#)
 - preconfigured [9-2](#)
 - setting properties [10-3](#)
 - suspending [10-5](#)
- category
 - adding [6-2](#)
 - deleting [6-3](#)
 - renaming [6-2](#)
- category tabs,described [3-3](#)
- collecting a crash dump [11-16](#)
- collecting traces [11-3](#)
- collecting traces using the query wizard [11-8](#)
- collecting traces using the schedule collection option [11-12](#)
- configuration profile
 - adding [2-7](#)
 - deleting [2-8](#)
 - restoring [2-7](#)
 - using default [2-7](#)
- counters
 - alert notification [3-5](#)
 - data sample [6-9](#)
 - displaying property description [6-8](#)
 - viewing data [6-10](#)
 - zooming [3-3, 3-4](#)
- data samples [6-9](#)
- deleting scheduled collections [11-15](#)
- finding
 - CTI applications [5-21](#)
 - CTI devices [5-22](#)
 - CTI lines [5-23](#)

R
Real-Time Monitoring Tool

- alert notification
 - configuring for a counter [6-5](#)

- devices [5-17](#)
- highlighting a chart [3-4](#)
- logging and report generation
 - call log [5-7](#)
 - device log [5-16](#)
 - server log [4-4](#)
 - service log [5-13](#)
- polling interval [3-3](#)
- polling rate, configuring [5-20](#)
- related topics for trace collection [11-33](#)
- sample rate [3-3](#)
- session trace [5-8](#)
- SysLog Viewer [12-1](#)
- updating trace configuration settings [11-32](#)
- using the real time trace option [11-28](#)
- using the real time trace option, monitor user event [11-29](#)
- using the real time trace option, view real time data [11-28](#)
- viewing
 - CTIManager information [5-21](#)
 - device properties [5-19](#)
 - phone information [5-19](#)
 - viewing trace collection status [11-15](#)
 - viewing trace files using the local browse option [11-22](#)
 - viewing trace files using the remote browse option [11-23](#)
 - zooming a counter [3-3](#)
- related documentation [1-xviii](#)
- relative range [11-21](#)
- reports
 - learned patterns [5-25](#)

S

- sample rate [3-3](#)
- schedule download of audit logs [11-19](#)
- server authentication certificates
 - importing using the trace collection option [11-2](#)

- SysLog Viewer [12-1](#)
- System
 - perfmon object and counters [A-17](#)

T

- TCP [A-18](#)
 - perfmon object and counters [A-18](#)
- Thread
 - perfmon object and counters [A-20](#)
- Tomcat JVM
 - perfmon object and counters [A-3](#)
- Tomcat Web Application
 - perfmon object and counters [A-4](#)
- Trace
 - collection
 - collecting crash dump option [11-16](#)
 - collecting files option [11-3](#)
 - configuration, described [11-1](#)
 - deleting scheduled collections [11-15](#)
 - list of topics [11-1](#)
 - related topics [11-33](#)
 - schedule collection option [11-12](#)
 - using the local browse option [11-22](#)
 - using the query wizard option [11-8](#)
 - using the real time trace option [11-28](#)
 - using the real time trace option, monitor user event [11-29](#)
 - using the real time trace option, view real time data [11-28](#)
 - using the remote browse option [11-23](#)
 - viewing status [11-15](#)
 - trace and log central
 - collecting installation and upgrade logs [11-7](#)
 - troubleshooting
 - Perfmon data logging
 - configuring [7-4](#)
 - parameters [7-5](#)
 - viewing log files [7-3](#)

U

upgrade logs

collecting [11-7](#)

Z

zooming a counter [3-3, 3-4](#)

