



A

- Answer button [3-3](#)
- answering a call [3-3](#)
- Assistant Console
 - accessing without assisting managers [2-5](#)
 - call control buttons [2-7](#)
 - customizing layout [2-17](#)
 - definition of [2-1](#)
 - handling calls from [3-1](#)
 - identifying parts of [2-6](#)
 - keyboard shortcuts for [2-20](#)
 - launching [2-3](#)
 - logging in to [2-3](#)
 - logging out of [2-4](#)
 - menu for [2-6](#)
 - operating with mouse and keyboard [2-18](#)
 - using intercom from [2-19](#)
- assistants
 - choosing (managers) [6-3](#)
 - customizing phone ringer for [4-2](#)
 - default [7-3](#)
 - identifying (managers) [6-3](#)
 - phone lines for [2-10](#)
- assistant selection

- understanding [6-3](#)
- Assistant Watch
 - managers [6-4](#)
 - using Inrcpt softkey with [6-9](#)

B

- blind transfer [3-5](#)
 - performing [3-5](#)
- buttons
 - identifying [2-7](#)

C

- call control buttons [2-7](#)
 - definition of [2-7](#)
- call control status
 - monitoring [2-16](#)
- call filtering
 - description of [6-12](#)
 - lists for [7-5](#)
 - modes [7-5](#)
 - with Divert All [7-7](#)
- call handling
 - from the Assistant Console [3-1](#)

- from the assistant phone [4-1](#)
 - from the manager phone [5-3, 6-8](#)
 - with call control buttons [2-7](#)
 - call hold
 - putting a call on hold [3-4](#)
 - removing a call from hold [3-4](#)
 - calls
 - how displayed [2-10](#)
 - Cisco Unified CallManager Assistant,
 - definition of [2-1](#)
 - Cisco Unified IP Phone
 - assistants [4-1](#)
 - proxy-line (managers) [6-1](#)
 - shared-line (managers) [5-1](#)
 - softkeys on (assistants) [4-1](#)
 - softkeys on (managers) [5-3, 6-8](#)
 - status window on (managers) [6-4](#)
 - conference calls, placing [3-6](#)
 - connected status
 - changing [2-5](#)
 - monitoring [2-16](#)
 - Console
 - dialing from [3-2](#)
 - Consult Transfer button [3-5](#)
-
- D**
- default assistant
 - assigning [7-3](#)
 - dialing a number [3-2](#)
 - directory
 - using [2-15](#)
 - Directory panel [2-15](#)
 - distinctive ringing [4-2](#)
 - DivAll softkey
 - manager target for [7-4](#)
 - using [6-10](#)
 - Divert All
 - with call filtering [7-7](#)
 - diverting a call
 - assistants [3-7, 4-1](#)
 - managers [5-3, 6-9](#)
 - Divert target, configuring
 - assistants [3-7](#)
 - managers [7-4](#)
 - DND soft key [5-5, 6-15](#)
 - documentation
 - for the Cisco Unified IP Phone [x](#)
 - organization of [ix](#)
 - Do Not Disturb feature [5-5, 6-15](#)
-
- E**
- ending a call [3-3](#)
 - Exclusive filter
 - definition of [6-12](#)
 - Exclusive filter lists
 - creating [7-5](#)

F

filtering

- description of [6-12](#)

- lists for [7-5](#)

- forwarding all calls [6-10](#)

H

- hanging up a call [3-3](#)

- Hang Up button [3-3](#)

- Hold button [3-4](#)

- holding a call [3-4](#)

I

icons on phone

- Divert All (managers) [6-10](#)

- Do Not Disturb (managers) [5-5, 6-15](#)

- filtering (managers) [6-14](#)

- of feature settings (managers) [6-5](#)

IMM DIV button

- using [3-7](#)

ImmDiv softkey

- assistants [4-1](#)

- managers [5-3, 6-9](#)

- manager target for [7-4](#)

Immediate Divert button

- configuring [3-7](#)

- Immediate Divert button (assistants)

- using [3-7](#)

Inclusive filter

- definition of [6-12](#)

Inclusive filter lists

- creating [7-5](#)

- intercepting a call [6-9](#)

intercom

- using from the Assistant Console [2-19](#)

- using on the phone (assistants) [4-3](#)

- using on the phone (managers) [5-4, 6-14](#)

- Intrcpt soft key, managers [6-9](#)

K

- keyboard, operating Console with [2-18](#)

- keyboard shortcuts [2-20](#)

L

- log in, assistants [2-3](#)

- log out, assistants [2-4](#)

M

- Manager Configuration window

- using [7-1](#)

- Manager lines

- in My Calls panel [2-10](#)

- in My Managers panel [2-11](#)
- manager proxy lines [2-10](#)
- managers
 - configuring features for [7-1](#)
 - feature status for [2-11](#)
 - monitoring [2-11](#)
 - online status of [2-11](#)
- menu bar
 - on Assistant Console [2-6](#)
- mouse
 - operating Assistant Console with [2-18](#)
- muting phone [5-5, 6-15](#)
- My Calls panel [2-10](#)
- My Managers panel [2-11](#)

O

- Offline button [2-5](#)
- offline status
 - monitoring [2-16](#)
- online help, using [x](#)

P

- placing a call [3-2](#)
- pop-to-top feature [2-16](#)
- proxy-line
 - status window on a manager phone [1-4](#)
 - using a manager phone [6-1](#)

- using Cisco Unified CallManager Assistant
 - in proxy-line mode [1-3](#)

R

- Resume button [3-4](#)

S

- server
 - connection to [2-16](#)
 - settings [2-17](#)
- settings
 - administrative [2-17](#)
- shared-line
 - status window on a manager phone [1-4](#)
 - using a manager phone [5-1](#)
 - using Cisco Unified CallManager Assistant
 - in shared-line mode [1-2](#)
- softkeys
 - assistants [4-1](#)
 - managers [5-3, 6-8](#)
- speed dials [2-14](#)
- status bar
 - using [2-16](#)
- status window
 - managers [6-4](#)

T

- Transfer button [3-5](#)
- transferring a call [3-5](#)
- Transfer VM button [3-9](#)
- TRA VM button [3-9](#)
- TrnsfVM softkey
 - assistants [4-1](#)
 - managers [5-3, 6-11](#)

U

- unhold [3-4](#)

V

- voice mail
 - sending a call to (assistants) [3-9, 4-1](#)
 - sending a call to (managers) [5-3, 6-11](#)

W

- wildcards
 - in filter lists [7-5](#)

