



## INDEX

---

### A

#### AAR

*See* automated alternate routing (AAR)

#### abbreviated dial

configuration settings (table) [67-28](#)

#### accessibility

accessing buttons and icons [1-21](#)

#### access list [49-2](#)

#### adding records

Cisco Unified Communications Manager Administration [1-17](#)

#### admission control

implementing with locations [15-1](#)

#### analog access gateways and ports

adding [66-85](#)

#### announcements [56-1](#)

#### annunciator

configuration overview [50-1](#)

configuration settings (table) [50-1](#)

related topics [50-4](#)

synchronizing configuration [50-4](#)

#### application dial rules

configuration overview [27-1](#)

configuration settings (table) [27-1](#)

related topics [27-3](#)

reprioritizing [27-3](#)

#### application server

configuration [23-1](#)

configuration settings (table) [23-1](#)

related topics [23-3](#)

#### application user

adding an administrator user to Cisco Unity or Cisco Unity Connection [87-6](#)

associating devices to an application user [87-10](#)

CAPF profile configuration [92-1](#)

changing password [87-8](#)

configuration [87-1](#)

configuration settings (table) [87-1](#)

credential settings (table) [87-9](#)

managing credential information [87-8](#)

related topics [87-11](#)

#### automated alternate routing (AAR)

##### groups

configuration settings (table) [26-1](#)

overview [26-1](#)

related topics [26-3](#)

#### autoregistration

configuration settings (table) [24-1](#)

configuring [24-1](#)

disabling [24-5](#)

enabling [24-3](#)

related topics [24-6](#)

reusing autoregistration numbers [24-5](#)

---

### B

#### BAT

application overview [93-1](#)

#### BLF/SpeedDial

configuration settings [67-29](#)

#### BRI

gateway configuration [66-60](#)

ports, adding [66-82](#)

#### browsers [1-3](#)

#### browsing

Cisco Unified Communications Manager [1-3](#)

security, hypertext transfer protocol [1-5](#)  
 buttons in GUI  
 Cisco Unified Communications Manager  
 Administration [1-18](#)

## C

call display restrictions

configuring in device profile [72-1](#)  
 configuring in translation pattern [42-6](#)  
 phone configuration [67-14](#)

called party transformation patterns

configuration settings (table) [48-1](#)  
 related topics [48-4](#)

calling party transformation patterns

configuration settings (table) [47-1](#)  
 related topics [47-4](#)

calling search spaces

configuration overview [41-1](#)  
 configuration settings (table) [41-1](#)  
 configure display in drop-down list box [43-24](#)  
 partition limitations [41-3](#)  
 related topics [41-3](#)

call park

described [49-3](#)

call pickup group

described [49-4](#)

call routing

directory numbers  
 configuration overview [43-1](#)

call waiting

configuration settings [43-23](#)

CAPF profile

configuring for application user [92-1](#)  
 configuring for end user [92-1](#)

Cisco CallManager service

activating [3-5](#)  
 deactivating [3-6](#)

Cisco Unified Communications Manager

accessibility [1-21](#)

benefits [1-2](#)

browsing into [1-3](#)

configuration settings (table) [3-1](#)

configuring [3-1](#)

groups

configuration overview [4-1](#)  
 configuration settings (table) [4-1](#)  
 synchronizing configuration [4-1](#)

introduction [1-1](#)

key features [1-2](#)

login [1-3](#)

logout [1-4](#)

more information [1-21](#)

overview [1-1](#)

related topics [1-22, 3-6](#)

server configuration [2-1](#)

synchronizing configuration [3-5](#)

Cisco Unified Communications Manager Administration

adding records [1-17](#)

buttons in GUI [1-18](#)

Cisco Unified Presence Server link [1-20](#)

copying records [1-17](#)

customized login message [1-20](#)

deleting records [1-15](#)

finding records [1-15](#)

Firefox 3.x and HTTPS [1-9](#)

GUI [1-13](#)

icons in GUI [1-18](#)

Internet Explorer 7 and HTTPS [1-5](#)

Internet Explorer 8 and HTTPS [1-7](#)

last successful login message [1-21](#)

navigating [1-13](#)

Safari 4.x and HTTPS [1-11](#)

using Help [1-15](#)

Cisco Unified Communications Manager Assistant

configuration wizard [83-1](#)

Cisco Unified IP Phones

configuration overview [67-1](#)

- configuring [67-30](#)
- displaying MAC address [67-43](#)
- finding actively logged in devices [67-41](#)
- finding remotely logged-in devices [67-42](#)
- related topics [67-43](#)
- synchronizing configuration [67-34](#)
- that are running SIP
  - third-party device differences [B-3](#)
- Cisco Unified IP Phone Services
  - configuring [67-35](#)
  - subscribing [67-36](#)
  - unsubscribing [67-37](#)
  - updating [67-37](#)
- Cisco Unified Presence Server
  - link from Cisco Unified Communications Manager Administration [1-20](#)
- Cisco Unity
  - adding an administrator to [87-6](#)
- Cisco Unity Connection
  - adding an administrator to [87-6](#)
  - user configuration voice mailbox [88-8](#)
- Cisco voice mail
  - configuration overview [58-1](#)
- Cisco voice-mail pilot
  - configuration overview [61-1](#)
  - related topics [61-2](#)
- Cisco voice mail port wizard [59-1](#)
- client matter codes, described [49-3](#)
- CMLocal date/time group [6-1](#)
- common device configuration
  - synchronizing configuration to applicable devices [77-5](#)
- common device configurations
  - configuration overview [77-1](#)
  - configuration settings (table) [77-2](#)
- common phone profile
  - synchronizing configuration to applicable devices [78-5](#)
- common phone profiles
  - configuration settings (table) [78-1](#)
- configuring [78-1](#)
- related topics [78-6](#)
- conference bridges
  - Cisco Conference Bridge (WS-SVC-CMM)
    - configuration settings (table) [51-11](#)
  - Cisco IOS
    - configuration settings (table) [51-6](#)
  - Cisco video
    - configuration settings (table) [51-8](#)
  - configuration overview [51-1](#)
  - hardware
    - configuration settings (table) [51-4](#)
  - related topics [51-13](#)
  - software
    - configuration settings (table) [51-2](#)
- conference devices
  - synchronizing configuration [51-13](#)
- configuring [43-25](#)
- copying records
  - Cisco Unified Communications Manager Administration [1-17](#)
- credential policy
  - configuration overview [86-1](#)
  - configuration settings (table) [86-1](#)
  - related topics [86-4](#)
- credential policy default
  - assigning [85-3](#)
  - configuration overview [85-1](#)
  - configuration settings (table) [85-1](#)
  - configuring [85-3](#)
  - related topics [85-4](#)
- CTI route points
  - configuration overview [64-1](#)
  - configuration settings (table) [64-1](#)
  - related topics [64-6](#)
  - synchronizing configuration [64-6](#)
- custom phone button templates
  - creating an expansion module [73-3](#)

**D**

- date/time group
  - synchronizing configuration to applicable devices [6-4](#)
- date/time groups
  - configuration overview [6-1](#)
  - configuration settings (table) [6-1](#)
  - related topics [6-5](#)
  - using phone NTP reference configuration with [5-1](#)
- default device profiles
  - configuration overview [71-1](#)
  - configuration settings (table) [71-1](#)
  - related topics [71-6](#)
- defaults, devices
  - configuration overview [69-1](#)
  - configuration settings (table) [69-1](#)
  - related topics [69-3](#)
  - updating [69-2](#)
  - with non-firmware loads [70-1](#)
- deleting records
  - Cisco Unified Communications Manager Administration [1-15](#)
- dependency records
  - accessing [A-2](#)
  - buttons [A-4](#)
  - detail example (figure) [A-4](#)
  - disabling [A-2](#)
  - enabling [A-1](#)
  - enterprise parameter [A-1](#)
  - overview [A-1](#)
  - summary example (figure) [A-3](#)
- device defaults
  - configuration overview [69-1](#)
  - configuration settings (table) [69-1](#)
  - related topics [69-3](#)
  - updating [69-2](#)
- device mobility groups
  - configuration overview [25-2](#)
- device mobility info
  - configuration overview [25-2](#)
- device pools
  - configuration overview [8-1](#)
  - configuration settings (table) [8-1](#)
  - related topics [8-18](#)
  - synchronizing configuration to applicable devices [8-17](#)
- device profiles
  - configuration overview [72-1](#)
  - configuration settings (table) [72-1](#)
  - related topics [72-8](#)
- devices
  - Cisco Unified IP Phones
    - configuration overview [67-1](#)
    - configuring [67-30](#)
    - related topics [67-43](#)
  - defining common characteristics [8-1](#)
  - firmware load information
    - configuration overview [70-1](#)
    - related topics [70-1](#)
  - gatekeepers, configuration overview [65-1](#)
  - gateways [66-1](#)
  - MWI configuration settings (table) [60-1](#)
  - non-default firmware loads [70-1](#)
  - trunks
    - configuration overview [68-1](#)
    - related topics [68-63](#)
- DHCP
  - activating DHCP monitor service [9-3](#)
  - server
    - configuration settings (table) [9-1](#)
    - configuring [9-1](#)
    - related topics [9-4](#)
  - starting DHCP monitor service [9-3](#)
  - subnet
    - configuration settings (table) [10-1](#)
    - related topics [10-3](#)
- dial plans

- configuring route pattern details for a non-NANP dial plan [45-3](#)
- editing [45-2](#)
- installer [45-1](#)
- installing [45-2](#)
- related topics [45-5](#)
- restarting Cisco CallManager Service [45-5](#)
- uninstalling [45-4](#)
- upgrading [45-3](#)
- dial rules
  - directory lookup
    - configuration settings (table) [28-1](#)
    - configuring [28-1](#)
    - related topics [28-2](#)
  - SIP
    - See* SIP dial rules
- digest authentication
  - enabling for third-party phones that are running SIP [B-5](#)
- Digital Access PRI ports [66-81](#)
- Digital Access T1
  - ports [66-81](#)
- directed call park
  - described [49-4](#)
- directory
  - Cisco Unity Connection voice mailbox [88-8](#)
- directory lookup dial rules
  - configuration settings (table) [28-1](#)
  - configuring [28-1](#)
- directory numbers
  - calling search space list [43-24](#)
  - call waiting configuration settings [43-23](#)
  - configuration overview [43-1](#)
  - configuration settings (table) [43-1](#)
  - deleting unassigned [46-3](#)
  - related topics [43-27](#)
  - removing from phone [43-26](#)
  - synchronizing configuration to applicable devices [43-24](#)
  - updating unassigned [46-3](#)

- Domain Name System (DNS) [2-1](#)
- domains, MLPP
  - overview [17-1](#)
- Dynamic Host Configuration Protocol
  - See* DHCP

---

## E

- end user
  - adding with phone [91-4](#)
  - and device
    - configuration settings (table) [91-1](#)
  - associating devices to an end user [88-13](#)
  - CAPF profile [92-1](#)
  - changing password [88-9](#)
  - changing PIN [88-10](#)
  - configuration overview [88-1](#)
  - configuration settings (table) [88-1](#)
  - configuring with phone [91-1](#)
  - credential settings (table) [88-11](#)
  - extension mobility [88-15](#)
  - managing credential information [88-11](#)
  - related topics [88-16](#)
  - user-related information [88-12](#)
- enterprise parameters
  - configuring [20-1](#)
  - dependency records [A-1](#)
  - related topics [20-2](#)
  - synchronizing configuration to applicable devices [20-2](#)
- Enterprise Phone Configuration parameters [21-1](#)
- extension mobility
  - end user [88-15](#)
  - finding actively logged in devices [67-41](#)
- Extension Mobility Cross Cluster
  - finding remotely logged-in devices [67-42](#)
- external phone number mask [24-2](#)

**F**

## finding records

Cisco Unified Communications Manager Administration [1-15](#)

## firmware load information

configuration overview [70-1](#)

devices with non-default [70-1](#)

related topics [70-1](#)

## forced authorization codes

described [49-3](#)

FXO ports [66-80](#)

FXS ports [66-79](#)

**G**

## g. clear codec

enable [66-57](#)

## gatekeepers

configuration overview [65-1](#)

configuration settings (table) [65-1](#)

related topics [65-4](#)

synchronizing configuration [65-3](#)

## gateways

adding [66-75](#)

analog access configuration settings (table) [66-23](#)

analog access gateway, adding [66-85](#)

BRI configuration settings (table) [66-60](#)

Cisco IOS SCCP gateway configuration settings (table) [66-29](#)

Cisco VG224/VG248 analog gateway, adding [66-86](#)

Cisco VG224/VG248 analog ports, adding [66-86](#)

Cisco VG248 configuration settings (table) [66-28](#)

configuration overview [66-1](#)

configuration settings (table) [66-1](#)

Digital Access PRI configuration settings (table) [66-37](#)

E & M port configuration settings (table) [66-74](#)

enabling g.clear codec [66-57](#)

FSX/FXO configuration settings (table) [66-31](#)

ground start port configuration settings (table) [66-73](#)

H.323, adding [66-84](#)

H.323 configuration settings (table) [66-5](#)

ISDN [66-37](#)

ISDN BRI [66-60](#)

loop start port configuration settings (table) [66-72](#)

## MGCP

BRI, configuring [66-60](#)

BRI ports, adding [66-82](#)

Cisco IOS, adding [66-76](#)

configuration settings (table) [66-3](#)

Digital Access PRI ports, adding [66-81](#)

FXO ports, adding [66-80](#)

FXS ports, adding [66-79](#)

ports, adding [66-78](#)

T1 ports, adding [66-81](#)

modifying [66-87](#)

non-IOS, adding [66-83](#)

port configuration settings (table) [66-31](#)

ports, adding [66-85](#)

POTS port configuration settings (table) [66-70](#)

PRI [66-37](#)

related topics [66-88](#)

## SCCP

Cisco IOS, adding [66-82](#)

synchronizing configuration [66-87](#)

updating [66-88](#)

## groups

Cisco Unified Communications Manager

configuration overview [4-1](#)

configuration settings (table) [4-1](#)

## date/time

configuration overview [6-1](#)

configuration settings (table) [6-1](#)

related topics [6-5](#)

presence, configuring [25-1](#)

## GUI

Cisco Unified Communications Manager Administration [1-13](#)

**H**

H.323, adding gateways [66-84](#)

Help, using

    Cisco Unified Communications Manager  
    Administration [1-15](#)

HTTPS

    HTTP over secure sockets layer [1-5](#)

hunt lists

    adding [35-2](#)

    adding line groups [35-4](#)

    changing the order of line groups [35-5](#)

    configuration overview [35-1](#)

    deleting [35-6](#)

    finding [35-1](#)

    related topics [35-7](#)

    removing line groups [35-5](#)

    synchronizing configuration to affected devices [35-6](#)

hunt pilots

    configuration overview [36-1](#)

    configuration settings (table) [36-1](#)

    related topics [36-10](#)

**I**

icons in GUI

    Cisco Unified Communications Manager  
    Administration [1-18](#)

intercom

    calling search spaces

        configuration overview [49-2](#)

    directory numbers

        configuration overview [49-2](#)

    partitions

        configuration overview [49-1](#)

    translation patterns

        configuration overview [49-2](#)

introduction to Cisco Unified Communications  
Manager [1-1](#)

IP address [2-1](#)

IP Phone Services

*See* Cisco Unified IP Phone Services

ISDN, gateway configuration [66-37](#)

ISDN BRI, gateway configuration [66-60](#)

IVR [57-2](#)

**L**

LDAP

    authentication

        configuration settings (table) [13-1](#)

        configuring [13-1](#)

        related topics [13-4](#)

    directory

        configuration settings (table) [12-1](#)

        configuring [12-1](#)

        related topics [12-6](#)

    filter

        configuration settings (table) [14-1](#)

        configuring [14-1](#)

        related topics [14-2](#)

    system

        configuration settings (table) [11-1](#)

        configuring [11-1](#)

        related topics [11-3](#)

licensing

    third-party phones that are running SIP [B-5](#)

line groups

    adding members [34-6](#)

    configuration overview [34-1](#)

    configuration settings (table) [34-1](#)

    related topics [34-7](#)

    removing members [34-6](#)

locations

    configuration overview [15-1](#)

    configuration settings (table) [15-1](#)

    related topics [15-5](#)

    resynching bandwidth [15-5](#)

login

- Cisco Unified Communications Manager [1-3](#)
- login message
  - customized [1-20](#)
  - last successful login [1-21](#)
- logout
  - Cisco Unified Communications Manager [1-4](#)

---

## M

- max list box enterprise parameter
  - calling search space [43-24](#)
- media resource group lists
  - configuration overview [55-1](#)
  - configuration settings (table) [55-1](#)
  - related topics [55-2](#)
- media resource groups
  - configuration overview [54-1](#)
  - configuration settings (table) [54-1](#)
  - related topics [54-3](#)
- media termination point
  - See* MTP
- meet-me number patterns
  - configuration overview [44-1](#)
  - configuration settings (table) [44-1](#)
  - related topics [44-2](#)
- message waiting
  - configuration overview [60-1](#)
  - configuration settings (table) [60-1](#)
  - related topics [60-3](#)
- MGCP
  - BRI gateway configuration settings (table) [66-60](#)
  - Cisco IOS, adding [66-76](#)
  - Digital Access PRI ports, adding [66-81](#)
  - Digital Access T1 ports [66-81](#)
  - FXO ports, adding [66-80](#)
  - FXS ports, adding [66-79](#)
  - gateways, adding [66-76](#)
  - non-IOS gateway, adding [66-83](#)
  - ports, adding [66-78](#)

- migrating phone settings [67-32](#)
- MLPP domains
  - configuration settings (table) [17-1](#)
  - overview [17-1](#)
  - related topics [17-2](#)
  - resource priority namespace network domain [18-1](#)
- mobile connect
  - access list [49-2](#)
  - mobile voice access [57-2](#)
  - mobility configuration [49-5](#)
  - remote destination [82-1](#)
  - remote destination profile [82-1](#)
- mobile voice access
  - configuration [57-2](#)
  - IVR [57-2](#)
  - remote destination [82-1](#)
  - remote destination profile [82-1](#)
- mobility configuration [49-5](#)
- MTP
  - configuration overview [52-1](#)
  - IOS configuration settings (table) [52-2](#)
  - related topics [52-4](#)
  - synchronizing configuration [52-3](#)
- MWI
  - configuration settings (table) [60-1](#)
  - related topics [60-3](#)

---

## N

- navigating
  - Cisco Unified Communications Manager Administration [1-13](#)
- Network Time Protocol
  - See* phone NTP reference
- normalization
  - configuration settings (table) [81-1](#)
  - importing scripts [81-5](#)
  - related topics [81-5](#)
- number patterns, meet-me



configuration settings (table) [44-1](#)  
 related topics [44-2](#)

---

## O

overview of Cisco Unified Communications Manager [1-1](#)

---

## P

parameters

configuring [22-1](#)  
 configuring for a service [22-1](#)  
 displaying for a service [22-3](#)  
 enterprise [20-1](#)  
 related topics [22-4](#)

partitions

calling search space limitations (table) [40-3](#)  
 configuration overview [40-1](#)  
 configuration settings (table) [40-1](#)  
 related topics [40-5, 56-8](#)  
 searching [40-4](#)  
 synchronizing configuration to applicable devices [40-4](#)

phone button templates

configuration overview [73-1](#)  
 configuration settings (table) [73-1](#)  
 creating an expansion module [73-3](#)  
 modifying button items [67-39](#)  
 related topics [73-4](#)

phone NTP reference

configuration settings (table) [5-1](#)  
 overview [5-1](#)  
 related topics [5-3](#)

phones

adding with end user [91-4](#)  
 configuration settings (table) [67-3](#)  
 configuring with end user [91-1](#)  
 displaying MAC address [67-43](#)  
 finding actively logged in devices [67-41](#)

finding remotely logged-in devices [67-42](#)  
 migrating phone settings to different phone [67-32](#)  
 phone migration settings (table) [67-32](#)  
 synchronizing configuration [67-34](#)

phone services

adding to a phone button [75-10](#)  
 Cisco-provided default services [75-6](#)  
 configuration overview [75-1](#)  
 configuration settings (table) [75-1](#)  
 configuring Cisco-signed Java MIDlets [75-1](#)  
 related topics [75-11](#)  
 service parameters  
   configuring [75-8](#)  
   deleting [75-9](#)  
   settings (table) [75-6](#)

physical locations

configuration overview [25-2](#)

PLAR [43-25](#)

plug-ins

configuration overview [84-1](#)  
 installing [84-1](#)  
 related topics [84-3](#)  
 updating the URL [84-2](#)  
 URL configuration settings (table) [84-1](#)

ports

Digital Access T1 configuration settings (table) [66-55](#)  
 modifying [66-87](#)  
 updating [66-88](#)

presence groups, configuring [25-1](#)

PRI, gateway configuration [66-37](#)

---

## R

recording profiles

overview [80-1](#)  
 related topics [80-2](#)

regions

configuration settings (table) [7-1](#)  
 configuring [7-1](#)

- related topics [7-7](#)
  - synchronizing configuration to applicable devices [7-7](#)
  - related topics
    - Cisco Unified Communications Manager [1-22](#)
  - remote destination [82-1](#)
  - remote destination profile [82-1](#)
  - resource priority
    - namespace list
      - configuration settings [19-1](#)
      - overview [19-1](#)
      - related topics [19-2](#)
    - namespace network domain
      - configuration settings [18-1](#)
      - overview [18-1](#)
      - related topics [18-2](#)
  - roles
    - assigning to user groups [90-6](#)
    - configuration settings (table) [89-1](#)
    - described [89-1](#)
    - related topics [89-3](#)
    - viewing for a user [90-7](#)
  - route filters
    - adding clauses [30-3](#)
    - configuration overview [30-1](#)
    - configuration settings (table) [30-1](#)
    - editing clauses [30-3](#)
    - operators
      - described (table) [30-7](#)
      - explained [30-5](#)
    - related topics [30-8](#)
    - removing clauses [30-4](#)
    - synchronizing configuration to applicable devices [30-4](#)
    - tags
      - described (table) [30-5](#)
      - explained [30-5](#)
  - route groups
    - adding devices [31-4](#)
    - configuration overview [31-1](#)
    - configuration settings (table) [31-1](#)
    - related topics [31-5](#)
    - removing devices [31-4](#)
  - route lists
    - adding route groups [32-3](#)
    - changing the order of route groups [32-5](#)
    - configuration overview [32-1](#)
    - related topics [32-6](#)
    - removing route groups [32-4](#)
    - synchronizing configuration to affected devices [32-6](#)
  - route patterns
    - configuration overview [33-1](#)
    - configuration settings (table) [33-1](#)
    - related topics [33-11](#)
  - SIP
    - See* SIP route patterns
  - route plan reports
    - configuration overview [46-1](#)
    - deleting unassigned directory numbers [46-3](#)
    - related topics [46-5](#)
    - updating unassigned directory numbers [46-3](#)
    - viewing in a file [46-4](#)
    - viewing records [46-2](#)
- 
- ## S
- SCCP
    - Cisco IOS, adding [66-82](#)
    - gateways, adding [66-82](#)
  - scripts
    - configuration settings (table) [81-1](#)
    - importing [81-5](#)
    - related topics [81-5](#)
  - security profile
    - configuring for CUMA [25-3](#)
    - configuring for phone [25-3](#)
    - configuring for SIP trunk [25-3](#)
  - servers

- configuration settings (table) [2-1](#)
- configuring [2-1](#)
- related topics [2-3](#)
- service parameters
  - configuring [22-1](#)
  - configuring for a service [22-1](#)
  - displaying for a service [22-3](#)
  - related topics [22-4](#)
- services
  - Cisco CallManager
    - activating [3-5](#)
    - deactivating [3-6](#)
  - phone
    - adding to a phone button [75-10](#)
    - configuration overview [75-1](#)
    - configuration settings (table) [75-1](#)
    - deleting a service parameter [75-9](#)
    - related topics [75-11](#)
    - service parameter [75-8](#)
    - service parameter settings (table) [75-6](#)
- service URL button, adding [67-38](#)
- SIP
  - configuration differences [B-3](#)
  - configuring third-party phones [B-1](#)
  - third-party phones that are running SIP
    - configuration checklist (table) [B-2](#)
  - third-party phones that are running SIP and TFTP [B-4](#)
- SIP dial rules
  - configuration settings (table) [29-1](#)
  - configuring [29-1](#)
  - dial plan examples [29-5](#)
  - pattern formats [29-4](#)
  - related topics [29-8](#)
  - resetting [29-6](#)
  - synchronizing configuration with affected SIP phones [29-7](#)
- SIP normalization scripts
  - configuration settings (table) [81-1](#)
  - importing [81-5](#)
  - related topics [81-5](#)
- SIP profiles
  - configuration settings [76-1](#)
  - configuring [76-1](#)
  - related topics [76-13](#)
  - resource priority namespace list [76-2](#)
  - synchronizing configuration [76-12](#)
- SIP realm, configuring [92-2](#)
- SIP route patterns
  - configuration settings (table) [37-1](#)
  - configuring [37-1](#)
  - related topics [37-5](#)
- softkey template configuration
  - synchronizing configuration to applicable devices [74-8](#)
- softkey templates
  - adding application softkeys [74-3](#)
  - assigning to phones [74-8](#)
  - configuration overview [74-1](#)
  - creating [74-2](#)
  - deleting [74-6](#)
  - finding [74-1](#)
  - modifying [74-5](#)
  - related topics [74-9](#)
  - renaming [74-6](#)
  - softkey positions [74-4](#)
  - updating [74-7](#)
- speed-dial buttons, configuring [67-34](#)
- speed dial configuration settings (table) [67-28](#)
- SRST
  - configuration overview [16-1](#)
  - configuration settings (table) [16-1](#)
  - related topics [16-3](#)
- Survivable Remote Site Telephony
  - See* SRST

**T**

T1 ports, adding [66-81](#)

templates

phone button

configuration overview [73-1](#)

configuration settings (table) [73-1](#)

related topics [73-4](#)

softkey

adding application softkeys [74-3](#)

assigning to phones [74-8](#)

configuration overview [74-1](#)

creating [74-2](#)

deleting [74-6](#)

finding [74-1](#)

modifying [74-5](#)

related topics [74-9](#)

renaming [74-6](#)

softkey positions [74-4](#)

updating [74-7](#)

TFTP

third-party phones that are running SIP [B-4](#)

third-party phones

SIP

licenses [B-5](#)

time periods

configuration overview [38-1](#)

configuration settings (table) [38-1](#)

related topics [38-3](#)

time schedules

configuration overview [39-1](#)

configuration settings (table) [39-1](#)

related topics [39-3](#)

time zones [6-1](#)

transcoders

configuration overview [53-1](#)

configuration settings (table) [53-1](#)

related topics [53-4](#)

synchronizing configuration [53-3](#)

transformation patterns

called party configuration settings (table) [48-1](#)

calling party configuration settings (table) [47-1](#)

related topics for called party [48-4](#)

related topics for calling party [47-4](#)

translation patterns

configuration overview [42-1](#)

configuration settings (table) [42-1](#)

related topics [42-10](#)

resource-priority namespace network domain [42-3](#)

trunks

configuration overview [68-1](#)

configuration settings (table) [68-1](#)

configuring [68-59](#)

deleting [68-61](#)

finding [68-58](#)

related topics [68-63](#)

resetting [68-61](#)

synchronizing configuration [68-62](#)

**U**

unassigned directory numbers

deleting [46-3](#)

updating [46-3](#)

user

and device configuration settings (table) [91-1](#)

application

associating devices to an application user [87-10](#)

changing password [87-8](#)

configuration [87-1](#)

configuration settings (table) [87-1](#)

credential settings (table) [87-9](#)

managing credential information [87-8](#)

related topics [87-11](#)

end

adding with phone [91-4](#)

associating devices to an end user [88-13](#)

changing password [88-9](#)

- changing PIN [88-10](#)
- configuration overview [88-1](#)
- configuration settings (table) [88-1](#)
- configuring Cisco Unity Connection voice mailbox [88-8](#)
- configuring with phone [91-1](#)
- credential settings (table) [88-11](#)
- extension mobility [88-15](#)
- managing credential information [88-11](#)
- related topics [88-16](#)
- user-related information [88-12](#)

user/phone add

- adding [91-4](#)
- configuration [91-1](#)
- related topics [91-5](#)

user groups

- adding [90-2](#)
- adding users [90-4](#)
- assigning roles [90-6](#)
- deleting [90-3](#)
- deleting users [90-6](#)
- described [90-1](#)
- finding [90-1](#)
- related topics [90-8](#)
- viewing user roles [90-7](#)

- port wizard directory number configuration settings [59-3](#)
- port wizard related topics [59-7](#)
- profile configuration overview [62-1](#)
- related topics [58-6](#)
- synchronizing profile configuration to applicable devices [62-3](#)
- voice-mail profiles configuration settings (table) [62-1](#)

voice-mail pilot

- configuration overview [61-1](#)
- configuration settings (table) [61-1](#)
- related topics [61-2](#)

voice mail ports

- synchronizing configuration [58-6](#)

voice-mail profiles

- configuration overview [62-1](#)
- configuration settings (table) [62-1](#)
- related topics [62-3](#)

---

## W

- web browsers [1-3](#)

---

## V

- voice gateways [66-1](#)

voice mail

- adding a new server and ports [59-1](#)
- adding ports with the wizard [59-6](#)
- configuration overview [58-1](#)
- deleting ports with the wizard [59-7](#)
- message waiting overview [60-1](#)
- port configuration settings (table) [58-1](#)
- port wizard configuration overview [59-1](#)
- port wizard device information configuration settings [59-2](#)

