



## Settings

---

- [Change the Ringtone, on page 1](#)
- [Adjust the Phone Ringer Volume, on page 1](#)
- [Adjust the Volume During a Call, on page 2](#)
- [Phone Display Language, on page 2](#)

## Change the Ringtone

You can change the sound that your phone uses for incoming calls.

### Procedure

---

- Step 1** Select **Settings** > **Preferences** > **Ringtone**.
- Step 2** Scroll through the list of ringtones and press **Play** to hear a sample.
- Step 3** Press **Set** to use the ringtone.
- 


## Adjust the Phone Ringer Volume

If your phone ringer is too loud or too soft when you get an incoming call, you can change the ringer volume. Changes to the ringer volume do not affect the call volume you hear when you are on a call.

### Procedure

---



Press **Volume**  up or down to adjust the volume when the phone is not in use.

---

## Adjust the Volume During a Call

If the sound in your conference phone is too loud or too soft, you can change the volume while you are listening to the other person.

The Cisco IP Conference Phone 7832 does not have a handset or support a headset.

### Procedure

---



Press **Volume** up or down to adjust the volume while you are on a call.

---

## Phone Display Language

Your phone can display text in many languages. Your administrator sets the language the phone uses. If you want the language changed, contact your administrator.