



Buttons app

- [Buttons app overview, on page 1](#)
- [Programmable buttons, on page 1](#)
- [Access Buttons app, on page 3](#)
- [Change button function, on page 4](#)

Buttons app overview

You can define the action for the programmable hard buttons on your phone with the **Buttons**  app.



Note

In some organizations, administrators set the buttons for specific application purposes and don't allow you to change these buttons. Check with your administrator if you can't make button assignment changes.

Programmable buttons

The following illustrations and table show the programmable buttons on the phone.



Note

The programmable buttons for the Cisco Wireless Phone 840 and Cisco Wireless Phone 860 are not in the same location. Also, the Cisco Wireless Phone 840 and 840S don't have a Fingerprint button.

Figure 1: Programmable buttons on the Cisco Wireless Phone 840 and 840S

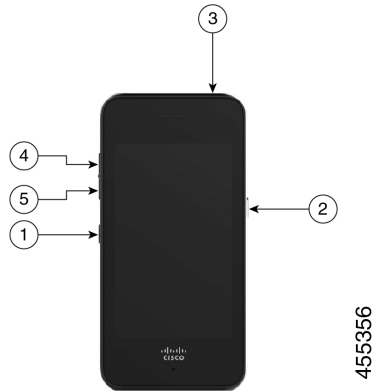


Figure 2: Programmable buttons on the Cisco Wireless Phone 860 and 860S

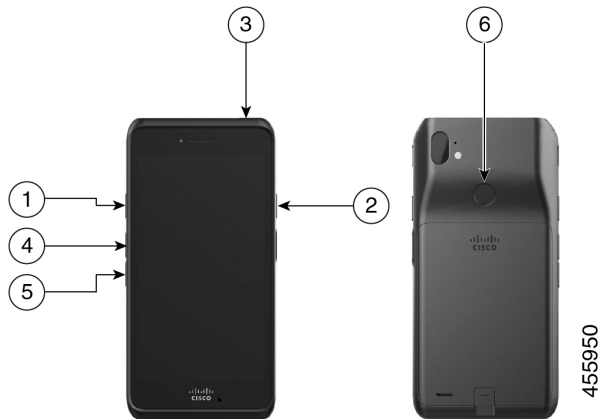


Table 1: Programmable buttons

Callout	Programmable button
1	Left button
2	Right button
3	Top
4	Volume up
5	Volume down
6	Fingerprint—For Cisco Wireless Phone 860 and 860S only.

Actions for the programmable buttons


The following are the potential actions for the programmable buttons.



Note Not all actions are available for all programmable buttons.

- No action
- Home key
- Back key
- Menu key
- PTT
- Emergency
- Volume up
- Volume down
- Run application
- Open URL
- Scanner—Available only for barcode scanner phones.
- Fingerprint—Available only for the Fingerprint button on the Cisco Wireless Phone 860 and 860S.
- Custom 1—Contact your app programmer to create custom actions.
- Custom 2
- Custom 3
- Custom 4

Access Buttons app

You can open the **Buttons**  app on your phone to view and change the programmable button actions. The application screen displays the programmable buttons with their current actions.

Procedure

Access the **Buttons**  app.

Default button settings

The following are the default button settings.

Table 2: Default programmable button settings


Programmable button	Default setting
Left button	No action (for Cisco Wireless Phone 840 and 860) Scanner (for Cisco Wireless Phone 840S and 860S only)
Right button	PTT
Top	Emergency
Fingerprint (for Cisco Wireless Phone 860 and 860S only)	Fingerprint
Volume up	Volume up
Volume down	Volume down

Change button function

You can change the default actions of the buttons on your phone. After you choose the action for a button, the changes automatically save.

If you're unable to change the action of the buttons, contact your administrator.

Procedure

-
- Step 1** Access the **Buttons**  app.
 - Step 2** From the **Buttons settings** screen, tap the desired button.
 - Step 3** Tap the desired action from the list.
-